

# NEXT


FLINTON HIGH BACK CHAIR

K95601-K95611-F98511-W30816-W11665-W11668

Assembly instructions

Actual product size

H104×W71.5×D91cm

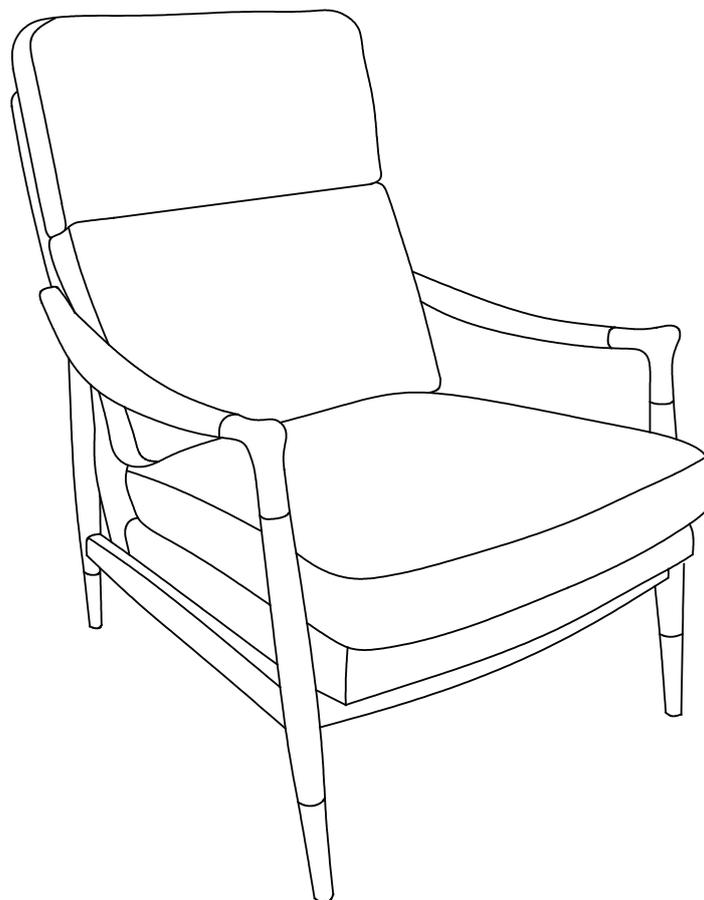

**Need Help ?**

With: Assembly instruction  
Missing or damaged parts

CALL: 0333 777 8999

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

# BEFORE YOU START

Number of people required to assemble  
One people are required to assemble this item

**Time to assemble:** 30 minutes



Item No.	Fabric name - leg	Fabric composition
K95601	VINTAGE FAUX LEATHER - WALNUT FRAME	100% polyester
K95611	PLUSH MOSS GREEN - WALNUT FRAME	100% polyester
F98511	SOFT VELVET RUST-WALNUT LEG	100% polyester
W30816	TWEEDY PLAIN LIGHT NATURAL-OAK EFFECT FRAME	100% polyester
W11665	RELAXED CHENILLE CORD CRANBERRY RED-WALNUT FRAME	100% polyester
W11668	CHUNKY MARL OLIVE GREEN -WALNUT FRAME	100% polyester

## Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.  
Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.  
Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.  
Always wipe dry after cleaning.  
To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

## Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.  
Do not stand or lean back on your chairs.  
Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

## Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Warnings

We suggest you retain these instructions for future reference.  
Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground  
Please periodically check all fittings and re-tighten as necessary.  
Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.  
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

## Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Services  
Next Retail Ltd  
Desford Road,  
Leicester,  
LE19 4AT


To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

## Need Help ?

With: Assembly instruction  
Missing or damaged parts

CALL: 0333 777 8999

## GETTING TO KNOW YOUR PRODUCT

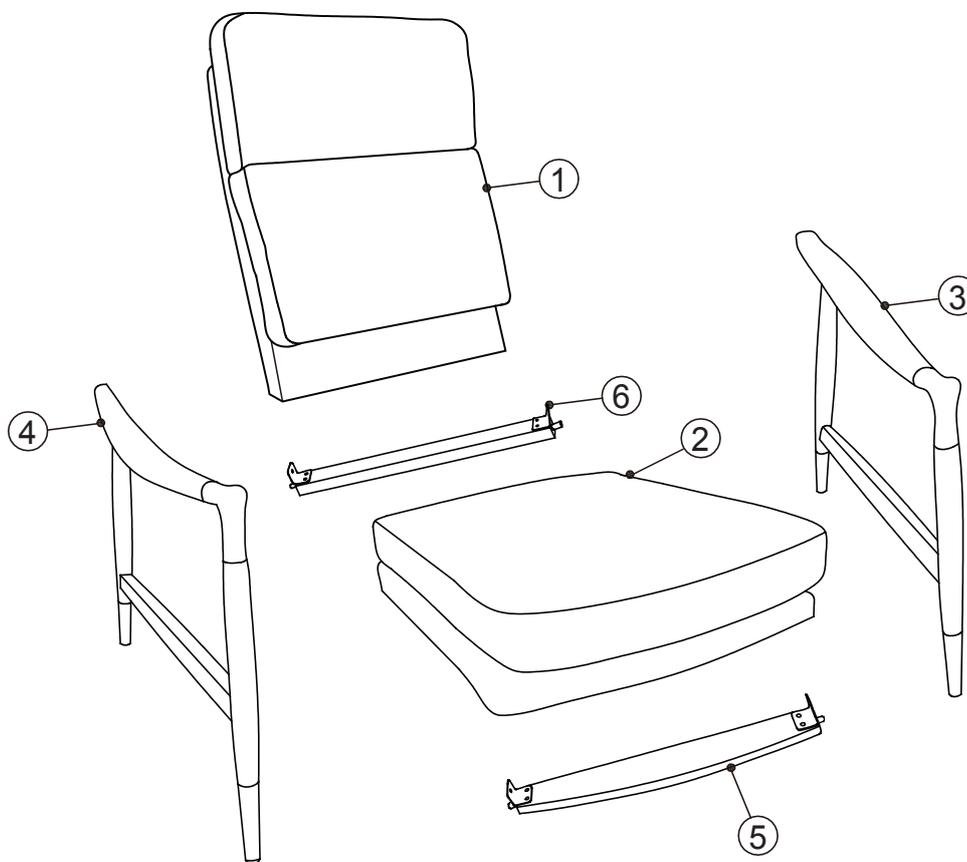

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimension	Visual	Qty	Ref	Dimension	Visual	Qty
1	Back H82xW59xD23CM		1	5	Front rail 61*8*6CM		1
2	Seat H21xW59.5xD62CM		1	6	Rear rail 61x4.5x7CM		1
3	Left Panel 78*63*7.5CM		1				
4	Right Panel 78*63*7.5CM		1				

# FLINTON HIGH BACK CHAIR


 
 
 
W11665-W11668-F98511-W30816-K95601-K95611

Assembly instructions

Fixtures and fittings  
supplied (actual size)

mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160


Ref	Dimension	Qty	Spare
A	M8 x20mm	4	1
B	M8 x45mm	2	1
C	M8 x60mm	4	1
D	12mm	10	1
E	22mm	10	1
F	6 x157mm	1	0

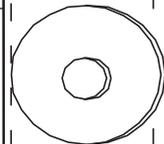


# FLINTON HIGH BACK CHAIR


W11665-W11668-F98511-W30816-K95601-K95611  
 Assembly instructions

 
1.

<b>C x 2</b>	M8x60mm
	
<b>D x 2</b>	12mm
	
<b>E x 2</b>	22mm
	
<b>F x 1</b>	6x157mm
	

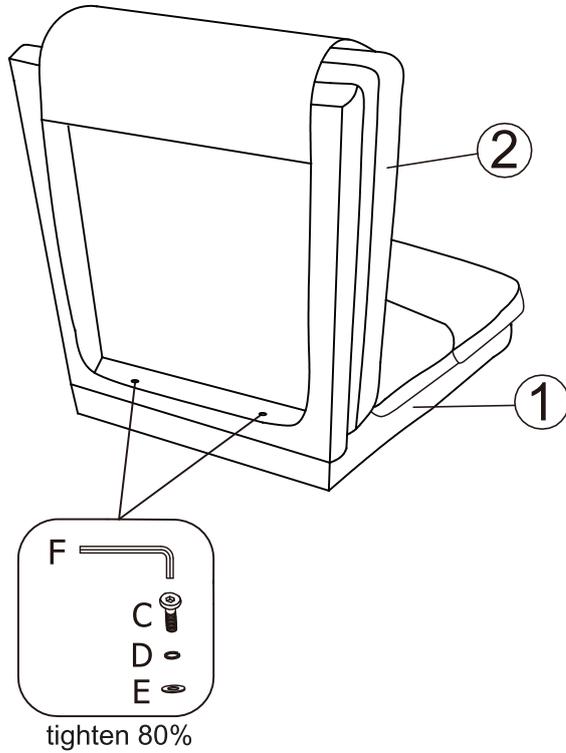

 2.

<b>B x 1</b>	M8x45mm
	
<b>C x 1</b>	M8x60mm
	
<b>D x 2</b>	12mm
	
<b>E x 2</b>	22mm
	
<b>F x 1</b>	6x157mm
	

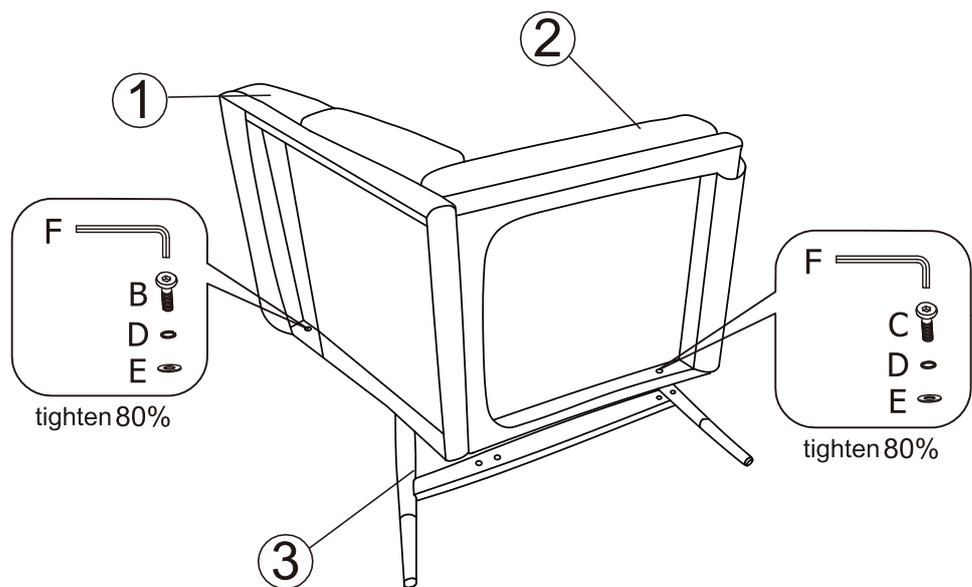


# FLINTON HIGH BACK CHAIR


W11665-W11668-F98511-W30816-K95601-K95611  
 Assembly instructions


3.

<b>A x 2</b>	M8x20mm
	
<b>D x 2</b>	12mm
	
<b>E x 2</b>	22mm
	
<b>F x 1</b>	6x157mm
	

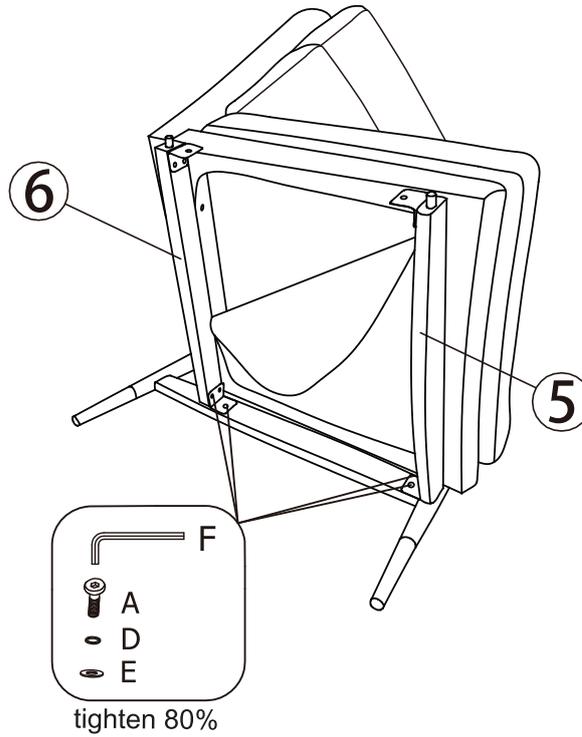

 
4.

<b>A x 2</b>	M8x20mm
	
<b>B x 1</b>	M8x45mm
	
<b>C x 1</b>	M8x60mm
	
<b>D x 4</b>	12mm
	
<b>E x 4</b>	22mm
	
<b>F x 1</b>	6x157mm
	

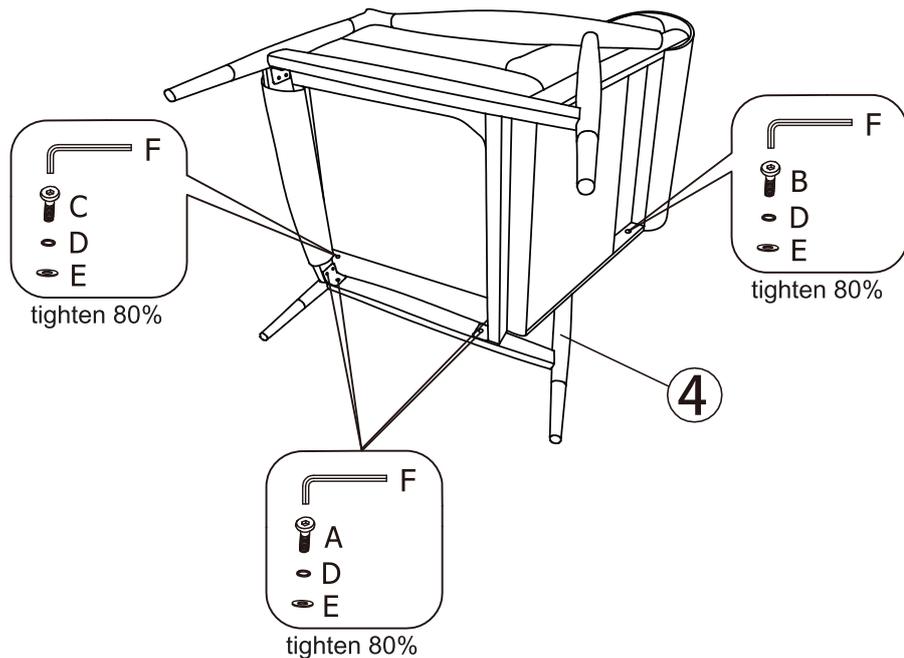


FLINTON HIGH BACK CHAIR  
W11665-W11668-F98511-W30816-K95601-K95611  
Assembly instructions

5.

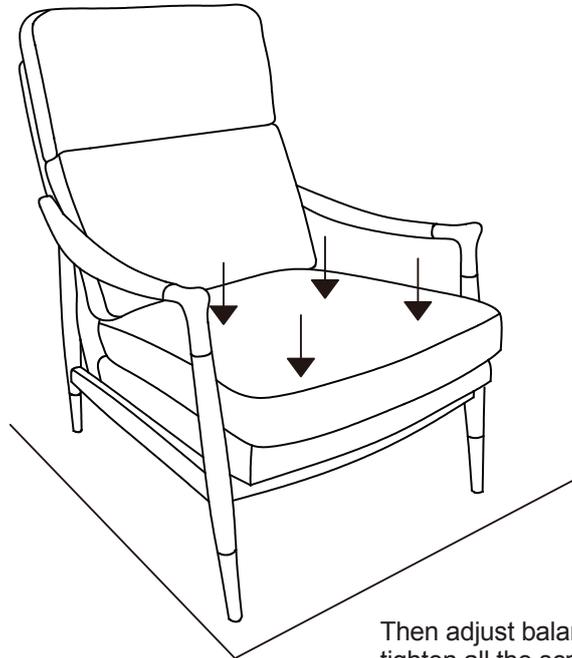


Then adjust balance of this chair  
tighten all the screws to 100%.

6.

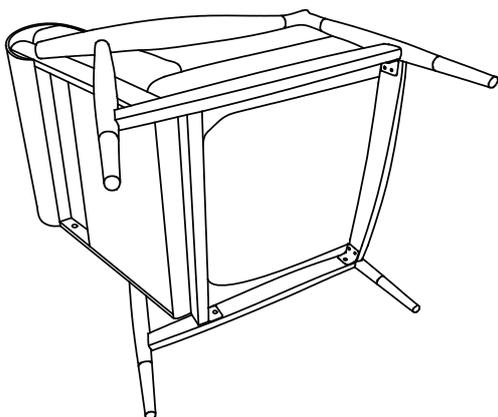

Zip up the non-woven cloth underneath the seat.

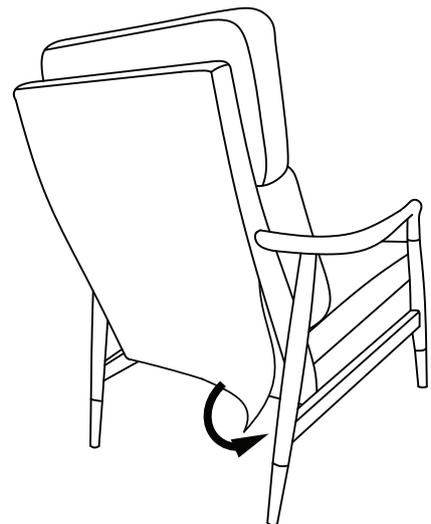

Stick the back.

# NEXT

## FLINTON HIGH BACK CHAIR

K95601-K95611-F98511-W30816-W11665-W11668

Assembly instructions

Actual product size

H104×W71.5×D91cm

**CAUTION:** Maximum weight capacity of this chair is 130kg.

