

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour
No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem. We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.


NEXT

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

NEXT ANDERSON DINING BANQUETTES WITH STORAGE

Self assembly instructions

5 Włi U`dfcXi Włig]nY:
H87×W235.5×D169CM

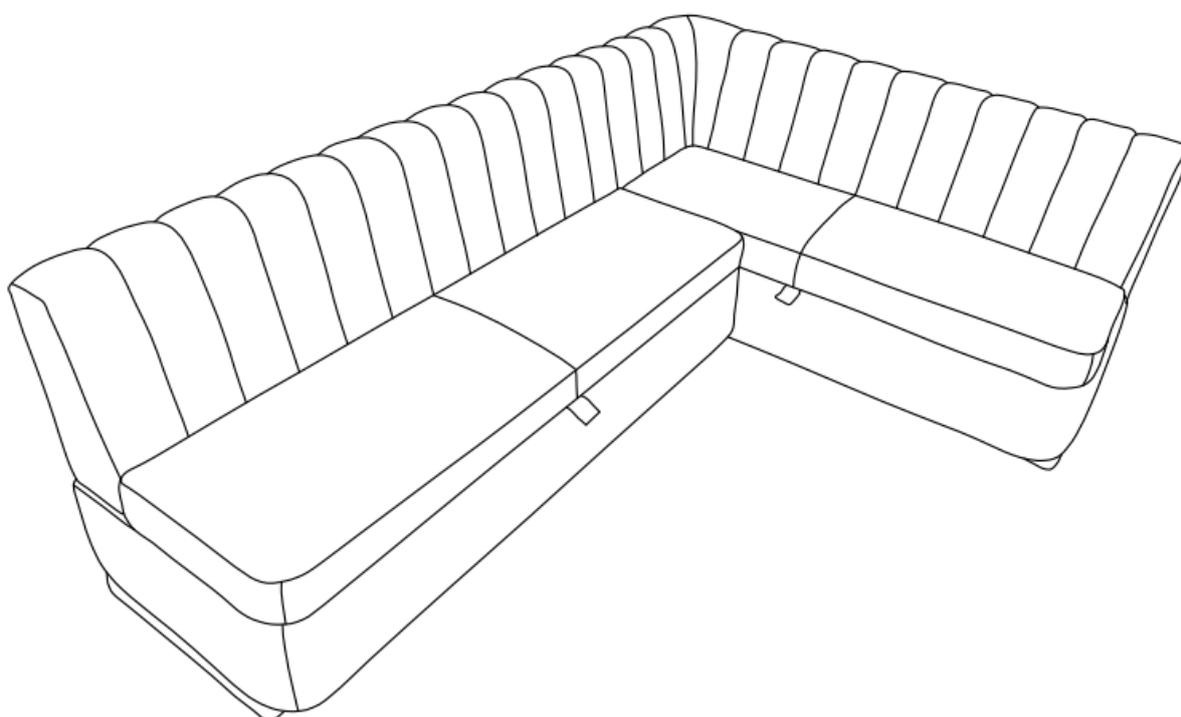

Item number	Fabric name	Fabric composition
W45767	Soft Texture Sage	100% polyester
B89062	Soft Velvet Grey	100% polyester
B55996	Monza Dark Grey	100% polyester
B54622	Chunky Weave Natural	84.4%Polyester 15.6%Acrylic
B97401	Plush Chenille - Moss	100% polyester
E95710	Monza Faux Leather Mink	100% polyester
E95711	Soft Velvet Pebble	100% polyester

Need Help?

With: Assembly instructions
Missing or damaged parts

IMPORTANT-RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

NEXT ANDERSON DINING BANQUETTES WITH STORAGE

Self assembly instructions

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference.
Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.
Please periodically check all fittings and re-tighten as necessary.
Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly
Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight Always wipe dry after cleaning.

To clean your item, please lightly brush clean or lightly wipe with a slightly dampened cloth.

Keep away from strong heat sources.

Occasional overall cleaning should be carried out approximately once a month by using a slightly damp-ened soft cloth. Then buff with a dry clean soft cloth.

Don'ts

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.


Do not use silicone based furniture polish. Silicone in furniture polishes. can break down the lacquer finish.

Number of people required to assemble

We recommend two people assemble this product.



Time to assemble : 30 minutes

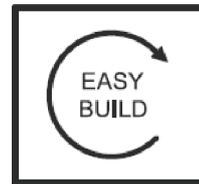

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on **0333 777 8999** and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians


If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible
If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.


 


You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4 AT

To view our full furniture range please visit www.next.co.uk

GETTING TO KNOW YOUR PRODUCT

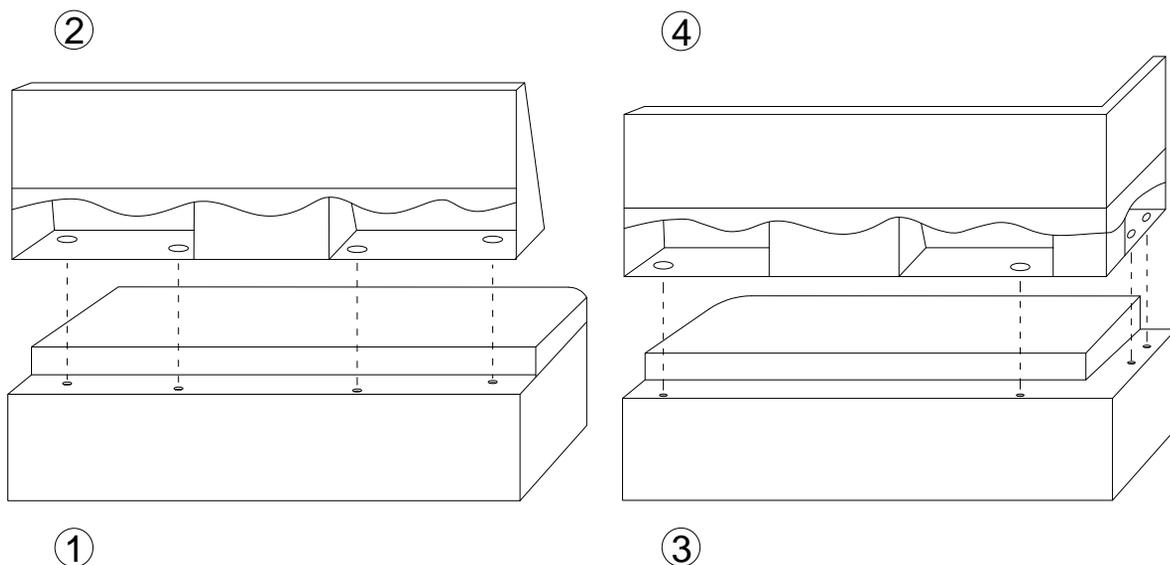


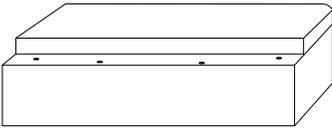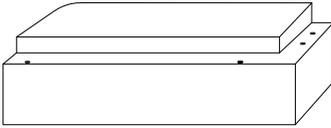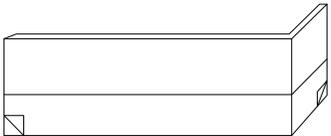Ref	Dimensions	Visual	Qty	Ctn
1	Seat : H50xW167.5xD68cm		1	2
2	Back : H50xW167.5xD22cm		1	2
3	Seat : H50xW169xD68cm		1	1
4	Back : H50xW169xD68cm		1	1



Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare
A	M8 x 100mm	8	1
B	170mm x 20mm	1	0
C	φ22mmX2MM	8	1
D	φ18-8.5X2MM	8	1
E	φ8X2MM	8	1


mm 10 20 30 40 50 60 70 80 90 100 110 120

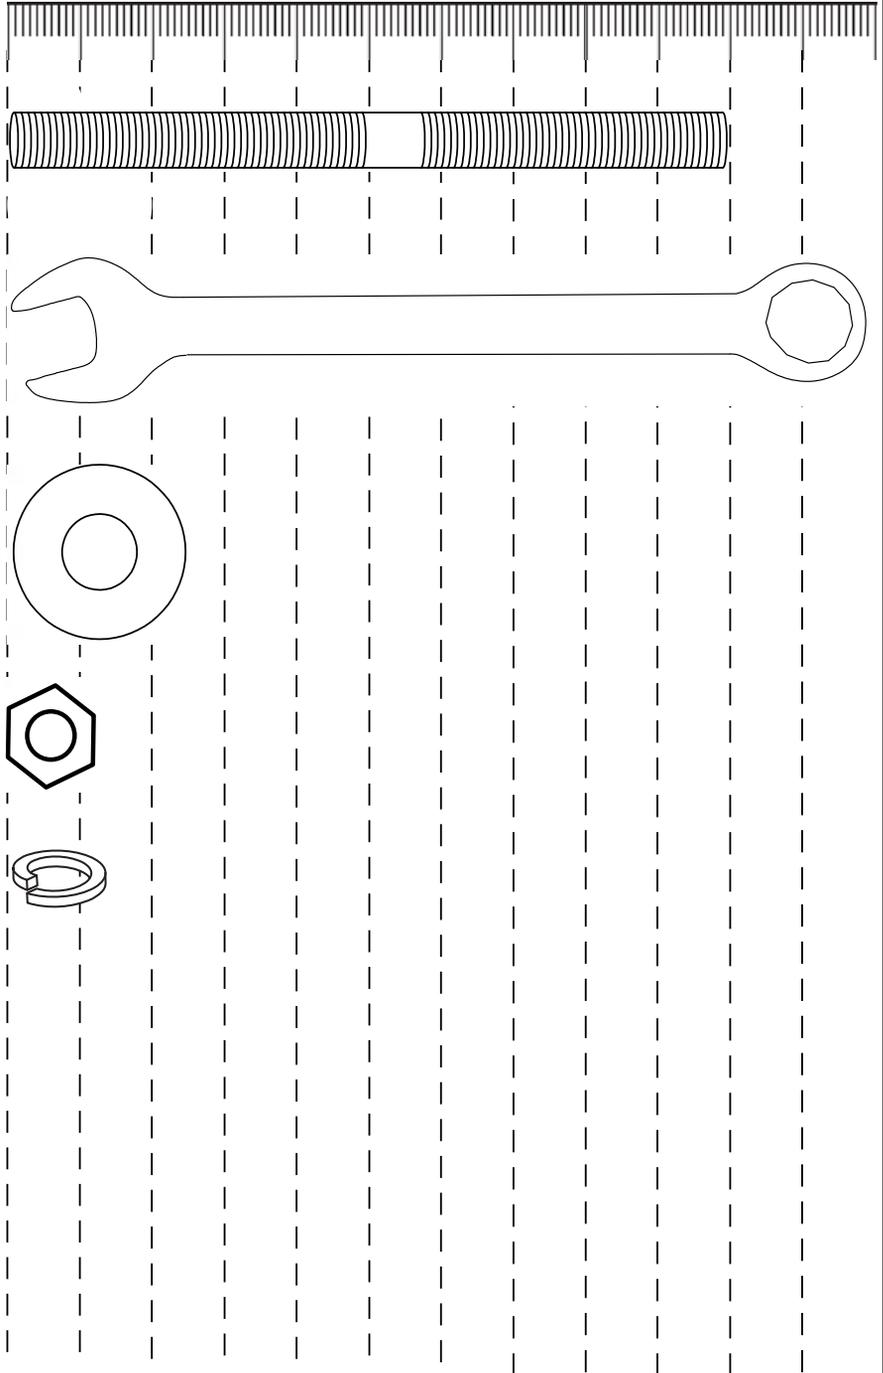


1

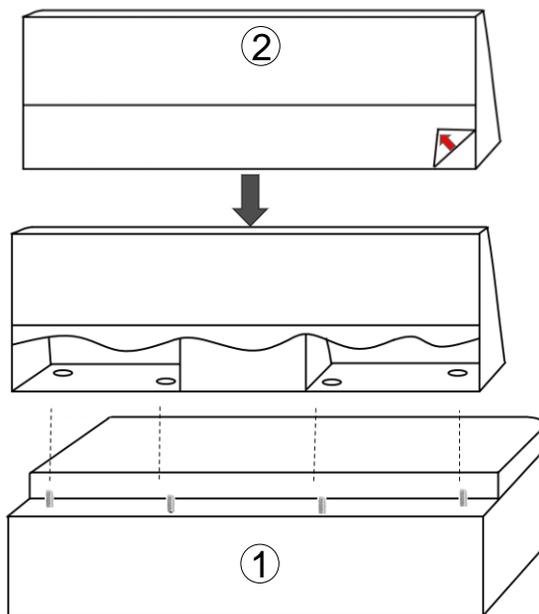
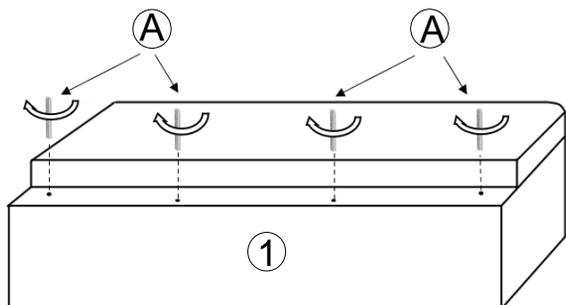


2

 AX4
 M8 x 100mm
BX1
 170mm x 20mm
CX4
 φ22mmX2MM
DX4
 φ18-8.5X2MM
EX4
 φ8X2MM

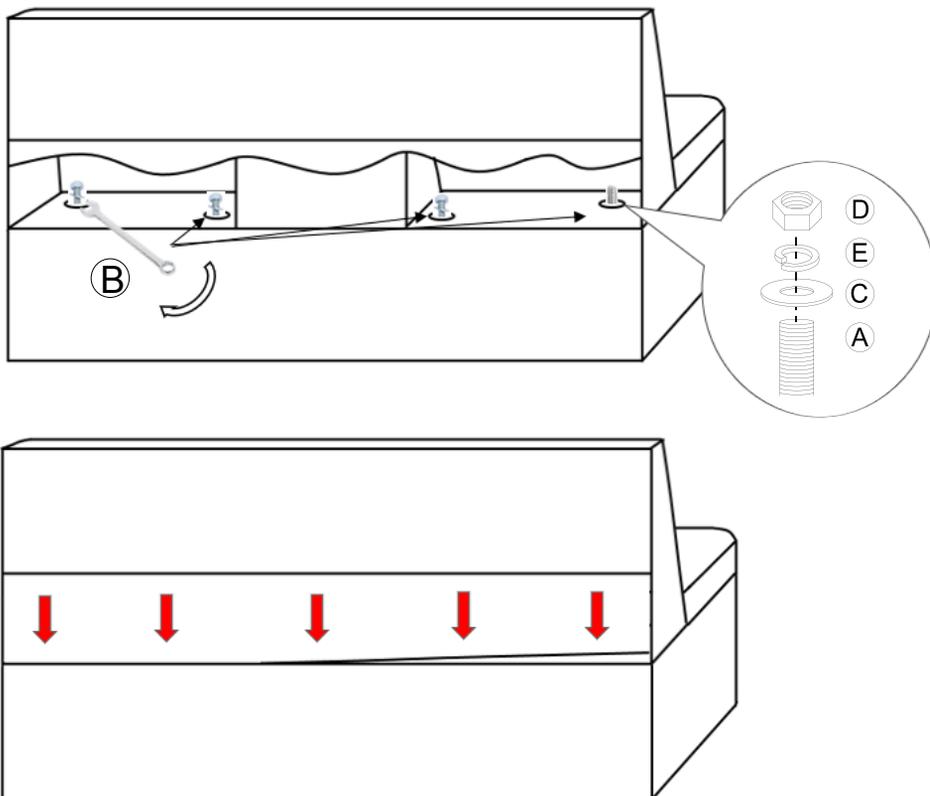

3

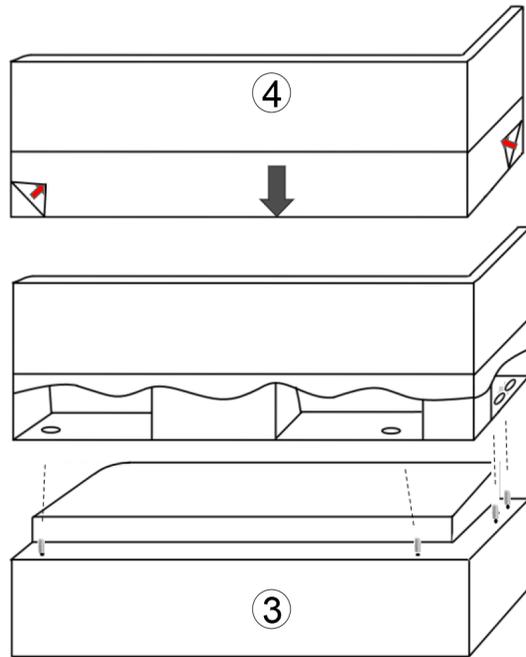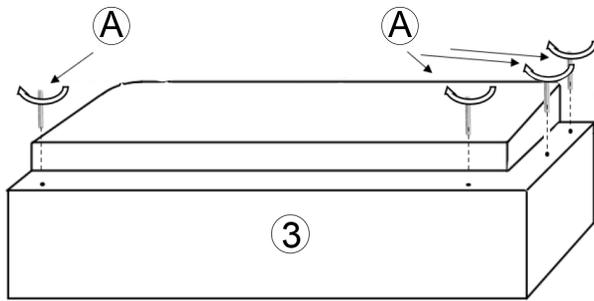

4

AX4



M8 x 100mm
BX1

170mm x 20mm
CX4


φ22mmX2MM
DX4

φ18-8.5X2MM
EX4

φ8X2MM

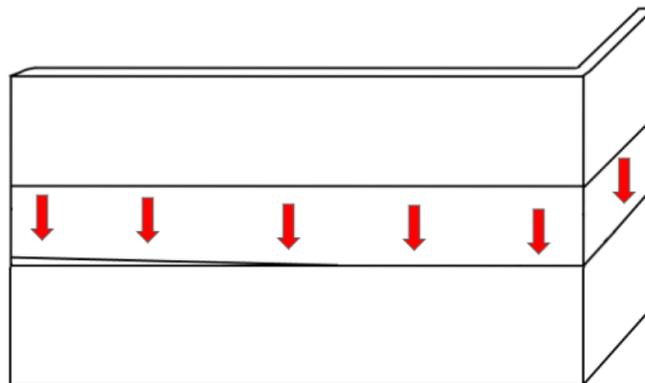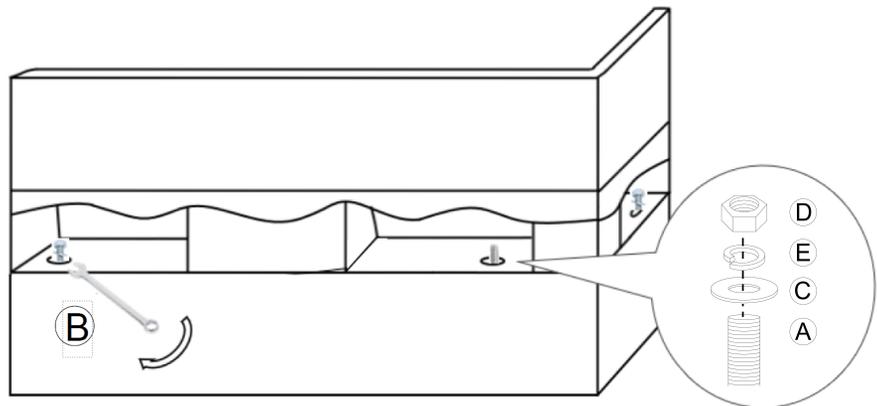

5

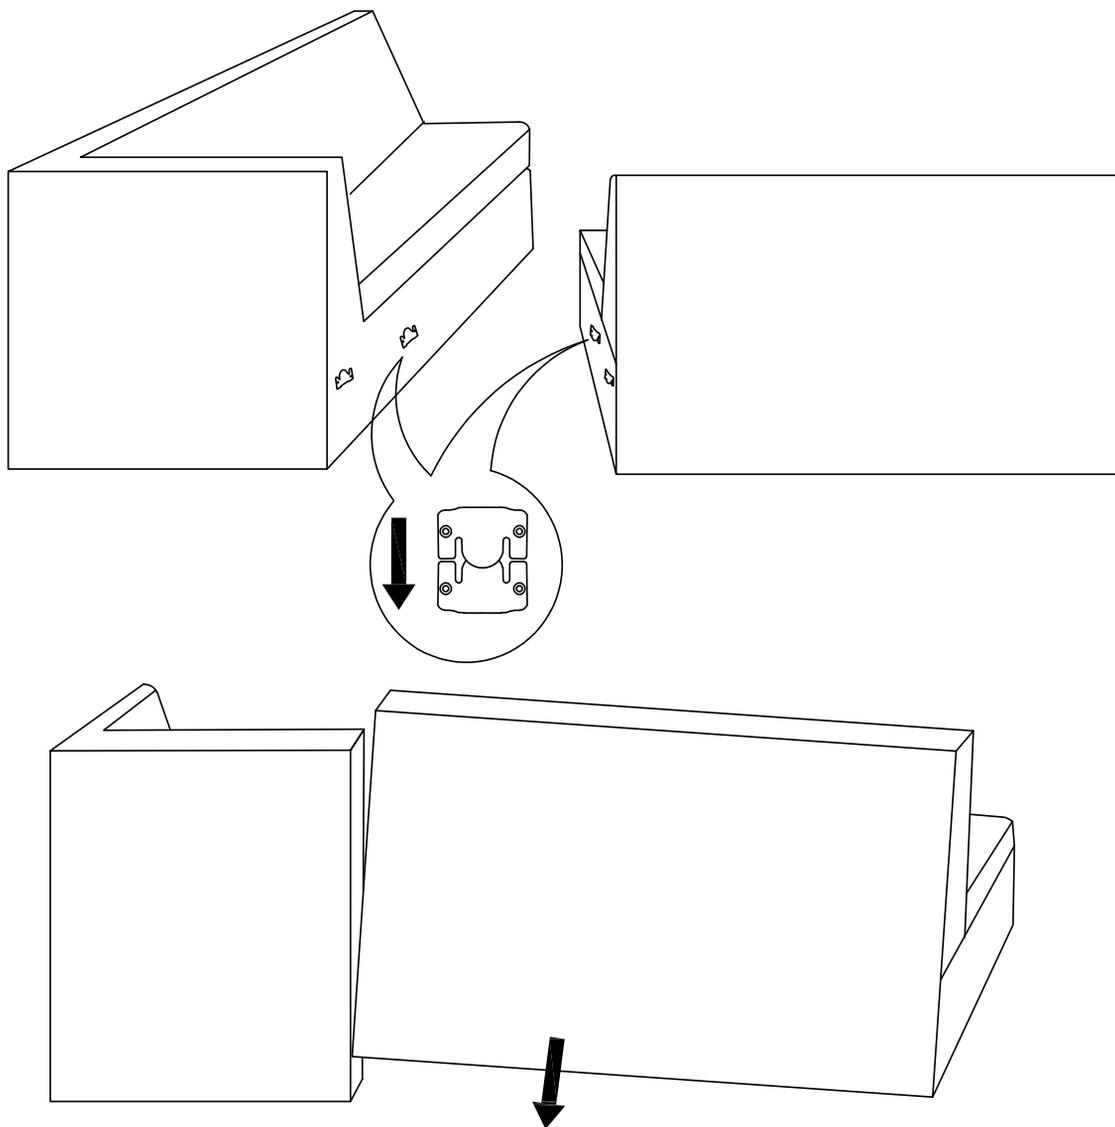


NEXT

ANDERSON DINING BANQUETTES WITH STORAGE

Self assembly instructions

Actual product size:

H 87 x W 235.5 x D169 cm

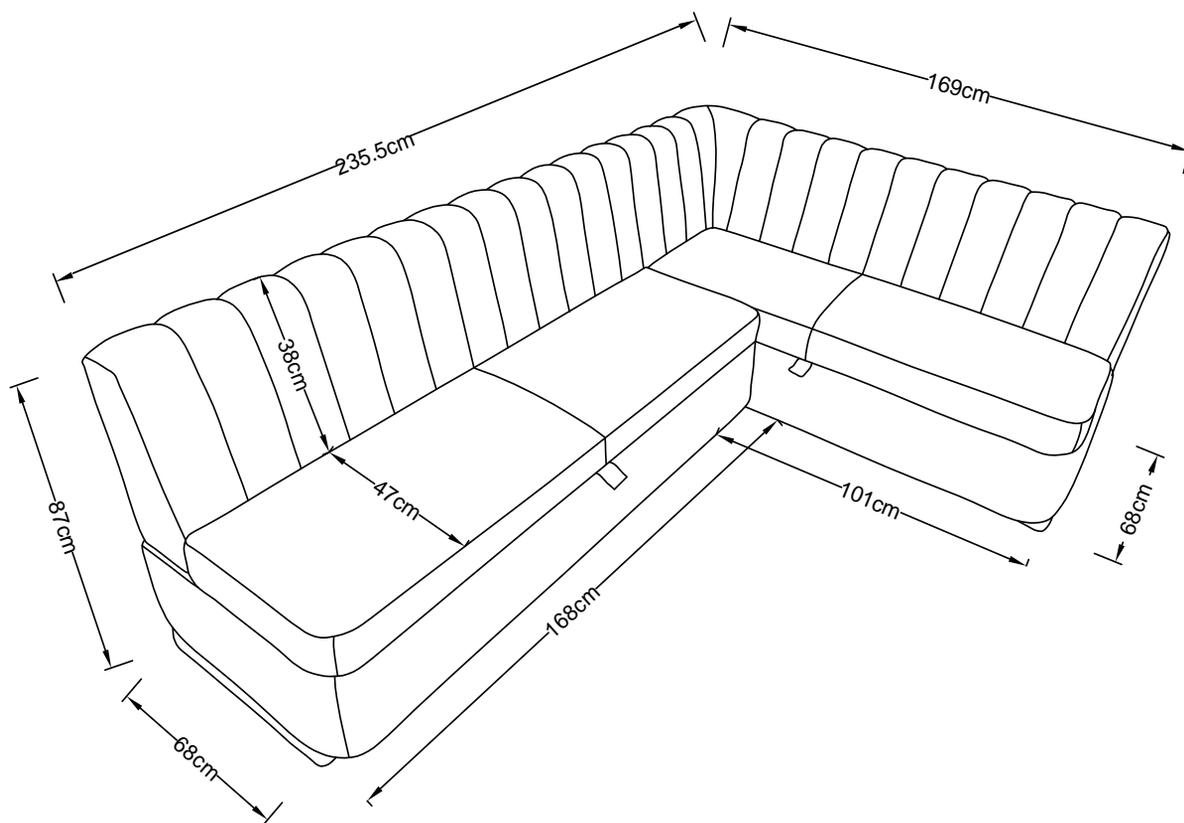

Need Help?

With: Assembly instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT – RETAIN FOR FUTURE REFERENCE