


NEXT

WOLTON BUTTON DINING CHAIR

T99531-T99530-967981-D78340-AB7813-B89708-B88814-Q53731-
E12092-D69044-N29096-F98999-W45775

Assembly instructions

Actual product size
H93×W54.5×D65cm

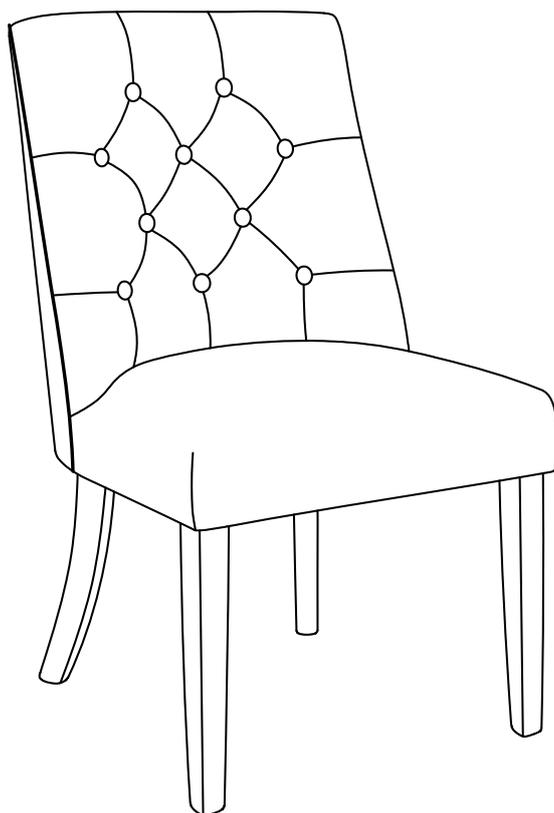

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999


IMPORTANT - RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Number of people required to assemble

One people are required to assemble this item

Time to assemble: 30 minutes

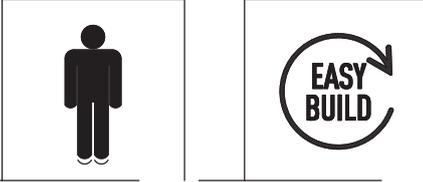

Item No.	Fabric name - leg	Fabric composition
T99531	CHUNKY WEAVE MID NATURAL - OAK EFFECT LEG	100% polyester
T99530	CHUNKY WEAVE MID GREY - OAK EFFECT LEG	100% polyester
967981	SOFT LINEN LOOK LIGHT NATURAL -OAK EFFECTED LEG	100% polyester
D78340	CHUNKY WEAVE MID NATURAL - WALNUT LEGS	100% polyester
AB7813	CHUNKY WEAVE MID BLUE-OAK EFFECTED LEGS	100% polyester
B89708	CHUNKY WEAVE MID NATURAL - BRONX LEG	100% polyester
B88814	CHUNKY WEAVE MID GREY - BRONX LEG	100% polyester
W45775	RELAXED LINEN LOOK FOREST GREEN-OAK EFFECTED LEGS	100% polyester
F98999	WOVEN TEXTURE LIGHT NATURAL-VALENCIA LIGHT LEGS	100% polyester
D69044	PLUSH CHENILLE MOSS - WALNUT LEGS	100% polyester
N29096	CHUNKY WEAVE MID CLAY NATURAL - OAK EFFECTED LEG	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd
Desford Road,
Leicester,
LE19 4AT


To view our full furniture range please visit www.next.co.uk

Need Help ?


With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

GETTING TO KNOW YOUR PRODUCT

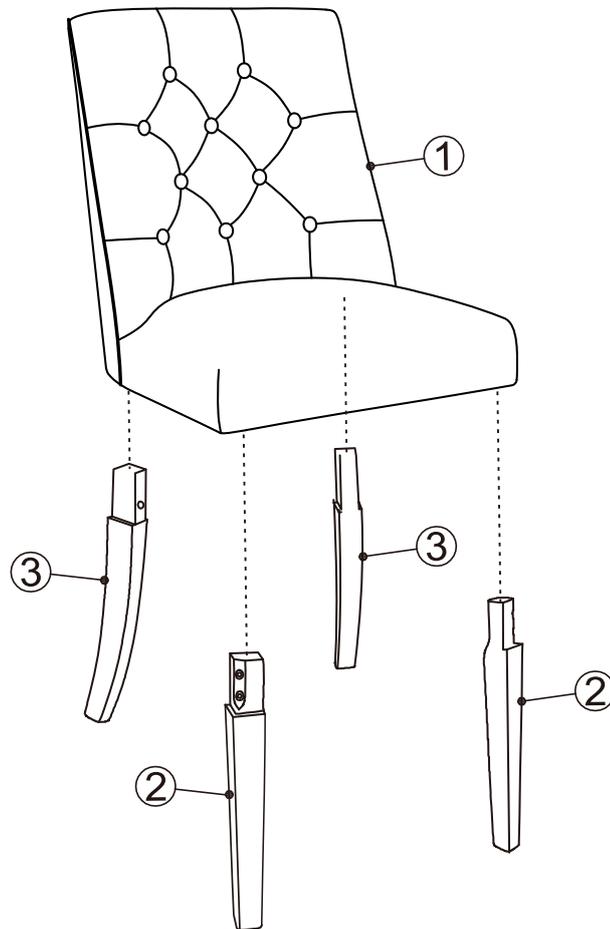

 Components supplied. Please use this guide if you require replacement parts.

Ref	Dimension	Visual	Qty
1	Seat: H58.5xW54.5xD65CM		1
2	Front Legs: 43x4.3x3CM		2
3	Back Legs: 42x4.7/3.3x3/3.3CM		2

Fixtures and fittings supplied (actual size)

Ref	Dimension	Qty	Spare
A	M8 x 55mm	4	1
B	M8 x 70mm	4	1
C	12mm	8	2
D	22mm	8	2
E	8 x 85mm	1	0


The diagram shows five hardware components labeled A through E. A ruler at the top indicates dimensions in millimeters from 0 to 130. Component A is a bolt with a length of 55mm. Component B is a longer bolt with a length of 70mm. Component C is a small circular washer with a diameter of 12mm. Component D is a larger circular washer with a diameter of 22mm. Component E is an L-shaped bracket with a vertical leg of 8mm and a horizontal leg of 85mm.

WOLTON BUTTON DINING CHAIR

T99531-T99530-967981-D78340-AB7813-B89708-B88814-Q53731-E12092-D69044-
W45775-N29096-F98999

Assembly instructions

1.

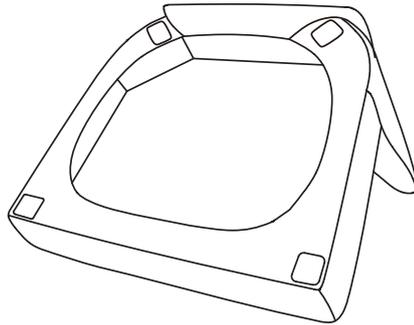


WARNING!


Open the bottom of the chair and take the legs out.


2.

A x 4	M8x55mm
	
C x 4	12mm
	
D x 4	22mm
	
E x 1	8x85mm
	

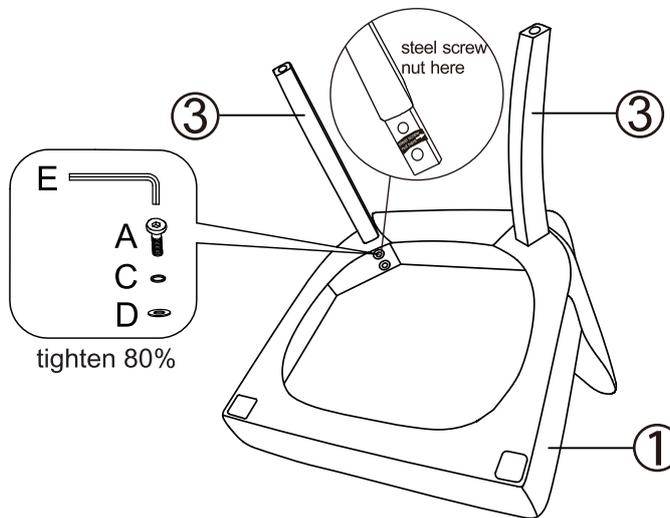

 3.

B x 4	M8x70mm
	
C x 4	12mm
	
D x 4	22mm
	
E x 1	8x85mm
	

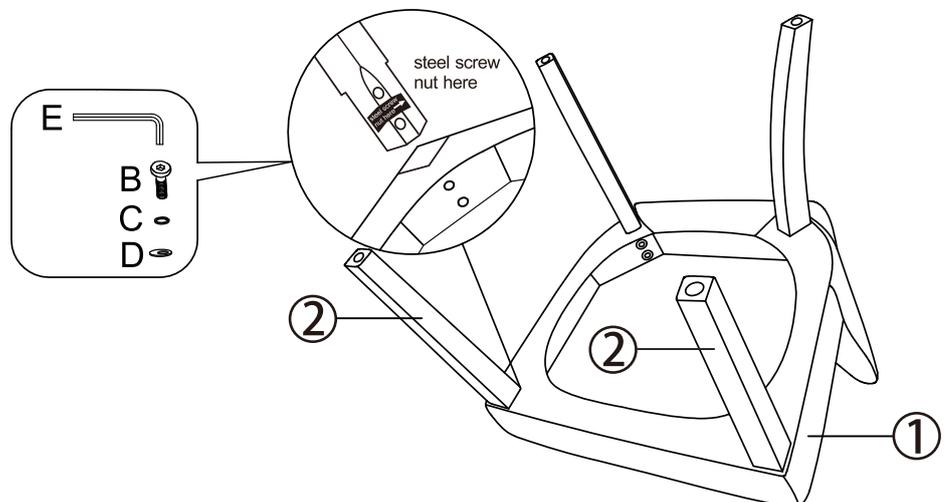


WOLTON BUTTON DINING CHAIR

T99531-T99530-967981-D78340-AB7813-B89708-B88814-Q53731-E12092-D69044-
W45775-N29096-F98999


Assembly instructions

4.

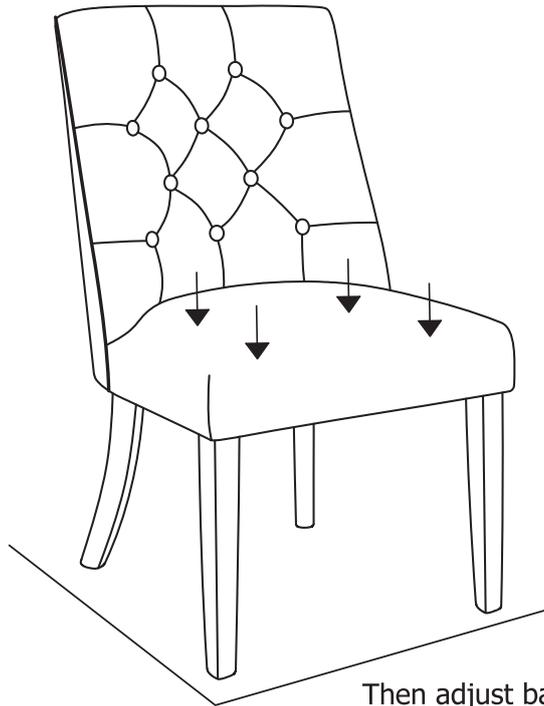

Then adjust balance of this chair
tighten all the screws to 100%.

5.

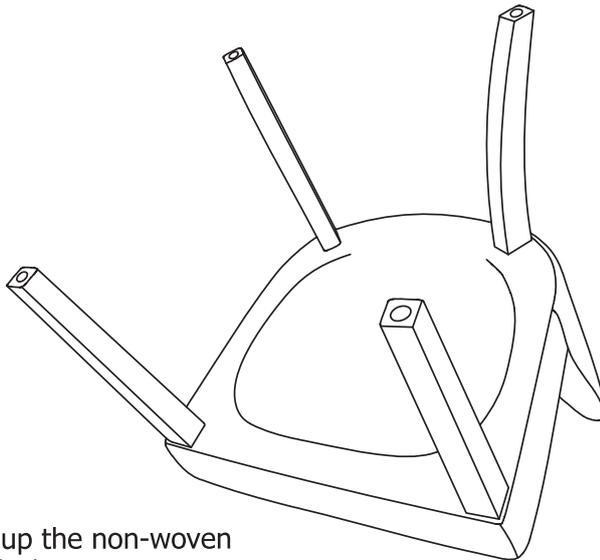

In the end , zip up the non-woven
cloth underneath the seat.

WOLTON BUTTON DINING CHAIR

T99531-T99530-967981-D78340-AB7813-B89708-B88814-Q53731-E12092-D69044-

NEXT

W45775-N29096-F98999

Assembly instructions

WOLTON BUTTON DINING CHAIR

T99531-T99530-967981-D78340-AB7813-B89708-B88814-Q53731-
E12092-D69044-N29096-F98999-W45775

Assembly instructions

Actual product size

H93×W54.5×D65cm

