


NEXT

Actual product size

Single chair: W65xD62xH67.5CM

Extending table: L210/270xW100xH75CM

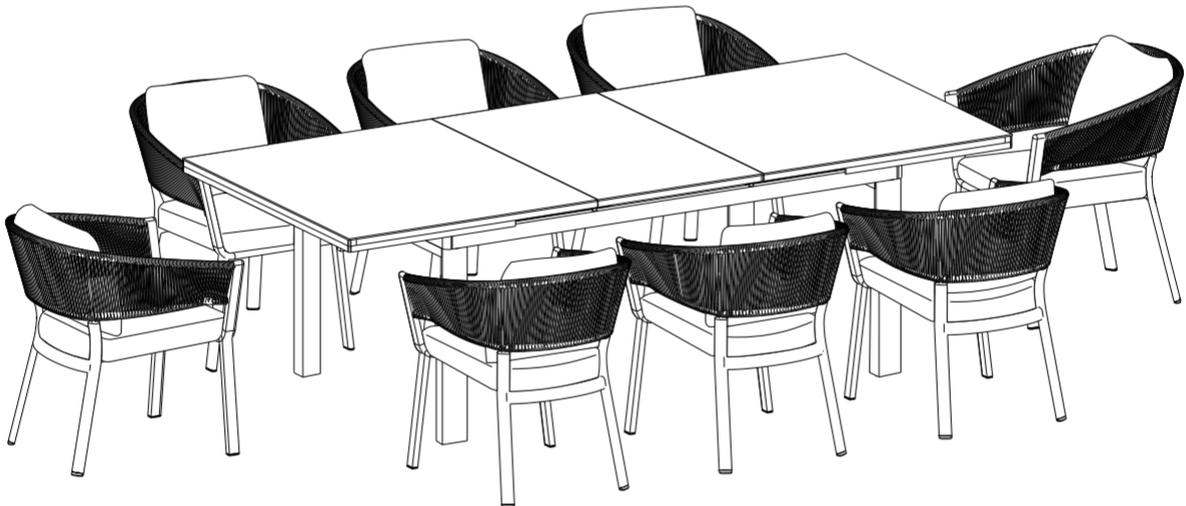

Item	Colour	Fabric
W46739	Natural	47% Olefin, 53% Polyester

IMPORTANT-RETAIN FOR FUTURE REFERENCE

Need Help ?

With: Assembly instruction

Missing or damaged parts

CALL: 0333 777 8999

SOLLER EXTENDING DINING SET-W46739

Assembly instructions

BEFORE YOU START

Number of people required to assemble

Two people are required to assemble this item

Time to assemble: 40 minutes



Warnings

This product is for domestic and outdoor use only. We suggest you retain these instructions for future reference.

Keep fittings out of children's reach. Keep children away when constructing your furniture.

This product should only be used on firm level ground.

Do not sit on the table.

Do not jump or stand on the product.

Do's

Do spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space. Due to the size of the product we recommend that it is assembled in the location intended for final use.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect any fabrics and surfaces during assembly.

Before beginning assembly carefully check that you have all the parts and fixings. Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use.

Please retain the assembly tools. You will need them in the future to re-tighten the bolts, or if you want to dismantle the furniture for storage.

Please make sure that the product is clean and dry before putting it into storage.

Do not

Do not position your product close to sources of intense heat, such as barbecues or patio heaters.

Do not sit on arms or the back of seating which may cause distortion or damage the frame.

Do not wash covers in a washing machine.

Do not use a jet or pressure washer to clean your furniture.

Avoid allowing pets on upholstered products as their claws may cause damage to the leather or fabric.

Care & Maintenance

Check fixings regularly to ensure they remain tight.

Lift the assembled product when moving it; do not drag it as this can cause damage.

The frame of this product is suitable for all year outdoor use. It is however still recommended to cover products when not in use for long periods to keep it clean.

Cushions are resistant to light summer showers, the water resistant covers will prevent the fillings from getting wet. However in heavy showers or long periods of wet weather they should be taken indoors or stored in a shed, garage or cushion box. Take cushions in at night or when it's raining as the dampness will cause mould to grow.

Fabrics have been tested for outdoor suitability; even so, please be aware that, over time, fabrics may fade a little after exposure to direct sunlight for long periods.

Regularly plump cushions to maintain their shape.

Cleaning

Regularly clean with a vacuum cleaner or lightly brush with a soft bristled brush.

Covers should be cleaned with a damp soapy cloth or sponge. Soak up any spillages quickly by blotting with a clean, dry absorbent cloth.

Any remaining stains should be removed with using water, but stubborn stains may need a mild household detergent.

Solid spillages should be removed with a teaspoon or flat utensil, before following the instructions for spillages.

Repeat until the stain is removed and allow to air dry.

Clean cushions in situ only.

Do not remove cushion covers to clean. DO NOT WASH.

Clean all parts of the product at the same time.

For stubborn stains contact a professional cleaner.

When cleaning glass panels use a damp cloth with washing up liquid or soft soap if necessary. Do not use washing powders or any other substances containing abrasives since these substances can scratch the glass.

We recommend that the product is protected with mats & coasters when items are placed on to its surface. Never put hot dishes directly onto glass surfaces as this may mark the furniture. If the glass is chipped or broken, stop using the product and consult Next.

Do not place very hot or very cold items on the glass surface, unless adequately thick table mats are used to prevent such items from coming into contact with the glass. Do not use glass as a chopping surface. Do not strike the glass with hard or pointed items.

Home service technicians

If you have a fault with your product please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT

To View our full furniture range please visit www.next.co.uk

Need Help ?


With: Assembly instruction
Missing or damaged parts
CALL: 0333 777 8999

NEXT

SOLLER EXTENDING DINING SET

W46739-Assembly instructions

GETTING TO KNOW YOUR PRODUCT

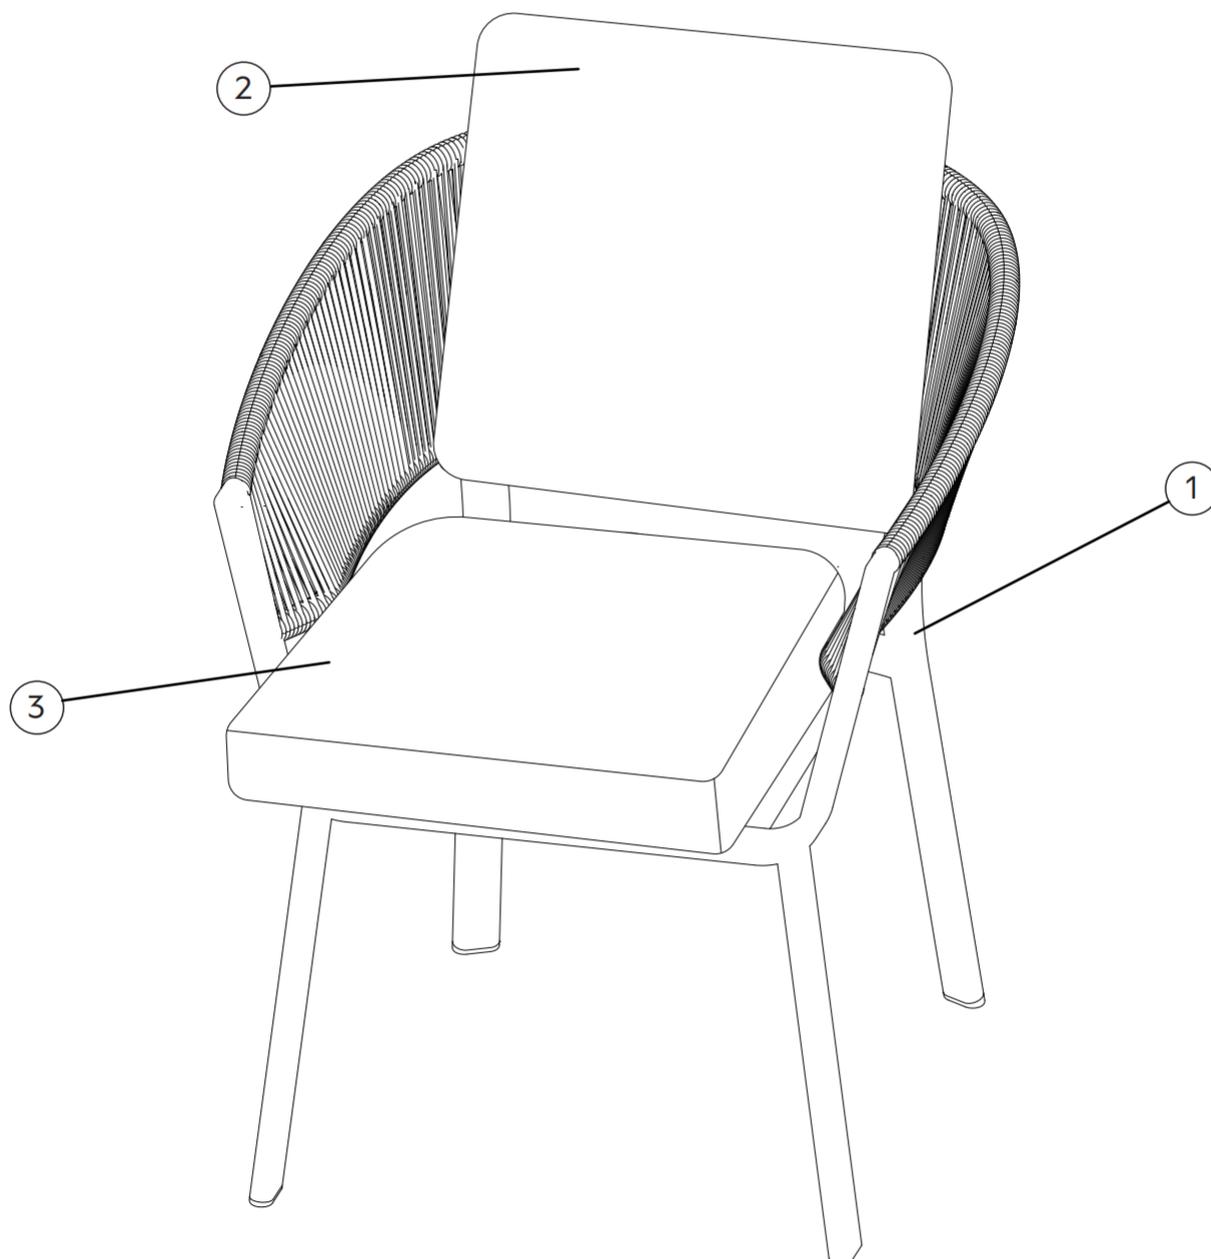


NEXT

SOLLER EXTENDING DINING SET

N46739-Assembly instructions

Components supplied. Please use this guide if you require replacement parts.

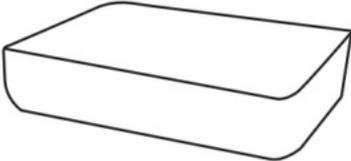Ref	Dimensions	Visual	Qty	Ctn
1	650 x 615 x 675mm		8	2&3
2	400 x 390 x 160mm		8	2&3
3	530 x 430 x 90mm		8	2&3


Ref	Description	Composition	Colour
1	Single chair - Frame	Aluminum frame with powder coating	Camel grey
	Single chair - Rope	Outer layer- Polyester , inner filling -Polyester	Beige Brown
2	Back cushion - Fabric	47% Olefin, 53% Polyester	Ivory White
	Back cushion - Filling	100% Polypropylene	White
3	Seat cushion - Fabric	47% Olefin, 53% Polyester	Ivory White
	Seat cushion - Filling	79% Polyurethane & 21% polyester	White & Blue

NEXT



SOLLER EXTENDING DINING SET

W46739-Assembly instructions

GETTING TO KNOW YOUR PRODUCT

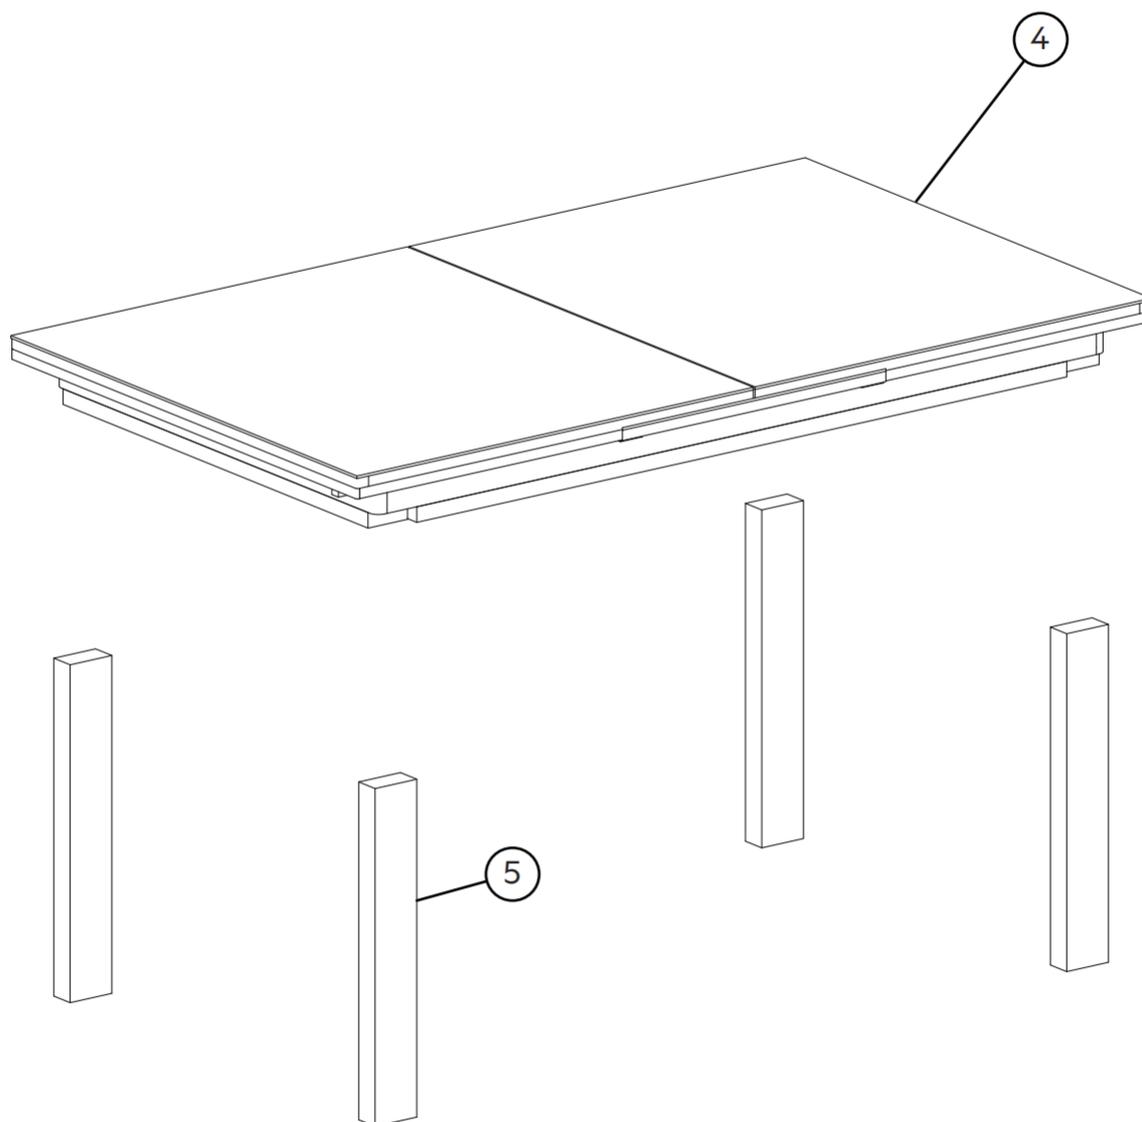


 Components supplied. Please use this guide if you require replacement parts.

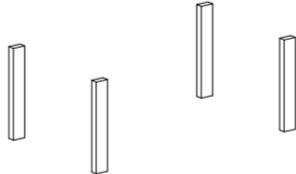Ref	Dimensions	Visual	Qty	Ctn
4	2100/2700 x 1000 x 115mm		1	1
5	60 x 60 x 700mm		4	1

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
A	M8 x 40mm	8	1
B	M8	8	1
C	M8	8	1

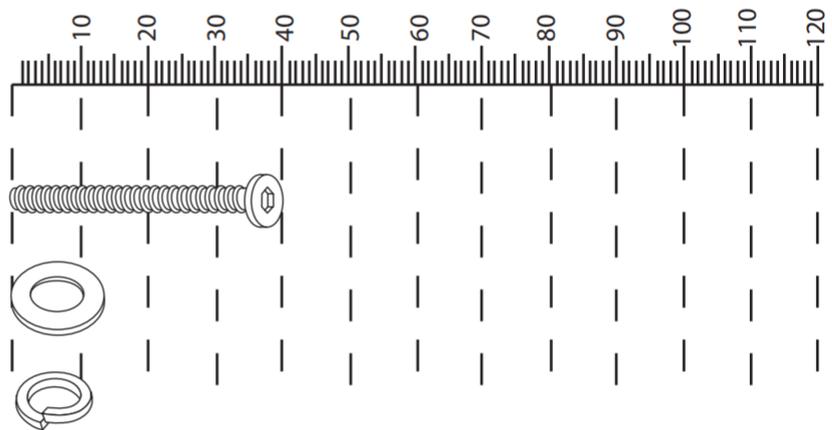

Fixtures and fittings supplied (not to scale)


Ref	Dimensions	Qty	Spare Qty	Visual
D	M8	2	N/A	

Ref	Description	Composition	Colour
1	Table Top	Ceramic Glass	Marble effect
2	Table Frame	Aluminum frame with powder coating	Camel grey
3	Table Leg	Aluminum frame with powder coating	Camel grey

NEXT SOLLER EXTENDING DINING SET

W46739-Assembly instructions

GETTING TO KNOW YOUR PRODUCT

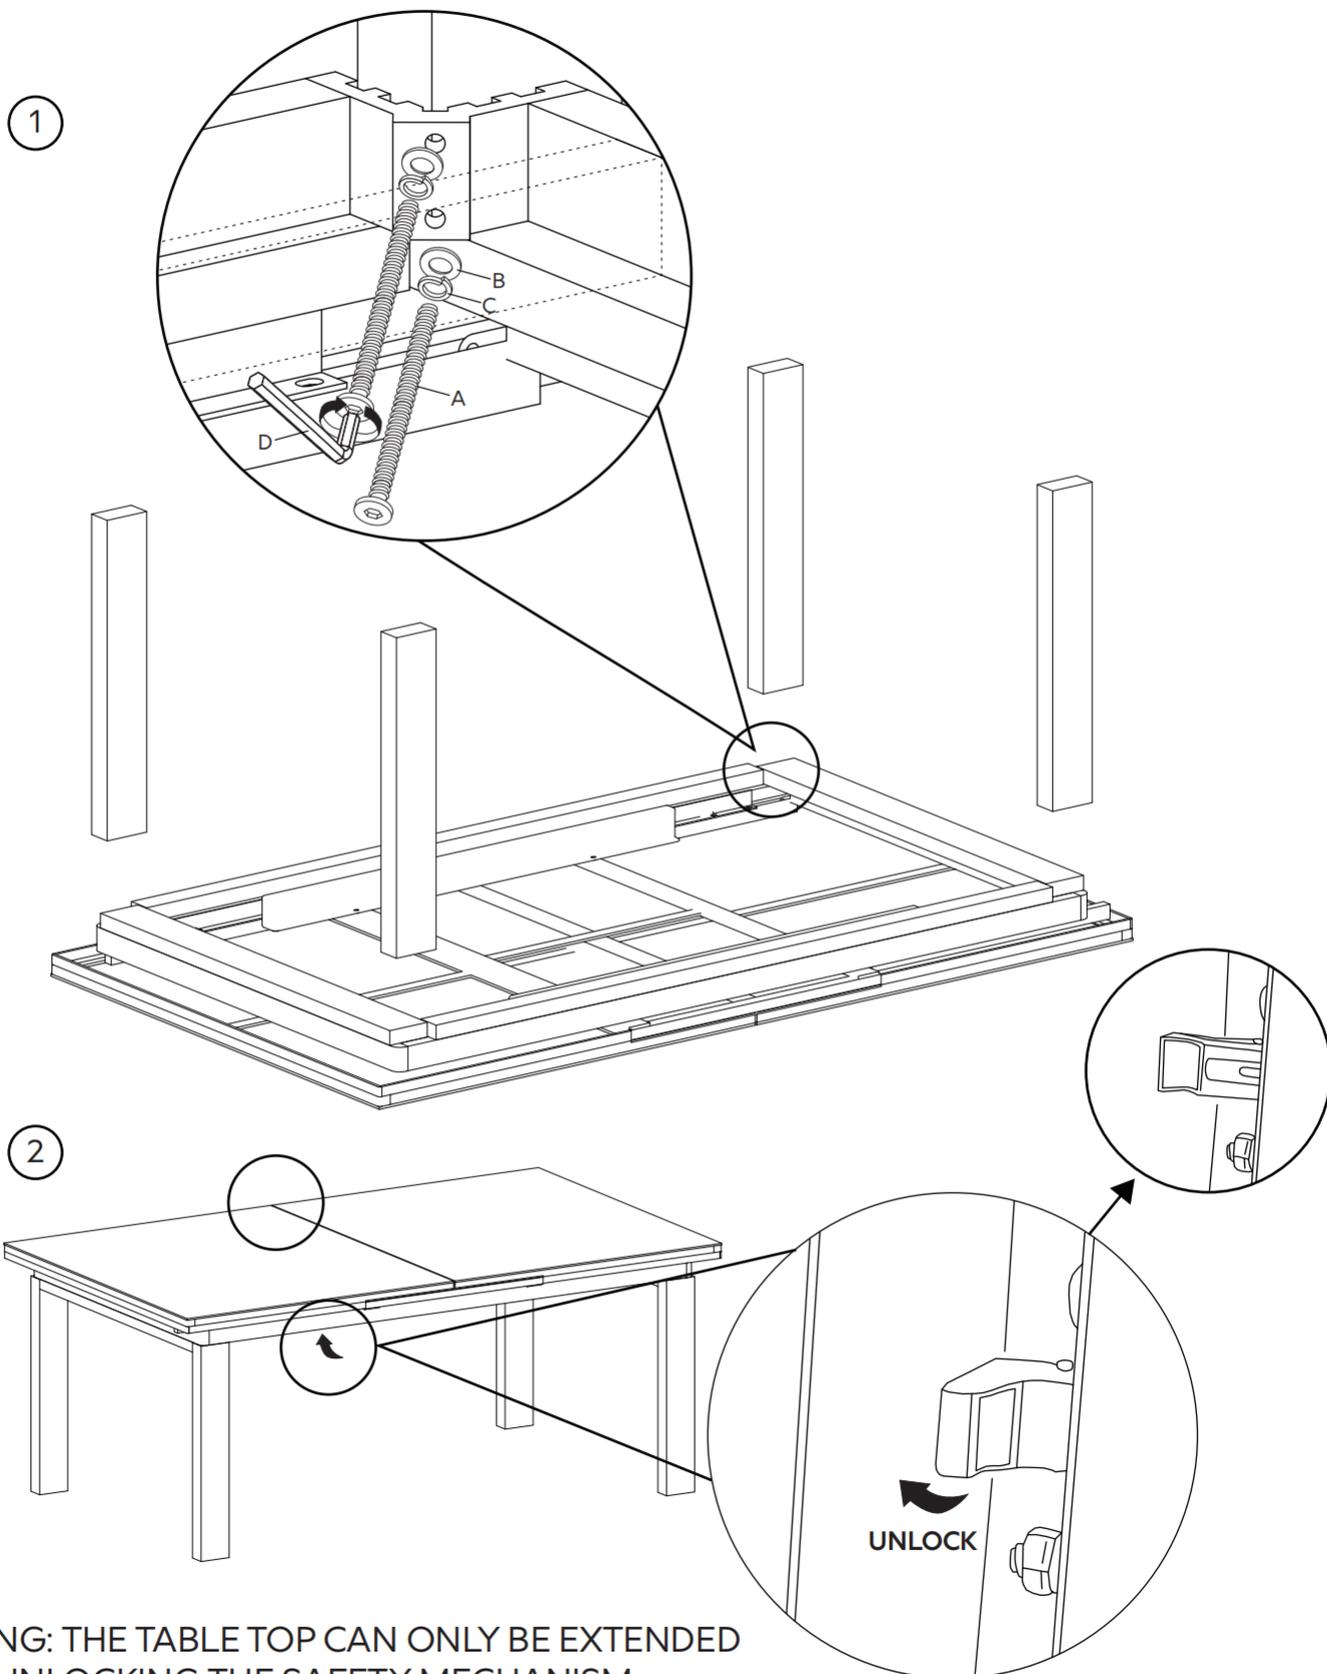


WARNING: THE TABLE TOP CAN ONLY BE EXTENDED AFTER UNLOCKING THE SAFETY MECHANISM

NEXT SOLLER EXTENDING DINING SET

W46739-Assembly instructions

GETTING TO KNOW YOUR PRODUCT

LIFTING THE TABLE

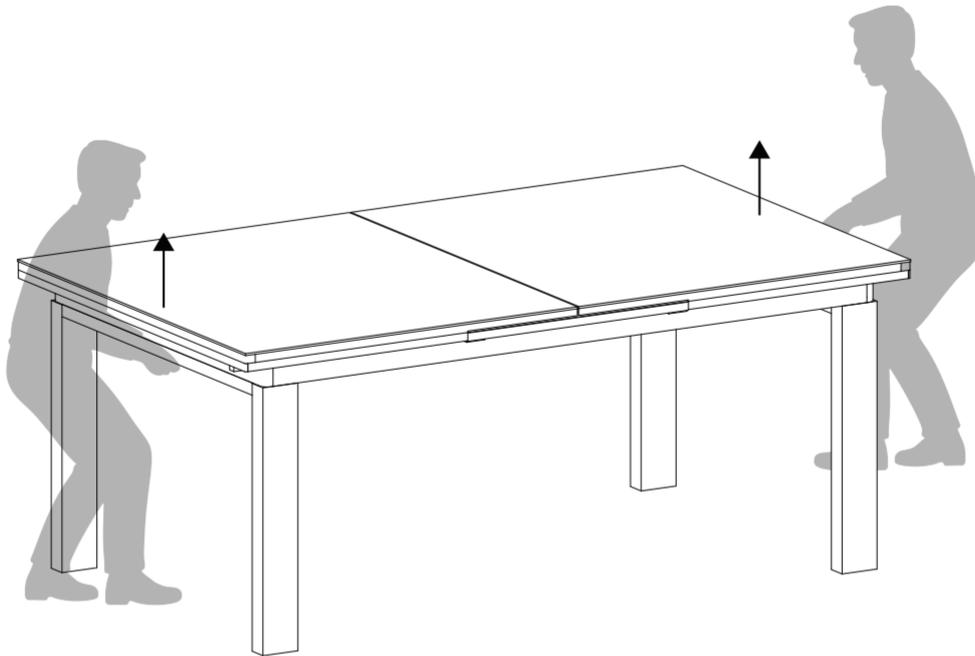


**WARNING: LIFT THE TABLE FROM
THE SHORT SIDES ONLY**

NEXT SOLLER EXTENDING DINING SET

W46739-Assembly instructions

GETTING TO KNOW YOUR PRODUCT EXTENDING THE TABLE

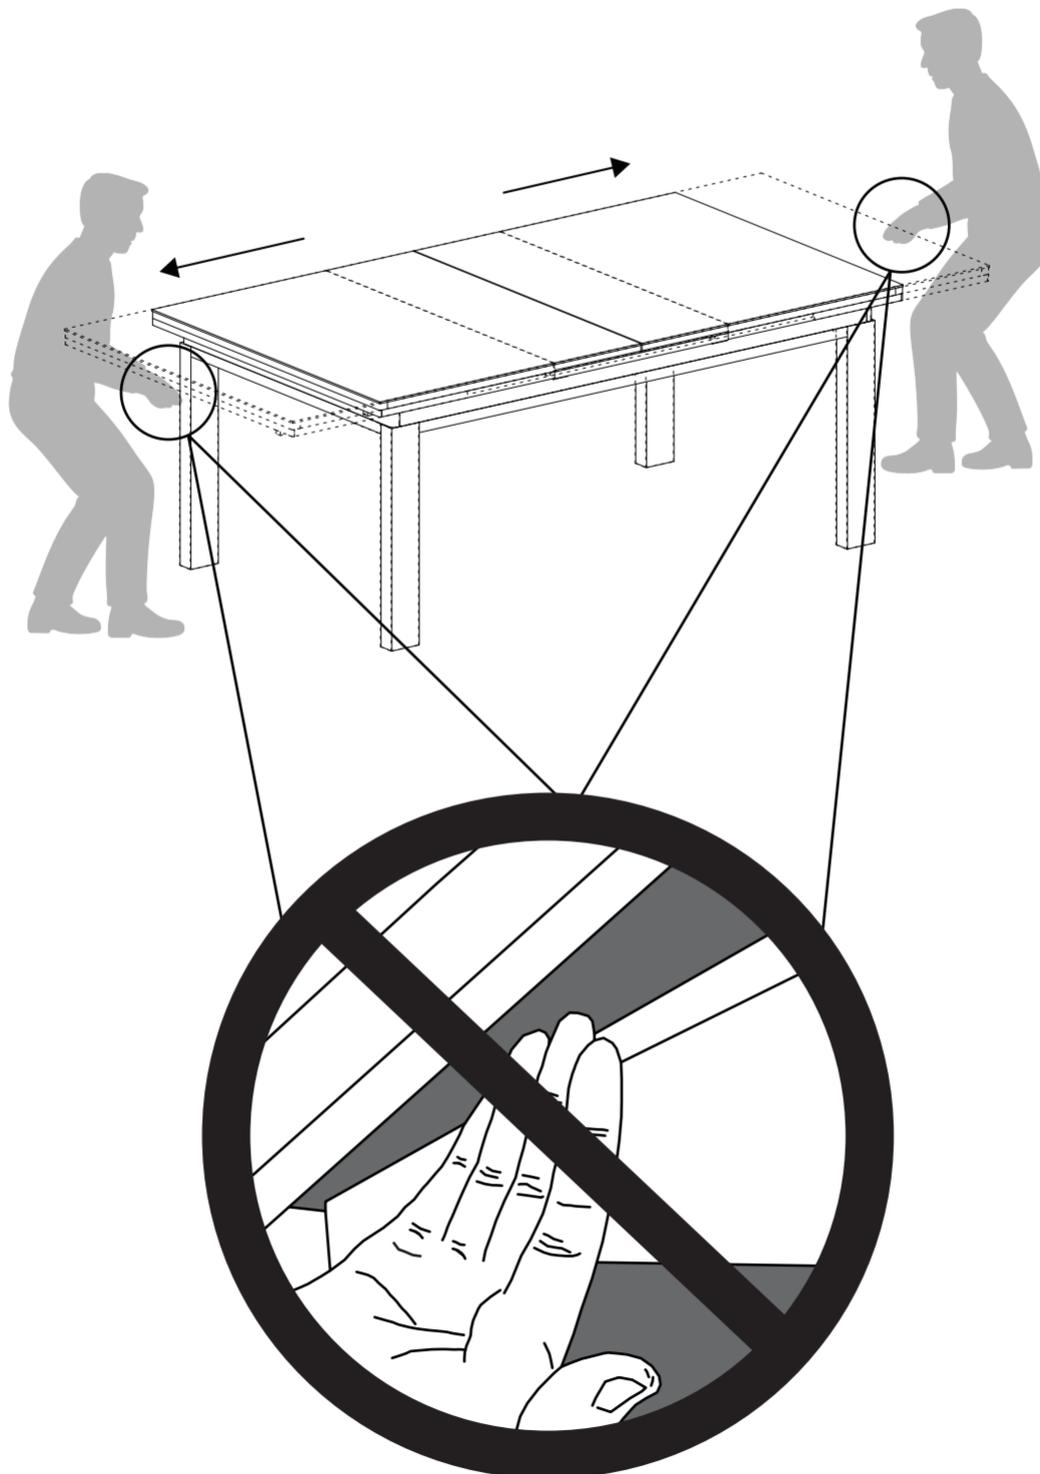

WARNING: DO NOT INSERT FINGERS
UNDER THE TABLE TOP FRAME. PULL FROM
BOTH ENDS TO EXTEND, AVOID PUSHING
FROM THE CENTER.

SOLLER EXTENDING DINING SET

Assembly instructions

NEXT


SOLLER EXTENDING DINING SET-W46739

Assembly instructions

Actual product size

Single chair: W65xD62xH67.5CM

Extending table: L210/270xW100xH75CM

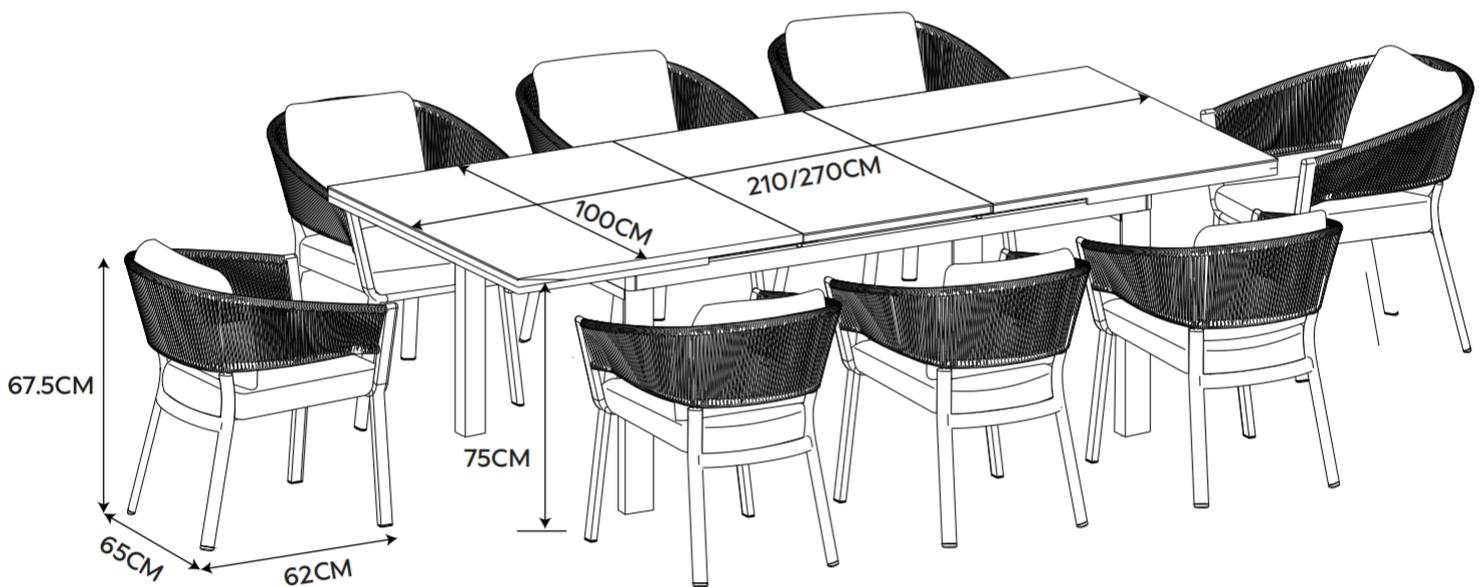

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT-RETAIN FOR FUTURE REFERENCE