

NEXT


CARTER CHAIR

D91489-N33815-D74256-4880C8-258396-D55556-
T81768-U69621-T81769-H59777-W66560

Assembly instructions

Actual product size

H83×W71×D73cm

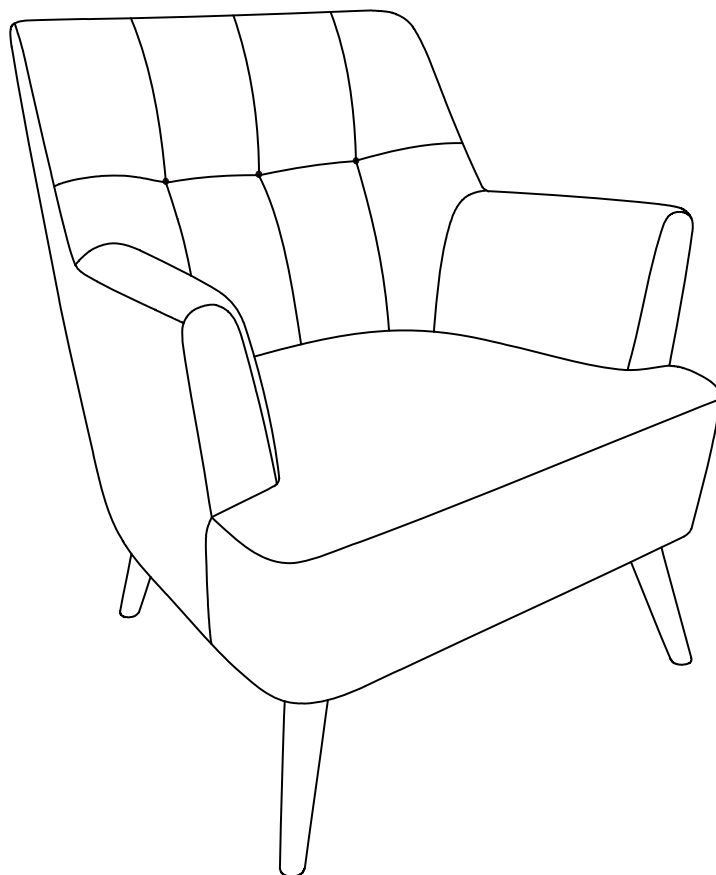

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Assembly instructions

Number of people required to assemble

One people are required to assemble this item

Time to assemble: 30 minutes

Item No.	Fabric name - leg	Fabric composition
D91489	FINE CHENILLE OCHRE - OAK EFFECT LEG	100% polyester
N33815	PLUSH CHENILLE NAVY- WALNUT LEG	100% polyester
D74256	SOFT VELVET SAGE - WALNUT LEG	100% polyester
4880C8	TWEEDY PLAIN MID NATURAL-OAK EFFECTED LEG	100% polyester
258396	FINE CHENILLE MID GREY - NATURAL LEG	100% polyester
D55556	MONZA FAUX LEATHER PEPPERCORN BROWN - WALNUT LEG	100% polyester
T81768	SOFT VELVET RUST - WALNUT LEG	100% polyester
U69621	SOFT VELVET JUNIPER- WALNUT LEGS	100% polyester
T81769	TWEEDY PLAIN LIGHT NATURAL - OAK EFFECTED LEGS	100% polyester
H59777	MONZA FAUX LEATHER MINK-BLACK LEG	100% polyester
W66560	CASUAL BOUCLE OLIVE GREEN-DARK OAK LEG	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground. Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

You can write to us at

Home Customer Services
Next Retail Ltd
Desford Road,
Leicester,
LE19 4AT


To view our full furniture range
please visit www.next.co.uk

Need Help ?


With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

GETTING TO KNOW YOUR PRODUCT

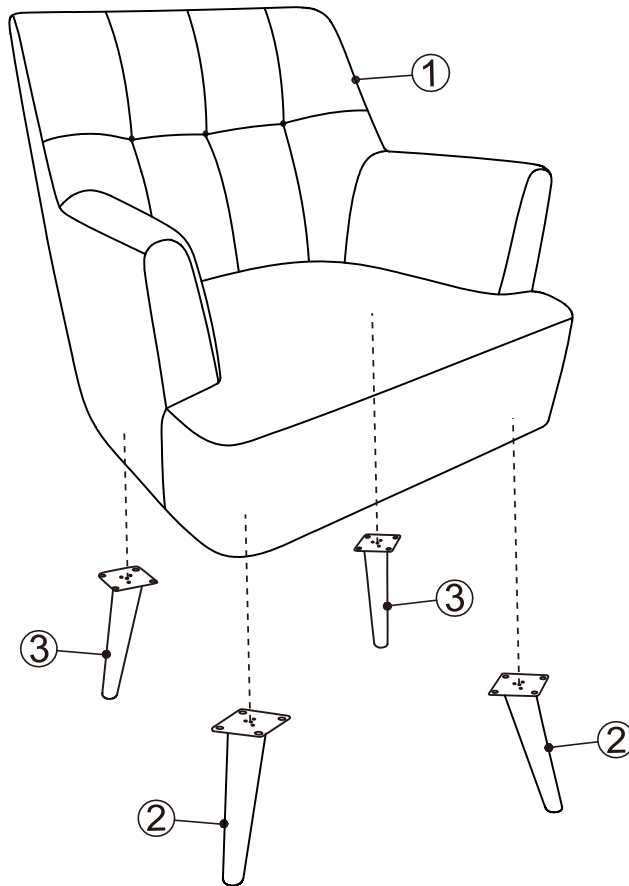


Components supplied. Please use this guide if you require replacement parts.

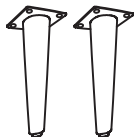Ref	Dimension	Visual	Qty
1	Seat: H63xW71xD73CM		1
2	Front Legs: 20.5x4.8x2.6CM		2
3	Back Legs: 20.5x4.8x2.6CM		2

Fixtures and fittings
supplied (actual size)

Ref	Dimension	Qty	Spare
A	M6X 25mm	16	2
B	6 X80mm	1	0

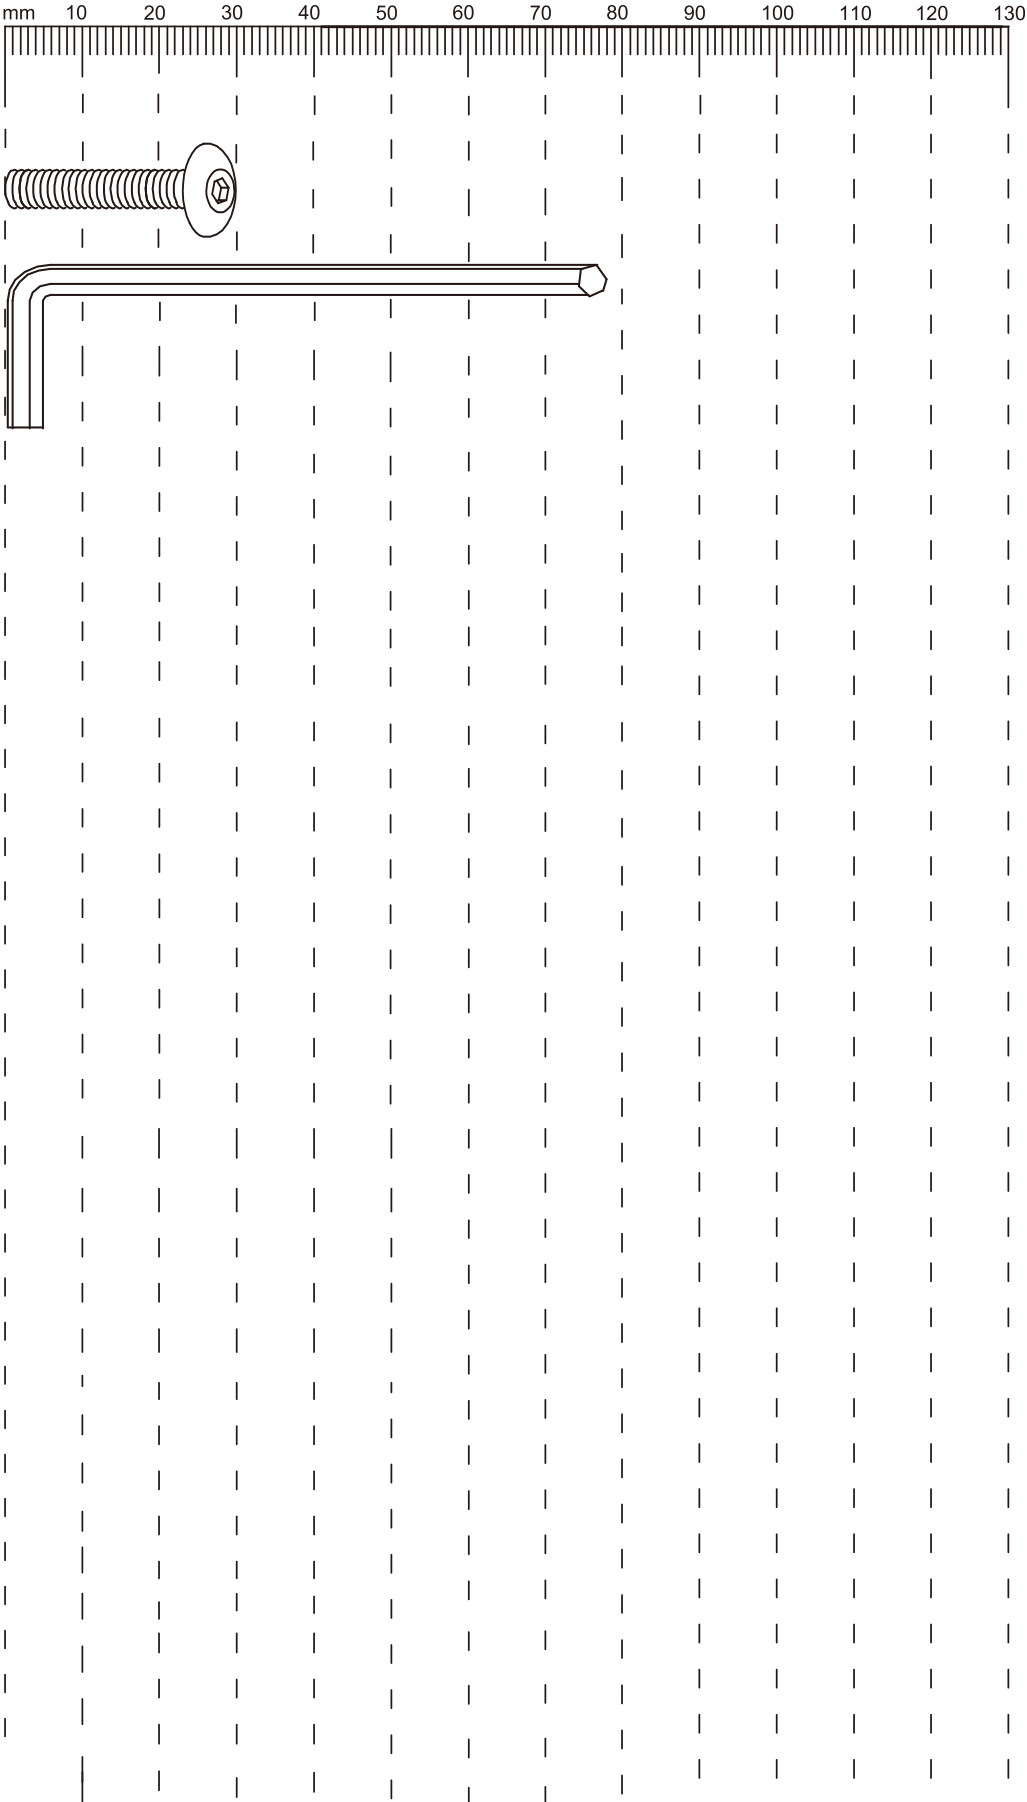


CARTER CHAIR

H59777-D91489-N33815-D74256-4880C8-258396-D55556-T81768-U69621-T81769

-W66560

Assembly instructions


1.

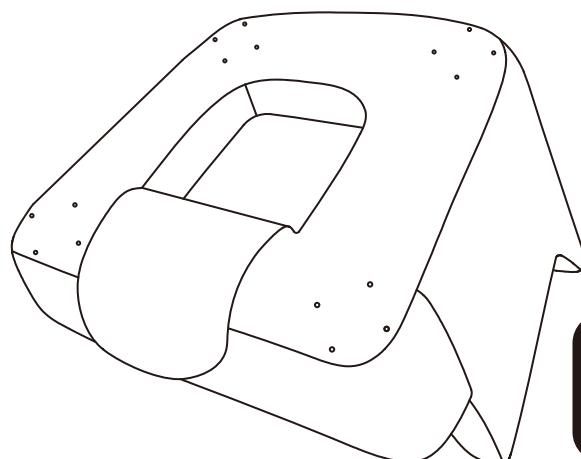

WARNING!

Open the bottom of the chair and take the legs out.

2.

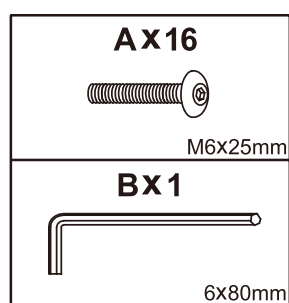


AX16




M6x25mm

 BX1




6x80mm

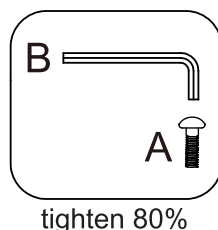

B


A

tighten 80%

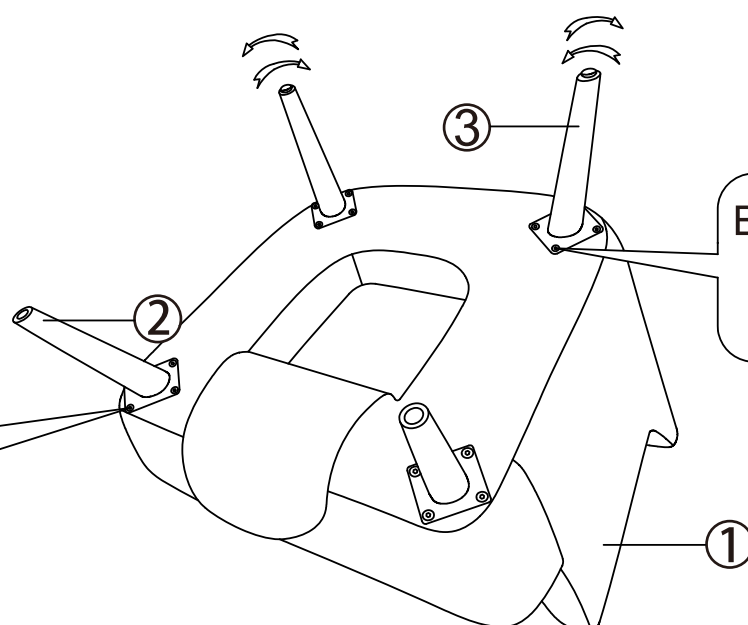

3

2

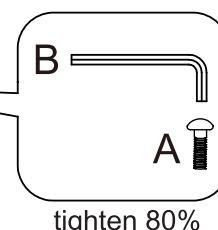

B

A

tighten 80%

1


CARTER CHAIR

H59777-D91489-N33815-D74256-4880C8-258396-D55556-T81768-U69621-T81769

-W66560


Assembly instructions

3.

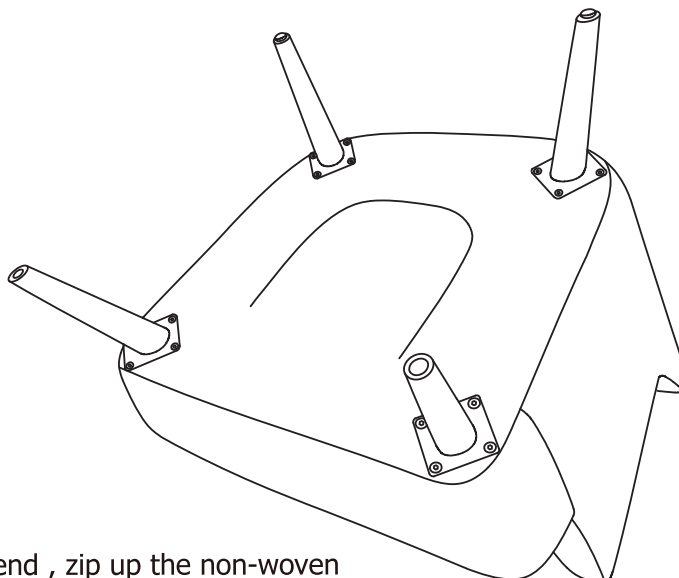

In the end , zip up the non-woven cloth underneath the seat.

4.

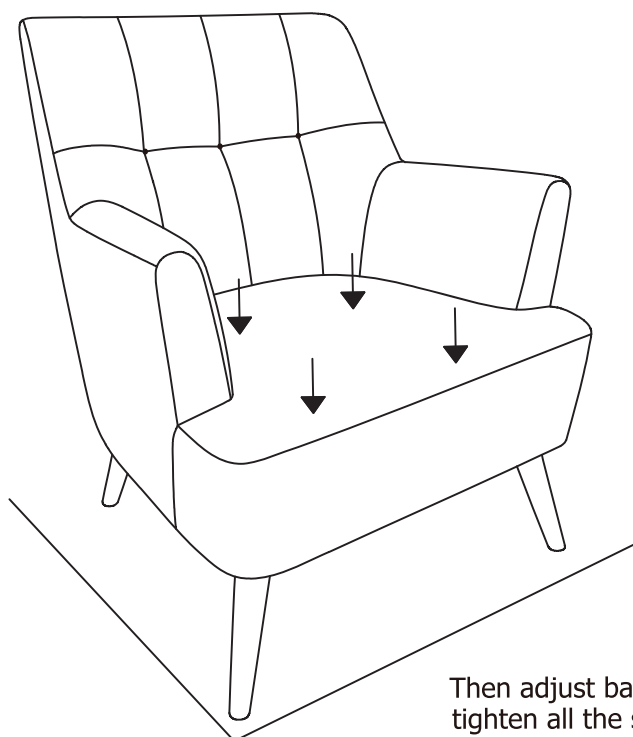

Then adjust balance of this chair,
tighten all the screws to 100%.

NEXT

CARTER CHAIR

D91489-N33815-D74256-4880C8-258396-D55556-
T81768-U69621-T81769-H59777-W66560

Assembly instructions

Actual product size

H83×W71×D73cm

CAUTION: Maximum weight capacity of this chair is 130kg.

