


NEXT

REMI HIGH BACK CHAIR W24542-W83175

Assembly instructions

Actual product size
H88×W72×D78cm

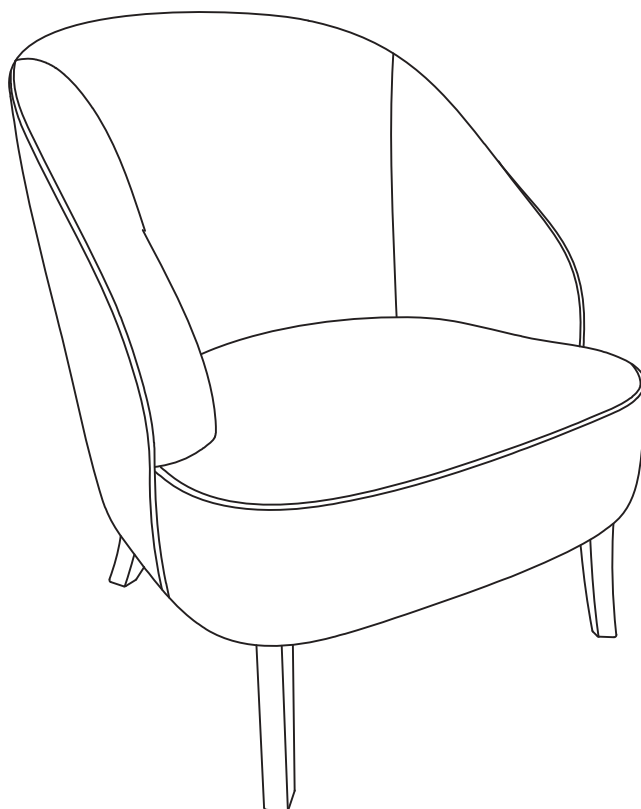

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Number of people required to assemble

One people are required to assemble this item

Time to assemble: 30 minutes



Item No.	Fabric name - leg	Fabric composition
W24542	SOFT VELVET PEBBLE(SOFT VELVET BLACK PIPE) - BLACK LEG	100% polyester
W83175	BOUCLE CHENILLE TAPESTRY PRINT (SOFT VELVET DARK GREY PIPE)- BLACK LEG	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground. Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

You can write to us at

Home Customer Services
Next Retail Ltd
Desford Road,
Leicester,
LE19 4AT


To view our full furniture range please visit www.next.co.uk

Need Help ?


 

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

GETTING TO KNOW YOUR PRODUCT

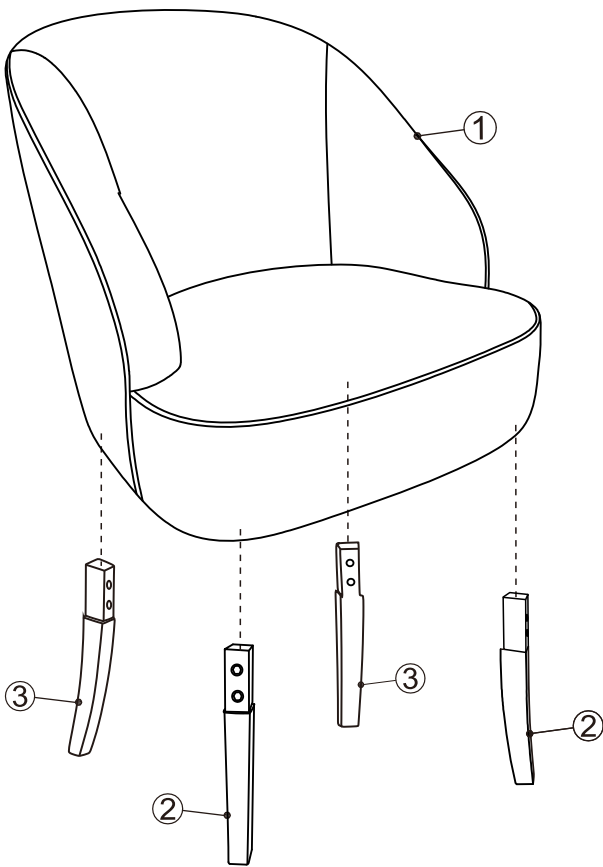

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimension	Visual	Qty
1	Back: H68xW72xD76.5CM		1
2	Front Legs: 32x4.8x3.4CM		2
3	Back Legs: 30.5x4.8x3.4CM		2


REMI HIGH BACK CHAIR

W24542-W83175


Assembly instructions

Fixtures and fittings
supplied (actual size)

Ref	Dimension	Qty	Spare
A	M8 x 60mm	8	1
B	12mm	8	1
C	22mm	8	1
D	8 x 85mm	1	0

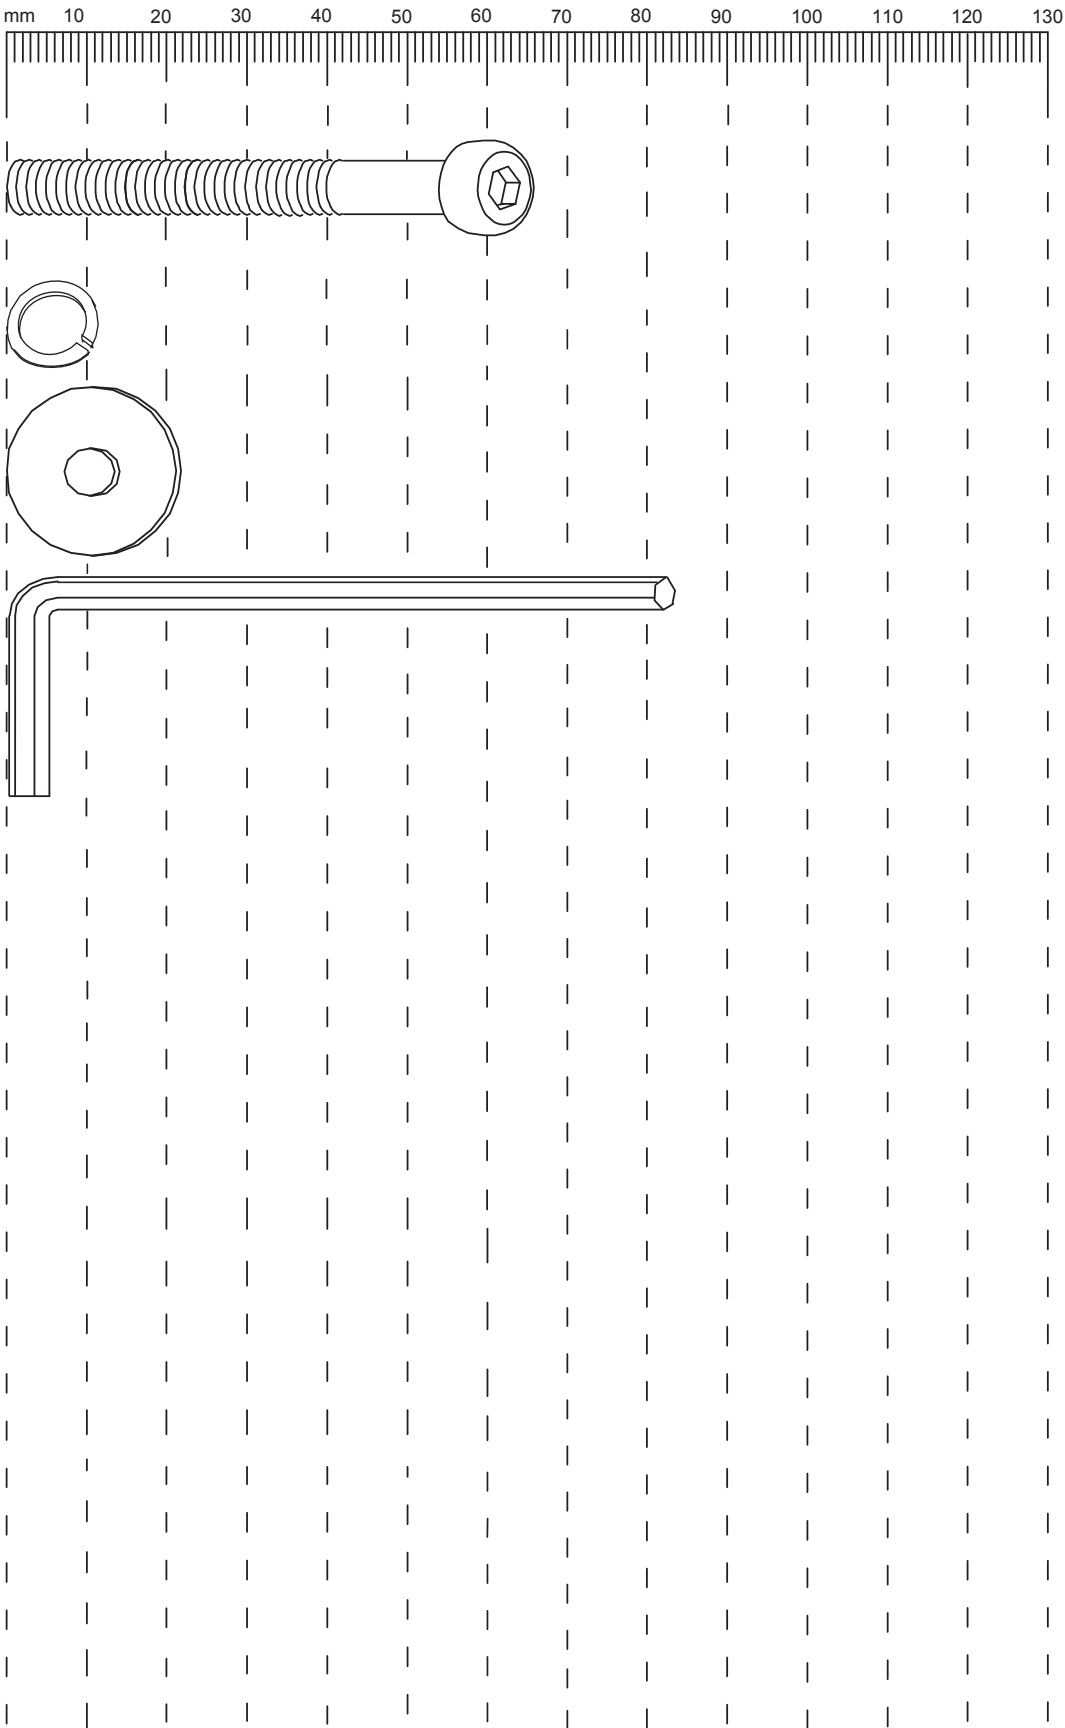

 1.




2.

3.

This diagram illustrates the assembly of the backrest. The main view shows the backrest being attached to the seat frame (labeled 1). Two vertical support bars (labeled 2) are shown being inserted into the frame. Arrows indicate the direction of movement for these bars. An inset provides a detailed view of the connection point, showing a 'steel screw' and a 'nut here'. A separate inset shows the required hardware: a screw (A), a small oval washer (B), and a larger oval washer (C). A bracket (D) is also shown, likely for the backrest's base.


REMI HIGH BACK CHAIR
W24542-W83175
Assembly instructions

4.

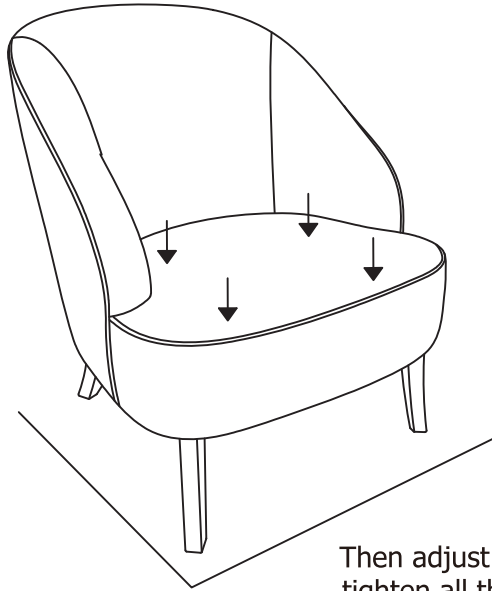

Then adjust balance of this chair
tighten all the screws to 100%.

5.

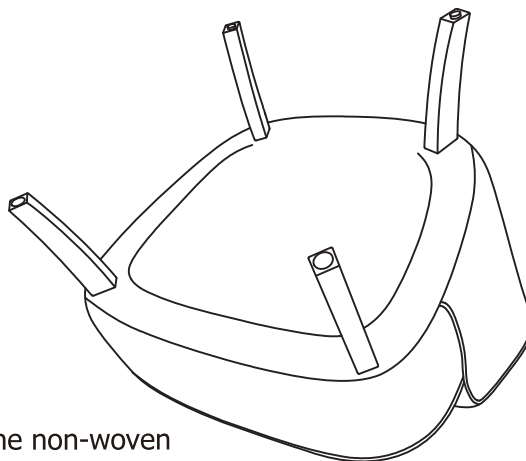

In the end , zip up the non-woven
cloth underneath the seat.

NEXT

REMI HIGH BACK CHAIR
W24542-W83175
Assembly instructions

REMI HIGH BACK CHAIR
W24542-W83175

Assembly instructions

Actual product size
H88×W72×D78cm

CAUTION: Maximum weight capacity of this chair is 130kg.

