

NEXT


FLINTON ACCENT CHAIR

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H20238-H20239-F66222-H59775-W85415

Assembly instructions

Actual product size

H86×W71×D85.5cm

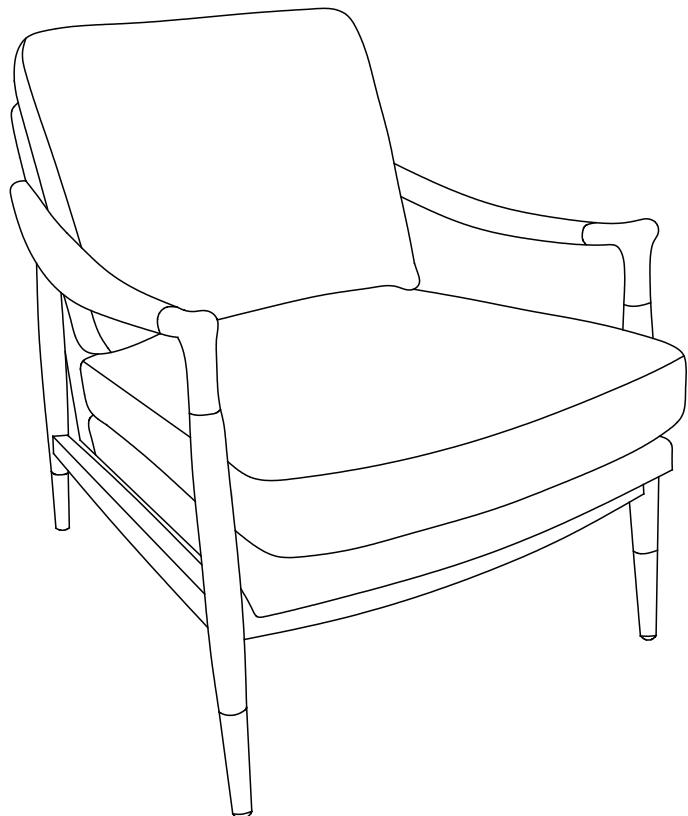

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

Produced in China for Next Retail Ltd.

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-F66264-H20238-H20239-F66222-H59775-W85415-2025-V1.

BEFORE YOU START

Number of people required to assemble

One people are required to assemble this item

Time to assemble: 30 minutes



Item No.	Fabric name - leg	Fabric composition
F66222	ALASKA LEOPARD FAUX FUR--WALNUT FRAME	100% polyester
F66264	TWEEDY BOUCLE MINK-WALNUT FRAME	100% polyester
W85415	DRY HANDLE BOUCLE SAGE & GREEN -WALNUT FRAME	100% polyester
H20239	SOFT VELVET NAVY -WALNUT FRAME	100% polyester
B70641	DISTRESSED FAUX LEATHER BLACK-BLACK FRAME	100% polyester
H59775	MONZA FAUX LEATHER DARK GREY-WALNUT FRAME	100% polyester
4873T6	SOFT VELVET RUST - WALNUT FRAME	100% polyester
D91483	VINTAGE FAUX LEATHER LIGHT BROWN -WALNUT FRAME	100% polyester
M63147	PLUSH CHENILLE MOSS - WALNUT FRAME	100% polyester
N57554	PLUSH CHENILLE SLATE BLUE -WALNUT FRAME	100% polyester
U34237	TWEEDY PLAIN LIGHT NATURAL - OAK EFFECT FRAME	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground

Please periodically check all fittings and re-tighten as necessary. Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

You can write to us at

Home Customer Services
Next Retail Ltd
Desford Road,
Leicester,
LE19 4AT


To view our full furniture range
please visit www.next.co.uk

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

GETTING TO KNOW YOUR PRODUCT

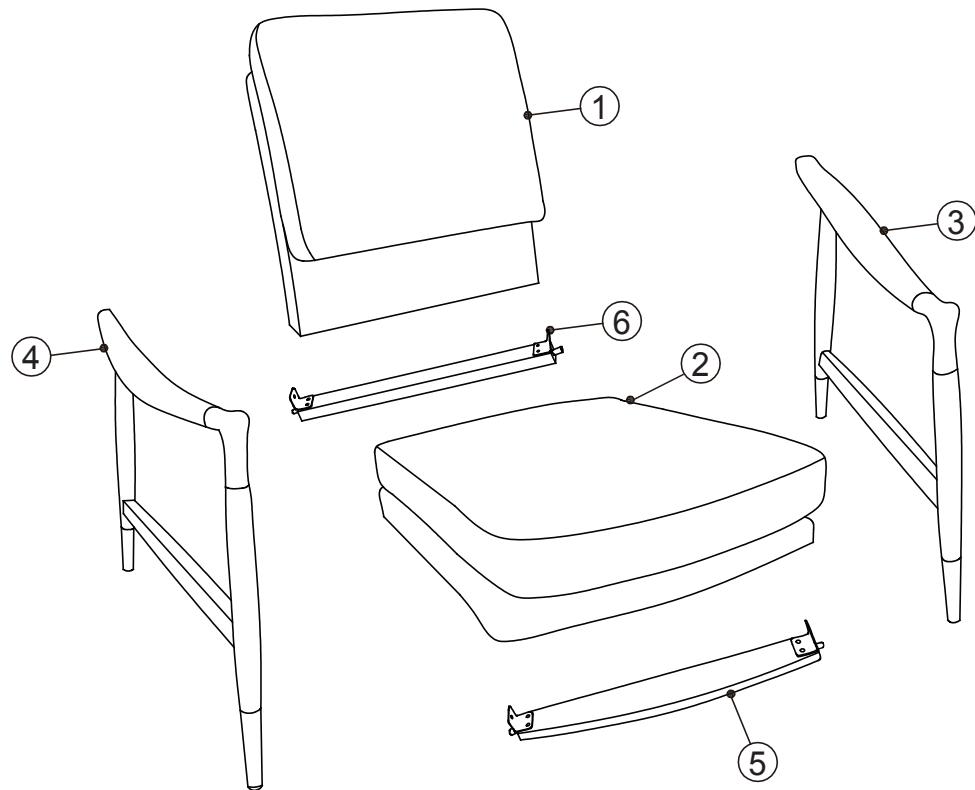

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimension	Visual	Qty	Ref	Dimension	Visual	Qty
1	Back H64xW59xD23CM		1	5	Front rail 61*8*6CM		1
2	Seat H21xW59.5xD62CM		1	6	Rear rail 61x4.5x7CM		1
3	Left Panel 78*63*7.5CM		1				
4	Right Panel 78*63*7.5CM		1				

FLINTON ACCENT CHAIR

N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6-D91483-M63147-U34237-


W85415-F66264-H59775-F66222-H20238-H20239

Assembly instructions

Fixtures and fittings supplied (actual size)


Ref	Dimension	Qty	Spare
A	M8 x20mm	4	1
B	M8 x45mm	2	1
C	M8 x60mm	4	1
D	12mm	10	1
E	22mm	10	1
F	6 x157mm	1	0

mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160

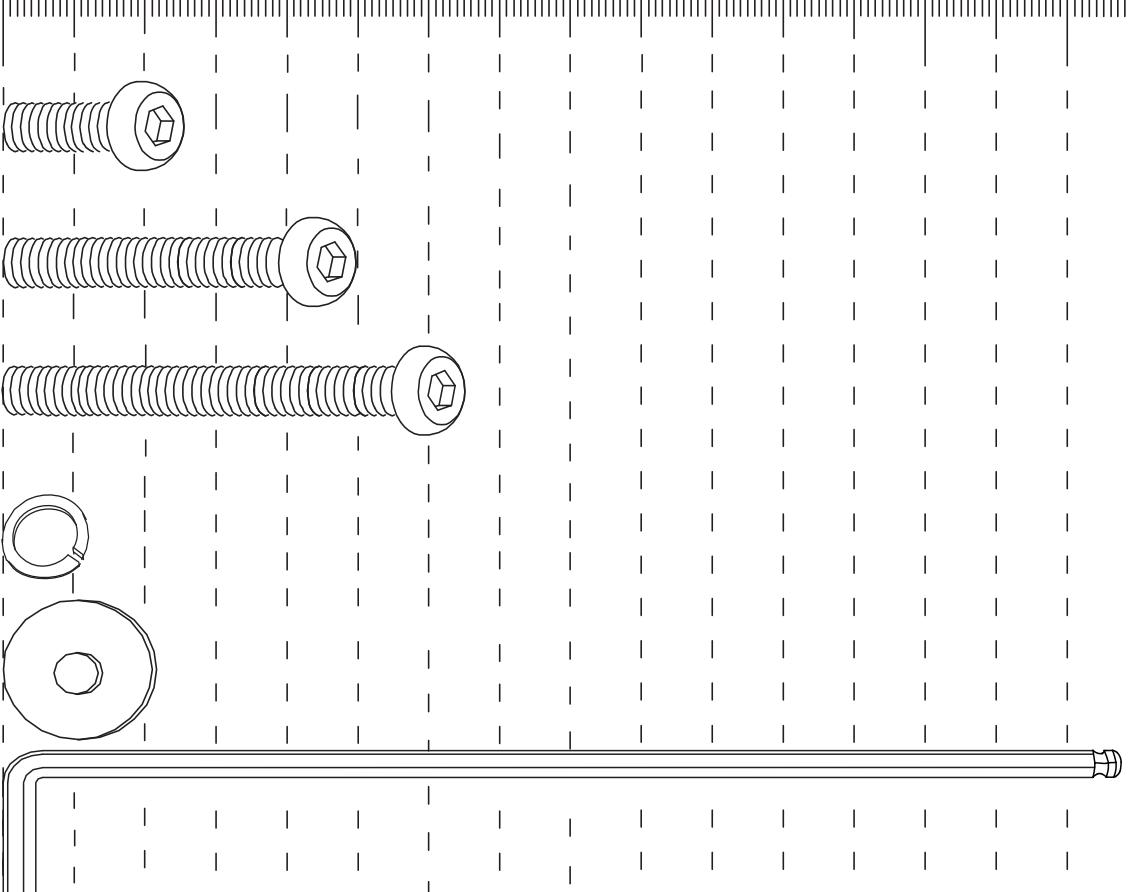


1.

C x 2	M8×60mm
D x 2	12mm
E x 2	22mm
F x 1	6×157mm

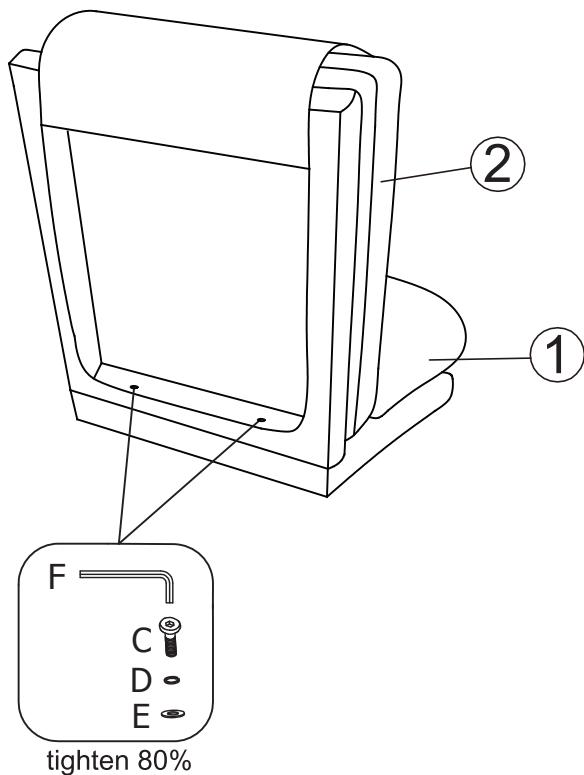


2.

B x 1	M8×45mm
C x 1	M8×60mm
D x 2	12mm
E x 2	22mm
F x 1	6×157mm

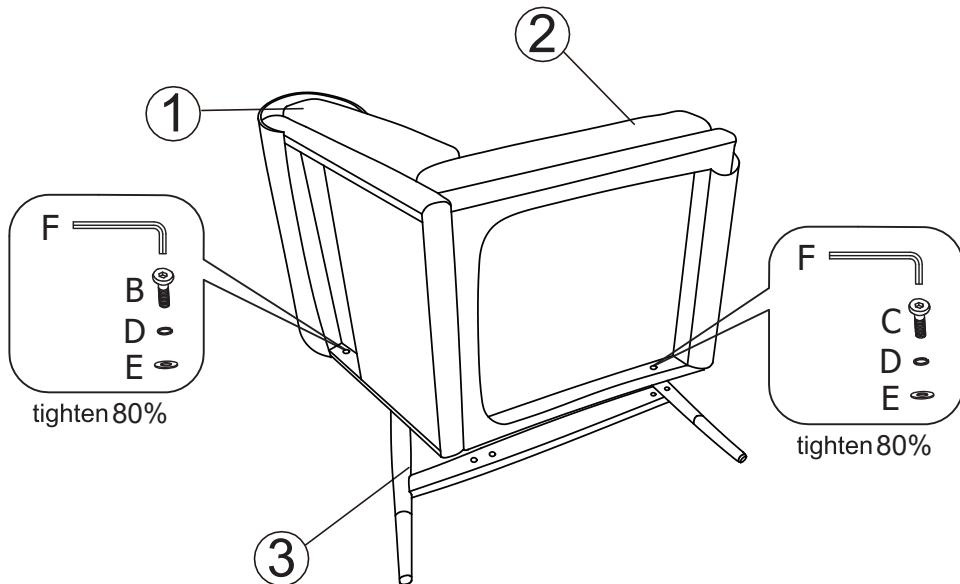


3.

A x 2	M8×20mm
D x 2	12mm
E x 2	22mm
F x 1	6×157mm

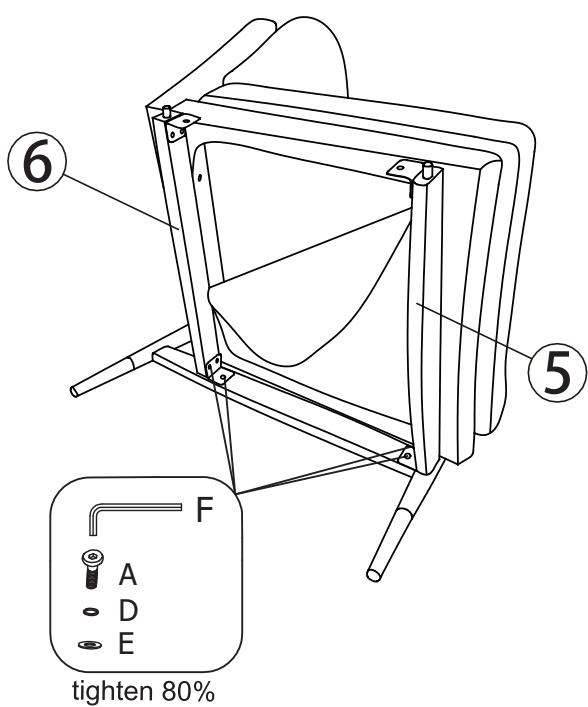


4.

A x 2	M8×20mm
B x 1	M8×45mm
C x 1	M8×60mm
D x 4	12mm
E x 4	22mm
F x 1	6×157mm

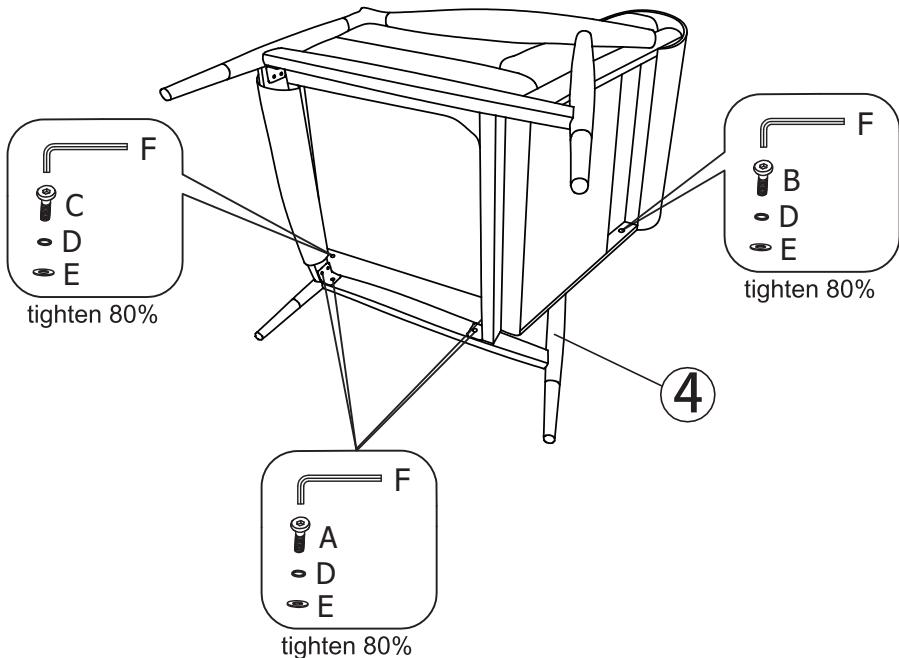


5.

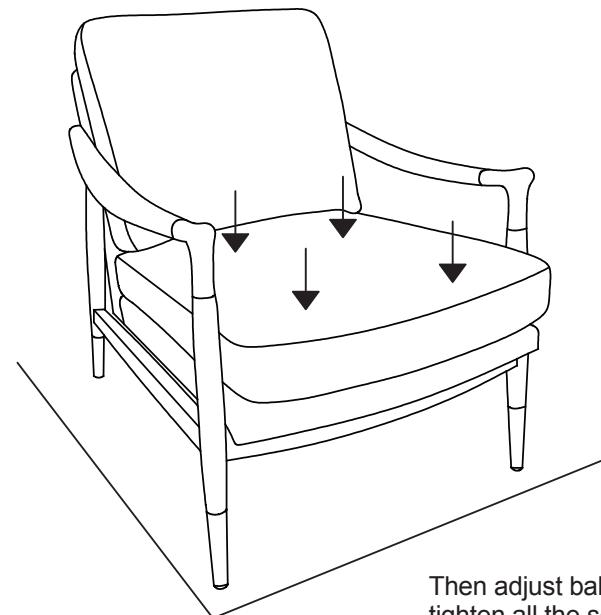

Then adjust balance of this chair
tighten all the screws to 100%.

6.

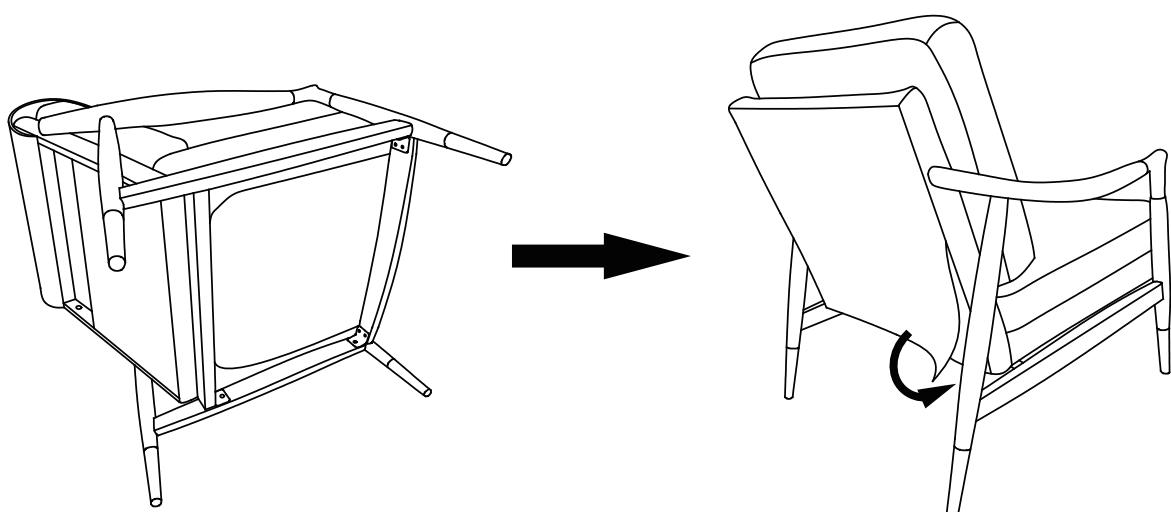

Zip up the non-woven cloth underneath the seat.

Stick the back.

NEXT**FLINTON ACCENT CHAIR**N57545-N57546-C57679-430314-B70641-E68181-N57554-4873T6 -
D91483-M63147-U34237-F66264-H20238-H20239-F66222-H59775-
W85415

Assembly instructions

Actual product size

H86×W71×D85.5cm

CAUTION: Maximum weight capacity of this chair is 130kg.

