

TOWER®

BUILT FOR BETTER SINCE 1912

T22038

Applicable to all colour variants

2 IN 1 GARMENT STEAMER



USER MANUAL



GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE

TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION	3-6
• General safety	3-4
• Whilst steaming	4
• Plug and cord	4-5
• Wiring safety	6
THIS BOX CONTAINS	7
SPECIFICATIONS	7
GETTING TO KNOW YOUR APPLIANCE	8
BEFORE FIRST USE	9
• Preparing for use	9
USING YOUR APPLIANCE	9-10
• Filling the water tank	9
• General Usage	10
• Steam settings	10
• Turning the unit off	10
CLEANING AND CARE	10
TROUBLESHOOTING	11
DISPOSAL OF THE UNIT/CUSTOMER SUPPORT	11

IMPORTANT SAFETY INFORMATION

Please read these safety **NOTES** carefully **BEFORE** using your Tower appliance.

These warnings have been provided in the interest of safety. Basic safety precautions should always be followed including the following:

GENERAL SAFETY

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- **DO NOT** use for anything other than its intended use.
- This appliance is intended to be used in household and similar applications such as: Staff kitchen are-as in shops, offices and other working environments; by clients in hotels, motels and other residential type environments; farm houses; bed and breakfast type environments.
- **DO NOT** use this product for anything other than its intended use.
- **DO NOT** place on or near a hot gas burner, hot electric burner, or in a heated oven.
- Switch off and unplug before fitting or removing accessories, after use and before cleaning.
- Allow the appliance to cool down for approximately 30 minutes before cleaning.

IMPORTANT SAFETY INFORMATION

- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- DO NOT clean the appliance with metal kitchen utensils, caustic or abrasive cleaning agents or scouring sponges.
- Retain the instructions for future reference.

WHILST STEAMING

- Never lay the product with the soleplate facing onto a surface when it is turned on or cooling down
- Always unplug the unit before removing or replacing the water tank.
- Be careful not to burn the power cord with the soleplate when in use or cooling down.
- Take care to not allow water to come into contact with any of the electrical components of the unit.
- Do not allow any steam to come into contact with skin or eyes; NEVER point the steamer at humans or animals.

- Do not leave unattended whilst the product is plugged in or cooling down. Take special care around children.
- Do not use the steamer if it has been dropped, if there is visible signs of damage, or if it leaking.
- It is important that this instruction manual is retained for future reference.
- If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

PLUG AND CORD

- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces..DO NOT carry the appliance by the power cord.


IMPORTANT SAFETY INFORMATION

- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- DO NOT let the supply cord touch hot surfaces.
- DO NOT carry the appliance by the power cord.
- DO NOT use any extension cord with this appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT plug and unplug with wet hands.

It is important that this instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

WIRING SAFETY FOR UK USE ONLY

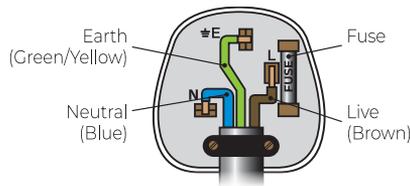

IMPORTANT: As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are labelled in accordance with the following code:

Blue neutral [N] Brown live [L] Green/Yellow [EARTH] 

PLUG FITTING DETAILS (WHERE APPLICABLE).

- Plug Fitting Details (Where Applicable). The wire labelled blue is the neutral and must be connected to the terminal marked [N].
- The wire labelled brown is the live wire and must be connected to the terminal marked [L].
- The wire labelled green/yellow must be connected to the terminal marked with the letter [E].
- On no account must either the brown or the blue wire be connected to the [EARTH] terminal.

- Always ensure that the cord grip is fastened correctly.
- The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.
- If in doubt consult a qualified electrician who will be pleased to do this for you.

NON-REWIREABLE MAINS PLUG.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - disconnect it from the mains - then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.

THIS BOX CONTAINS

Instruction Manual
Garment Steamer
Water Tank
Fabric Brush
Carry/Travel bag



SPECIFICATIONS

RATED VOLTAGE	220-240V~
FREQUENCY	50/60Hz
POWER CONSUMPTION	1200-1400W
WATER TANK CAPACITY	80ml

GETTING TO KNOW YOUR APPLIANCE

1. LED display/control panel
2. Handle
3. Removable water tank (located inside handle)
4. Power cord
5. Soleplate
6. Fabric brush
7. MODE button
8. Power indicator
9. Low steam indicator
10. High steam indicator



BEFORE FIRST USE

PREPARING FOR USE

NOTE: Every effort has been made to ensure this item reaches you in perfect condition. However, due to our rigorous testing and quality processes before the unit leaves our production facility, there may be a small amount of water residue left in the water tank. This is nothing to worry about and the product can be used as normal.

1. Remove the appliance from the packaging and check for any visible damage to the appliance, cord and plug.
2. Remove any stickers, protective foil or storage cover from the soleplate.
3. Clean the exterior surface of the garment steamer and soleplate with a soft, damp cloth and dry thoroughly and in accordance with the instructions in the Cleaning and Care section below.

4. Fill the water tank with clean water, and then empty it to ensure that the tank is clear of any manufacturing residues. Refill the tank.
5. Your garment steamer is now ready for normal use.
6. Dispose of the packaging in a responsible manner.

NOTE: When using the appliance for the first time, a slight odour and small amount of smoke may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around appliance.

NOTE: When using the appliance for the first time, test the garment steamer on a piece of scrap cloth to ensure that it is working correctly.

USING YOUR APPLIANCE

FILLING THE WATER TANK:

1. Unplug the garment steamer before filling the water tank. Press the bottom of the handle (where "PUSH" is written) and the water tank will pop out slightly. Pull it all the way out.
2. When the water tank is fully removed from the main unit, locate the rubber bung on the top of the unit (on the opposite face from "PUSH". Pull out the rubber bung.
3. Fill the tank through the hole that the bung was covering until full. Replace the rubber bung, making sure that it is properly seated.
4. Wipe down the exterior of the water tank with a clean cloth, ensuring that there is no moisture before replacing.
5. Push the water tank back in the handle, making sure that the recessed side of the water tank matches up with the round protruding side of the inside handle.
6. Once the water tank is properly in place, an audible click will be heard and the face with "PUSH" written on it will be flush with the bottom of the handle.

USING YOUR APPLIANCE

GENERAL USAGE

- Ensure that the steamer's tank has sufficient water. Refill the unit's tank if needed.
- Check the label of the garment that you would like to steam / iron. If uncertain, iron a part of the garment that is not normally visible first before ironing the whole thing.
- Hang the garment up away from anything that will be affected by steam and heat.
- Plug the unit in. When the unit has been plugged in, the white pilot light (closest to the MODE button) and the Low and high steam indicators will flash for a second.
- Whilst the unit is heating up, the pilot light will glow white intermittently and you will not be able to select a steam setting. Once the unit has heated up, the pilot light will display a solid white.

STEAM SETTINGS:

The unit has two steam settings which are represented by icons on the LED display. Each icon will light up white

when selected. The MODE button is represented with the steam symbol on the button:

 Low steam

 High steam

- To select between these two settings, press the MODE button.
- To generate steam, simply set the unit on either Low or High steam. To turn off the steam, hold down the MODE button until the LED display shows only the pilot light and neither the high or low steam light.

CAUTION! Always check the label of the garments before using the appliance on them.

TURNING THE UNIT OFF:

- To turn the unit off, unplug the unit, and allow it to cool down.
- When the unit is in use or cooling down, make sure to not rest the unit with the soleplate in contact with any surface or material.

CLEANING AND CARE

WARNING! Do not immerse the appliance in water or any other liquid.

1. DO NOT allow water or any other liquid to enter the unit.
2. Wipe the outside of the appliance with a damp cloth.
3. Ensure all parts are thoroughly dry before use.

STORAGE

- Ensure that you empty the unit of any liquid before storage.
- Ensure that the unit has cooled down completely before storage.
- Do not wrap the power cord aggressively around the unit.
- Store the appliance in a cool and dry place.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
No steam is being emitted	There is insufficient water in the water tank. The pump is still drawing water from the water tank.	Fill the water tank following the instructions in the section entitled "Filling the water tank".
Excess water is dripping from the ceramic soleplate	This is condensation inside the soleplate.	Allow the garment steamer up to the selected temperature before using.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that **all electrical items must be recycled**, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



CUSTOMER SUPPORT

If you have any questions or concerns about your new product, or you need any spare part replacements and accessories, we have these available to purchase. Please contact our helpful Customer Support Team:



+44 (0) 333 220 6066



www.towerhousewares.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label. Below are the available items that can be purchased for your appliance

TOWER[®]

BUILT FOR BETTER SINCE 1912

thank you!

We hope you enjoy your appliance for many years...

This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

THE FOLLOWING CONDITIONS APPLY:

The product must be returned to the retailer with proof of purchase or a receipt.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon

registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Or call our Customer Support Team on: **+44 (0) 333 220 6066**

