

 **HADEN**
ESTD. ENGLAND 1958



INSTRUCTION MANUAL



PRODUCT CODE: 188830 188854 203595

JERSEY KETTLE

COMPONENTS



How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@haden.com



Write to us
**Team Haden, Sabichi Homewares
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com



- | | |
|------------------|----------------|
| 1. Lid | 5. Power base |
| 2. Handle | 6. Main body |
| 3. Water window | 7. Water spout |
| 4. ON/OFF switch | |

IMPORTANT SAFEGUARDS

When using this appliance the following basic safety precautions should always be taken.

- Read all Instructions prior to first use.
- Do not touch hot surfaces.
- Use handles or knobs when holding the appliance.
- This kettle can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the kettle in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the kettle.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the kettle and its mains cord out of the reach of children younger than 8 when the kettle is switched on or is cooling down.
- While the water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Ensure that the lid is closed before switching the kettle on, otherwise it may not automatically switch off.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the jug kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- To protect against electric shock, do not immerse the cord, plug, or any part of the kettle in water or other liquid.
- Before switching the kettle on, ensure the water level is between the Min and Max lines and that the lid is completely closed.
- If the kettle boils dry, allow 15 minutes to cool before refilling with cold water. The safety cut out will automatically reset during this time.
- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.
- After the kettle has switched off automatically, (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
- Always take care when pouring boiling water and never tip the kettle excessively.
- Should you need to refill the kettle after it has boiled, allow the kettle to cool sufficiently before opening the lid.
- Do not open the lid while the water is boiling.
- Do not open the lid when steam is coming out of the spout.
- Place the kettle on a stable flat heat resistant surface.
- Ensure that the kettle is switched off before removing it from its stand.
- Prevent children from pulling on the mains cord or knocking the kettle.
- Ensure that the mains lead, kettle or power does not overhang the worktop or come into contact with hot surfaces hotplate, hot hob or burners.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
- Do not use the kettle for any purpose other than heating water.
- Only use the cord supplied with this kettle.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill the water over the maximum water level. Doing so may cause the kettle to splash during the boiling cycle.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person.
- Never leave the kettle unattended when in use.
- This kettle is intended for household use only.

SAVE THESE INSTRUCTIONS

HOW TO USE YOUR KETTLE

BEFORE USING YOUR KETTLE

- Remove all packing materials, any stickers from the kettle and power base.
- Remove the filter and wash with water.
- Fill the kettle to 'MAX' level and boil. The boiled water should be discarded and the kettle rinsed out with cold water. Repeat the boil and rinse steps for at least twice to remove any manufacturing dust, etc.
- After the kettle has been rinsed out, re-fit the filter and the kettle is ready to use.

FILLING THE KETTLE

- Remove the kettle from the base.
- Open the lid by pulling the lid knob straight up.
- Make sure the removable filter is in place.
- Do not fill with less than the **MIN** water level to prevent the kettle running dry while operating; misuse of this kind will shorten the life of the element. Do not fill with more than the **MAX** level.

If the kettle is overfilled, there is a risk that boiling water may be ejected causing burns.

- Replace the lid on the kettle.

SWITCHING ON

- Plug the power base into the wall socket.
- Place the kettle on the power base.
- Press the ON/OFF switch down. The switch will light up, and the kettle will start to heat up.
- The kettle will automatically switch off once the water has boiled. The switch will return to the "OFF" position and the light will go out.
- To turn the kettle off before the water boils, move the ON/OFF switch up to the OFF position, or simply lift the kettle from its base.

POURING

- Remove the kettle from the power base and carefully pour out the water. Do not tilt the kettle suddenly or pour water out at too sharp an angle.
- When you lift the kettle from the base, you may see moisture on the top surface of the base. Condensation on the base is perfectly normal, and should not be a cause for alarm.

SAFETY CUT OUT

This kettle is fitted with an automatic safety cut out to protect against boil dry overheating. It will operate if the kettle is switch ON with too little or no water inside the kettle. If this cut-out operates, disconnect the kettle from the mains supply and leave to cool down for 15 mins before refilling with cold water (otherwise the element could be damaged).

CLEANING & MAINTENANCE

CLEANING

- Before cleaning, be sure the base is unplugged and the kettle has cooled completely.
- Empty any remaining water from the kettle.
- Wipe the outside and inside surfaces of the kettle with a damp cloth. If necessary, you may use a little household detergent to clean the filter, if you use detergent inside the kettle, rinse thoroughly afterwards to remove all trace of the detergent.
- Ensure that all connectors and sockets are kept dry.

**Do not immerse the kettle or power base in water.
Do not use harsh or abrasive cleaners or solvents.**

CLEANING THE WATER FILTER

- Before cleaning, be sure the base is unplugged and the kettle has cooled completely.
- Open the lid and lift the filter out from its location in the body of the product.
- Wash the filter in warm soapy water. Rinse and dry with a clean, soft cloth.
- Insert the filter back into the body making sure it is correctly located.

DESCALING

When the water is heated, the minerals in the water solidify creating limescale which makes the water appear cloudy. As soon as you notice a film forming on the water, or, when cleaning the filter, if you notice a film on the walls or the element, descale the kettle and its filter.

Limescale build-up will cause the element to overheat, reducing its working life. It may also cause the safety cut out to operate prematurely, switching the kettle off before the water boils.

To minimize scale build-up:

- Use descaler for kettles (tip: use citric-acid based descaling solutions). When limescale starts forming on the heating element, buy a suitable descaler for kettles and descale according to the instructions given on the descaler pack.
- When descaling has finished, empty the kettle and rinse it out several times with fresh water, then fill with fresh water, boil. And discard the water. This should ensure no residues are left in the kettle.
- If the filter requires descaling, remove and immerse in the same descaling solution.
- Make sure electric parts are completely dry before using the kettle.


TECHNICAL DETAILS

Product Code: 188830 188854 203595
Voltage: 220-240V ~ 50/60Hz
Power: 2520 - 3000W
Capacity: 1.5L



Sabichi Homewares Ltd
5 Wadsworth Road, Perivale, Middlesex UB6 7JD
20 Harcourt Street, Dublin D02 H364

WASTE ELECTRICAL RECYCLING

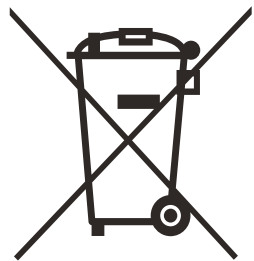

This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste. The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- to recycle waste electrical products using the best available recovery and recycling techniques.
- to minimise the impact to on the environment
- to treat any hazardous substances
- to avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact your local authority.

WARRANTY (UK & IRELAND ONLY)

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number and serial number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570
Opening Hours: Monday - Friday 9.30am – 5pm
Email: info@haden.com



ESTD. ENGLAND 1958