

**Swan**  
designed for life



Windsor Two Slice Textured Toaster

Model: ST14071

Helpline

0333 220 6050



## IMPORTANT SAFEGUARDS

**The following basic precautions should always be followed when using an electrical appliance:**

- Read all instructions before using.
- Make sure the voltage in your living area corresponding to the one shown on the rating label of the appliance and the wall socket is properly earthed.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on or near a hot surface.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.

## PRODUCT SAFEGUARDS

- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- The appliance is not intended to be operated by means of an external timer or separate-remote control system.
- This appliance is intended to be used in household and similar applications such as:
  1. Staff kitchen areas in shops, offices and other working environments;
  2. Farm houses;
  3. By clients in hotels, motels and other residential type environments;
  4. Bed and breakfast type environments.
- When using this appliance, allow adequate air space and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
- Do not use the toaster without the crumb tray in place. The crumb tray should be cleaned regularly to prevent a build up.
- Do not use this appliance with any food products containing a sugar content or with products containing jam or preserves.
- The temperature of accessible surfaces may be high when the appliance is operating.

**WARNING: Never attempt to extract jammed toast, muffins, bagels or any other item with a knife or any other object, contact with live elements may cause electrocution.**

**Allow the appliance to cool down, unplug and carefully remove the bread.**

**The following is the safe cautionary symbol of a Hot Surface accessible to people. This symbol alerts you the hot hazards that you can be injured.**



**CAUTION: Hot Surface. The surface can be hot and should not be touched without taking care.**

## GET TO KNOW YOUR TOASTER



1. Toasting slots
2. Lowering lever
3. Cancel button
4. Reheat button
5. Frozen button
6. Variable heat control dial
7. Crumb tray

## HOW TO USE YOUR TOASTER

### **Before First Use:**

1. Carefully remove your appliance from the packaging and remove all packing materials.
2. To avoid danger, always keep packaging materials (plastic bags, polystyrene, ect.) away from children. Dispose of the packaging in a responsible manner.
3. Check that the main products, the accessories, the power cord and the plug are in good condition and show no signs of damage.
4. Insert the plug into a suitable mains supply socket and turn the power on.

## INSTRUCTIONS FOR USE

### **Toasting**

1. Place up to two slices of bread, muffins, or bagels into the toasting slots.
2. Select the desired heat setting from 1 – 7 on the variable heat control dial. (1 being lowest and 7 being the highest.) When using the toaster for the first time we suggest you toast on a heat setting of 4. Varying types of bread and personal preference may require a different heat setting.
3. Press the Lowering Level down until it clicks into place. Once clicked down the toasting cycle will automatically begin. NOTE: If the toaster is not plugged in and switched on then the Lowering Lever will not click into place.
4. The toaster turns off when the toast cycle has concluded, the toast will automatically be raised. The toasting cycle can be stopped at any time by pressing the cancel button.

### **Toasting Frozen Bread**

To toast frozen bread, follow the toasting instructions above. Once the Lowering Lever has clicked down, press the Frozen Button to extend the toasting time to allow for the bread to defrost before toasting. Additionally this can be stopped at any time by pressing the cancel button.

### **Reheating Toast**

The toaster allows you to reheat toast without additional toasting, follow the toasting instructions above. Once the Lowering Lever has clicked down, press the Reheating button to gently warm the toast. This reheating cycle will commence and lift the now warmed toast, additionally this can be stopped at any time by pressing the cancel button.

### **CHECKING BROWNING BREAD**

The toaster allows you to lift the lowering level up to look at the toast colour in any working state without cancelling the toasting process. DO NOT touch the bread while checking. Release the Lowering Lever, the bread will return back down into the unit to continue toasting. If you are satisfied with the toasted bread, press the cancel button to stop further toasting.

In the unlikely event that the bread or crumpet becomes jammed, switch the toaster off at the power outlet, remove the plug from the supply socket and carefully ease the bread out of the toaster, ensuring that you do not damage the element.



## SPECIFICATIONS

Description: 2 Slice Toaster

Model: ST14071

Input Voltage: 220 – 240V

Frequency: 50/60Hz

Power Consumption: 750 – 900W

**Helpline: 0333 2206050 v1.0**



## CLEANING AND MAINTANANCE

**DO NOT immerse the unit or plug in water.**

1. Always turn the power off, remove the plug and allow the toaster to cool before cleaning.
2. To remove any crumbs from the toaster, slide out the crumb trays from under the toaster, empty and replace in the toaster before using again.
3. Wipe the outside of the toaster with a lightly damp cloth and polish with a soft dry cloth.
4. To clean the interior, turn the toaster upside down over a sink or bin and shake crumbs free.

The crumb trays should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.



## WEEE DIRECTIVE

### DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items.

Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



## BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

**BLUE**

**NEUTRAL**

**BROWN**

**LIVE**

**GREEN/YELLOW**

**EARTH**

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured **BLUE** must be connected to the terminal which is marked with the letter **N** or coloured black. The wire which is coloured **BROWN** must be connected to the terminal which is marked with the letter **L** or coloured red. The wire which is coloured **GREEN/YELLOW** must be connected to the terminal which is marked with the letter **E** or [earth symbol] and is coloured **GREEN** or **GREEN/YELLOW**.

**WARNING: THIS APPLIANCE MUST BE EARTHED**



[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



Scan this QR code  
to hear about  
our story



We love  
what we do



We're proud  
of our quality



Find us on Facebook

\*on selected products

Copyright © Swan Products Ltd.  
Stoke-on-Trent ST4 2NL