

TOWER®

BUILT FOR BETTER SINCE 1912

T548006

AQUAJETPRO HANDY SPOT CLEANER



USER MANUAL



GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE

TABLE OF CONTENTS

THIS BOX CONTAINS	3
SPECIFICATIONS	3
IMPORTANT SAFETY INFORMATION	4-6
• General safety	4
• Battery safety and precautions	5
• Plug and cord	6
GETTING TO KNOW YOUR CLEANER	7
BEFORE FIRST USE	8-9
USING YOUR STEAM HARDFLOOR CLEANER	9-10
CLEANING AND CARE	10-11
• Emptying the dirty water tank	10
• Cleaning the clean water tank	10
• Cleaning the unit	10
• Cleaning the rolling brush	11
• Cleaning the suction inlet	11
TROUBLESHOOTING	11
DISPOSAL OF THE UNIT	12
CUSTOMER SUPPORT	12

THIS BOX CONTAINS

Instruction Manual
Cleaning Unit
Battery Pack
Soft Bristle Rolling Brush
Mains Plug Charger



SPECIFICATIONS

RATED VOLTAGE	11.1V
RATED POWER	60W
BATTERY CAPACITY	2000mAh
CLEAN WATER TANK VOLUME	300ml
DIRTY WATER TANK VOLUME	500ml
CHARGE TIME	3.5 Hours
RUN TIME FROM FULL CHARGE	Up to 40 minutes

IMPORTANT SAFETY INFORMATION

Please read these safety **NOTES** carefully **BEFORE** using your Tower appliance.

These warnings have been provided in the interest of safety. Basic safety precautions should always be followed including the following:

GENERAL SAFETY

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- **DO NOT** leave the appliance unattended while it is operating.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- This appliance is intended to be used in household and similar applications such as: Staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels and other residential type environments; farm houses; bed and breakfast type environments.
- **DO NOT** use this product for anything other than its intended use.
- The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- **DO NOT** clean the appliance with metal kitchen utensils, caustic or abrasive cleaning agents or scouring sponges.
- Retain the instructions for future reference.
- **FIRE WARNING – DO NOT** place this product on or near a cooker or any other

IMPORTANT SAFETY INFORMATION

hot surface and DO NOT incinerate this appliance even if it is severely damaged. The battery might catch fire or explode.

- FIRE WARNING – DO NOT apply any fragrance or scented product to the filter(s) of this appliance. The chemicals in such products are known to be flammable and can cause the appliance to catch fire.

BATTERY SAFETY PRECAUTIONS

- DO NOT use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury. DO NOT expose battery pack or appliance to fire or temperatures above 60°C (140°F) may cause explosion.
 - The battery is a sealed unit and under normal circumstances poses no safety concerns. In the unlikely event that liquid leaks from the battery, DO NOT touch the liquid as it may cause irritation or burns to skin, eyes or nose. Should battery liquid
- come in contact with skin, immediately wash the affected area with soap and water. In case of eye contact, immediately flush your eyes thoroughly with water for at least 15 minutes and seek medical attention.
 - In case of inhalation, immediately expose to fresh air and seek out medical advice.
 - Disposal – wear gloves to handle the battery. Dispose of it immediately, following local ordinances or regulations.
 - Follow all charging instructions and DO NOT charge the battery pack or the appliance outside of the temperature range specified in the instructions. Charging improperly or at a temperature outside of the specified range may damage the battery and increase the risk of fire. To ensure maximum battery life, observe the following guidelines: Store and use the charger in dry rooms only within the ambient temperature of 5 - 40°C
 - When not in use the appliance should be stored at room temperature.

IMPORTANT SAFETY INFORMATION

Recommended range: 18°C (64°F) to 28°C (82°F).

PLUG AND CORD



- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- Switch off and unplug before fitting or removing tools/ attachments, when not in use and before cleaning. Allow to cool before assembly or disassembly occurs.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- DO NOT carry the appliance by the charging cord.
- Keep the charging cord away from sharp edges and prevent from being pinched between objects, such as a door.
- DO NOT handle the plug or the hardfloor cleaner with wet hands.
- DO NOT insert any objects into openings in the unit.
- DO NOT use the hardfloor cleaner without the roller correctly installed or without water in the water tank.
- DO NOT use hot water or chemicals in the water tank. Never put de-scaling, aromatic, alcoholic or detergent products into the hardfloor cleaner, as this may damage it or make it unsafe for use.
- Stop using the hardfloor cleaner if water leakage is observed and seek advice from the manufacturer or its service agent or a similarly qualified person.

It is important that this instruction manual is retained for future reference.

If the appliance is given to someone else, it should always be accompanied by these operating instructions, as they form an integral part of the appliance.

GETTING TO KNOW YOUR CLEANER

1. Display Screen
2. Suction Button
3. Spray Nozzle
4. Suction Cover Release Button
5. Suction Cover
6. Spray Button
7. Handle
8. Clean Water Tank
9. Dirty Water Tank
10. Rolling Brush Button
11. Rolling Brush
12. Dirty Water Tank Release Button
13. Charging Port
14. Soft Rubber Scrub Brush
15. Battery Pack
16. Mains Plug Charger

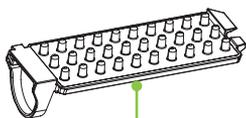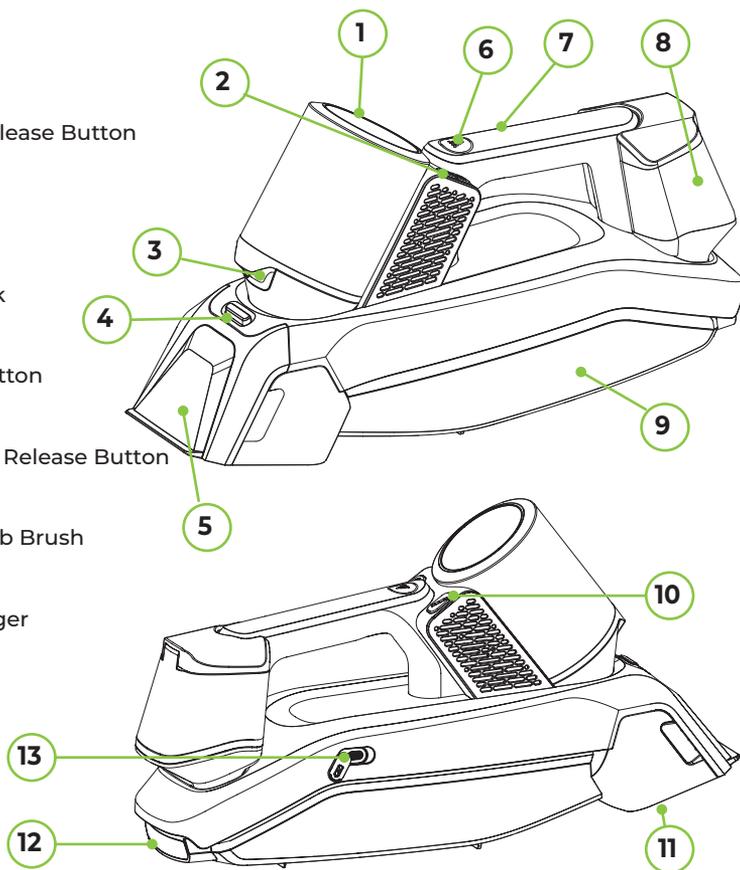

14




15




16

BEFORE FIRST USE

1. Read all instructions and safety information carefully before first use. Please retain this information for future reference.
2. Remove all packaging material and check parts against the parts list.
3. Check there is no damage to the cord or any visible damage to the unit.
4. Charge the unit through the USB-C to mains power plug provided as described below.
5. Familiarise yourself with the display screen and controls panel. See below.

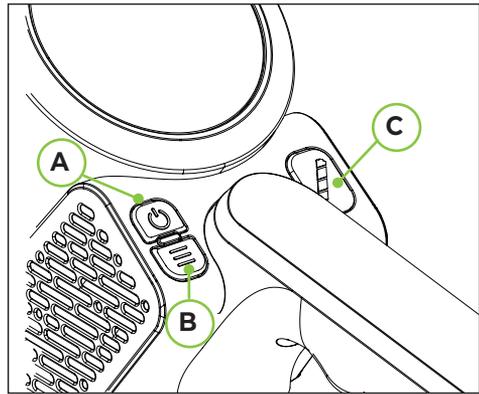


- A. Suction power button
- B. Suction speed button
- C. Rolling brush button

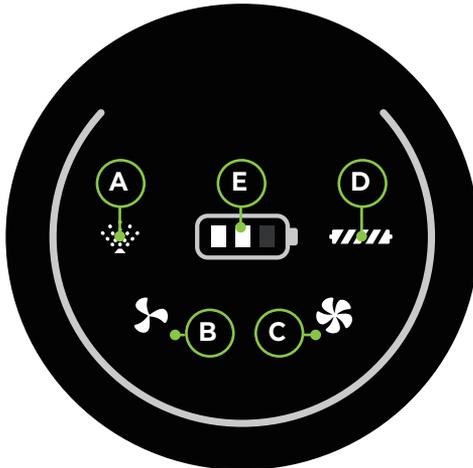


- A. Spray Indicator
- B. Low Speed Indicator
- C. High Speed Indicator
- D. Rolling Brush Indicator
- E. Battery Indicator

6. Remove the clean water tank by lifting it up until it detaches, as shown in the figure below.

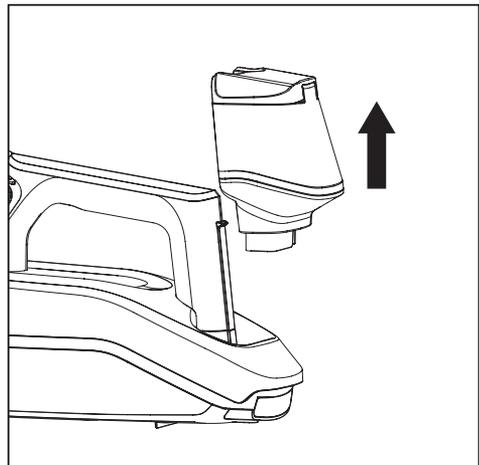

BEFORE FIRST USE

7. Open the lid of the clean water tank, fill the tank with clean water until the 'MAX' fill line before closing.

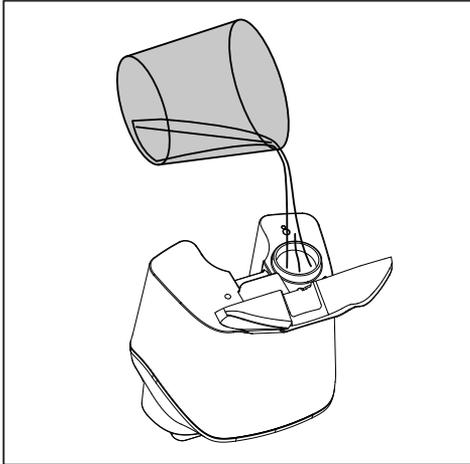

8. Reinstall the clean water tank into the unit.
9. The unit is now ready for normal use.

CHARGING:

1. To charge the use, plug the charger into a compatible mains socket and the USB-C into the unit by moving the rubber tab covering the port

2. Once plugged in, the display screen will show the unit's charging level. The three charging bars on the indicator will flash while charging, and illuminate fully when the unit is completely charged.
3. Once the unit is completely charged, unplug the charging cable and cover the charging port with the rubber tab.

NOTE: The battery pack of this unit can additionally be charged outside of the unit. To do this, turn the unit upside down and remove the battery pack from the main body by grasping the tabs on either side to lift it out of the unit.

WARNING! If the battery pack leaks, do not contact the leaking liquid with eyes or skin. In case of contact, wash immediately with clean water and seek medical help. Only use the provided battery pack and a suitable mains adapter. Do not disassemble, repair or modify the battery pack. If necessary, contact customer service for assistance with replacing the battery pack.

USING YOUR SPOT CLEANER

NOTE: When the unit is in standby mode, none of the indicators will be illuminated; when the unit is in operation the charging indicator will be illuminated.

1. To clean with the unit, ensure that the clean water tank is appropriately filled with water, as described above.
2. Hold the unit by the handle and aim towards the cleaning area. Press the spray button to spray clean water on the area, as shown in the figure below. While the spray button is held, the spray indicator will illuminate on the unit's LCD display.
3. Press the rolling brush to the now wet spot and press the rolling brush button to clean. The rolling brush indicator will illuminate during operation. To turn the rolling brush off, press the rolling brush power button again while it is in operation.
4. Hold the suction inlet to the cleaned spot and press the Suction Power button to remove excess water into

USING YOUR SPOT CLEANER

the dirty water tank. The suction indicator will illuminate on the lower speed.

5. To change the speed, press the Speed selection button to switch between low and high, as shown in the image below. The corresponding indicator will illuminate on the unit's LCD display.
6. When the dirty water level reaches the 'MAX' fill line, stop using the unit and empty and clean the dirty water tank, as described in the Cleaning and Care section of this instruction manual.

NOTE: The following materials should not be sucked up using this unit: dry dust, large amounts of powder, sand, stones, rubbish, metal, polybags and stockings.

SOFT RUBBER SCRUB BRUSH

- To use the soft rubber scrub brush, first the soft bristle brush must be removed from the unit. To do this, slide down the tab next to the rolling brush to release the brush from the main unit.
- To install the soft rubber brush, take the side of the rubber brush without the rotating connector and slide it back into place over the driving motor. Once this side of the rubber brush is in place, ensure the flat side of the rotating connector is facing out of the unit before clicking it into place.

CLEANING STUBBORN STAINS

- If stains still persist after regular cleaning, add detergent to the clean water tank. To do this, carry out the same process described to fill the clean tank with water, but using the appropriate liquid instead.

CLEANING AND CARE

EMPTYING THE DIRTY WATER TANK

- Empty the dirty water tank before the water level reaches the 'MAX' fill line. To do this, press the dirty water release button to remove the dirty water tank.
- To drain the dirty water tank, remove the covering and pour away the dirty water into a suitable water disposal location.
- Once the dirty water tank is emptied, clean it, cover it back up and reinstall it into the unit.

CLEANING THE CLEAN WATER TANK

- Remove the clean water tank, as described in the corresponding section of this instruction manual. Lift the lid and pour away any remaining

water. Reinstall the now empty clean water tank back into the unit, and power the unit up, to spray water and discharge any water left in the unit, preventing mould from forming when the unit is not in use. Once any excess water is expelled, power off the unit and store it as described in the corresponding section below.

CLEANING THE UNIT

- Wipe down the unit with a soft, damp cloth. Ensure the unit is fully dry before attempting to use it again.

CLEANING AND CARE

CLEANING THE ROLLING BRUSH

- To clean the rolling brush, first remove it from the unit. To do this, slide down the tab next to the rolling brush to release the brush from the main unit.
- Clean the brush with lukewarm water and let it fully dry before installing it back into the unit.
- To reinstall, take the side of the rolling brush without the rotating connector and slide it back into place over the driving motor. Once this side of the rolling brush is in place, ensure the flat side of the rotating connector is facing out of the unit before clicking it into place.

CLEANING THE SUCTION INLET

- To clean the suction inlet, first remove the suction cover. To do this, press on the suction cover release button and slide the cover out of the unit.
- Clean the suction inlet with a soft cloth using lukewarm water before replacing the suction cover.
- To replace the cover, hook it around the bottom of the unit and push the top inwards until it clicks into place.

TROUBLESHOOTING

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Unit fails to start.	Out of power.	Charge the battery until fully charged.
	Overheating protection.	Give the unit time to cool, then reset it.
	No battery installed.	Install the battery pack.
Weak suction.	Dirty water tank full.	Empty the dirty water tank.
	Suction inlet blocked.	Rinse the suction inlet.
Short run time.	Not charged completely.	Recharge the battery pack fully.
	Battery wearing over time.	Purchase a new battery or contract the customer service team.
Rolling brush no longer rotates.	Hair blockage.	Cleaning the rolling brush.
	Rolling brush installed incorrectly.	Reinstall the rolling brush.
LED display screen flickering.	Low battery.	Charging before use.
	Battery temperature protection.	Allow the unit to cool, then charge it.
Low or reduced water spray volumes.	Spray nozzle blocked.	Clean the spray nozzle.
	Spray button or pump damaged.	Contact a qualified service person or the customer service team.

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Li-ion

Batteries should never be placed in the general household waste bin.

Never place batteries on a fire!

To recycle your lithium batteries, you will need to take them to a specialist recycling centre. Or, to dispose of them, you will need to go to a hazardous waste collection site.

For other batteries, they should be disposed of at a local household recycling centre for which details can be found on your local authority website.

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, or you need any spare part replacements and accessories, we have these available to purchase. Please contact our helpful Customer Support Team:



+44 (0) 333 220 6066



www.towerhousewares.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label. Below are the available items that can be purchased for your appliance

NOTES

NOTES

NOTES

TOWER[®]

BUILT FOR BETTER SINCE 1912

thank you!



We hope you enjoy your appliance for many years...

This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

THE FOLLOWING CONDITIONS APPLY:

The product must be returned to the retailer with proof of purchase or a receipt.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon

registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Or call our Customer Support Team on: **+44 (0) 333 220 6066**

