 


NEXT

HAMILTON WITH OAKLEY STITCHING DINING CHAIR-
F40207-F40205-F40213-V22180-W12273-G91079-Y91518

Assembly instructions

Actual product size
H85 x W51 x D58.5cm

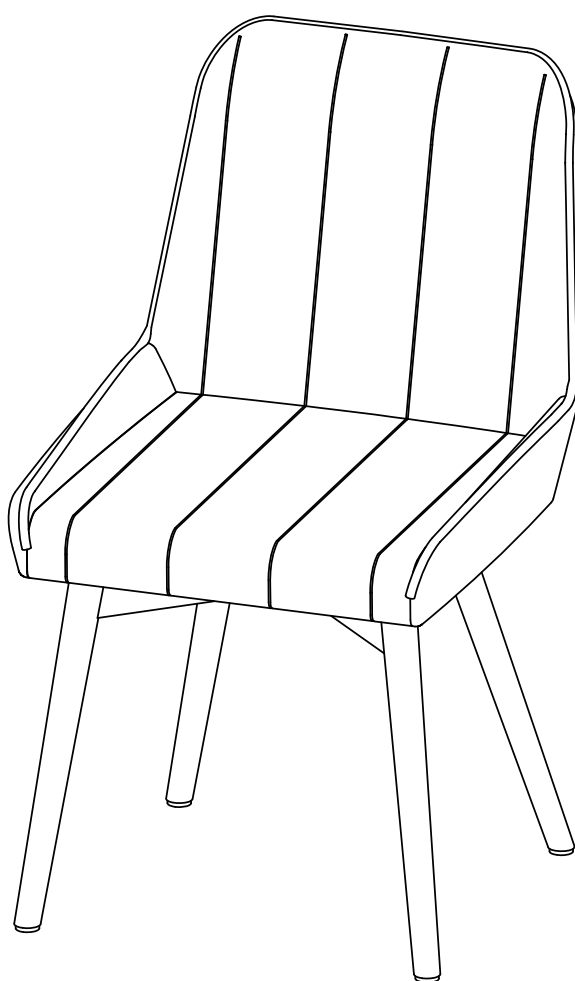

Need Help ?

With: Assembly instruction

Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT-RETAIN FOR FUTURE REFERENCE

HAMILTON WITH OAKLEY STITCHING DINING CHAIR- F40207-F40205-F40213-V22180-W12273-G91079-Y91518

 
 
BEFORE YOU START

Assembly instructions

Number of people required to assemble

Two people are required to assemble this item

Time to assemble: 30 minutes

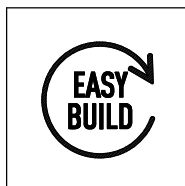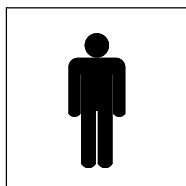

Item No.	Fabric name - leg	Composition
F40207	RELAXED LINNEN LOOK GREEN - BRONX FINISH	3%Linen+12%Cotton+85%Polyester
F40205	RELAXED LINNEN LOOK MID PEBBLE - BRONX FINISH	3%Linen+12%Cotton+85%Polyester
F40213	RELAXED LINNEN LOOK MID BLUE - HAYFORD FINISH	3%Linen+12%Cotton+85%Polyester
V22180	EASTON FAUX LEATHER TAN - BRONX FINISH	100% Polyester
W12273	RELAXED LINEN LOOK RUST - BRONX FINISH	100% Polyester
G91079	RELAXED LINEN LOOK TAUPE GREY - BRONX FINISH	100% Polyester
Y91518	EASTON FAUX LEATHER DARK GREEN - BRONX FINISH	100% Polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.

Always wipe dry after cleaning.

To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.

Do not stand or lean back on your chairs.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground. Please periodically check all fittings and re-tighten as necessary.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk

Need Help ?

With: Assembly instruction

 
 
Missing or damaged parts


CALL: 0333 777 8999

HAMILTON WITH OAKLEY STITCHING DINING CHAIR- F40207-F40205-F40213-V22180-W12273-G91079-Y91518


Components supplied. Please use this guide if you require replacement parts.

Assembly instructions

Ref	Dimensions	Visual	Qty	Ctn
1	500x575mm		1	1
2	685x400mm		1	1
3	685x400mm		1	1

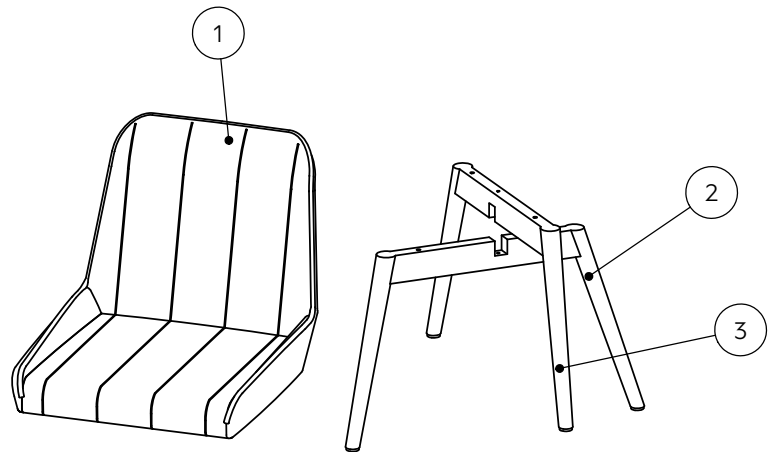 

Fixtures and fittings supplied (actual size)			
Ref	Dimensions	Qty	Spare Qty
A	M6x60mm	5	1
B	M6x18mm	4	1

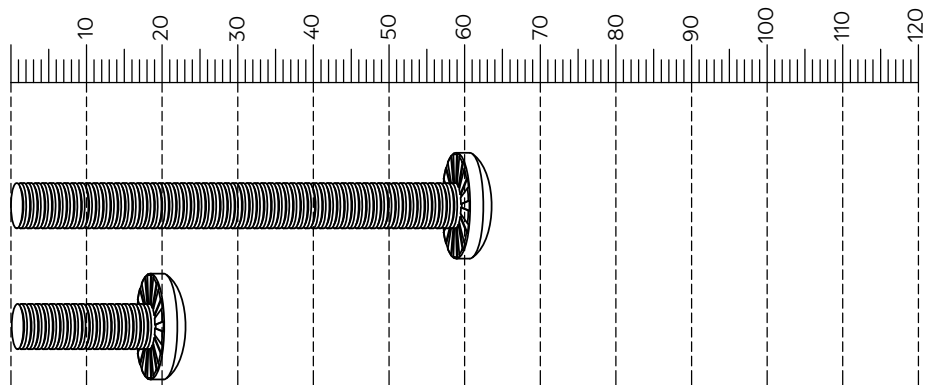 


Fixtures and fittings supplied (not to scale)				
Ref	Dimensions	Qty	Spare Qty	Visual
C	Ø10mm	4	1	
D	Ø16mm	5	1	
E	Ø14mm	4	1	
F	150x150mm	1		
G	Ø25mm	4	1	
H	5mm	1		


HAMILTON WITH OAKLEY STITCHING DINING CHAIR- F40207-F40205-F40213-V22180-W12273-G91079-Y91518

Assembly instructions

 1.

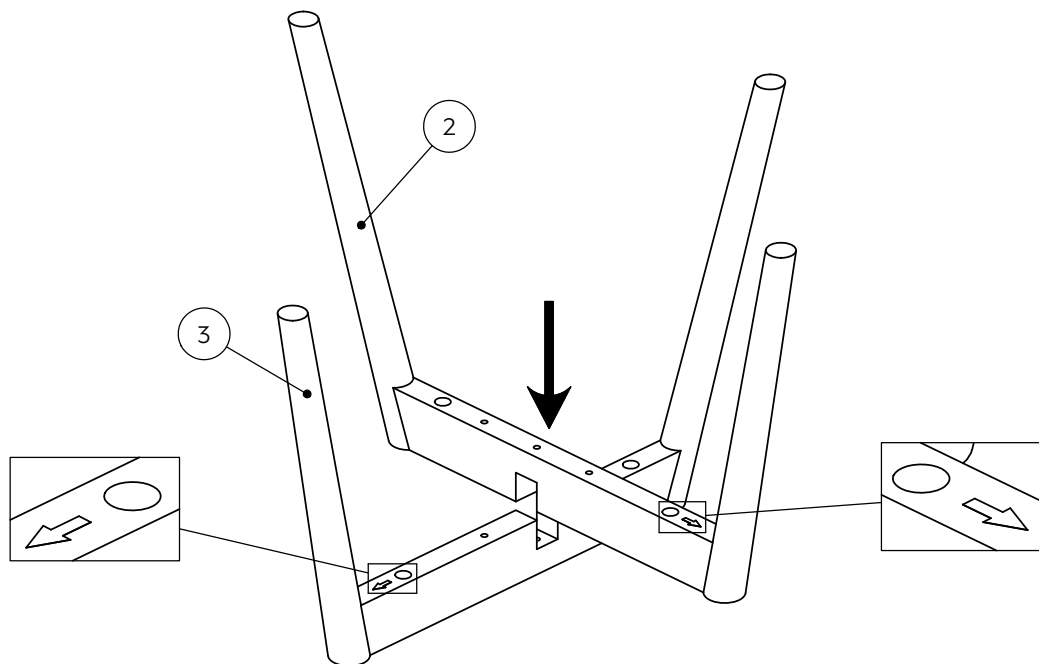

 2.

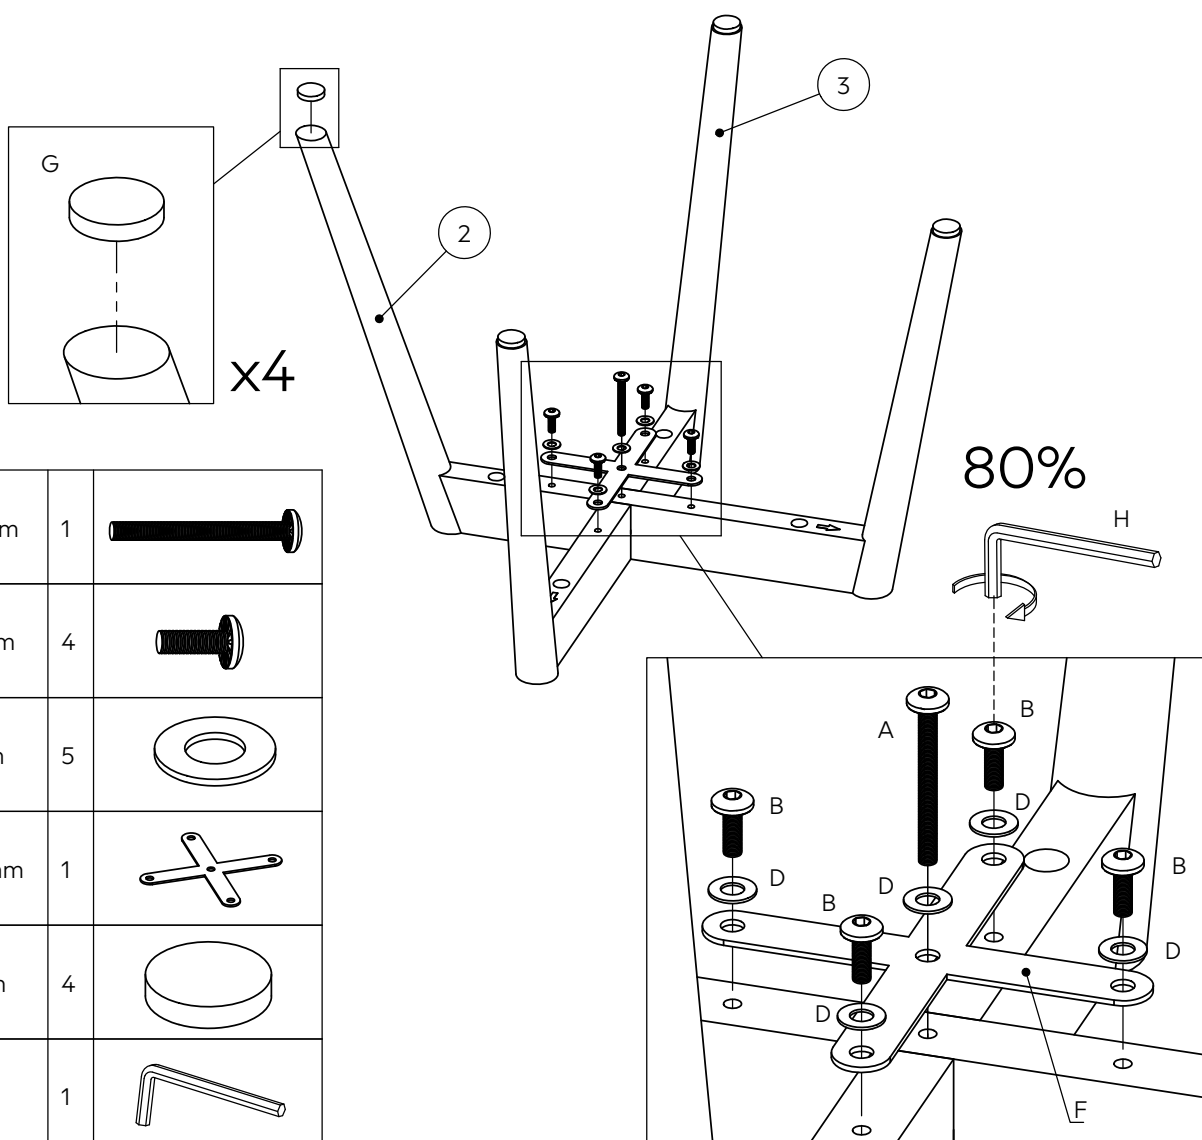


A	M6x60mm	1	
B	M6x18mm	4	
D	Ø16mm	5	
F	150x150mm	1	
G	Ø25mm	4	
H	5mm	1	

HAMILTON WITH OAKLEY STITCHING DINING CHAIR- F40207-F40205-F40213-V22180-W12273-G91079-Y91518

Assembly instructions

 3.


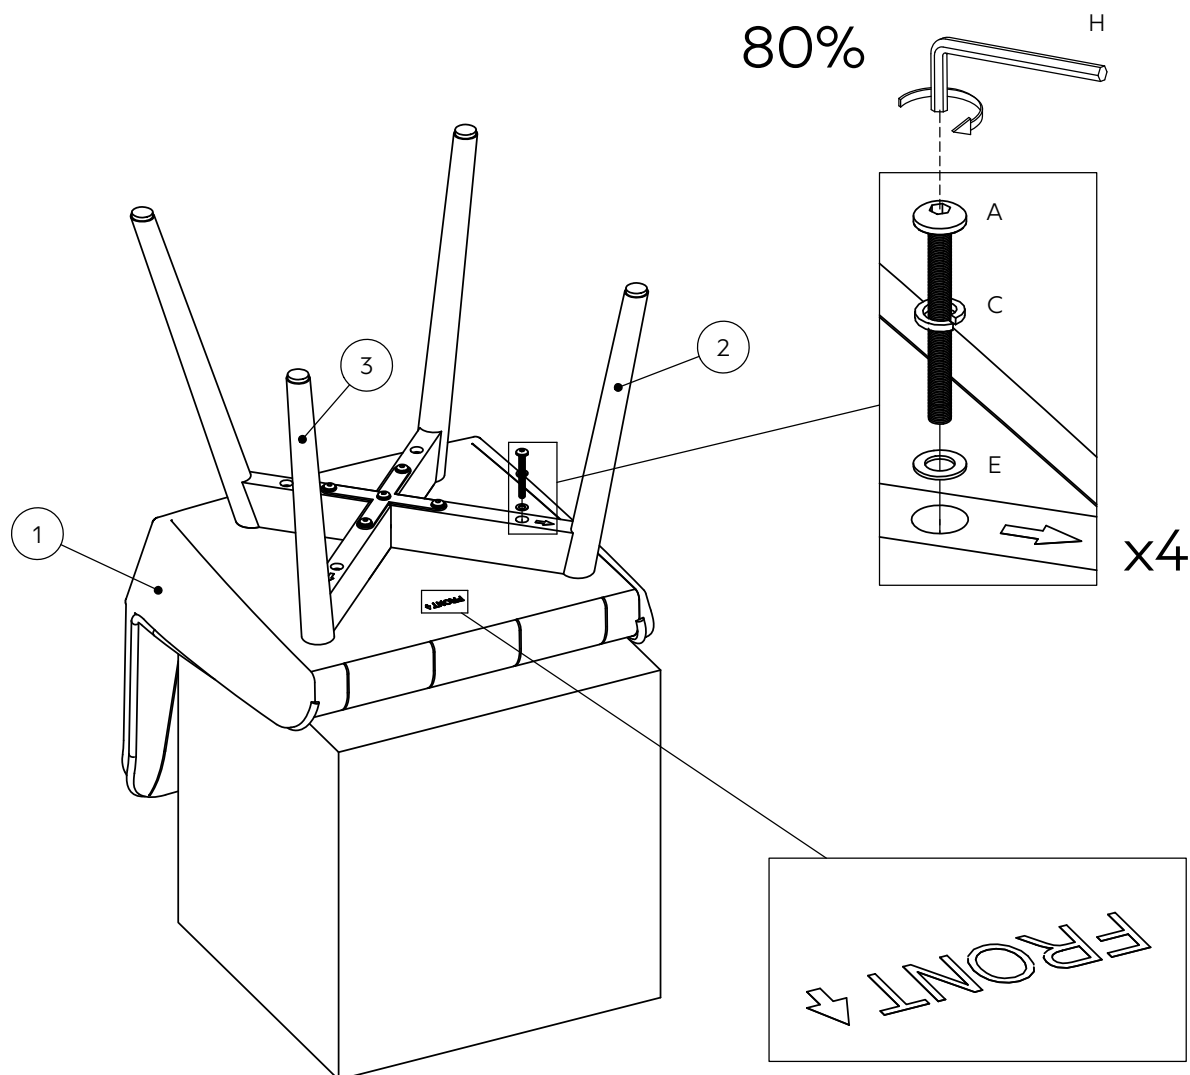


A	M6x60mm	4	
C	Ø10mm	4	
E	Ø14mm	4	
H	5mm	1	

HAMILTON WITH OAKLEY STITCHING DINING CHAIR- F40207-F40205-F40213-V22180-W12273-G91079-Y91518

Assembly instructions

  4.

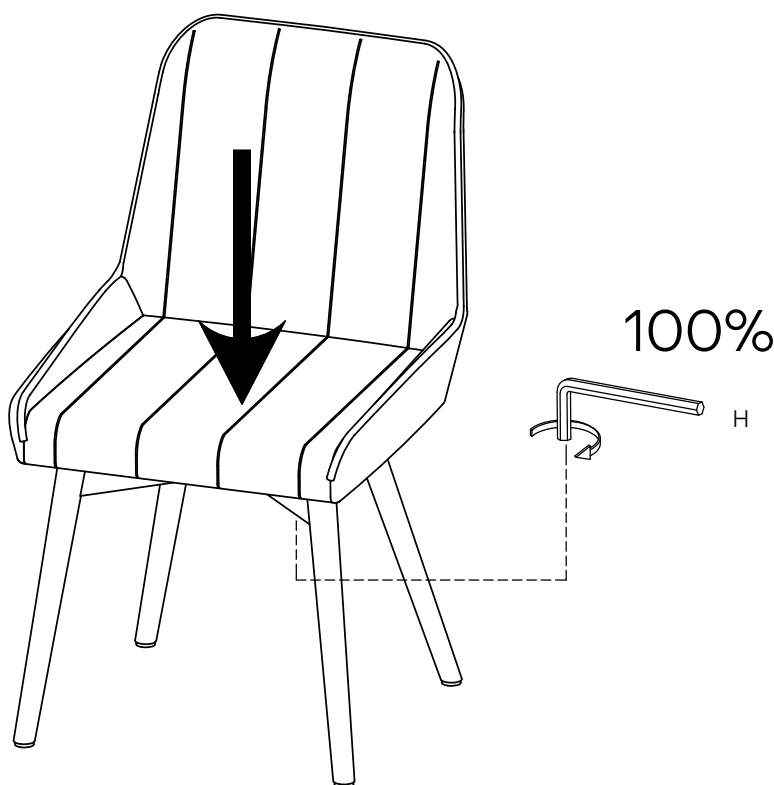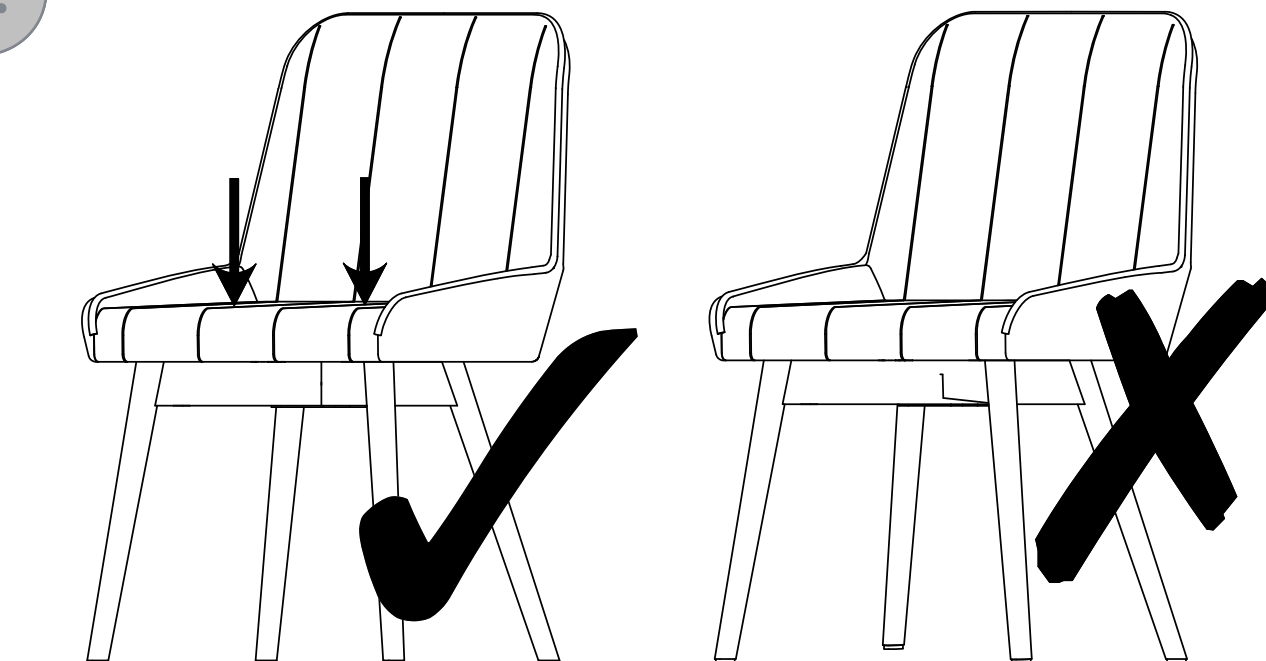

H	5mm	1	
---	-----	---	--

HAMILTON WITH OAKLEY STITCHING DINING CHAIR-
F40207-F40205-F40213-V22180-W12273-G91079-Y91518

Assembly instructions

NEXT

HAMILTON WITH OAKLEY STITCHING DINING CHAIR-
F40207-F40205-F40213-V22180-W12273-G91079-Y91518

Assembly instructions

Actual product size
H85 x W51 x D58.5cm

