

NEXT


ANDERSON DINING BANQUETTES WITH STORAGE

W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521

Assembly instructions

Actual product size

H87×W235.5×D169cm

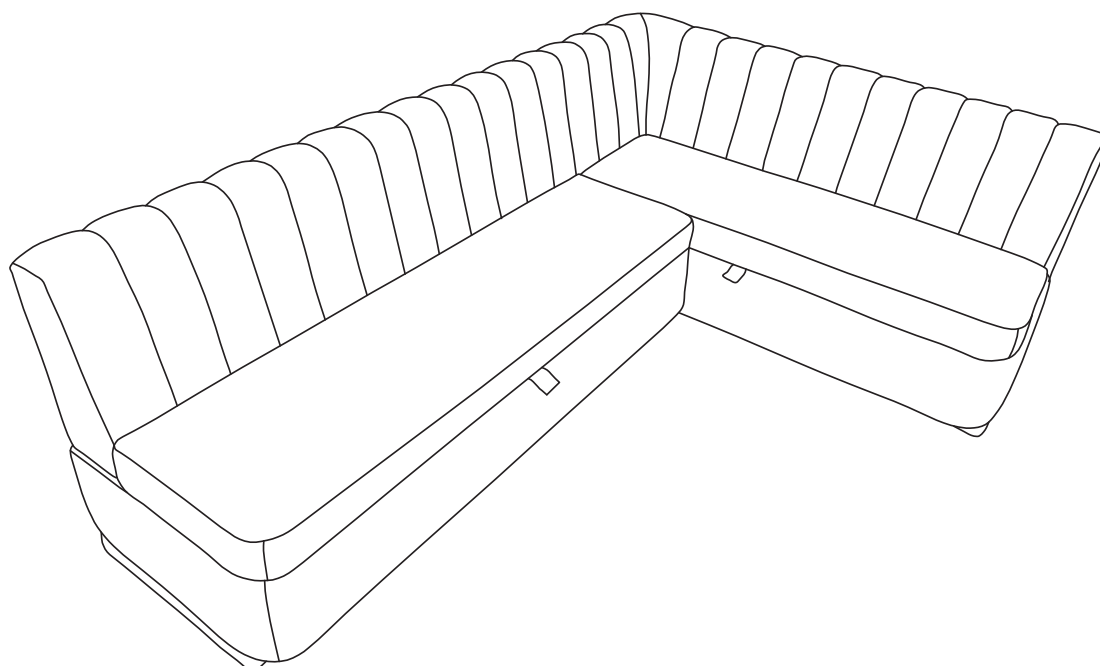

Need Help ?

With: Assembly instruction
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

BEFORE YOU START

Number of people required to assemble
Two people are required to assemble this item
Time to assemble: 30 minutes



ANDERSON DINING
BANQUETTES WITH
STORAGE
W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521
Assembly instructions

Item No.	Fabric name	Fabric composition
W45767	SOFT TEXTURE SAGE	100% polyester
B89062	SOFT VELVET GREY	100% polyester
B55996	MONZA DARK GREY	100% polyester
B54622	CHUNKY WEAVE NATURAL	84.4%Polyester +15.6%Acrylic
B97401	PLUSH CHENILLE MOSS	100% polyester
E95710	MONZA FAUX LEATHER MINK	100% polyester
E95711	SOFT VELVET PEBBLE	100% polyester
V22178	FAUX LEATHER TAN	100% polyester
G91083	TAILORED CHENILLE OYSTER	100% polyester
G91080	SOFT VELVET RUST	100% polyester
Y91521	EASTON FAUX LEATHER DARK GREEN	100% polyester

Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space.
Unwrap all packaging materials and place the components on a clean surface to protect it from damage. We recommend that the packaging is used to protect the surfaces during assembly.
Carefully check that you have all the parts before beginning assembly. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight.
Always wipe dry after cleaning.
To clean your item, please use a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth.

Dont's

Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
Do not stand or lean back on your chairs.
Do not use silicone based furniture polish. Silicone in furniture polishes can break down the lacquer finish.

Missing parts

If you are missing any fixtures and fittings for your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Warnings

We suggest you retain these instructions for future reference.
Keep fittings out of children's reach and keep children well away from construction area. This product should only be used on firm level ground
Please periodically check all fittings and re-tighten as necessary.
Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking of the wood and deterioration of the colour.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage.

Home Service Technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independant home service technician to review and repair the product where possible and recommend further action.


You can write to us at
Home Customer Services
Next Retail Ltd
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range
please visit www.next.co.uk

Need Help ?

With: Assembly instruction
Missing or damaged parts
CALL: 0333 777 8999

GETTING TO KNOW YOUR PRODUCT

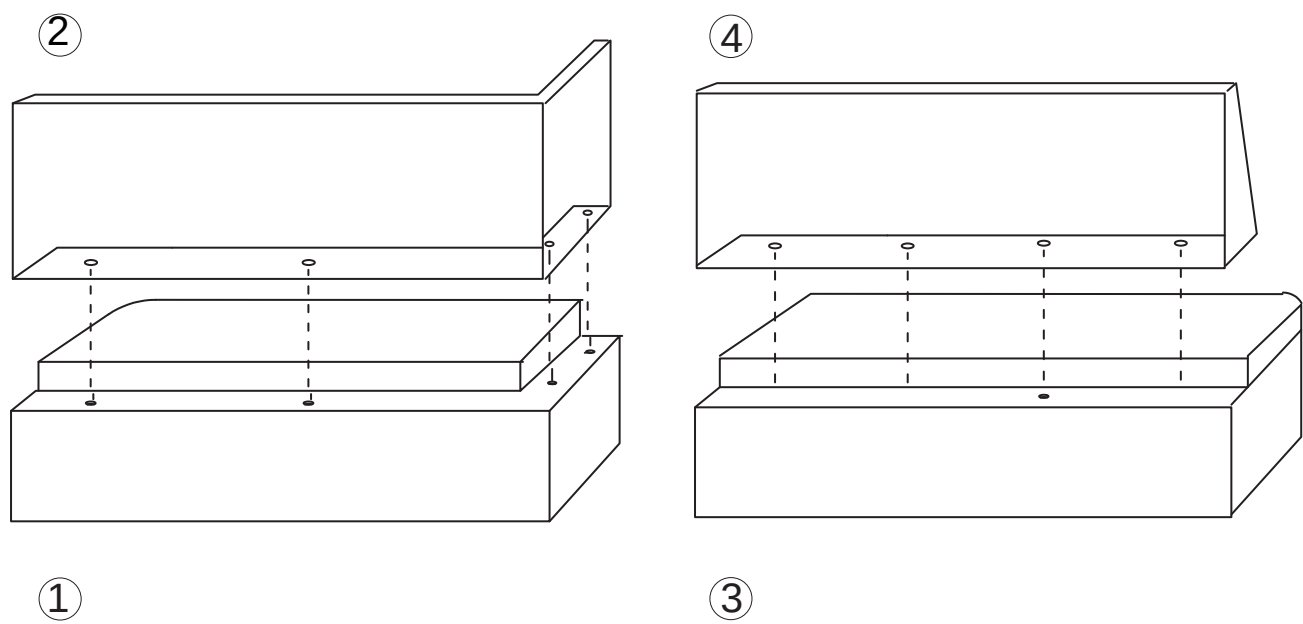


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	Seat : H50xW169xD68cm		1	1
2	Back : H50xW169xD68cm		1	1
3	Seat : H50xW169xD68cm		1	2
4	Back : H50xW169xD22cm		1	2

Fixtures and fittings
supplied (actual size)

Ref	Dimension	Qty	Spare
A	M8 x 60 mm	8	1
B	8 x 85 mm	1	0
C	φ8xφ16x1.5 mm	8	1
D	φ8xφ13x4 mm	8	1

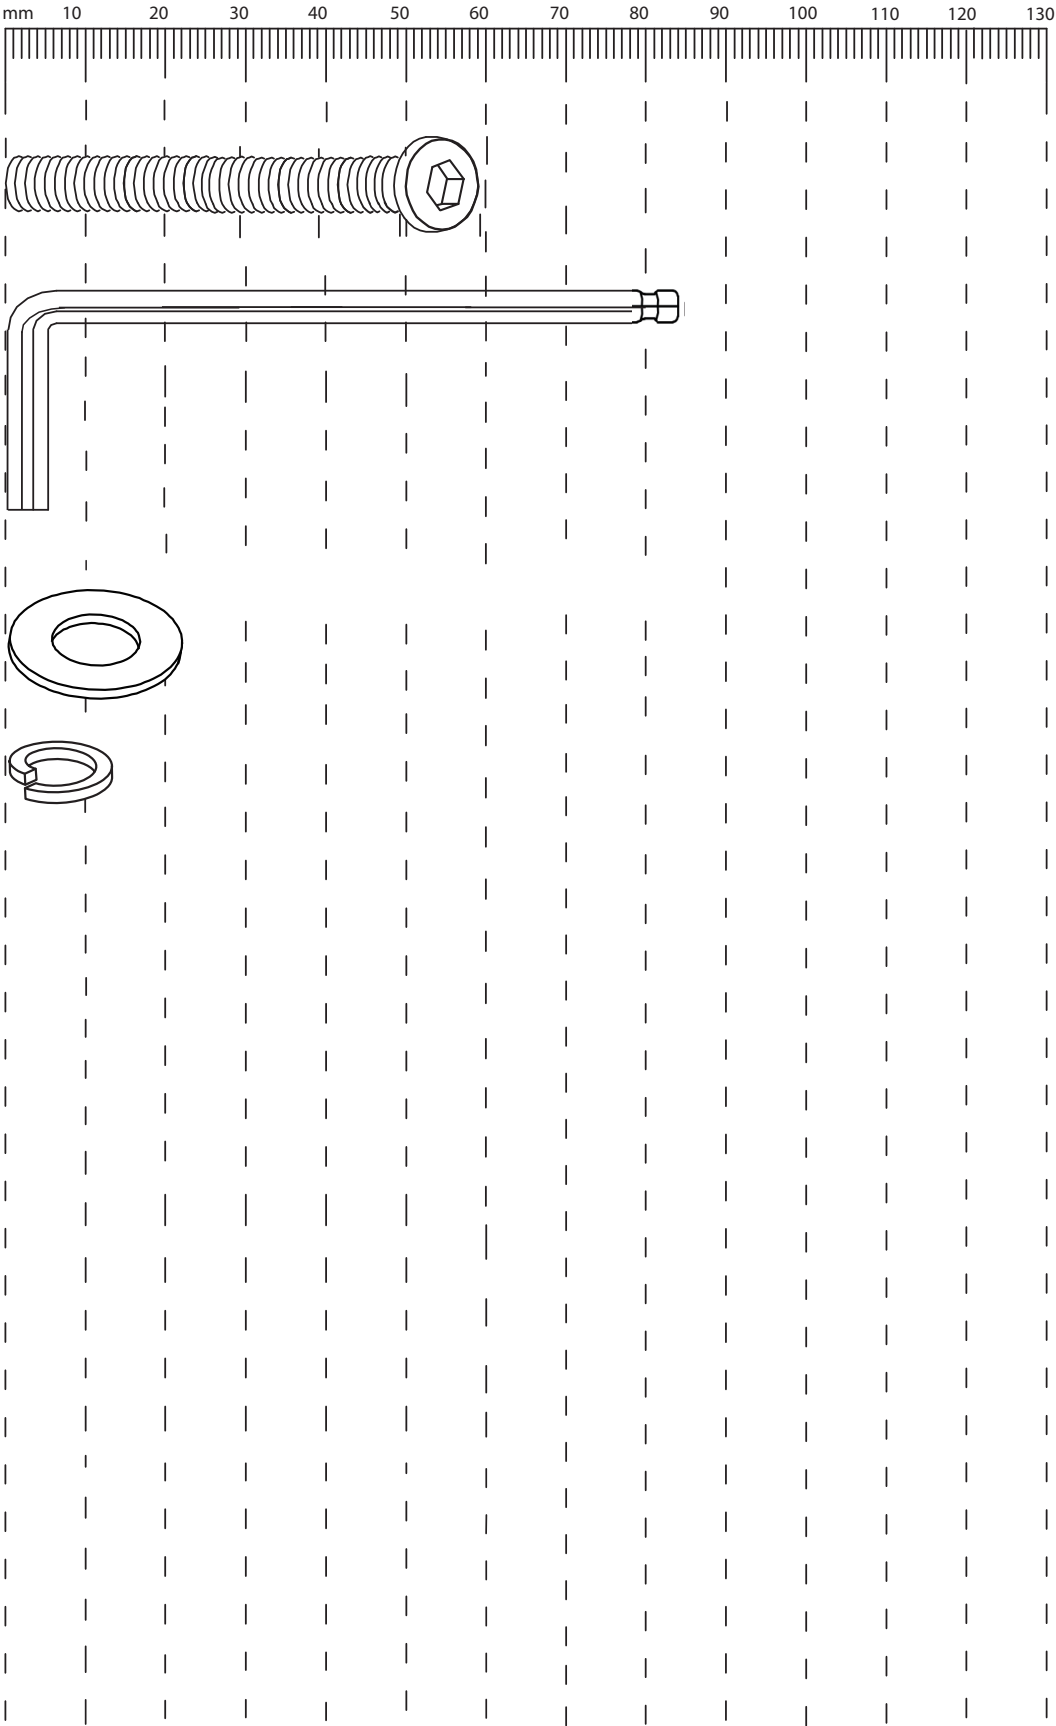

ANDERSON DINING BANQUETTES WITH STORAGE


W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521

Assembly instructions




1.

2

1

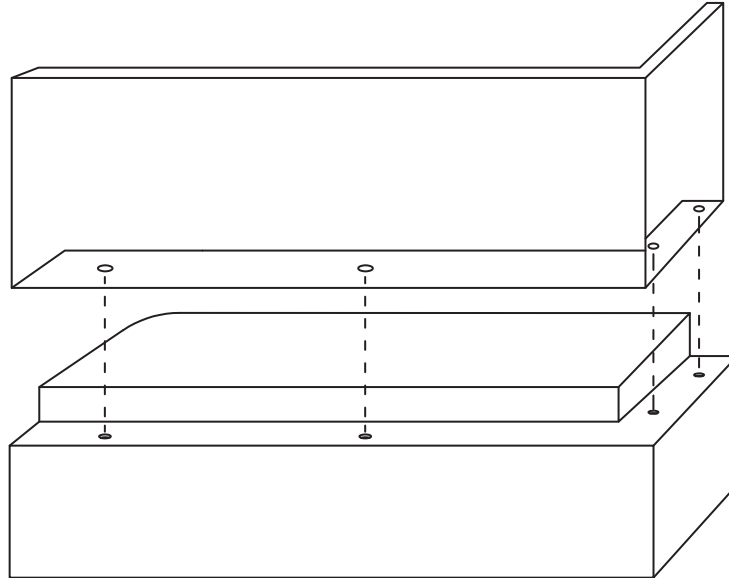

2.

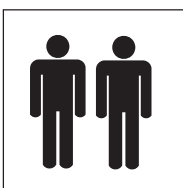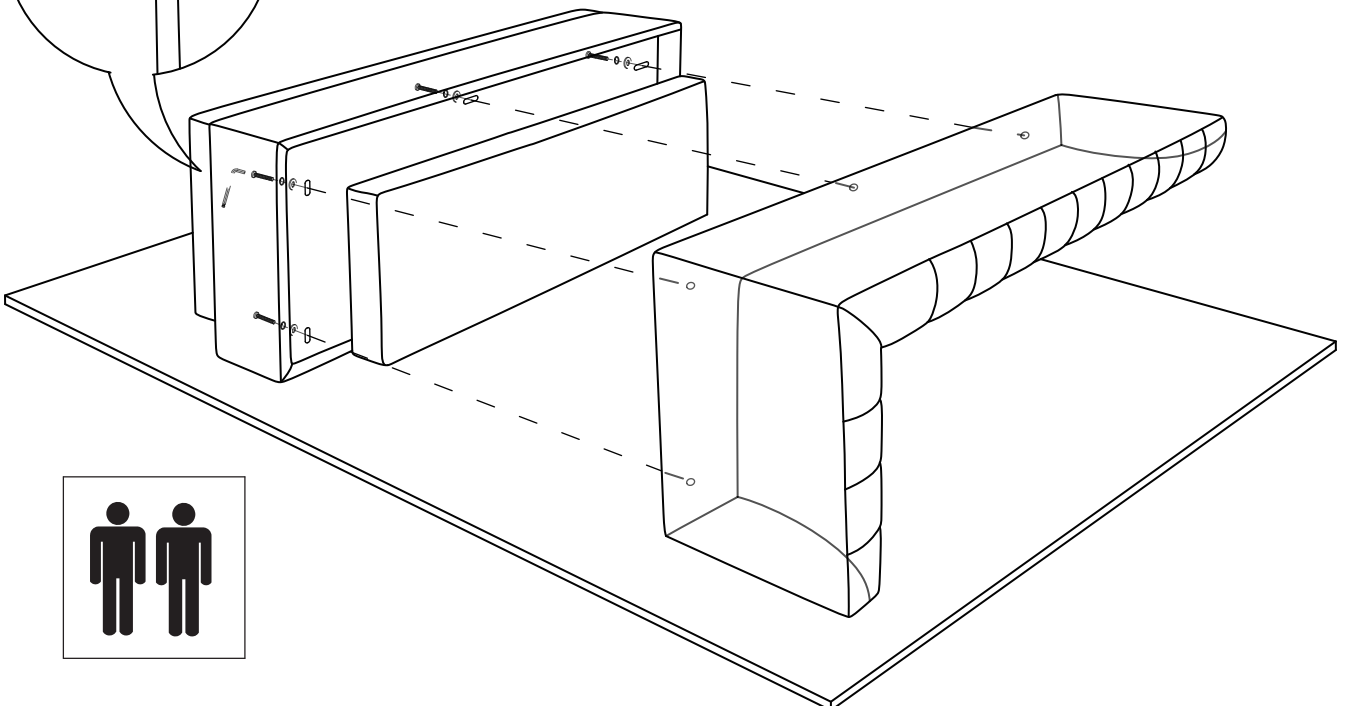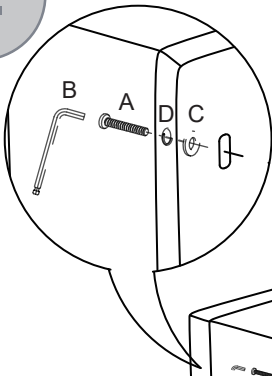


ANDERSON DINING
BANQUETTES WITH
STORAGE
W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521
Assembly instructions



3.

④

③

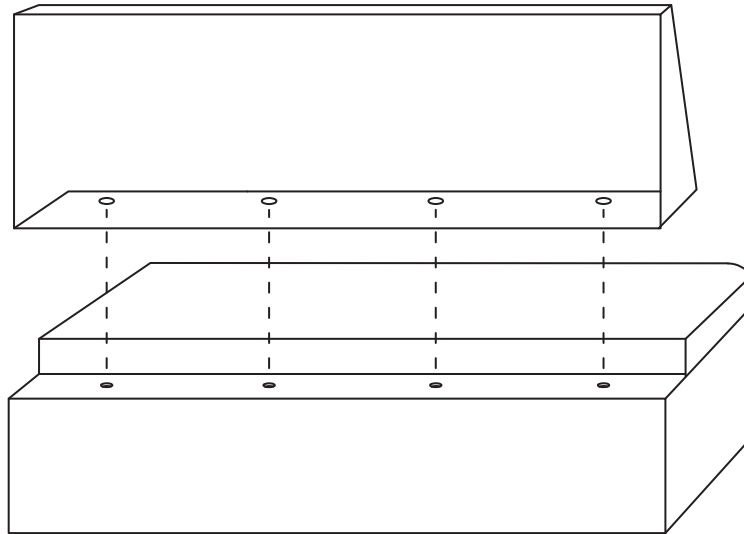

4.

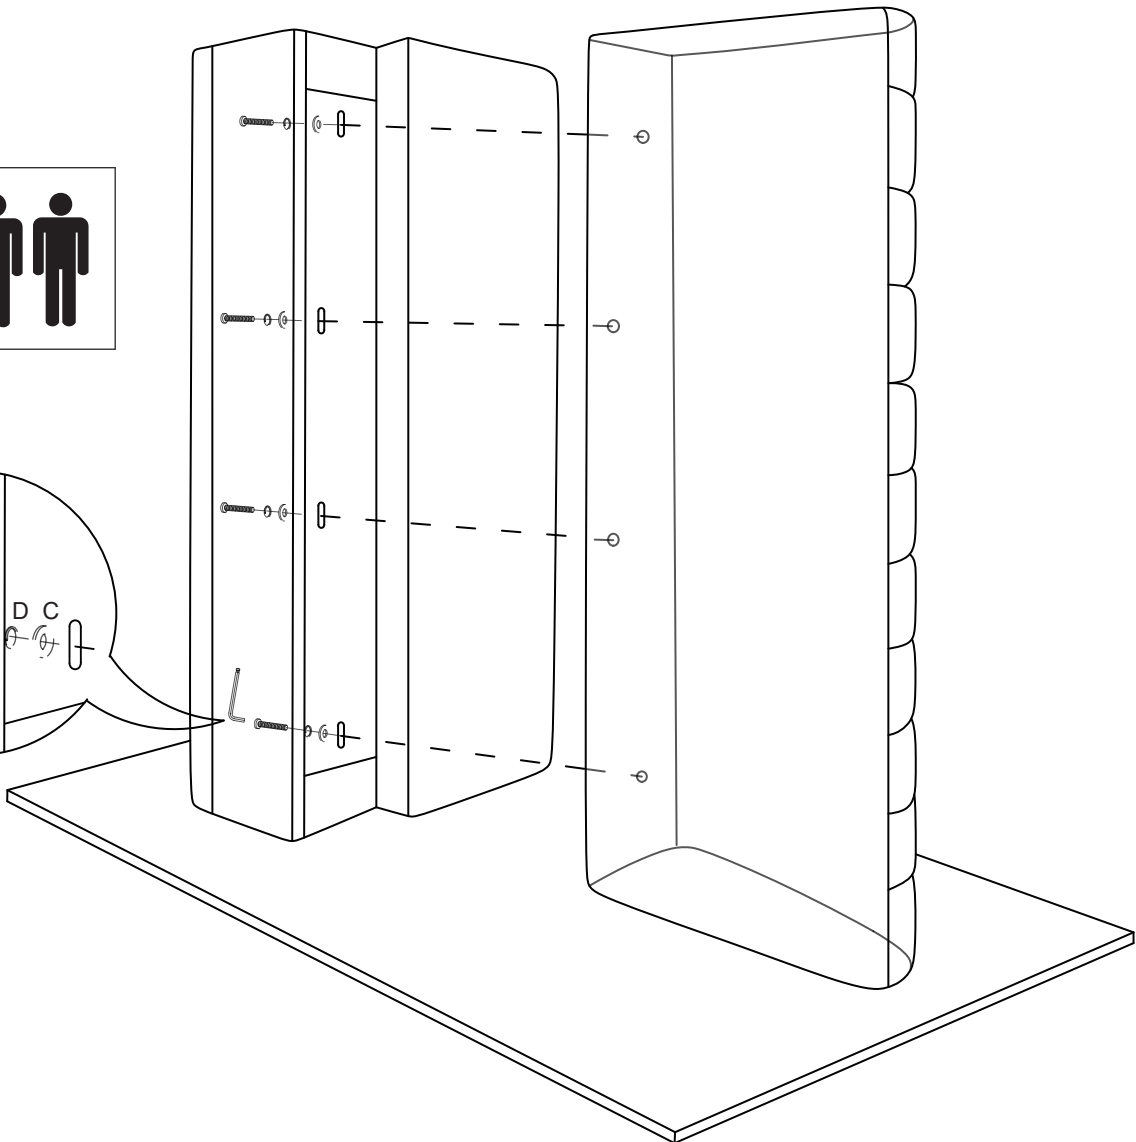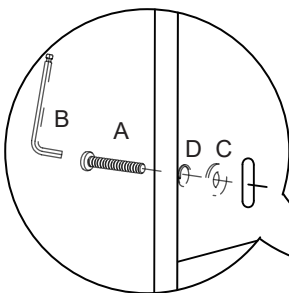


ANDERSON DINING
BANQUETTES WITH
STORAGE

W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521

Assembly instructions

5.

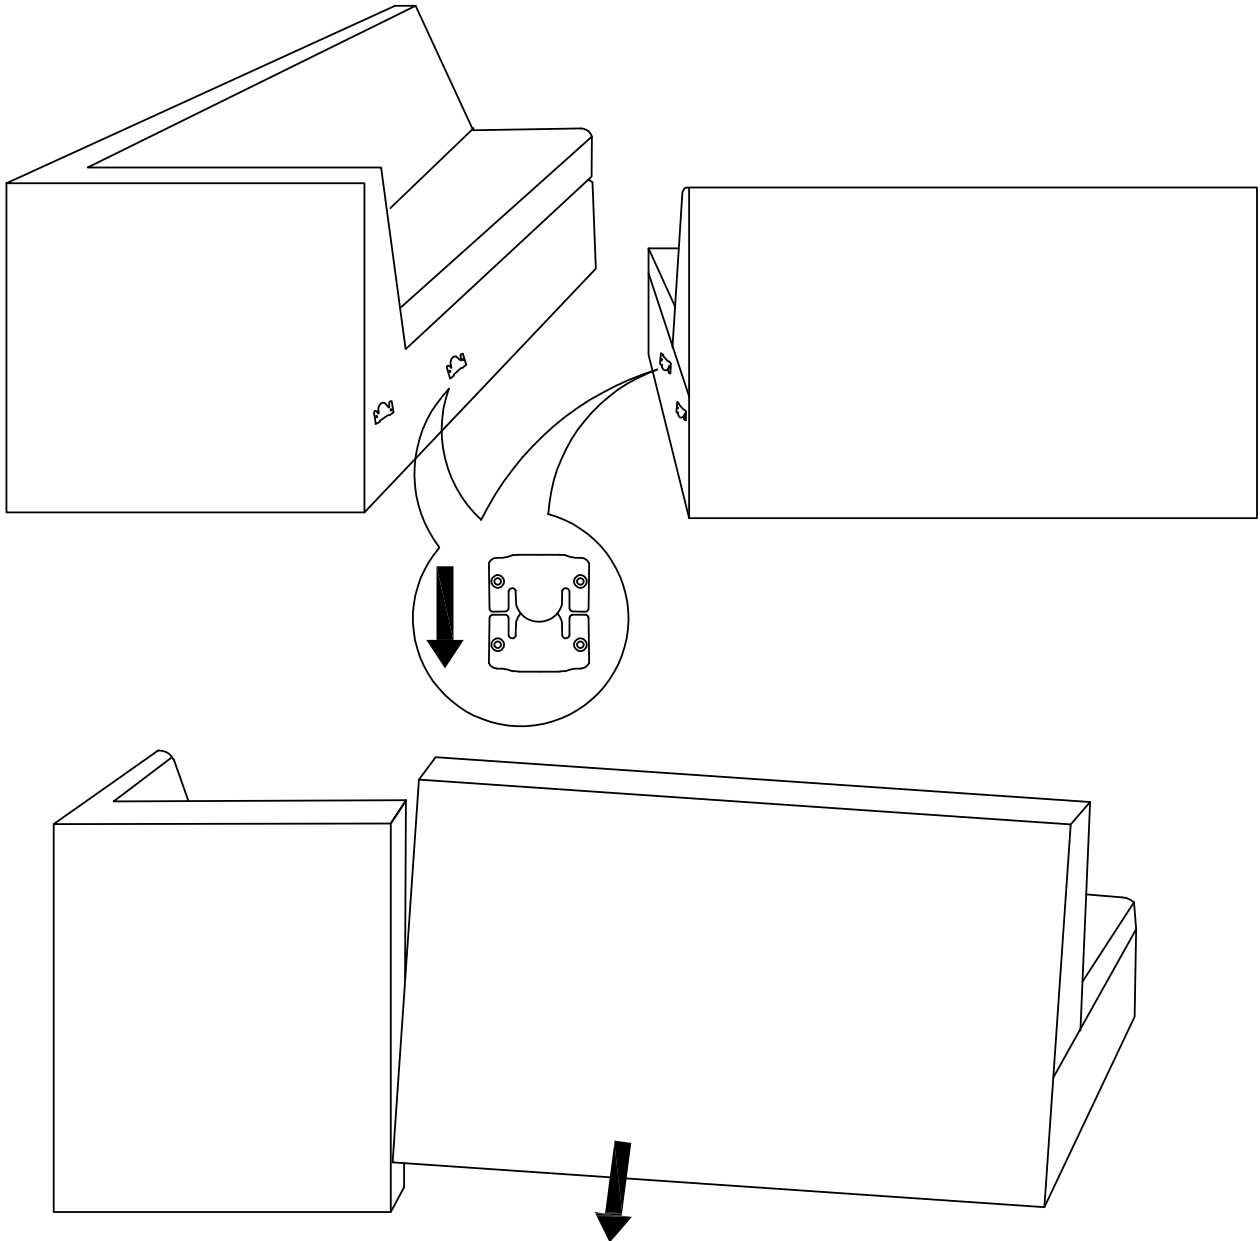

NEXT

ANDERSON DINING BANQUETTES WITH STORAGE

W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521

Assembly instructions

Actual product size

H87×W235.5×D169cm

ANDERSON DINING BANQUETTES WITH STORAGE

W45767-B89062-
B55996-B54622-
B97401-E95710-
E95711-V22178-
G91083-G91080-
Y91521

Assembly instructions

