

TOWER®

BUILT FOR BETTER SINCE 1912

18"
**METAL HIGH SPEED VELOCITY
FLOOR FAN**



USER MANUAL

MODEL: T662000
APPLICABLE TO ALL COLOURS



GREAT BRITISH DESIGN, INNOVATION AND EXCELLENCE

Please Keep and Read

Thank you for choosing this Tower product. Please read these instructions carefully, they will tell you how to use and care for the product.

If you have any further questions about the range please contact the customer services department, the contact details can be found on the bottom of this leaflet.

IMPORTANT SAFETY INFORMATION

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- DO NOT let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- DO NOT carry the appliance by the power cord.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. DO NOT use extension cords with the appliance.
- DO NOT pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Take care when any appliance is used near pets.
- DO NOT use this product for anything other than its intended use.
- DO NOT immerse cords, plugs or any part of the appliance in water or any other liquid.
- This appliance is for household use only.
- DO NOT use the appliance outdoors.
- Keep hair, loose clothing, fingers and all body parts away from moving parts.
- DO NOT insert or allow foreign objects to enter any ventilation opening as this may cause an electric shock, fire, or damage to an individual or a property.
- To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet (receptacle) or into another outlet (receptacle) wired into the same circuit.
- We DO NOT recommend use of an extension cord as it may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord should be No: 14 AWG minimum size and rated not less than 1875 watts, and has to be used only for supplying power to this fan.
- Never insert fingers, pencils or other objects through the grille during operation.
- The fan should be set up on a stable and level surface to avoid it being knocked over.
- DO NOT expose the fan to excessive heat or humidity as this can cause damage to the electrical components.
- Use only the manufacturer's recommended accessories.
- DO NOT pull the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team: +44 (0) 333 220 6066

THIS BOX CONTAINS

Instruction Manual

Fan Unit



SPECIFICATIONS

RATED VOLTAGE	220-240V~
FREQUENCY	50/60HZ
POWER	100W
POWER CONSUMPTION IN STANDBY MODE:	N/A
POWER CONSUMPTION IN OFF MODE:	0W

BEFORE FIRST USE


Note! Read all instructions and safety information carefully before first use. Please retain this information for future reference.

Remove your appliance from the packaging.
Check that there is no damage to the cord or any visible damage to the body or accessories.

Dispose of the packaging in a responsible manner.

Assemble the fan, as detailed in the corresponding section below.

GETTING TO KNOW YOUR APPLIANCE

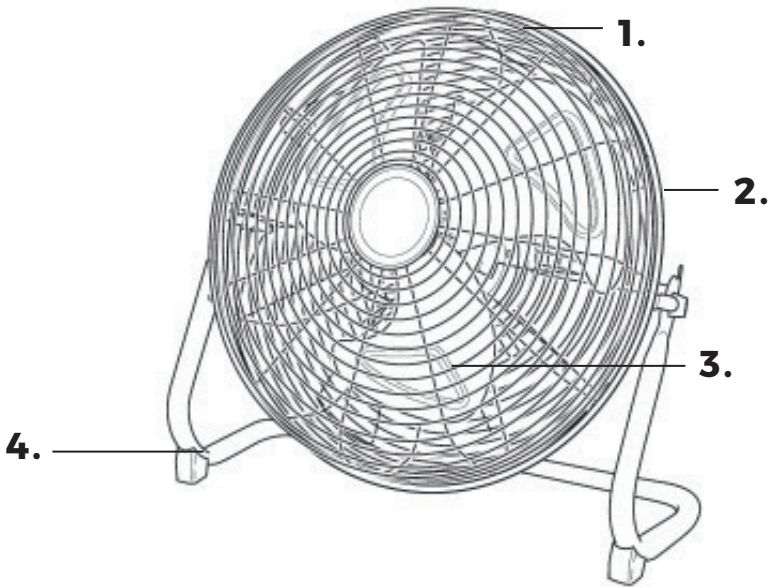

- | | |
|-----------------------------------|--------------------------------------|
| 1. Guard
(front and back) | 3. Fan blades |
| 2. Control panel
(back of fan) | 4. Fan stand with
protective feet |

USING YOUR APPLIANCE

Assembling The Fan

1. Place the fan in the desired location. Ensure the fan is placed on a dry and level surface. Please note this fan is designed for floor use.
2. Plug the fan into an electrical wall outlet. Make sure all of the buttons at the back are released before plugging in your fan.
3. Manually adjust the angle of the fan as desired. Take care not to tilt the fan at an angle higher than 100 degrees, as doing so will damage the unit.
4. Press the relevant speed button at the back to select the required fan speed:

0 Stop

1 Slow

2 Medium

3 High

CLEANING & CARE

Before cleaning always switch off the appliance and remove the plug from the electrical socket.

To clean the outside of the fan, wipe the exterior with a soft, damp cloth.

Cleaning the fan blades:

1. Remove the front guard by unclipping the locking clips located around the circumference of the guard.
2. The top lock does not unclip.
3. Use a small spanner to unscrew the nut and bolt that holds the bottom of the front guard to the back guard.
4. With both hands, pull the front guard downwards and away from the fan.
5. Clean the fan blades with a soft, damp cloth.
6. Slide the front guard back into place, so it fits into the top lock clip. Clip all the locks back into place and screw the nut and bolt back in.

STORAGE

When not in use, store the fan (preferably in its original box) in a cool, clean and dry location.

Model Identifier(s): T662000 All colour variants			
Item	Symbol	Value	Unit
Maximum fan flow rate	F	98.26	m ³ /min
Fan Power input	P	99.5	W
Service value	SV	0.99	(m ³ /min)/W
Standby power consumption	PSB	0.00	W
Fan sound power level	LWA	65.62	dB(A)
Maximum air velocity	C	3.85	m/sec
Seasonal electricity consumption	Q	31.84	kWh/a
Measurement standard for service value	EN IEC 60879:2019		
Contact Details:	RKW LTD, Sutton House, Berry Hill Industrial Estate, Berry Hill Road, Stoke-on-Trent, ST4 2NL		

DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:

+44 (0) 333 220 6066

www.towerhousewares.co.uk

Please have your Model No. available. This can be found on the front cover of this instruction manual and on the appliance's rating label.

TOWER®

BUILT FOR BETTER SINCE 1912

Thank you!

We hope you enjoy your product for many years...

This product is guaranteed for 12 months from the date of original purchase.

If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

THE FOLLOWING CONDITIONS APPLY:

The product must be returned to the retailer with proof of purchase or a receipt.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

The standard one year guarantee is only extended to the maximum available for each particular product upon

registration of the product within 28 days of purchase. If you do not register the product with us within the 28 day period, your product is guaranteed for 1 year only.

To validate your extended warranty, please visit www.towerhousewares.co.uk and register with us online.

Please note that length of extended warranty offered is dependent on product type and that each qualifying product needs to be registered individually in order to extend its warranty past the standard 1 year.

Extended warranty is only valid with proof of purchase or receipt.

Your warranty becomes void should you decide to use non Tower spare parts.

Spare parts can be purchased from www.towerhousewares.co.uk

Or call our Customer Support Team on: **+44 (0) 333 220 6066**

