

Batteries required per candle: 2 x AA, not included.

This product is battery operated with the battery compartment located on the underside of the candle.

After insertion of the batteries the product can be activated via the On/Off switch positioned on the underside of the candle.

WARNING

Insertion, removal and disposal of batteries should be done under adult supervision. For best performance, use only batteries recommended. Ensure that batteries are inserted with the correct polarity. Do not mix new and used batteries. Remove batteries when item is not in use. Remove exhausted batteries and dispose of in accordance with manufacturer's recommendations. Do not dispose of used batteries in domestic waste. Your local authority has made special arrangements for the disposal of used batteries; contact them for further details. Remove rechargeable batteries from the product before recharging. The supply terminals are not to be short-circuited. This item is fragranced. Discontinue use if irritation occurs. Do not place in a warm position such as direct sunlight or television top.

**DO NOT PLACE ON UNPROTECTED SURFACE. FRAGRANCED WAX MAY STAIN.
DO NOT LIGHT. KEEP OUT OF REACH OF CHILDREN.
PLEASE RETAIN THIS PACKAGING FOR FUTURE REFERENCE.**