

2 x AA batteries required. Batteries not included.

This product is battery operated with the battery compartment located on the underside of the candle. After insertion of the batteries the product can be activated via the on/off switch positioned on the underside of the candle.

WARNING! Insertion, removal and disposal of batteries should be done under adult supervision. For best performance use only the batteries recommended. Ensure that batteries are inserted with the correct polarity. Do not mix different types of battery. Do not mix new and used batteries. Remove batteries when item is not in use. Remove exhausted batteries and dispose of in accordance with manufacturer's recommendations. Do not dispose of used batteries in domestic waste. Your local authority has made special arrangements for the disposal of used batteries; contact them for further details. Do not attempt to recharge non rechargeable batteries. Remove rechargeable batteries from the product before recharging. The supply terminals are not to be short circuited. Discontinue use if irritation occurs.

Do not place in a warm position such as direct sunlight or television top. Do not light. Keep out of the reach of children.

Please retain this information for future reference.

Picase return in packaging. This does not affect your legal rights.

Made in China

Next Retail Ltd, LE19 4AT. next.co.uk

Next Retail (Ireland) Ltd. 13-18 City Quey, Dublin 2, D02 ED70