

Batteries required per candle: 2 x AA batteries (6 overall), not included.

This product is battery operated with the battery compartment located on the underside of the candle. After insertion of the batteries, the product can be activated via the On/Off switch positioned on the underside of the candle.

Battery warning:

Insertion, removal and disposal of batteries should be done under adult supervision.

For best performance use only the batteries recommended.

Ensure the batteries are inserted with the correct polarity.

Do not mix different types of battery.

Do not mix new and used batteries.

Remove batteries when item is not in use.

Remove exhausted batteries and dispose of them in accordance with manufacturer's recommendations.

Do not dispose of batteries in domestic waste.

Your local authority has made special arrangements for the disposal of used batteries; contact them for further details.

Do not attempt to recharge non-rechargeable batteries.

Remove rechargeable batteries from the product before recharging.

The supply terminals are not to be short-circuited.

Do not place in a warm position such as direct sunlight or on a television top.

Do not place on an unprotected surface.

Do not light.

Keep out of reach of children.

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.