
NEXT

# LOXLEY DRUM GOLD - 810688

**Assembly instructions**

Actual product size

H45.5 x W30.5 x D30.5 cm

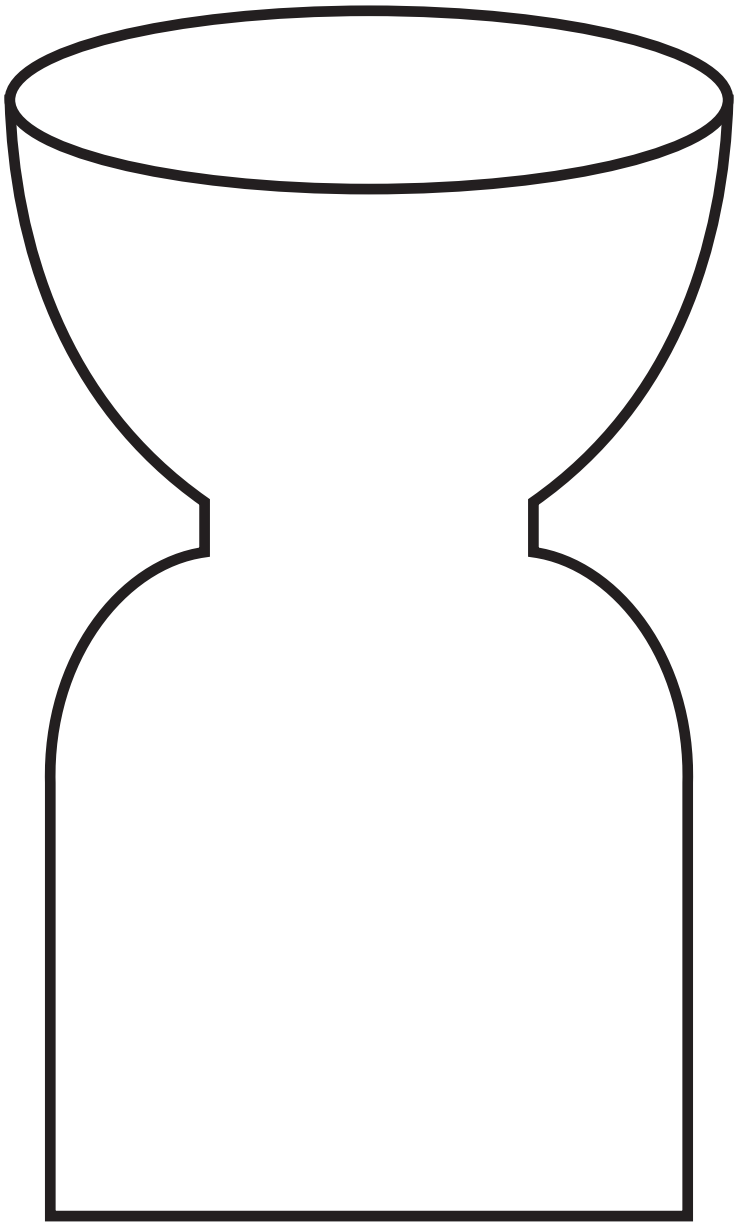

## Need Help ?

With: Assembly instruction
Missing or damaged parts

**CALL: 0333 777 8999**

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

# LOXLEY DRUM GOLD
# 810688
**Assembly instructions**

# BEFORE YOU START

## Do's

We suggest you spend a short time reading through this leaflet before you start. When you are ready to start, make sure that you have the right tools and plenty of space. Unwrap all packaging mat erials and place the componen ts on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly. Carefully check that you have all the parts before beginning assembly. Due to the size of this product we recommence that it is assembled in the room intended for use. Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Wipe occasionally with a soft cloth slightly dampened with w ater. Then buff with a dry clean soft cloth. Wood will mellow and change colour over time, we recommend that ornamen ts and items placed on the surface are moved regularly for the first f ew months to prevent uneven mellowing.

## Dont's

Do not drag or pull your furnitur e. Do not rub or scrub the surface when cleaning. Do not use silicone based furnitur e polish. Silicone in furniture polishes can break own the finish. Marble can be somewhat fr agile compared to other materials as it is susceptible to scratches, etching and staining. While it may seem difficult to clean marble without the use of abrasive cleaners, it's not. Marble is easy to clean and maintain. Gentle soap and warm water are enough to get the job done. If you make a mess, immediately spot clean any spills in order to prevent staining. The longer a substance is left on top of the marble, the more likely it is to stain.

Never allow any kind of liquid to remain on your furnitur e. Absorption can cause wood to warp or finishes to de-laminat e. Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

## Missing parts

If you are missing any fixtures and fittings f or your product.. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Warnings

We suggest you retain these instructions f or future reference. Keep fittings out of children s reach and keep children well away from construction ar ea. This product should only be used on firm level ground.
Please periodically check all fittings and r e-tighten as necessary. Please do not sit or stand on your furnitur e. Avoid exposing the furnitur e to excessive heat or direct sunlight as this can cause deterioration of the colour. Unwrap all packaging mat erials and place the componen ts on top of the cart on box or on a clean floor to protect it from damage

## Home Service Technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independen t home service technician to review and repair the product where possible and recommend further action.

You can write to us at
Home Customer Services
Next Retail Ltd.
Desford Road, Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk

## Need Help ?

With: Assembly instruction
Missing or damaged parts

**CALL: 0333 777 8999**

# LOXLEY DRUM GOLD
# 810688
**Assembly instructions**

NEXT

Actual product size
H45.5 x W30.5 x D30.5 cm

