Birlea®

Assembly Instructions

Thank you for purchasing a Birlea product

For a chance to win a Love2Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture. One winner will be selected at random each month.
*Terms & conditions may apply.

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our Trustpilot link on the QR code here. Your feedback will be greatly appreciated.

SCAN ME

No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer that you purchased your item from.

Please note that this items build time is around 30minutes with 2 man build

www.birlea.com

ASSEMBLY INSTRUCTIONS
NOAH 2 DOOR SIDEBOARD

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR NOAH 2 DOOR SIDEBOARD.


PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.


HEALTH & SAFETY:


DO NOT use this item if any parts are missing, damaged or worn.
DO NOT use this item unless all fixings are secured.
Please keep small parts out of reach of children.
Always use on a level, even surface.

CARE & MAINTENANCE:

Assemble in the room of use.
Assembly should be carried out with this item laying flat, not standing upright.
Assemble on a soft,clean surface to prevent damages.
To remove the printed numbers on the pieces,use the eraser provided.
Periodically check all screws & fixings to ensure they are secure.
DO NOT push the item as this will damage the base.
Always lift the item with two pepple to reposition.
Keep any sharp objects away from the item.

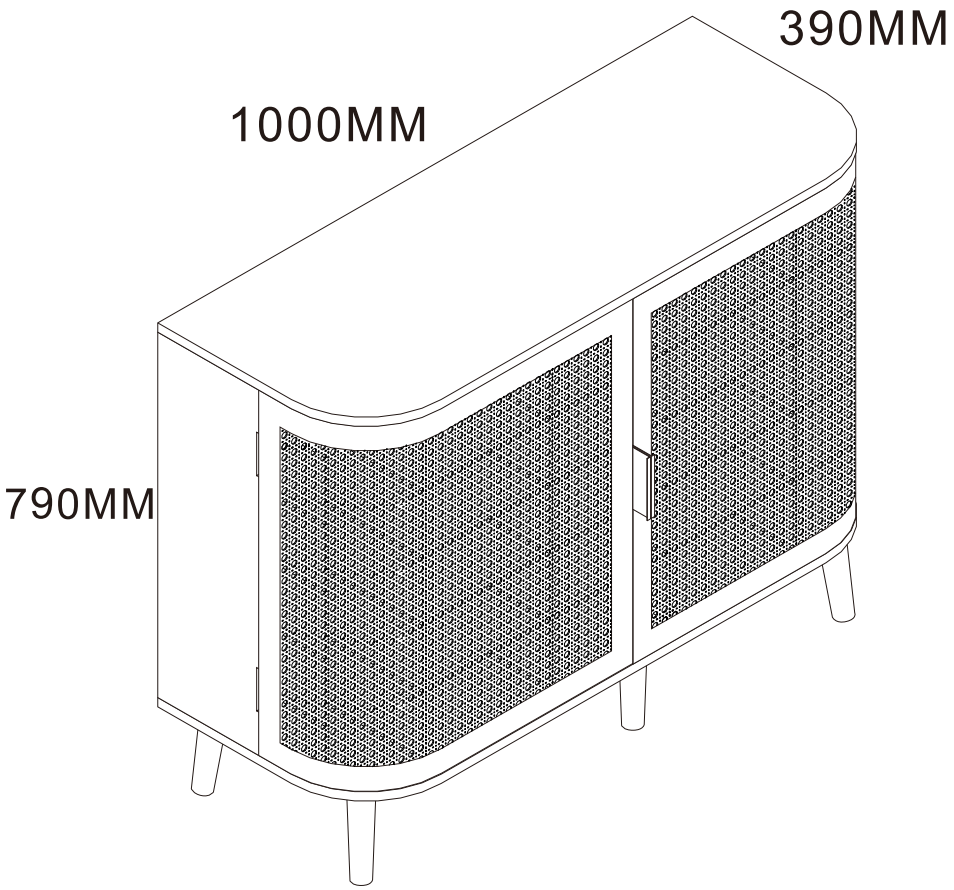

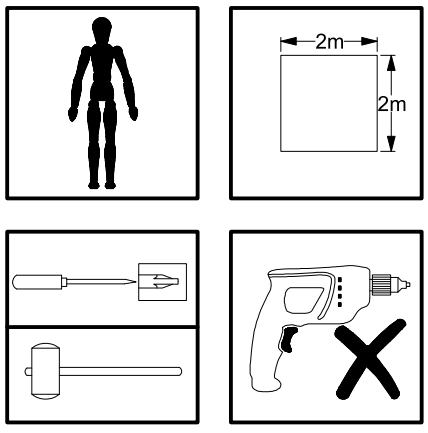


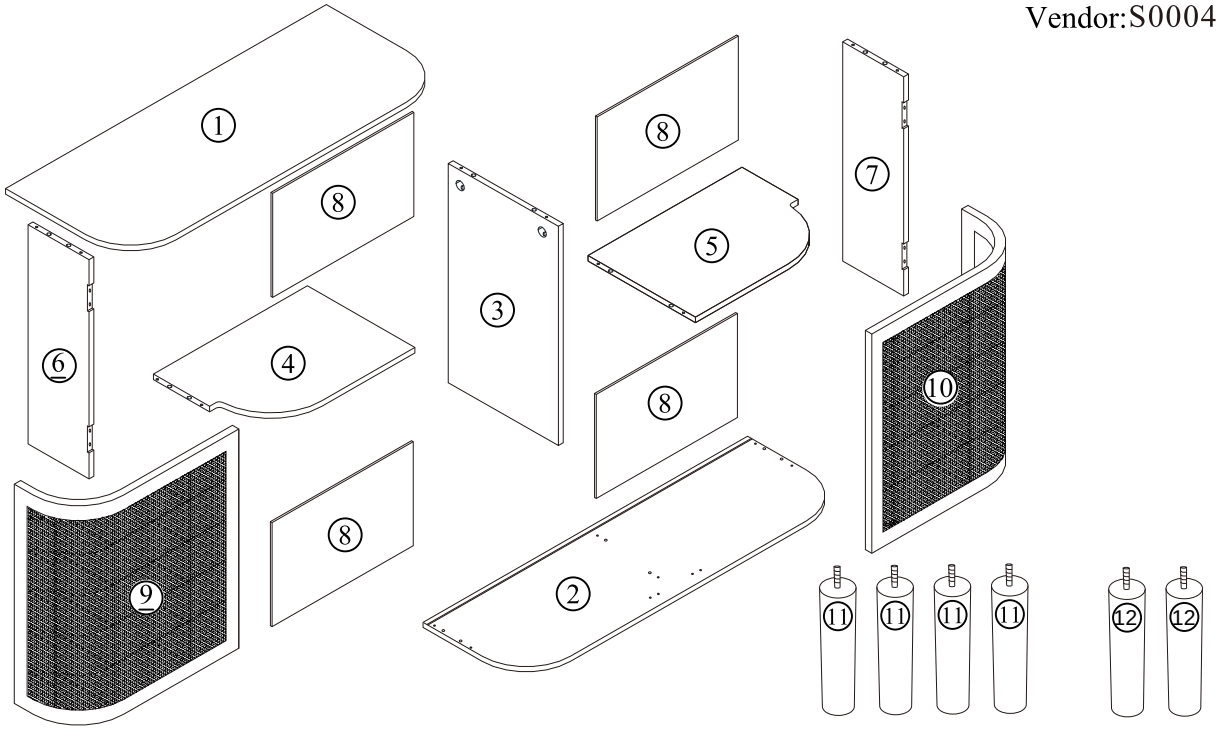


Parts list			
Part	Descripion	Box	Qty
1	Cabinet Top	1	1
2	Bottom Panel	1	1
3	Middle Division Panel	1	1
4	Left Shelf	1	1
5	Right Shelf	1	1
6	Left Side Panel	1	1
7	Right Side Panel	1	1
8	Back Panel	1	4
9	Left Door	1	1
10	Right Door	1	1
11	Feet	1	4
12	Center Adjustable Foot	1	2

Parts list		
Part	Descripion	Qty
A	Cam Bolt M6X35MM	14
B	Cam Lock 15X10MM	14
C	Wooden Dowel M6X30MM	20
D	Screw M4X35MM	8
E	Screw M3X14MM	64
F	Screw M3.5X14MM	4
G	Plastic Corner Support	16
H	Handle	2
I	Metal Pin	4
J	Screw M4X12MM	22
K	Nylon Strap	2
L	Magnetic Door Catcher	4
M	Metal Plate	4
N	Hinge	4
O	Anchor	2

**** You will need a small mallet and a screwdriver for assembly.**
**** Some screws and wooden dowel may remain.**

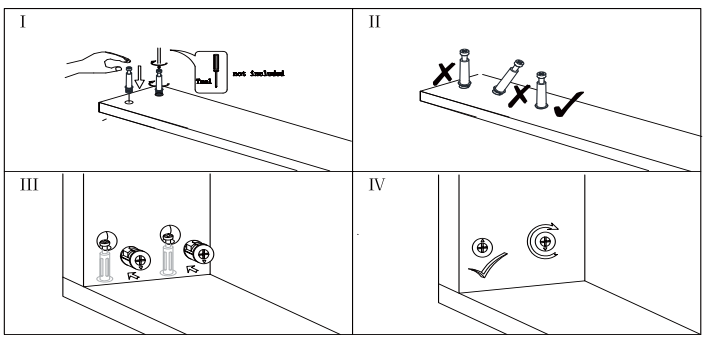


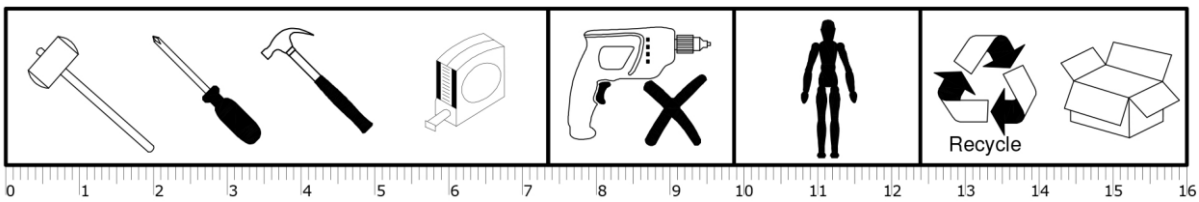

Step1


Vendor:S000403

A×4
B×4
C×4

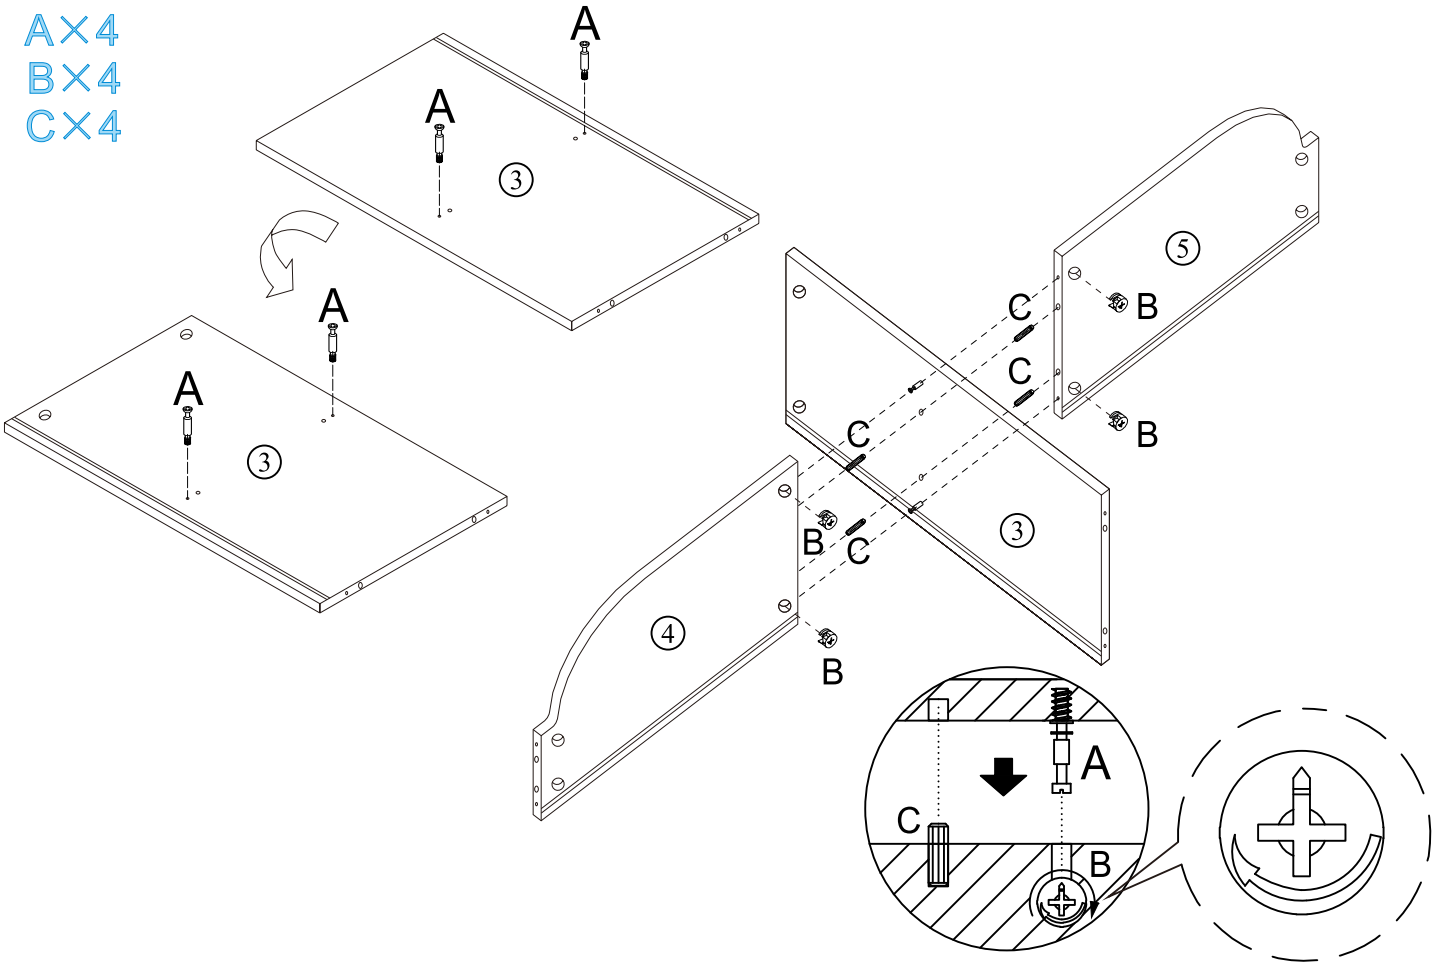


Step 2

A×4
B×4
C×4

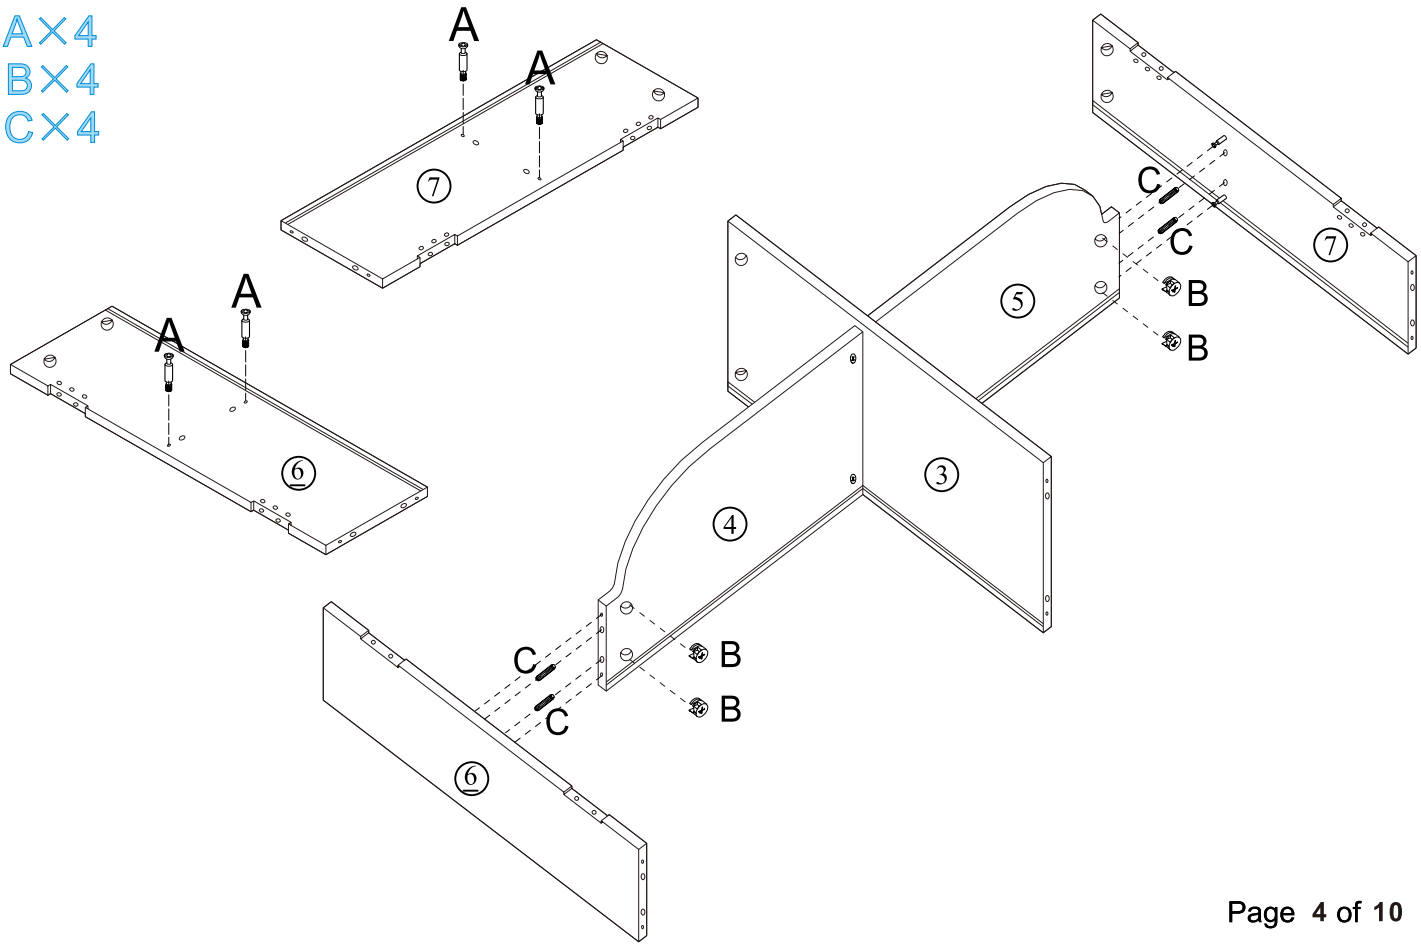


Step 3

Vendor:S000403

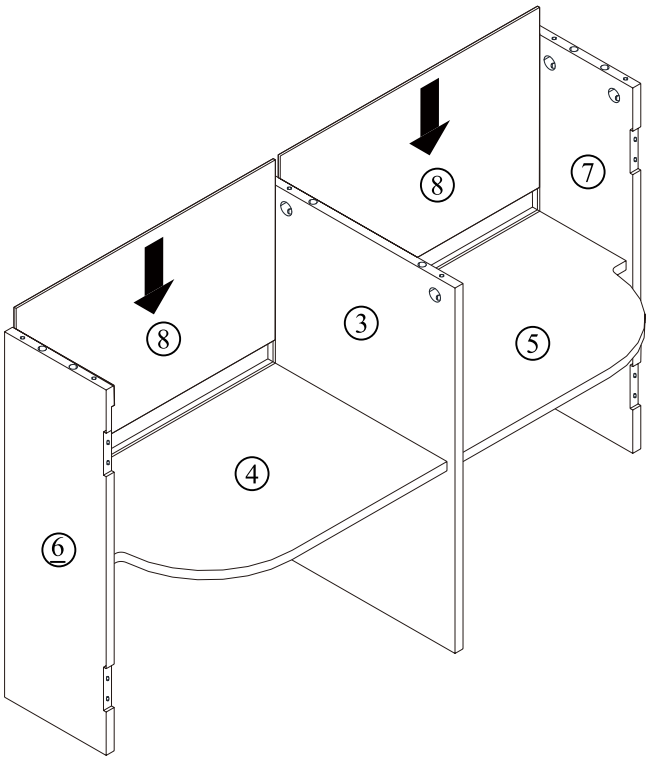


Step 4

A×6
B×6
C×6
E×4
L×2

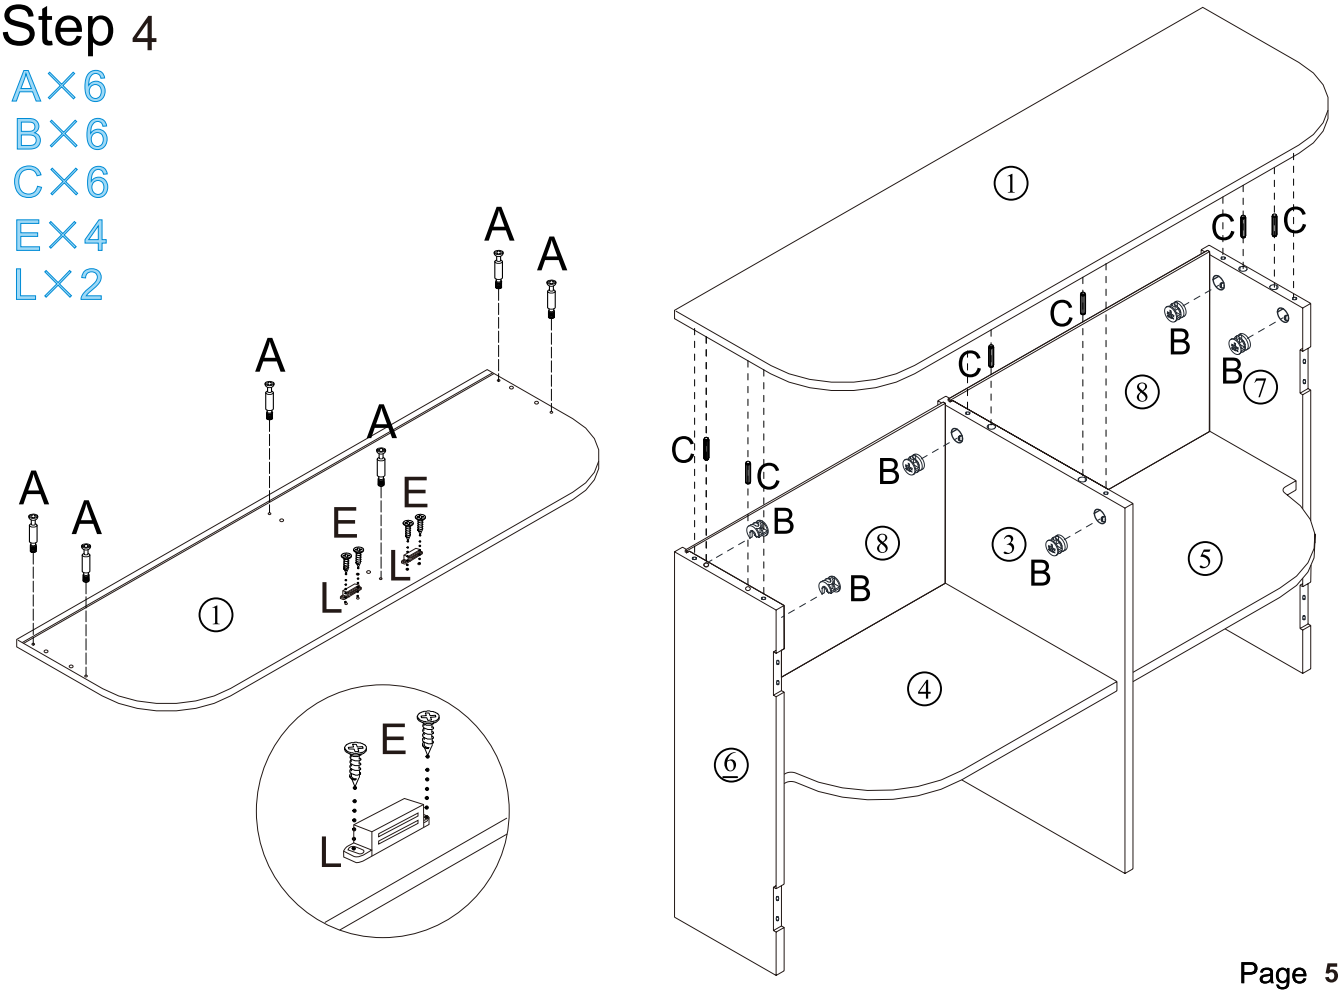


Step 5


Vendor:S000403

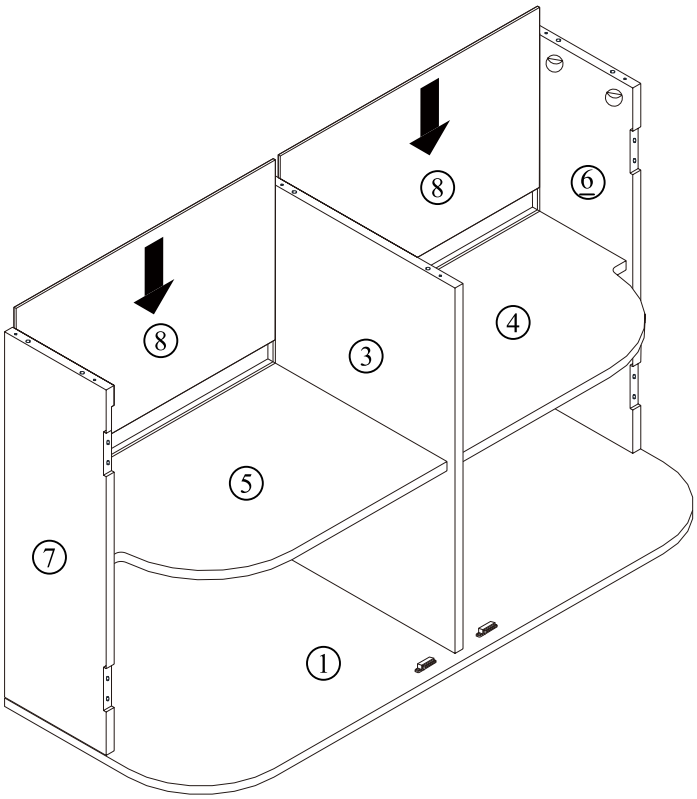

Step 6

C×6
D×6
E×4
L×2

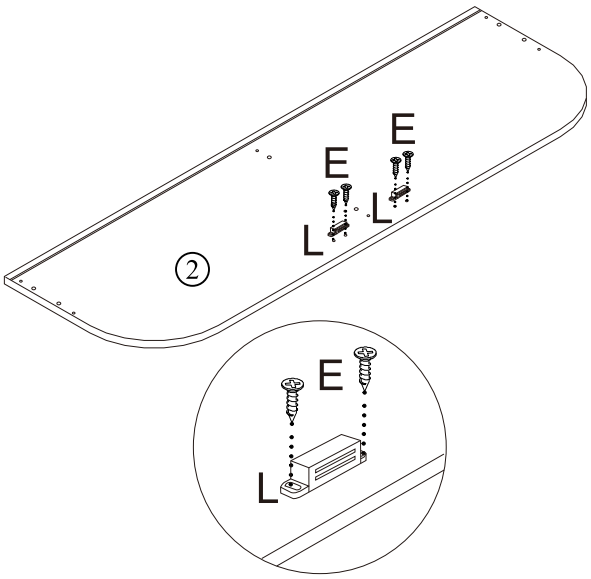


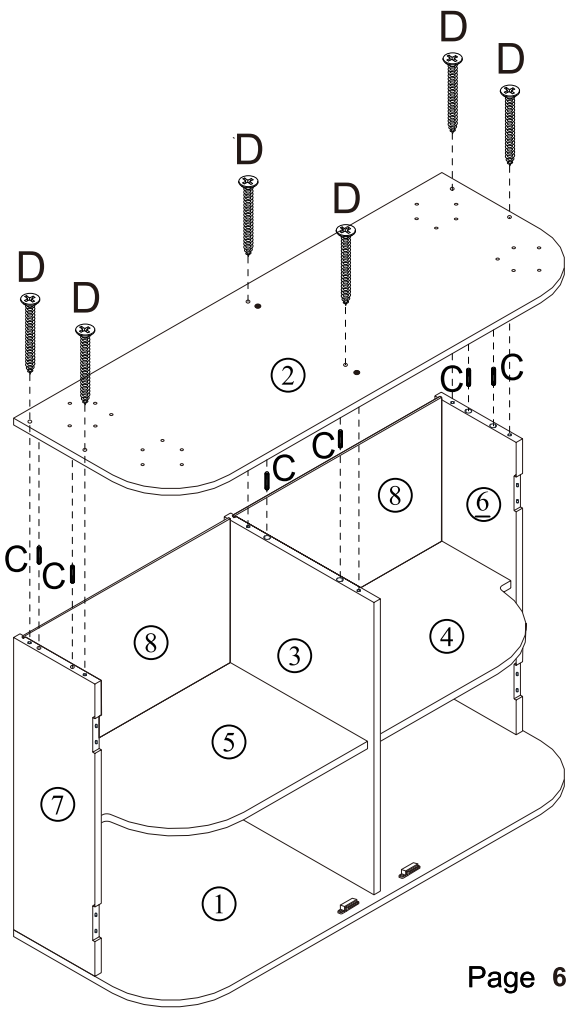


Step 7


Vendor:S000403


I×4
J×20

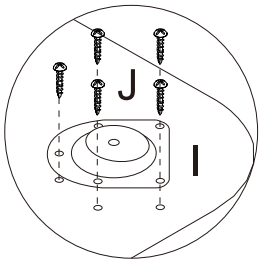

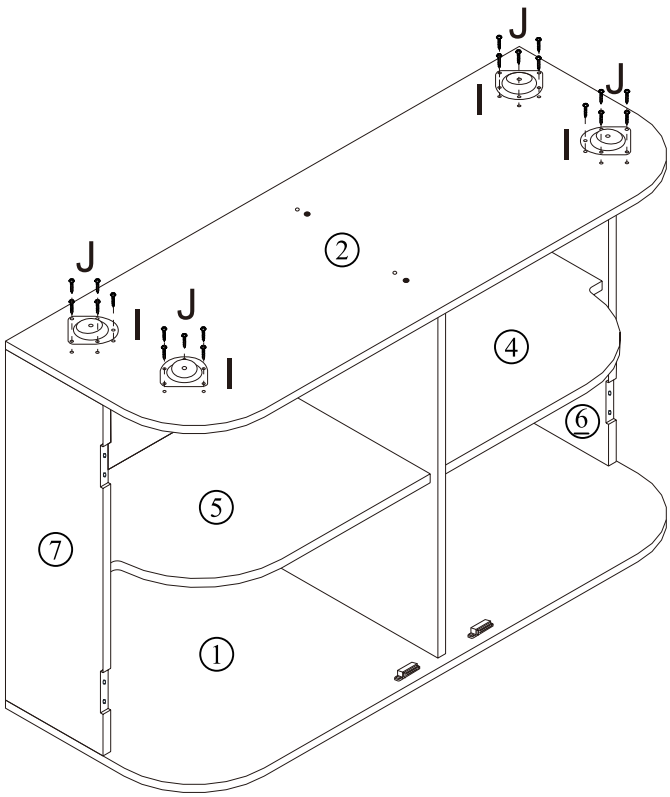


Step 8

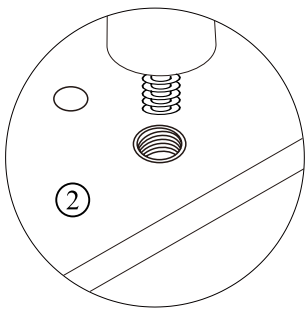

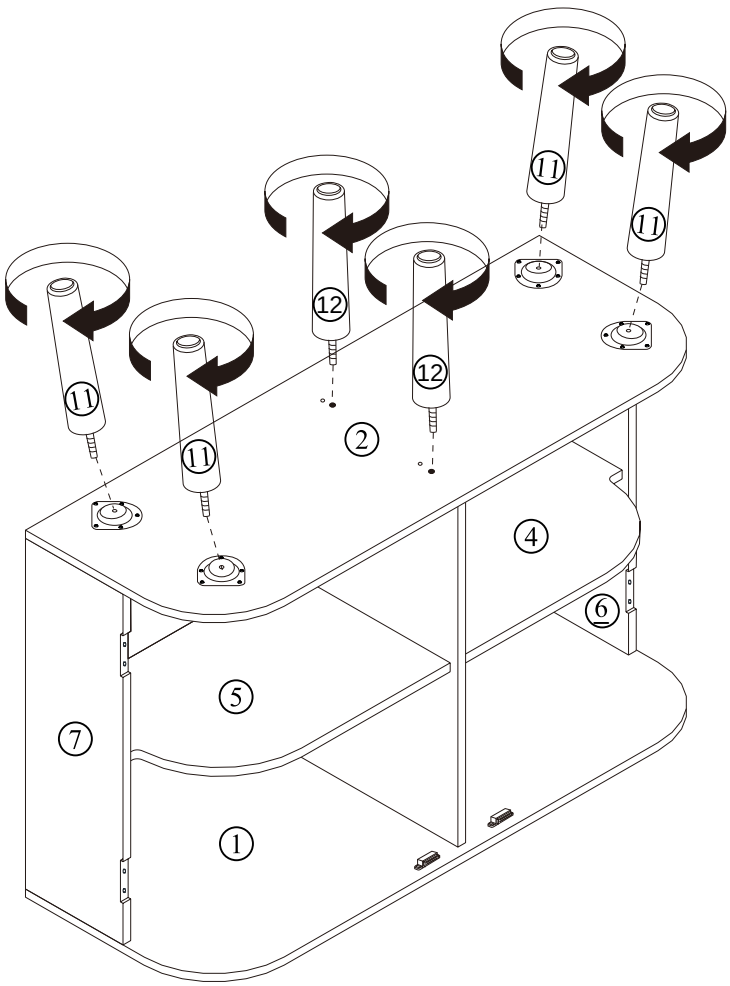


Step 9

E×20
F×4
H×2
M×4

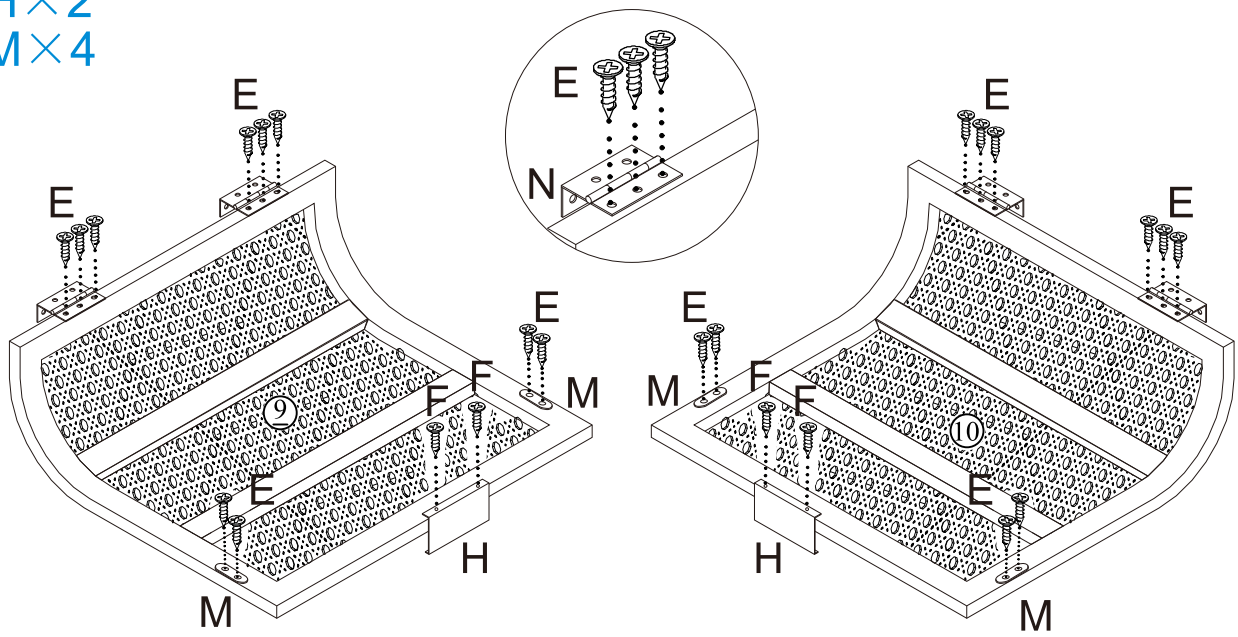

Step 10


E×20

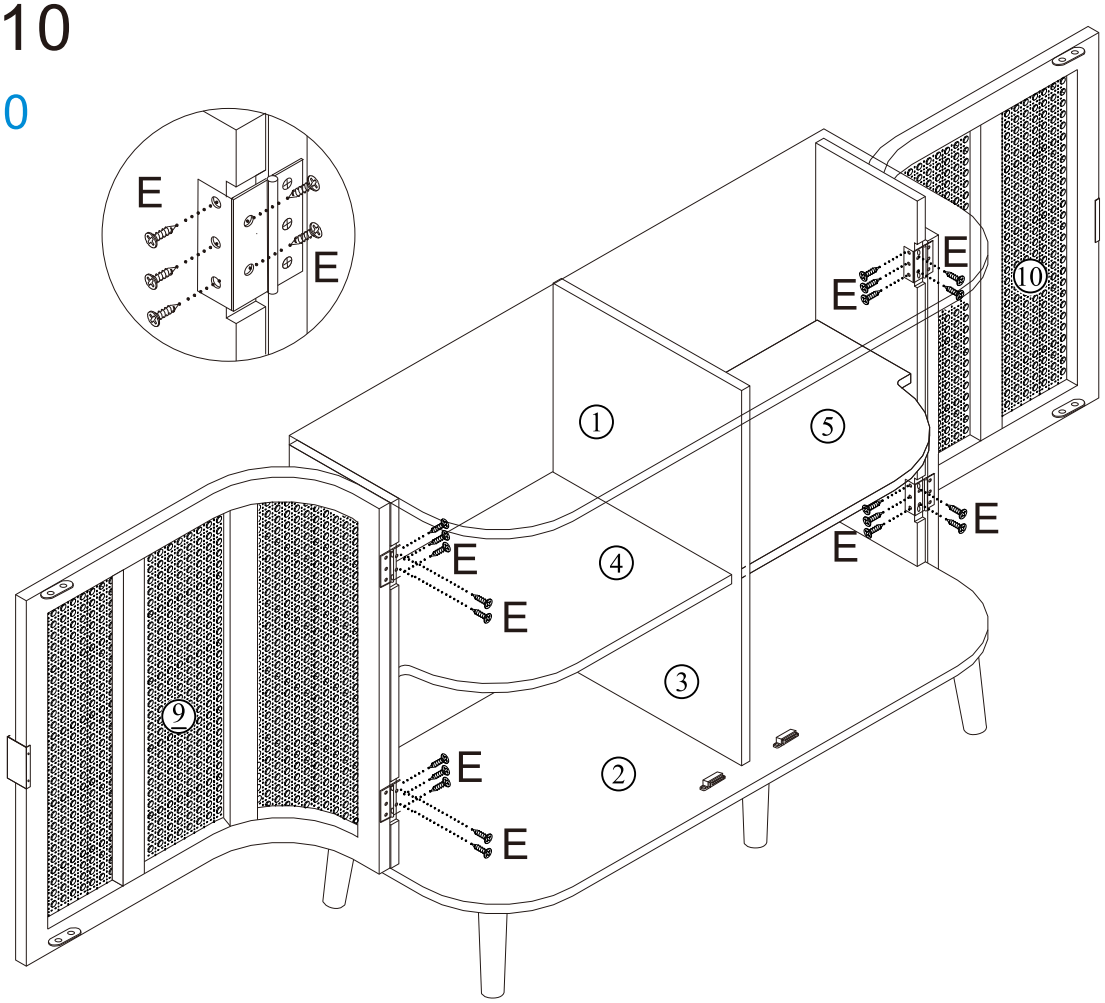


Is your cabinet door looking crooked or unevenly spaced? (Cont.)

If you're still having trouble lining everything up, your next step should be to try to adjust the feet slightly to square up the cabinet & doors. Follow the illustrations below:


If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

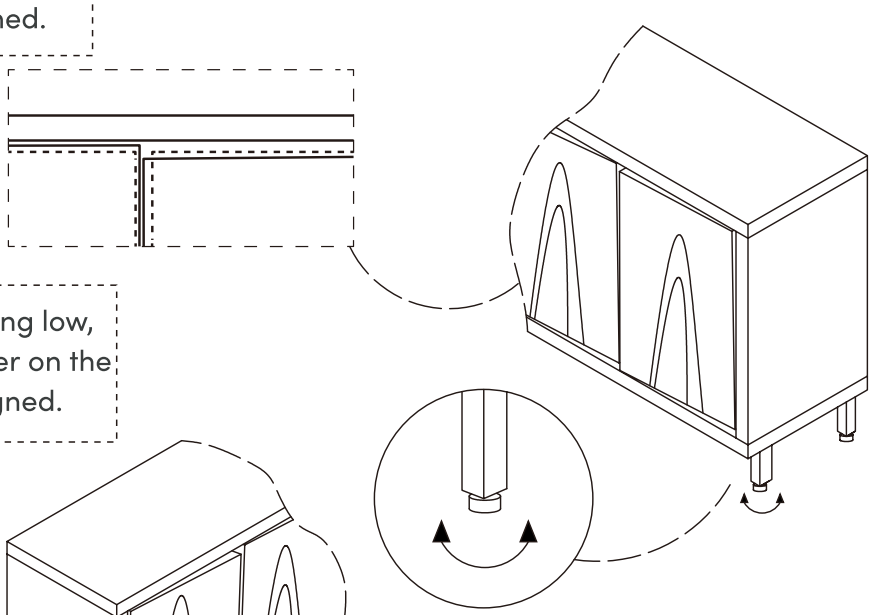

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

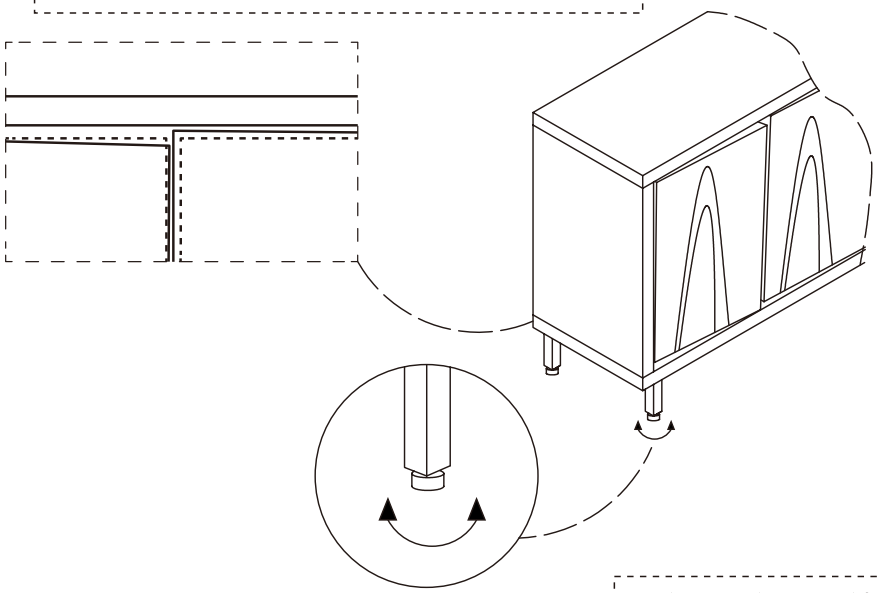


Adjust the midfoot as needed to level the object

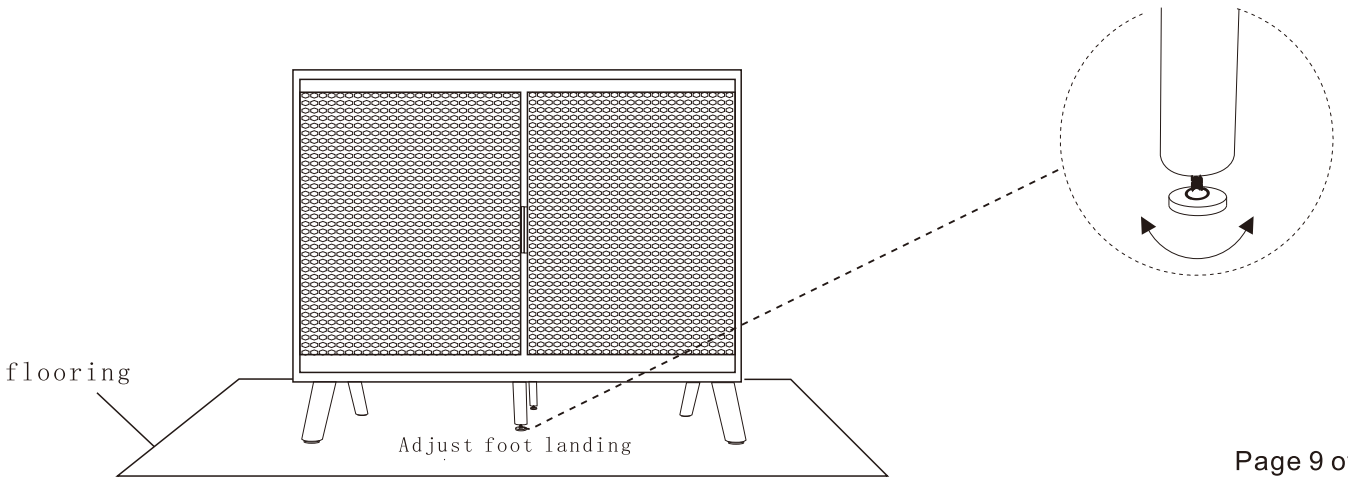



Step11


Vendor:S000403

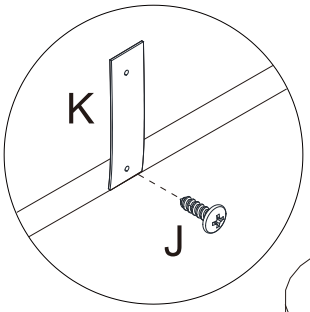


E×16
G×16
J×2
K×2

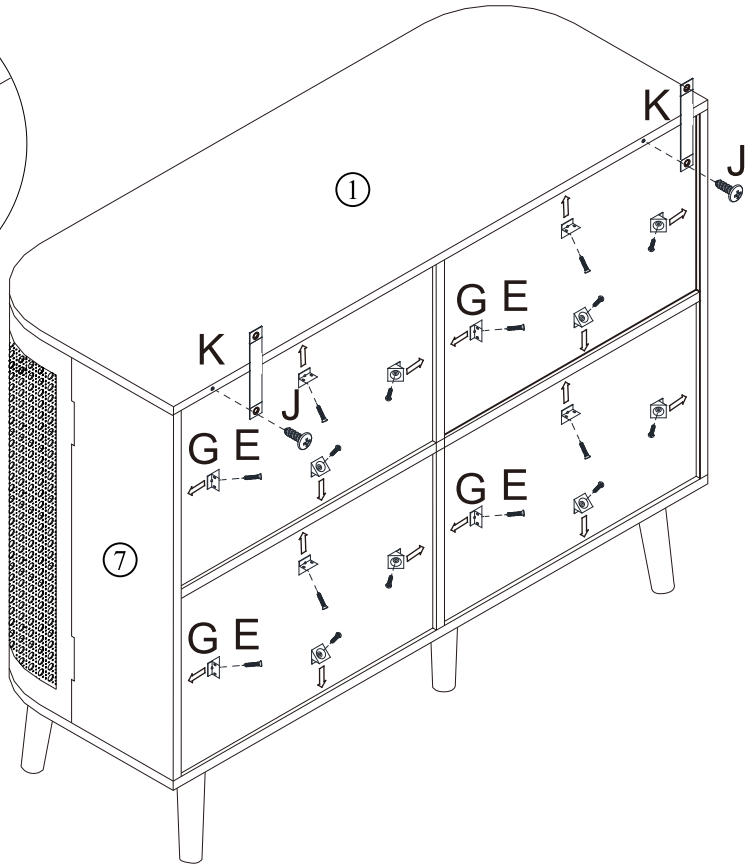

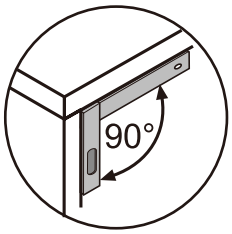

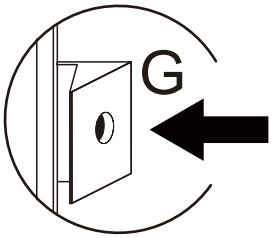

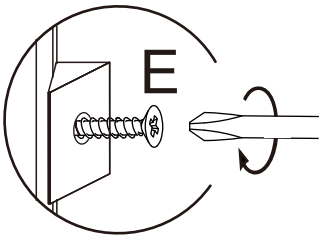

Step12

D×2
O×2

