

# NEXT

## BRONX OAK SLATTED LOFT BED


201962

Assembly instructions

### Actual product size

DOUBLE: H110 x W141.5 x D197cm

KING: H110 x W156.5 x D207cm

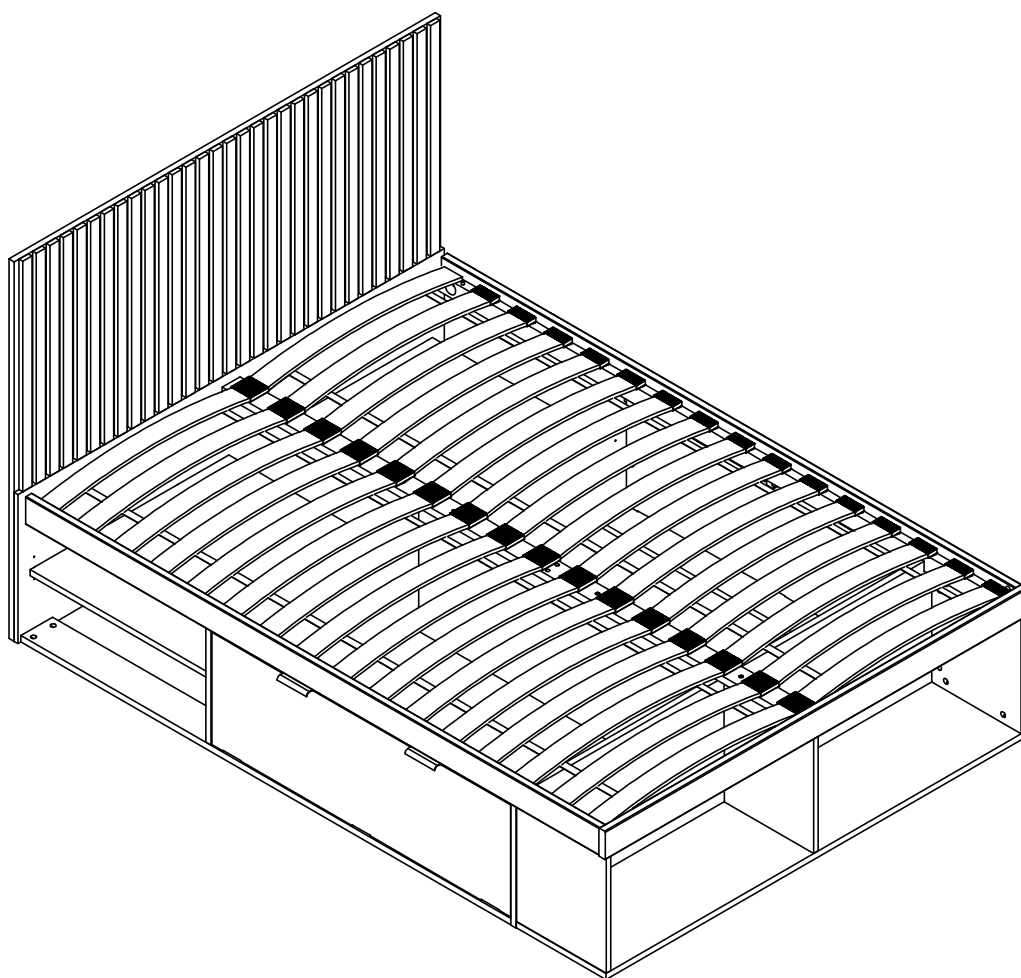

## Need Help ?

With: Assembly instruction

Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

### BEFORE YOU START


#### Number of people required to assemble

Two people are required to assemble this item



**Time to assemble : 1 hour**

#### Tools required

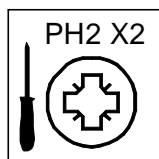

not supplied

#### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

#### Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.

Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.


# NEXT

## BRONX OAK SLATTED LOFT BED-DOUBLE















201962




Assembly instructions
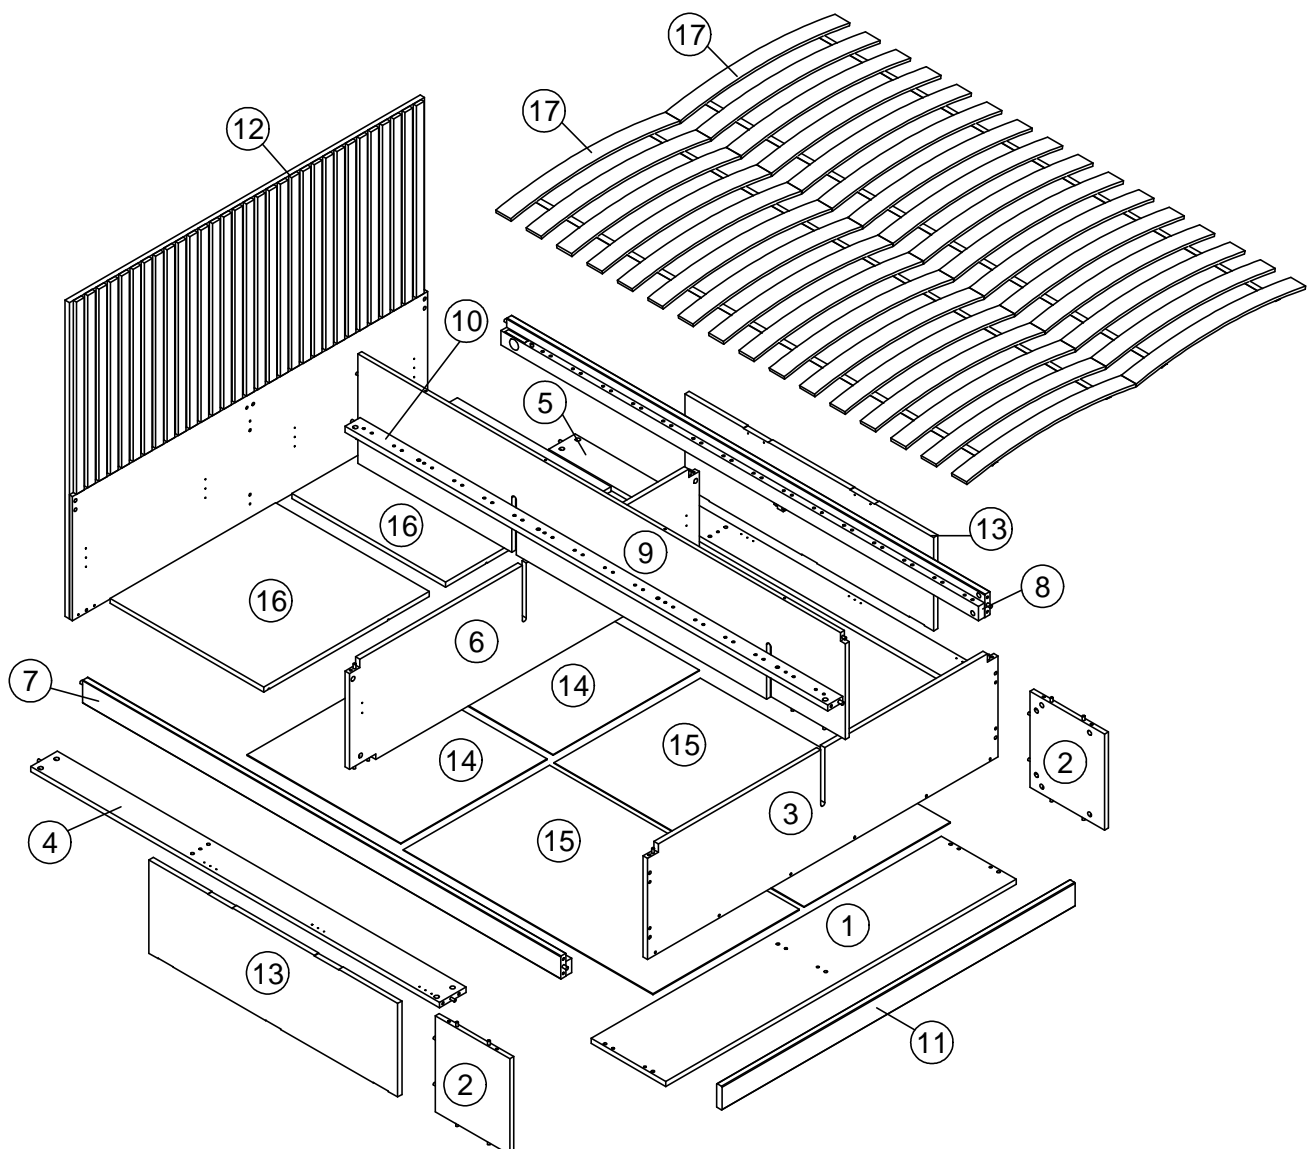
### GETTING TO KNOW YOUR PRODUCT



Components supplied. Please use this guide if you require replacement parts.

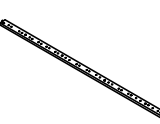Ref	Dimensions	Visual	Qty	Ctn
1	30 x 140.5cm		1	1
2	30 x 33.5cm		2	1
3	38 x 141cm		1	1
4	10.5 x 162cm		1	2
5	10.5 x 162cm		1	2
6	38 x 140.5cm		1	1
7	8 x 194cm		1	2
8	8 x 194cm		1	2
9	38 x 194cm		1	2
10	6 x 192cm		1	2
11	8 x 141.5cm		1	1
12	110 x 141.5cm		1	3
13	32.5 x 100cm		2	1
14	58.5 x 60cm		2	3

Ref	Dimensions	Visual	Qty	Ctn
15	58.5 x 100.5cm		2	3
16	60 x 67.5cm		2	3
17	6 x 68cm		32	1


# NEXT

## BRONX OAK SLATTED LOFT BED-KING















201962




Assembly instructions
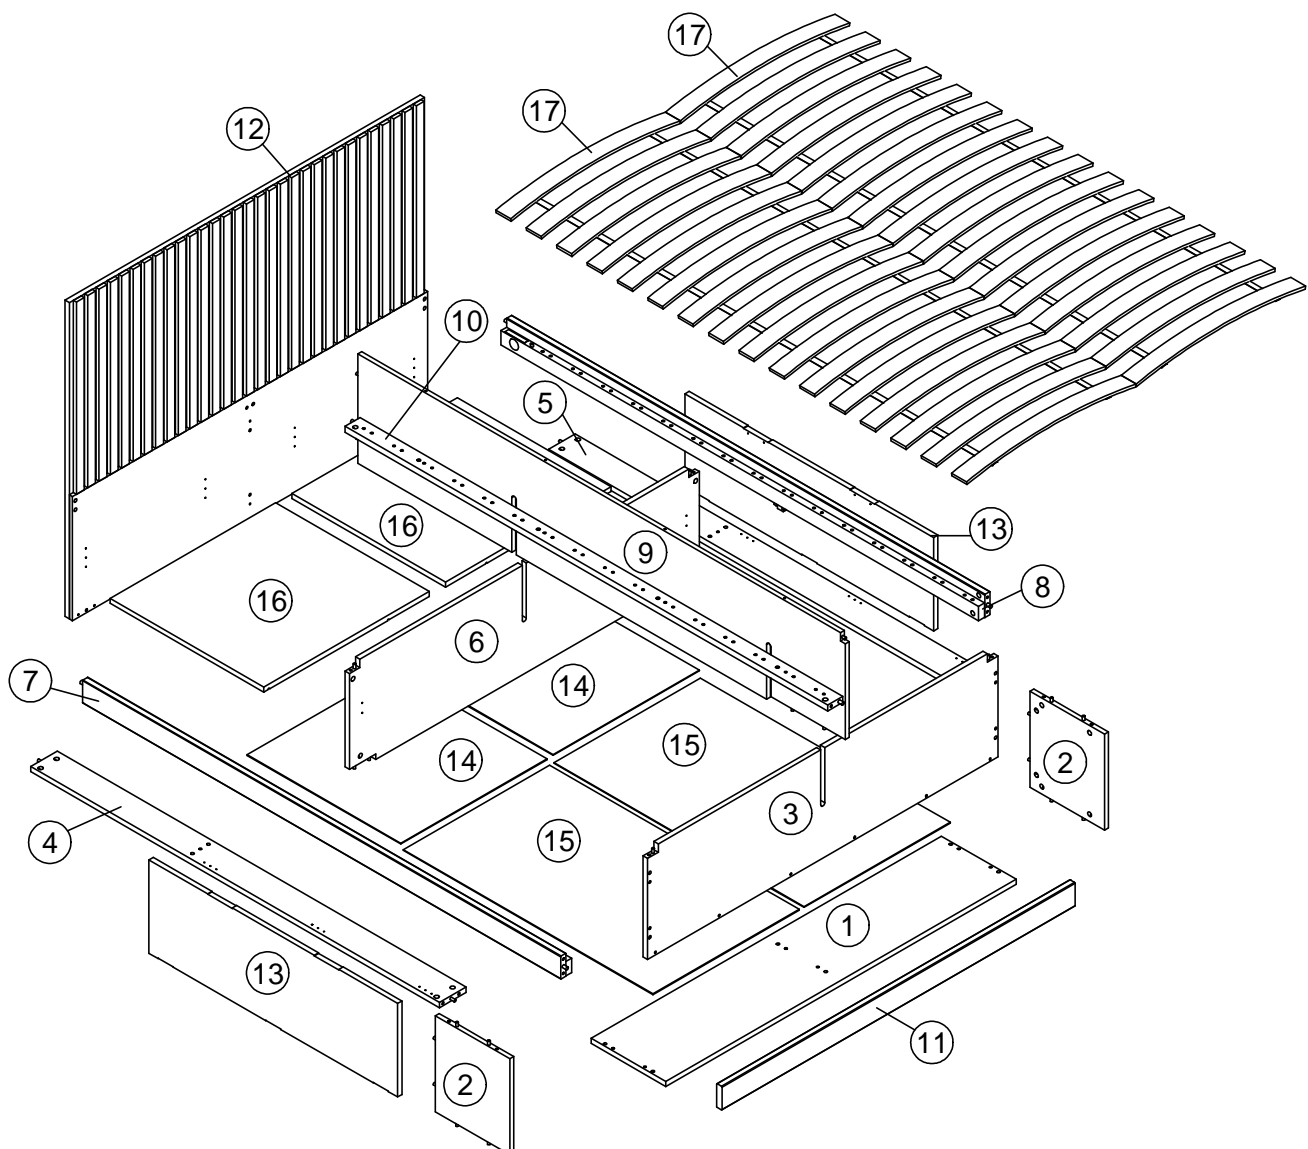
### GETTING TO KNOW YOUR PRODUCT




Components supplied. Please use this guide if you require replacement parts.

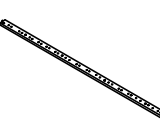Ref	Dimensions	Visual	Qty	Ctn
1	30 x 155.5cm		1	1
2	30 x 33.5cm		2	2
3	38 x 156cm		1	2
4	10.5 x 172.5cm		1	1
5	10.5 x 172.5cm		1	1
6	38 x 155.5cm		1	2
7	8 x 202cm		1	1
8	8 x 202cm		1	1
9	38 x 204cm		1	1
10	6 x 202cm		1	1
11	8 x 156.5cm		1	1
12	110 x 156.5cm		1	3
13	32.5 x 105cm		2	2
14	65 x 66cm		2	3

Ref	Dimensions	Visual	Qty	Ctn
15	66 x 105.5cm		2	3
16	65 x 75cm		2	3
17	6 x 75.5cm		32	1

**Fixtures and fittings  
supplied (actual size)**





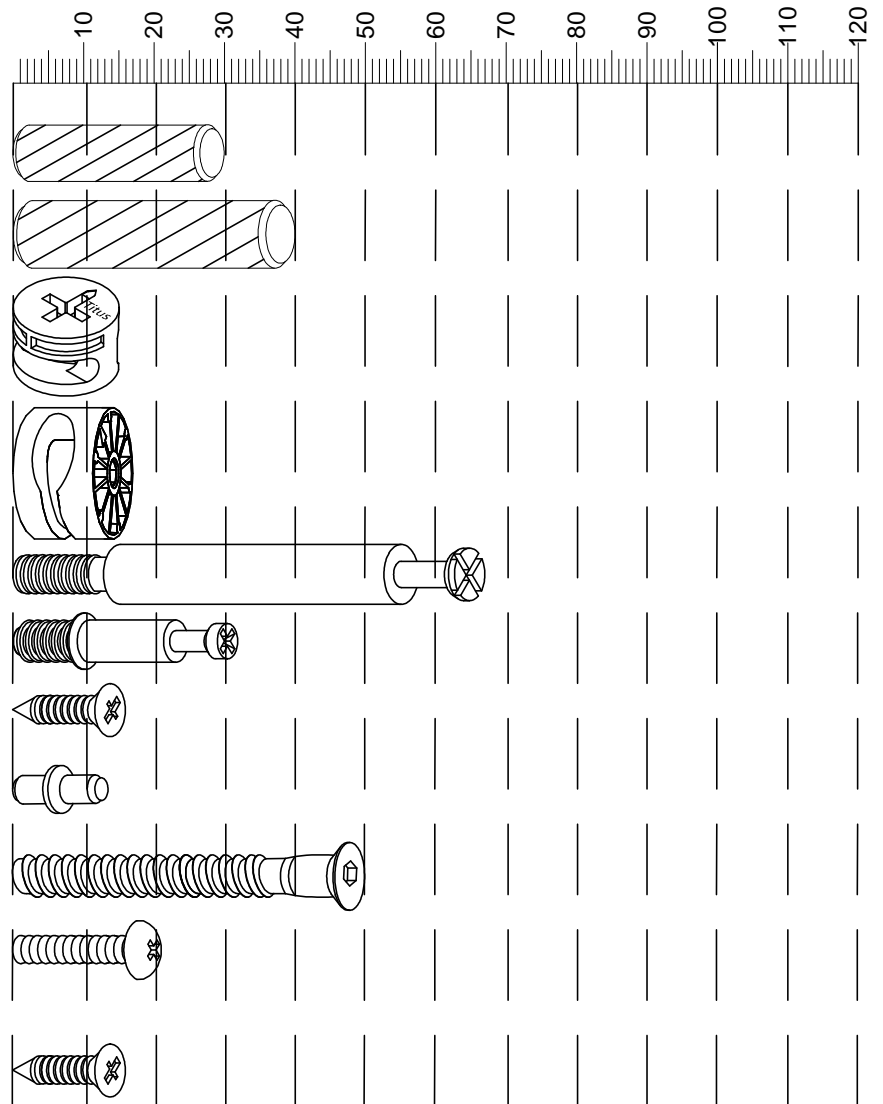




Ref	Dimensions	Qty	Spare Qty
D6	Ø8 x 30mm	N/A	2
D9	Ø10 x 40mm	N/A	1
B6	Ø15 x 12mm	36	2
B25	Ø35 x 17mm	2	N/A
B24	Ø8.5 x 63mm	2	N/A
B12	Ø7.5 x 33mm	36	2
U123	Ø4 x 16mm	42	2
P3	Ø5 x 16mm	8	1
Y8	Ø6 x 50mm	10	2
S42	Ø4 x 16mm	4	1
U136	Ø4 x 16mm	16	2



NEXT

BRONX OAK SLATTED LOFT BED  
201962  
Assembly instructions

Fixtures and fittings supplied ( not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
H38	N/A	4	N/A	
H29	N/A	6	N/A	
E39	N/A	4	N/A	
T34	N/A	16	N/A	
T33	N/A	30	N/A	
T7	N/A	1	N/A	
T4	N/A	2	N/A	
M1	N/A	2	N/A	
O1	Ø21mm	30	2	



NEXT

BRONX OAK SLATTED LOFT BED  
201962  
Assembly instructions

1

Diagram 1 shows two slats, labeled 1 and 3, being attached to the bed frame. Screws B12 are used to secure the slats. An inset shows a screw being driven into the slat.

B12	Ø7.5 x 33mm	10		 not supplied
-----	-------------	----	--	------------------

2

Diagram 2 shows two slats, labeled 7 and 8, being attached to the bed frame. Screws S42 are used to secure the slats. An inset shows the screws being driven into the slats, with a FELT PAD label.

S42	Ø4 x 16mm	4		 not supplied
M1	N/A	2		

1

2



FRONT TO BACK

3


3

### DON'T STOP UNTIL THE 2 O'CLOCK LOCK


TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW

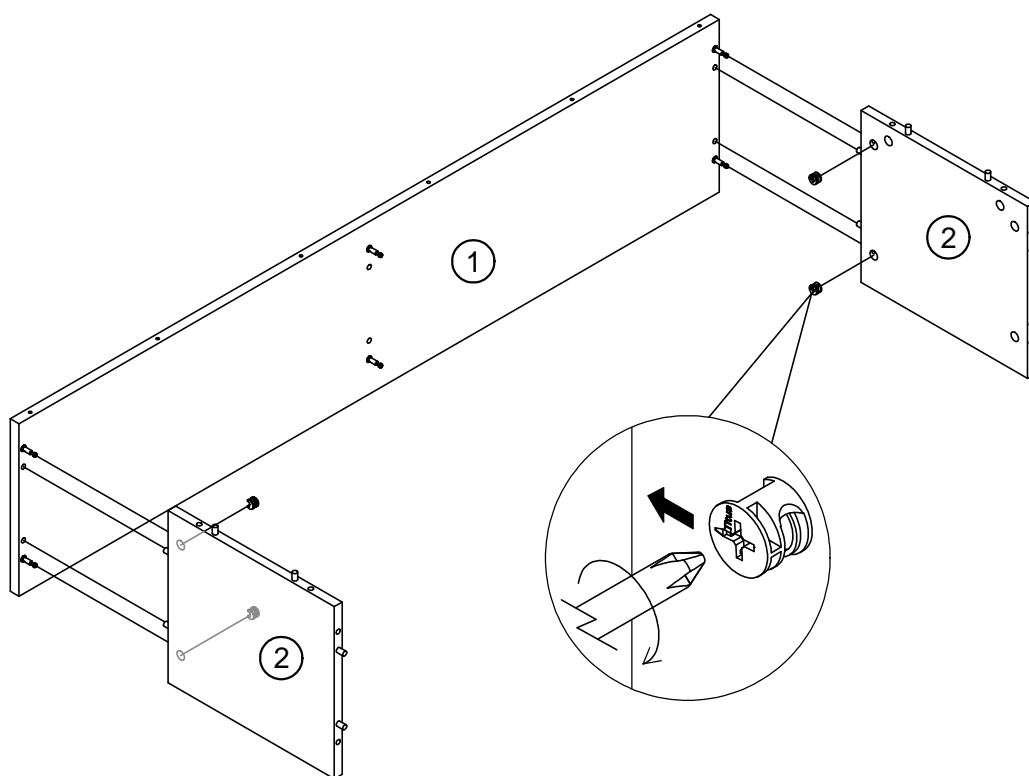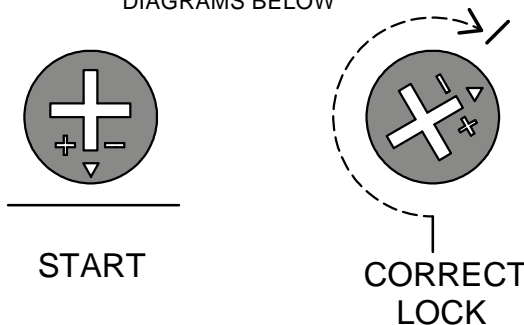

PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE

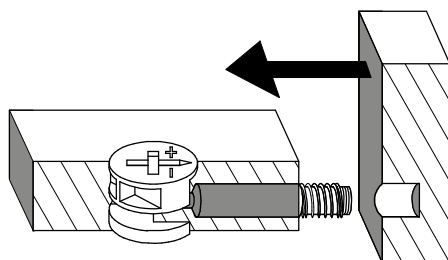

TURN THE CAM IN A CLOCKWISE DIRECTION

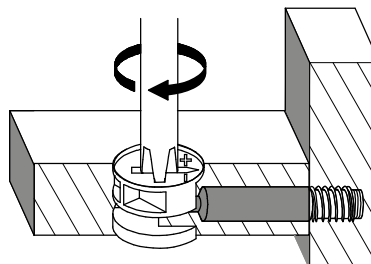

B6 Ø15 x 12mm

4








not supplied

NEXT

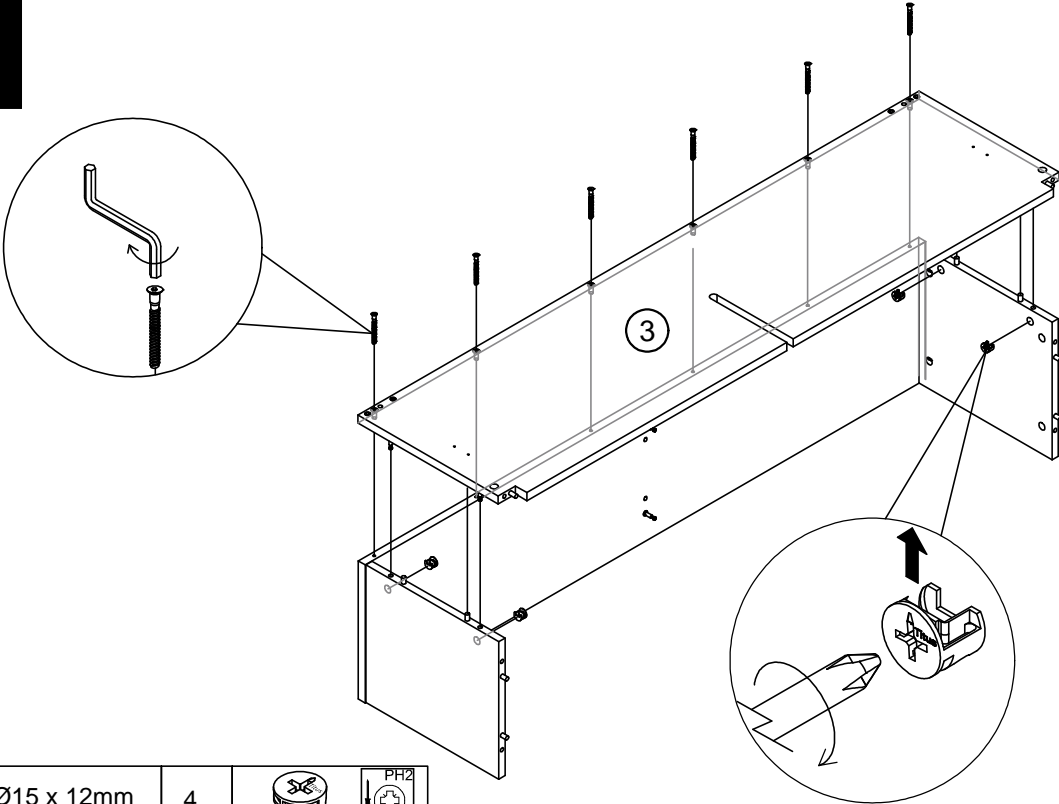
BRONX OAK SLATTED LOFT BED  
201962  
Assembly instructions



4



B6	Ø15 x 12mm	4	  not supplied
T4	N/A	2	
Y8	Ø6 x 50mm	6	

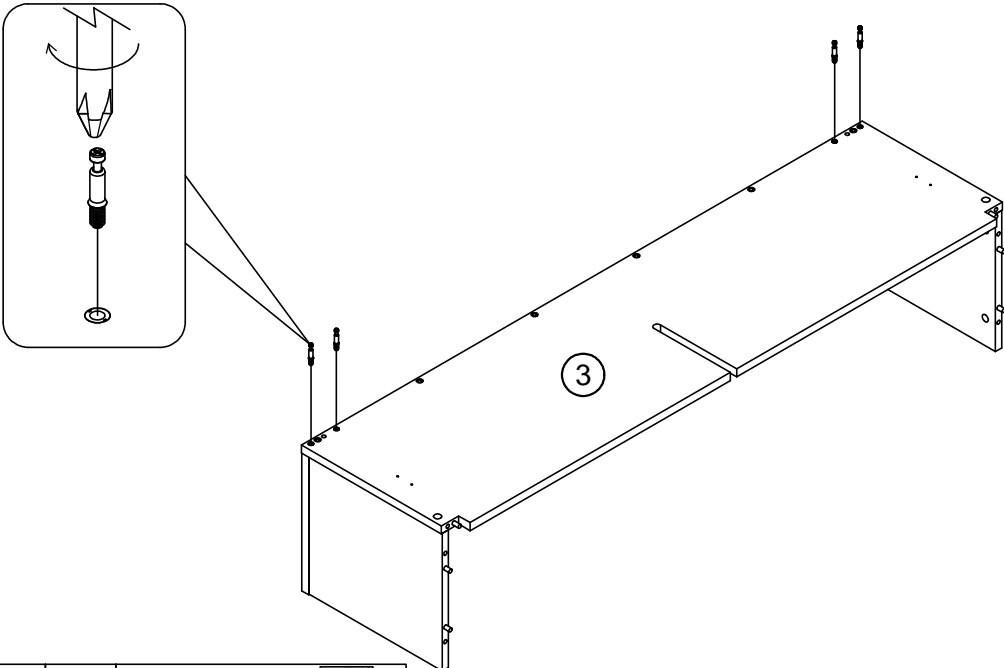5



B12	Ø7.5 x 33mm	4	  not supplied
-----	-------------	---	---

NEXT

BRONX OAK SLATTED LOFT BED  
201962  
Assembly instructions

6

Diagram illustrating the assembly of the bed frame components (3, 4, 5) using screws B12 and B6. The diagram shows the attachment of slats (4, 5) to the frame (3) using screws B12 and B6. Callouts show the correct orientation of the screws and the use of a PH2 screwdriver.


B12	Ø7.5 x 33mm	2		 not supplied
B6	Ø15 x 12mm	4		 not supplied




7

Diagram illustrating the assembly of the bed frame components (3, 6) using screws B6. The diagram shows the attachment of the side panel (6) to the frame (3) using screws B6. A callout shows the correct orientation of the screw and the use of a PH2 screwdriver.


B6	Ø15 x 12mm	2		 not supplied
----	------------	---	--	------------------

8

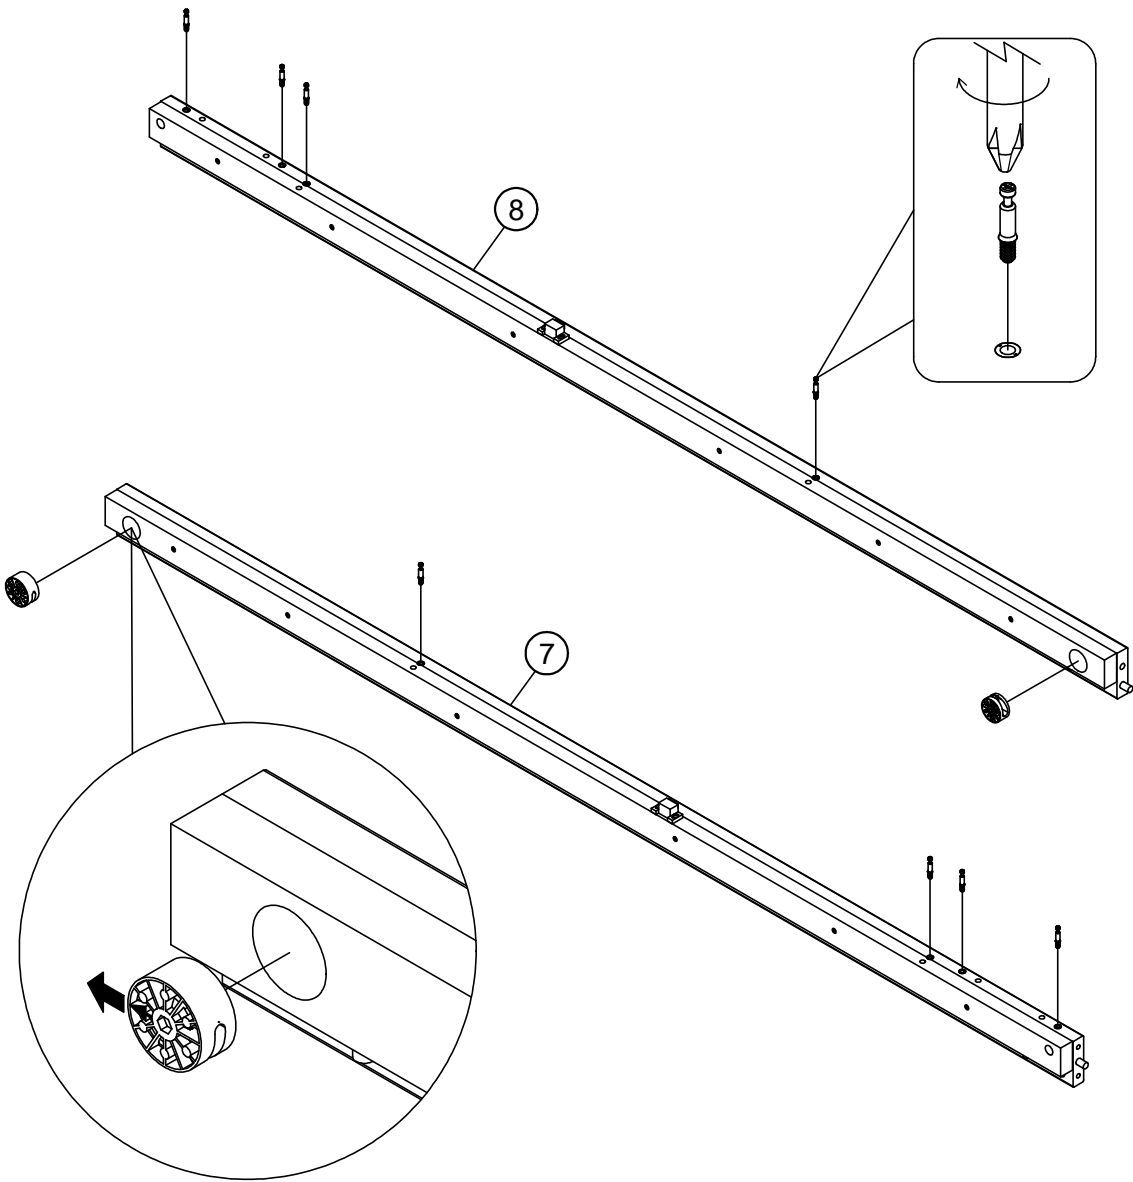

B25	Ø35 x 17mm	2	
B12	Ø7.5 x 33mm	8	  not supplied

9

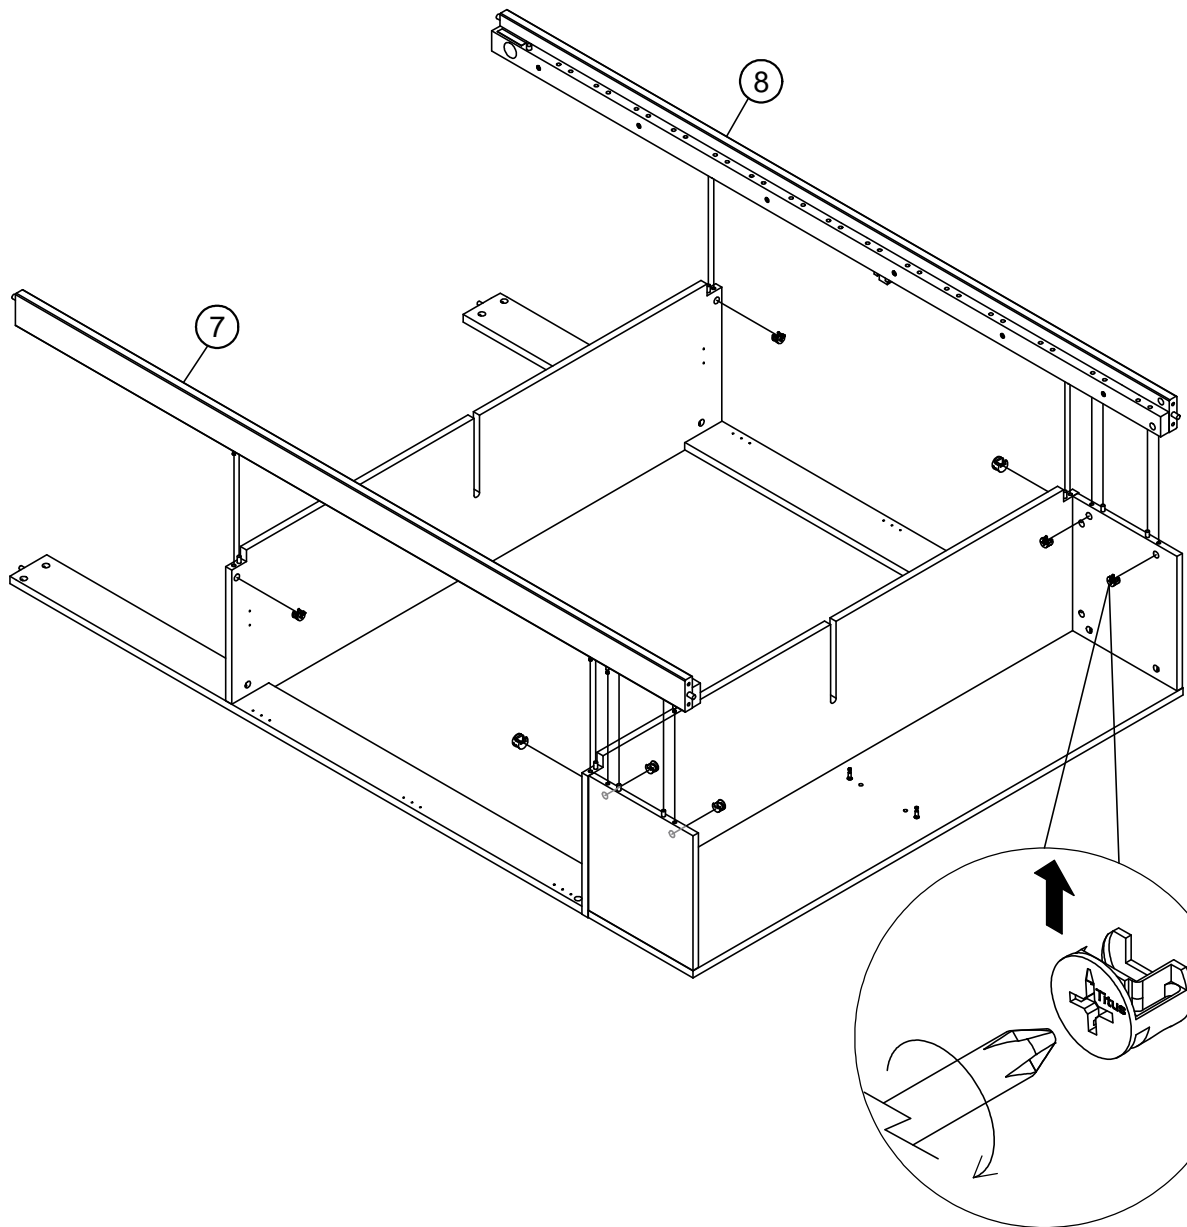

B6


Ø15 x 12mm

8



not supplied

10

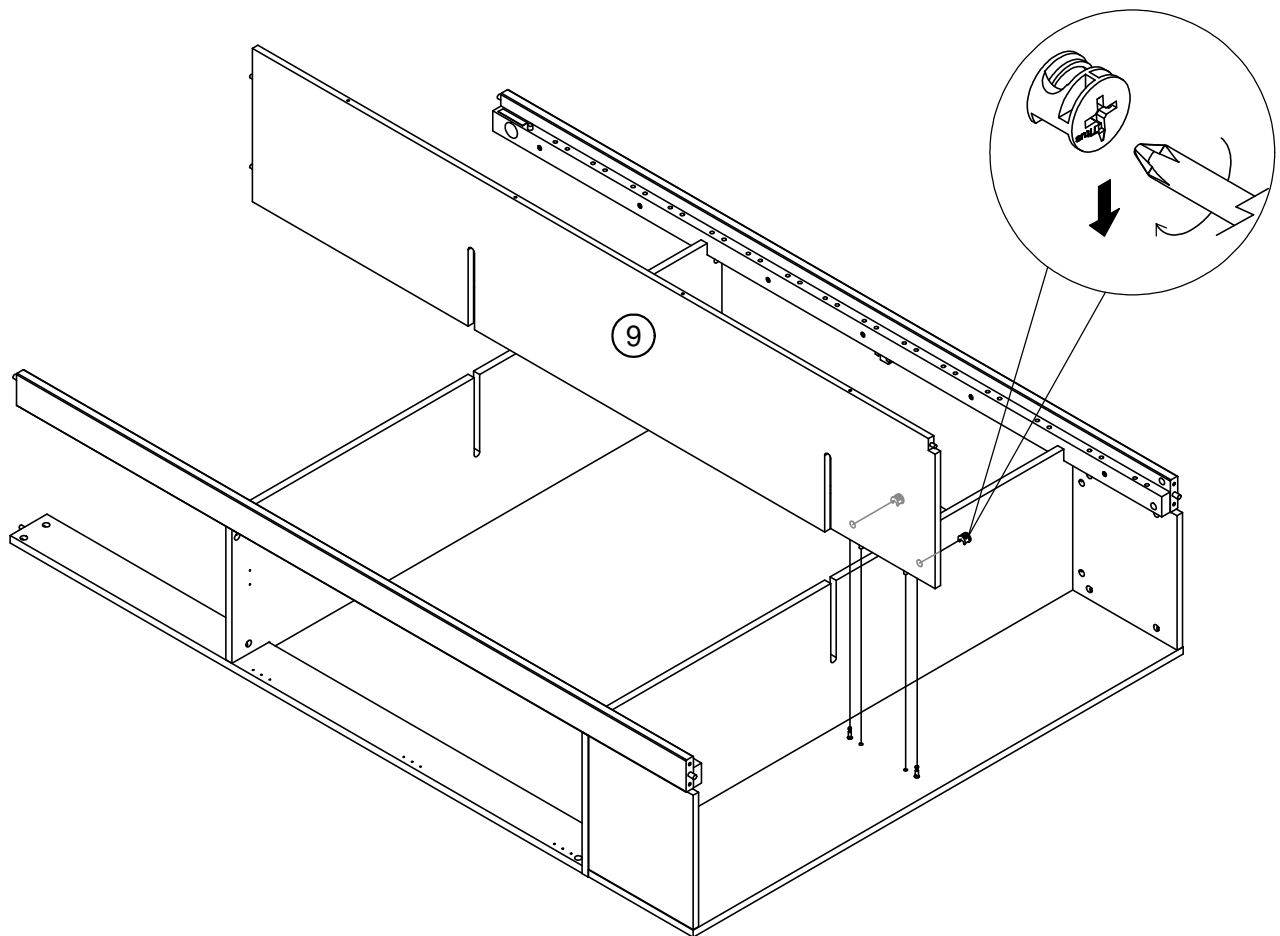

B6


Ø15 x 12mm



2



not supplied

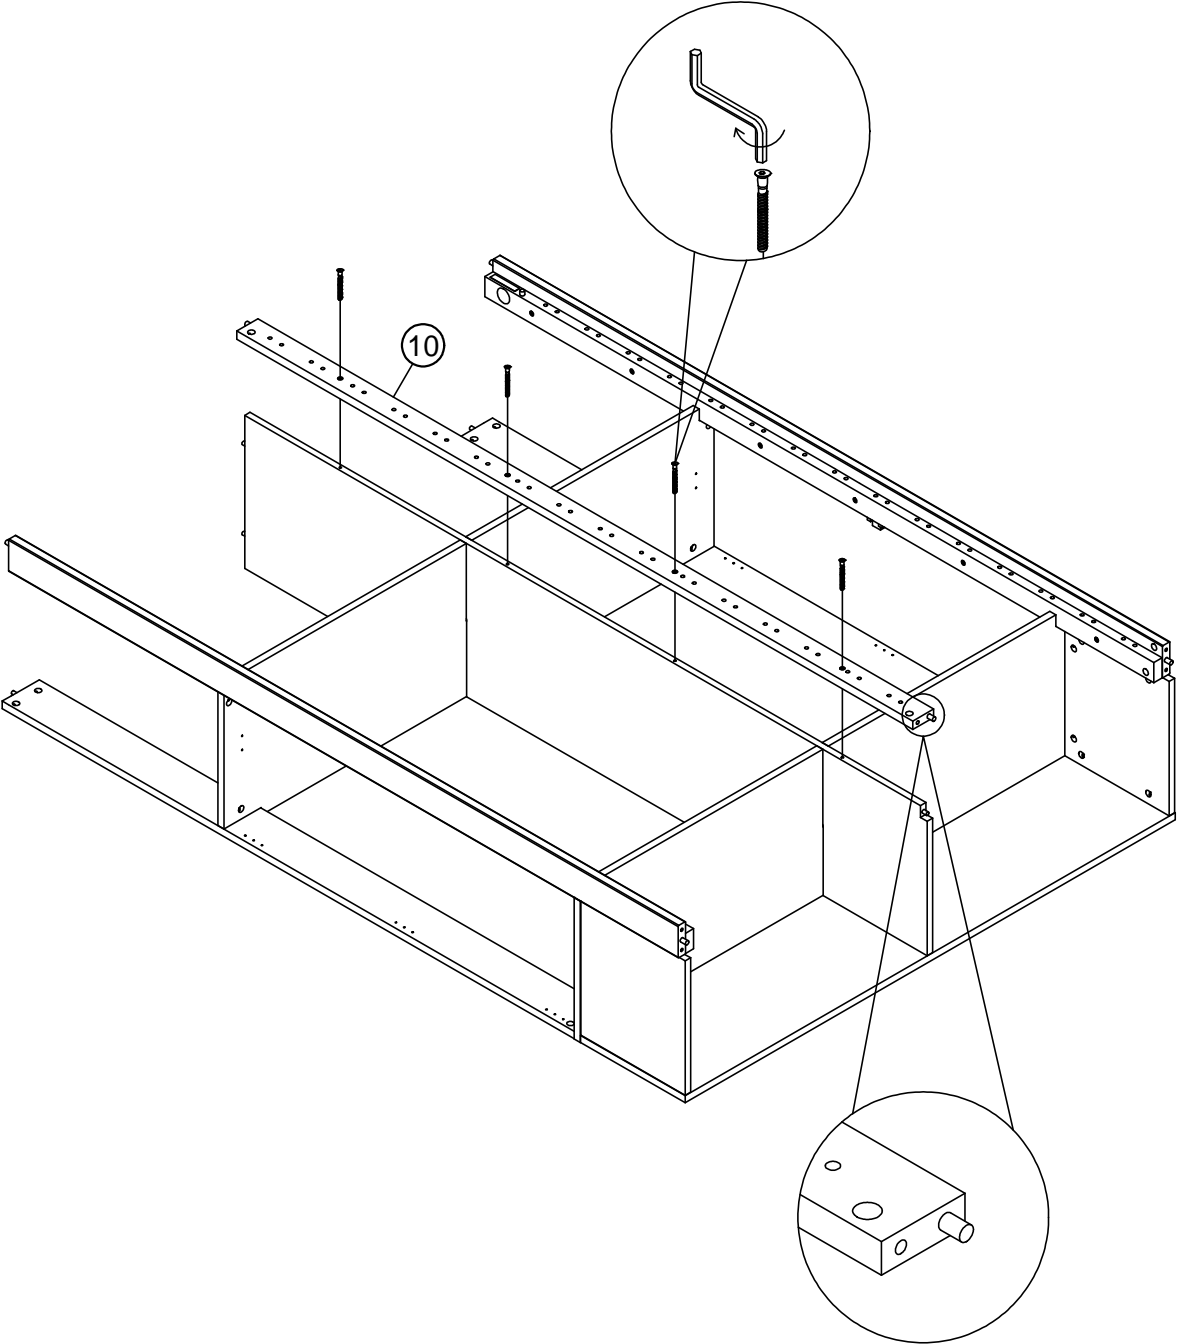
11






T4	N/A	2	
Y8	Ø6 x 50mm	4	




12

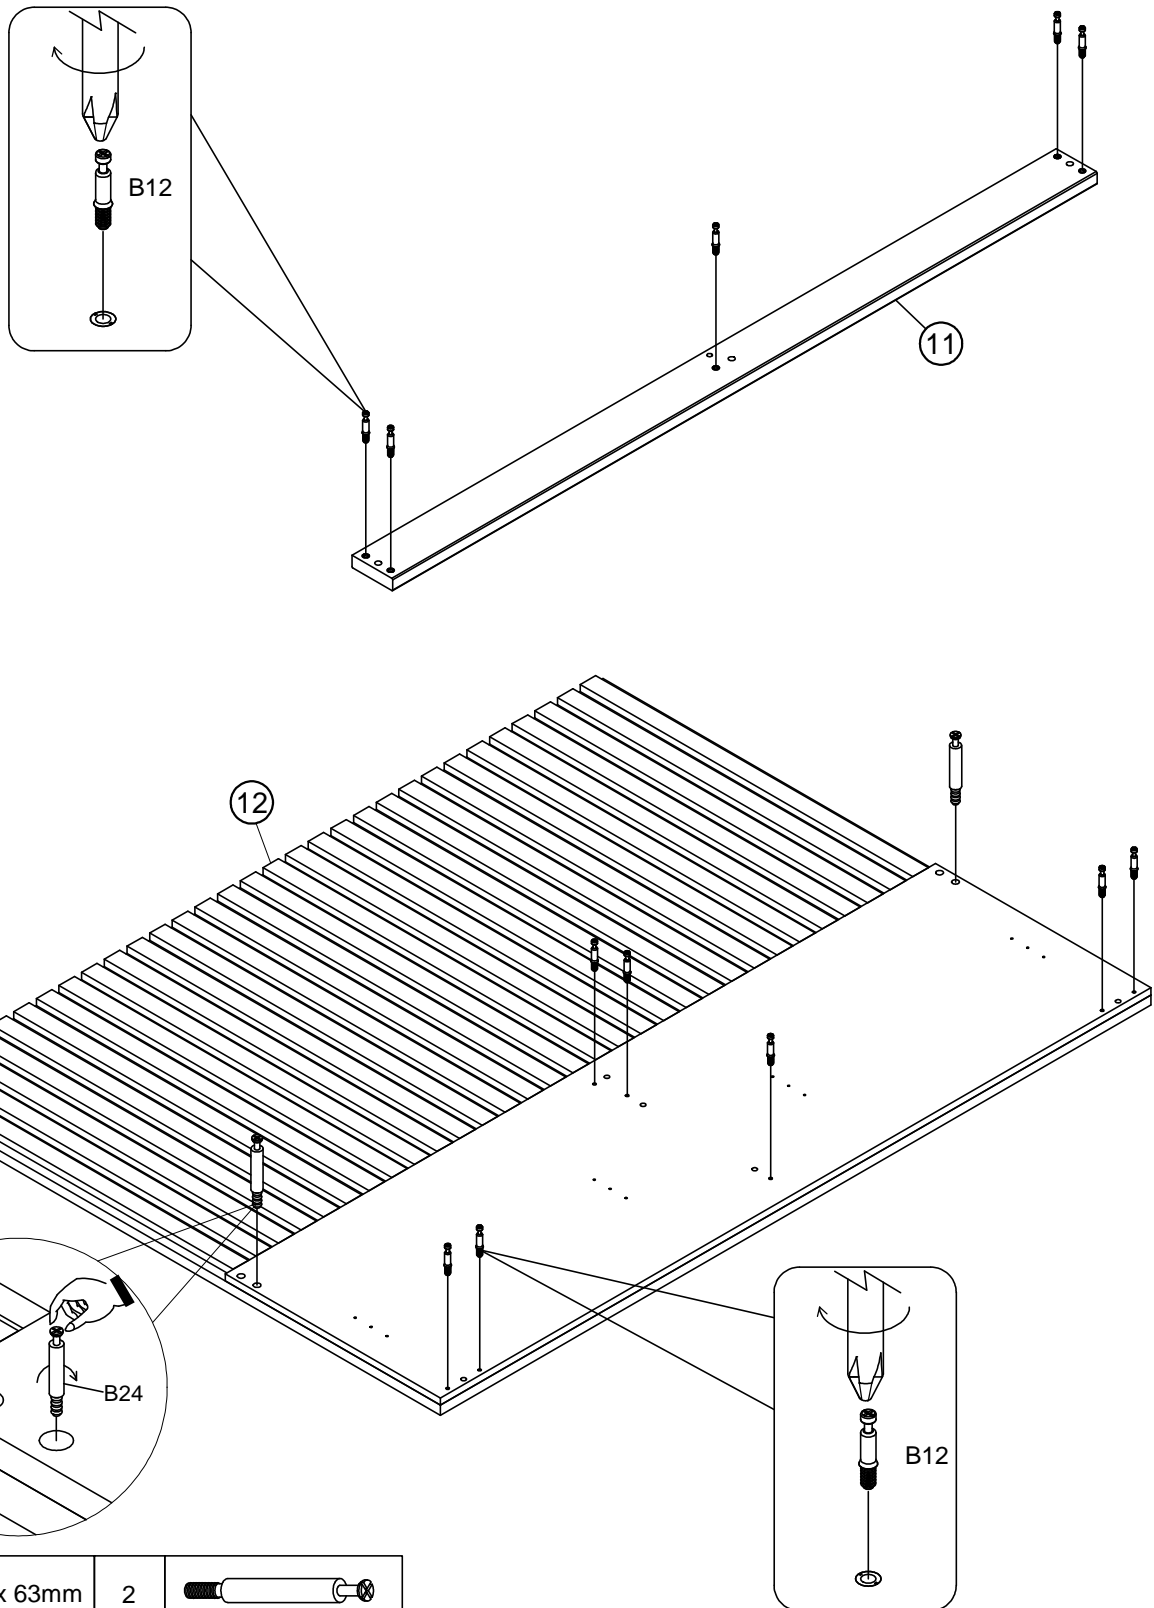


B24	Ø8.5 x 63mm	2	
B12	Ø7.5 x 33mm	12	  not supplied

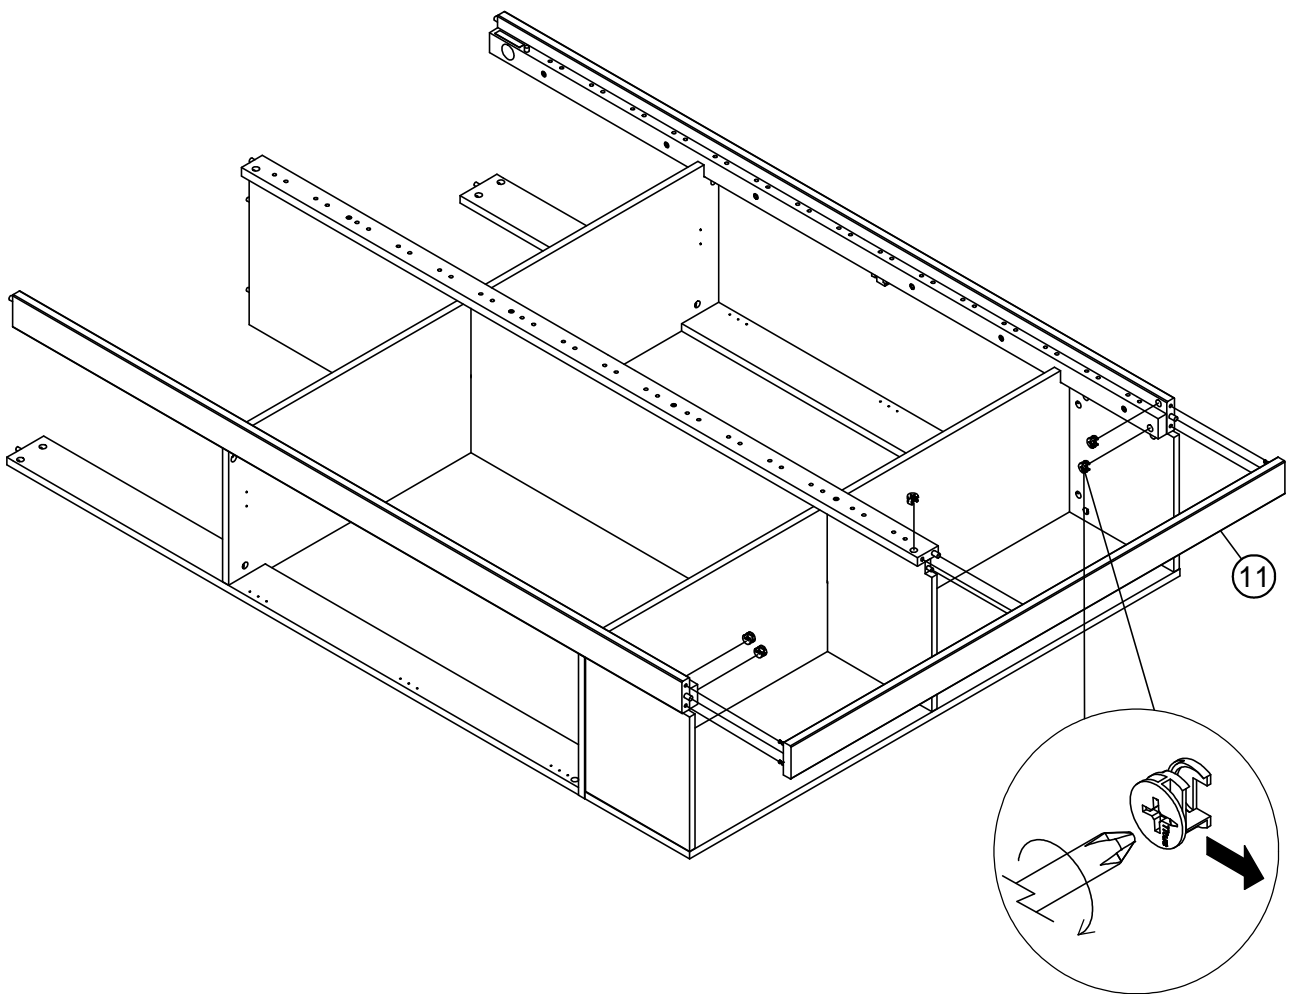


13



B6	Ø15 x 12mm	5		 PH2 not supplied
----	------------	---	---	---

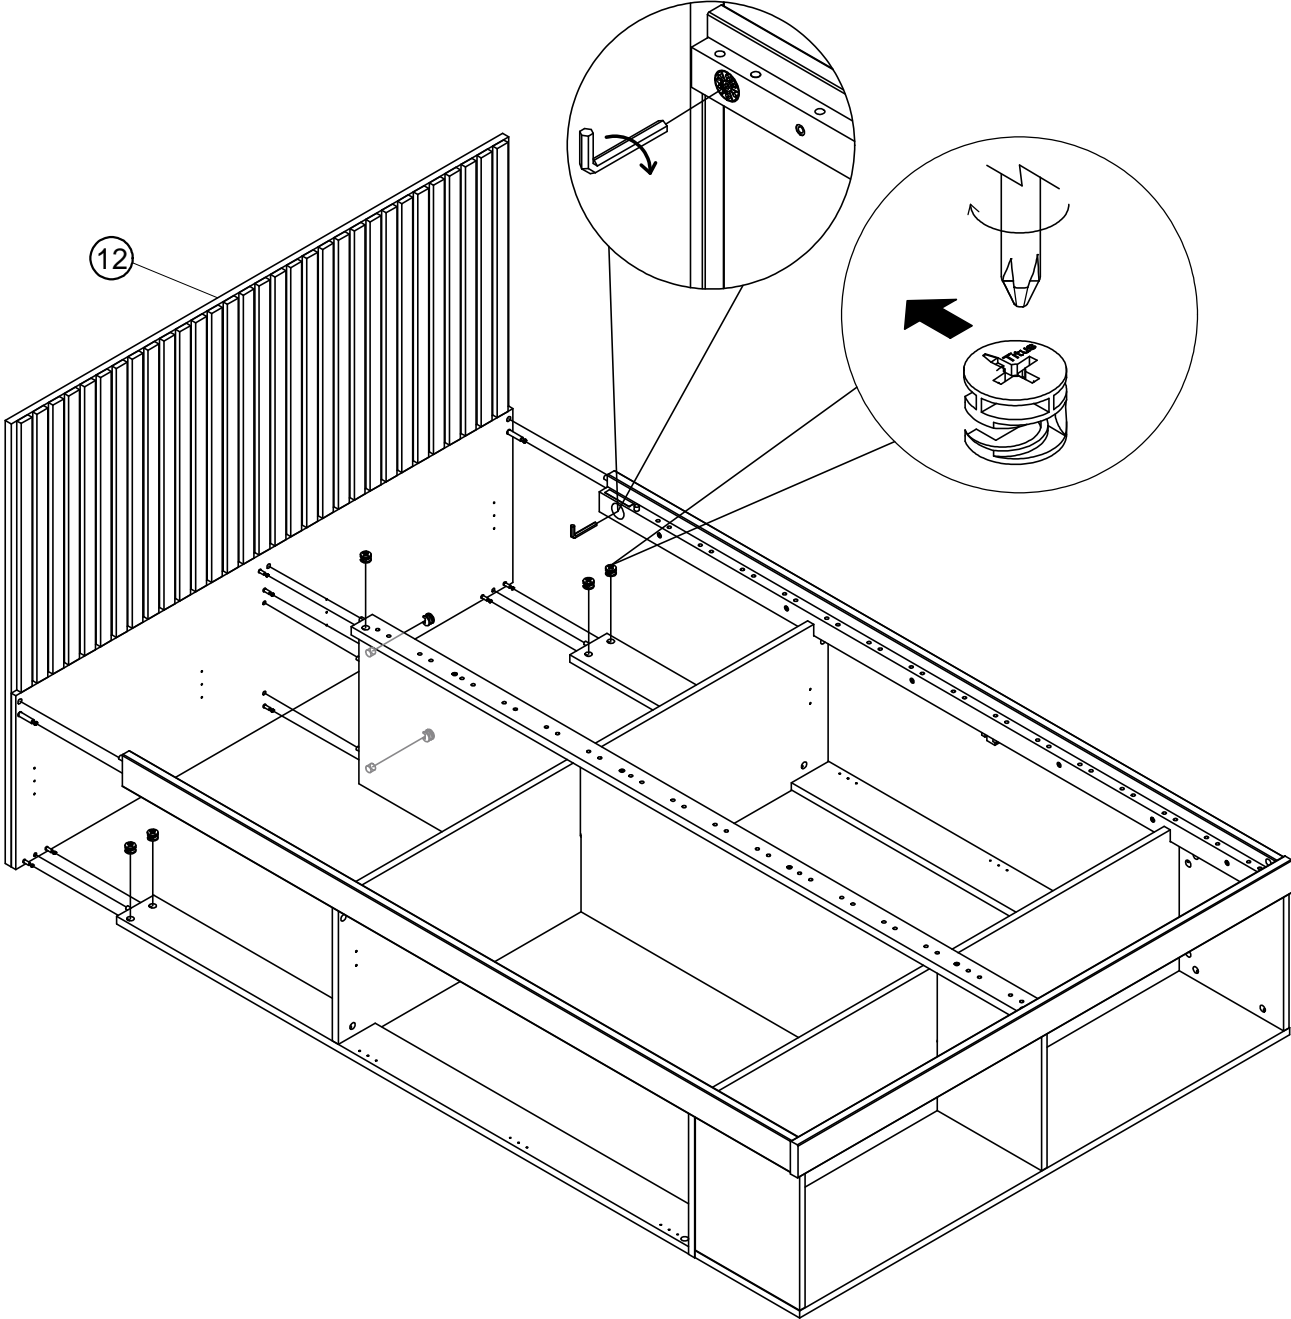14



T7	N/A	1	
B6	Ø15 x 12mm	7	  not supplied

NEXT

BRONX OAK SLATTED LOFT BED  
201962  
Assembly instructions

15

E39	N/A	4		 not supplied
-----	-----	---	--	------------------


X2



16

U123	Ø4 x 16mm	24		 not supplied
H29	N/A	6		

X2

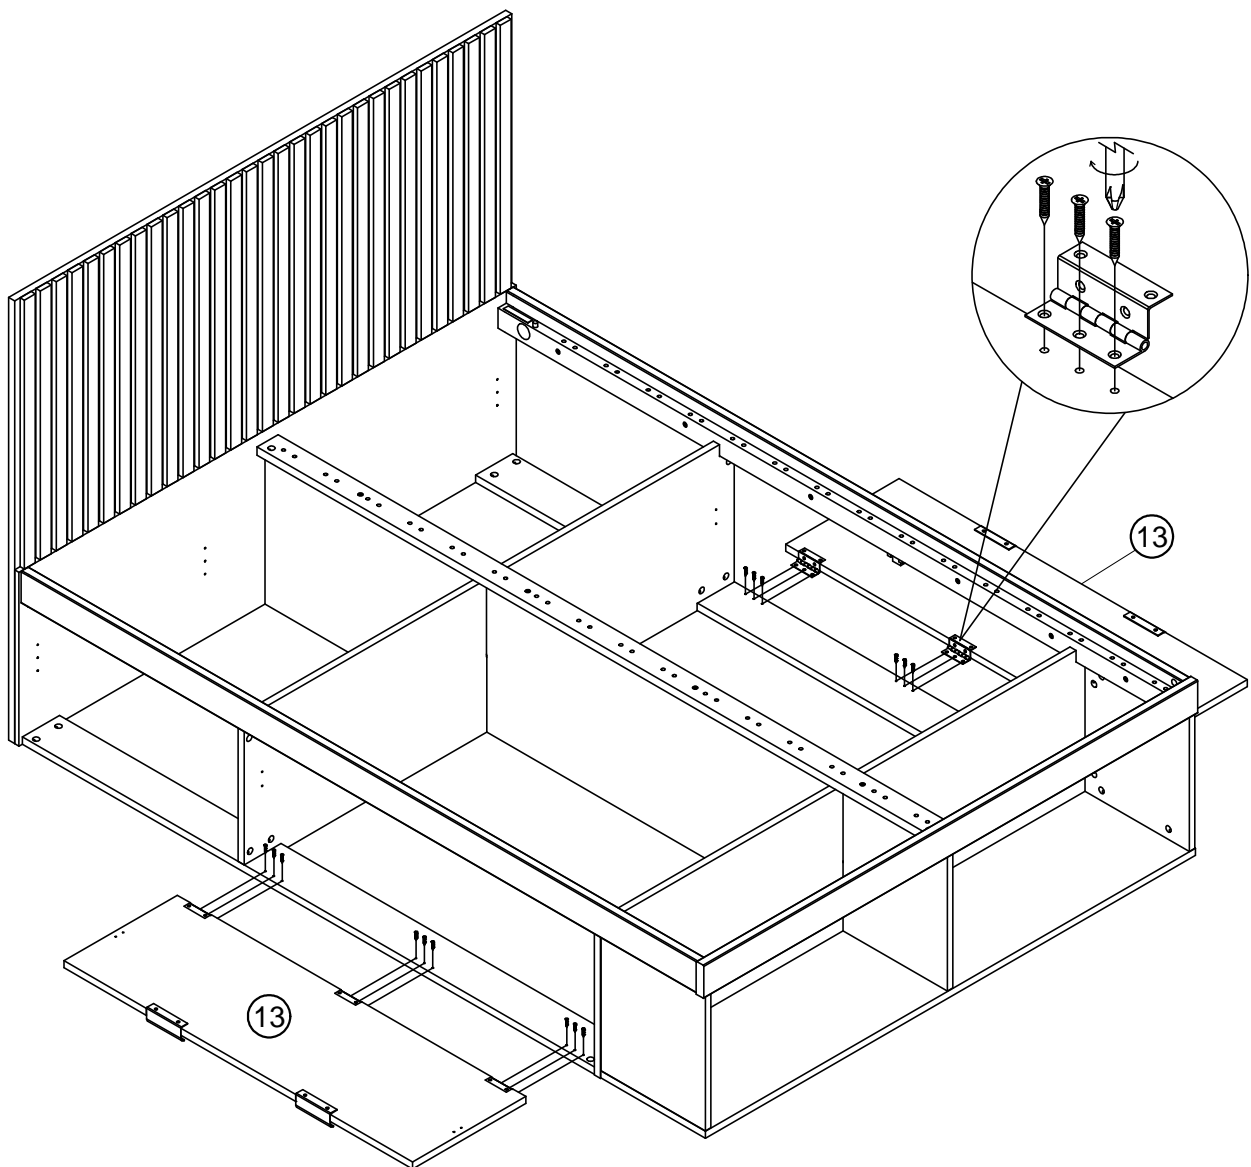17







U123	Ø4 x 16mm	18		 not supplied
------	-----------	----	---	---

NEXT


BRONX OAK SLATTED LOFT BED  
201962  
Assembly instructions

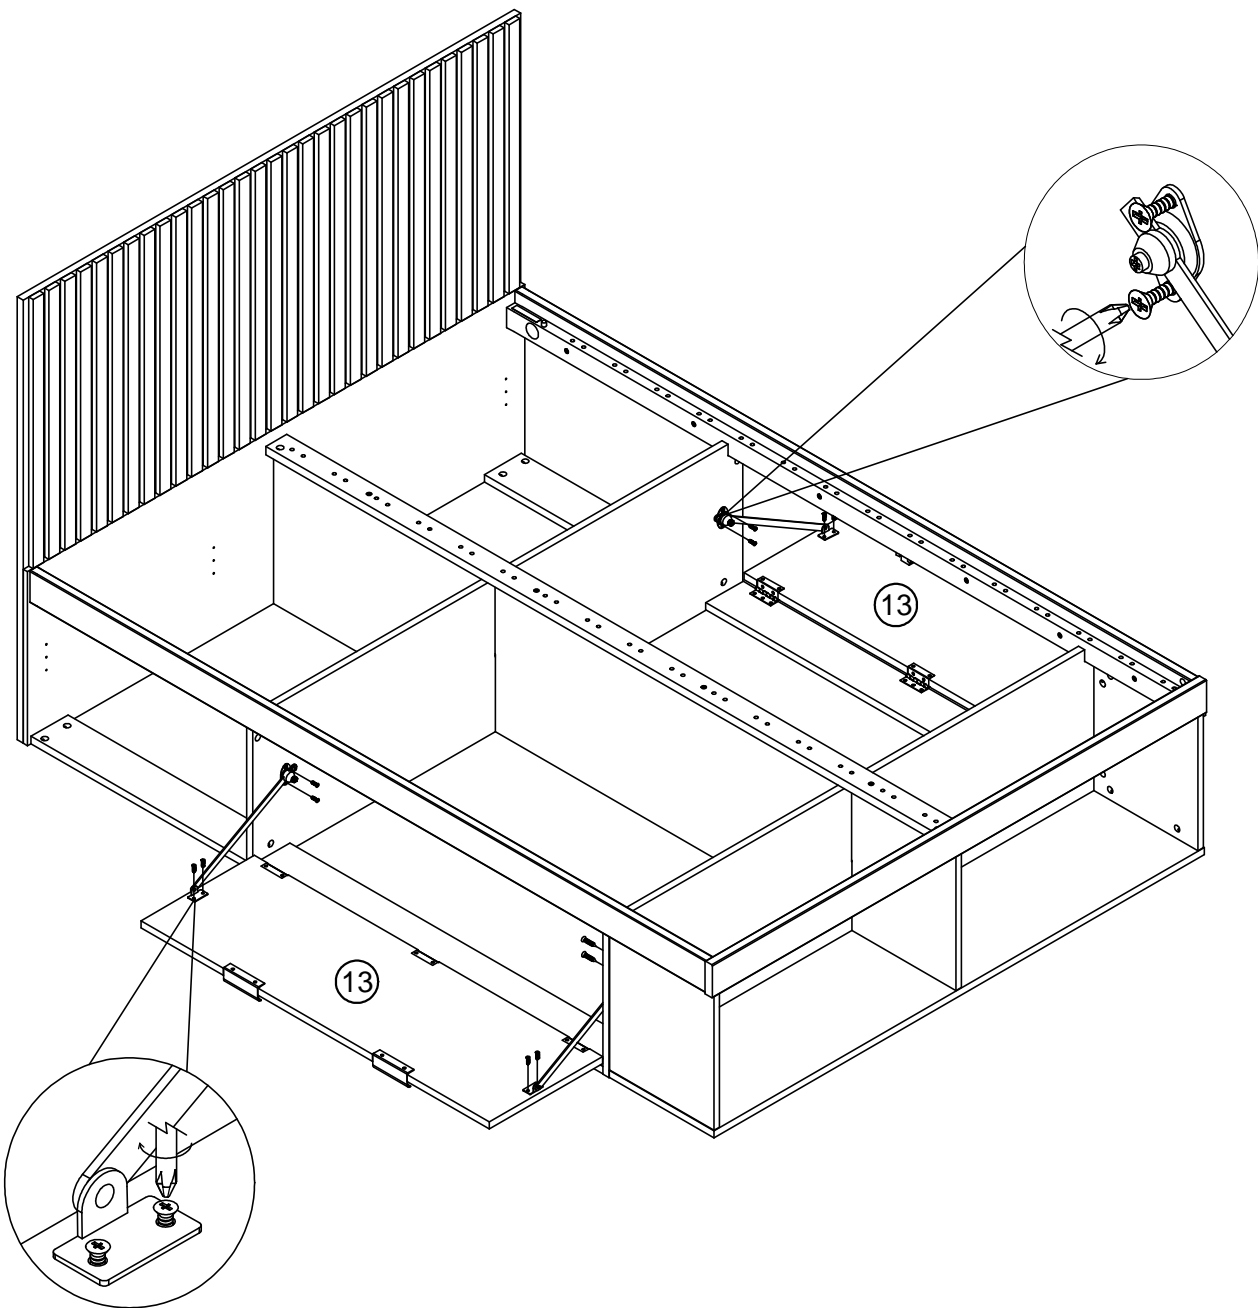18






U136	Ø4 x 16mm	16		 not supplied
H38	N/A	4		

19

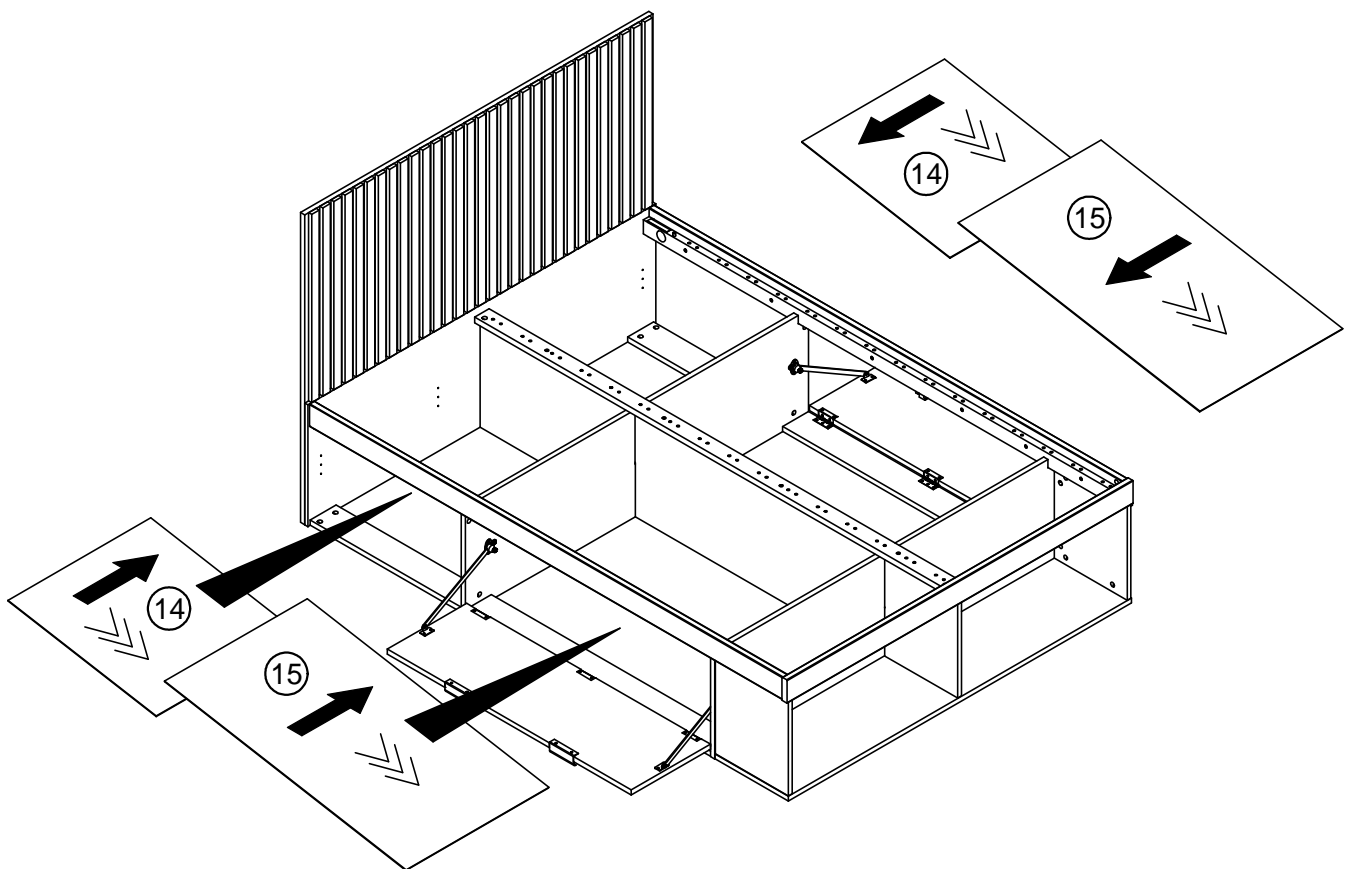



20

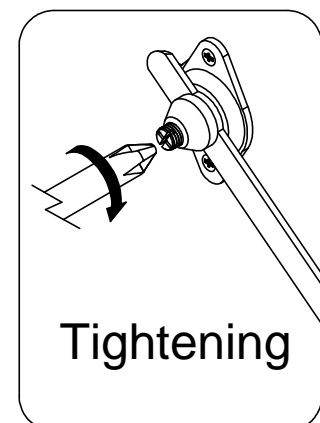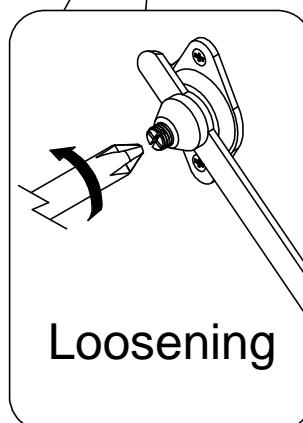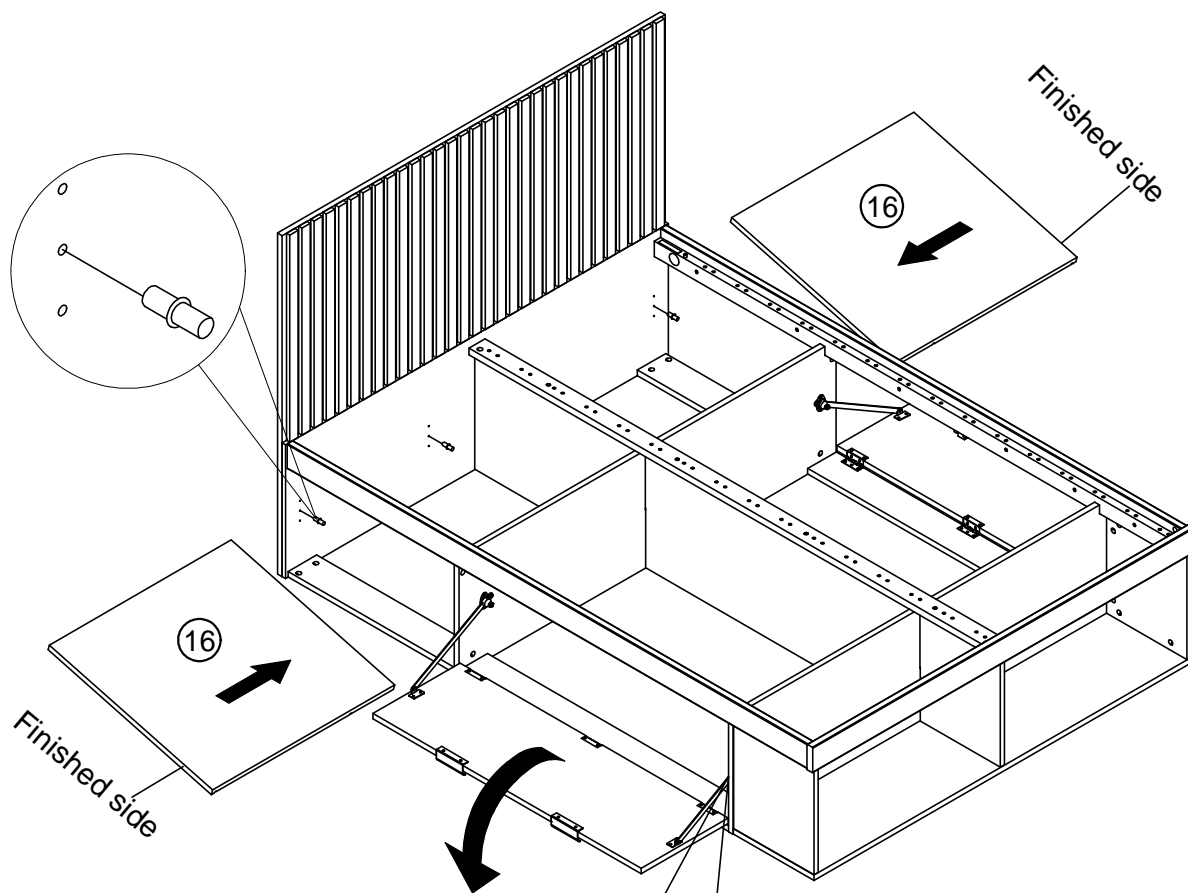

P3	Ø5 x 16mm	8	
----	-----------	---	--




21

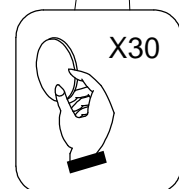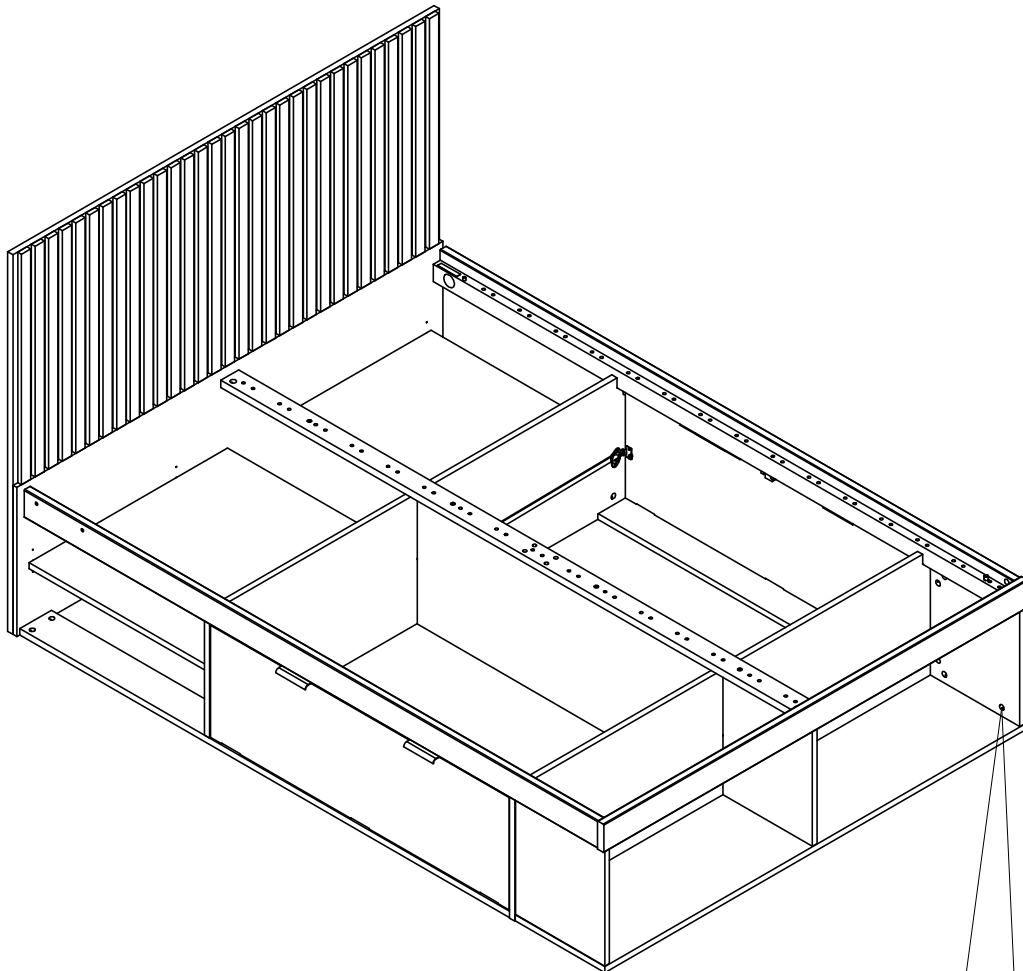


Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.


O1	Ø21mm	30	
----	-------	----	--


22

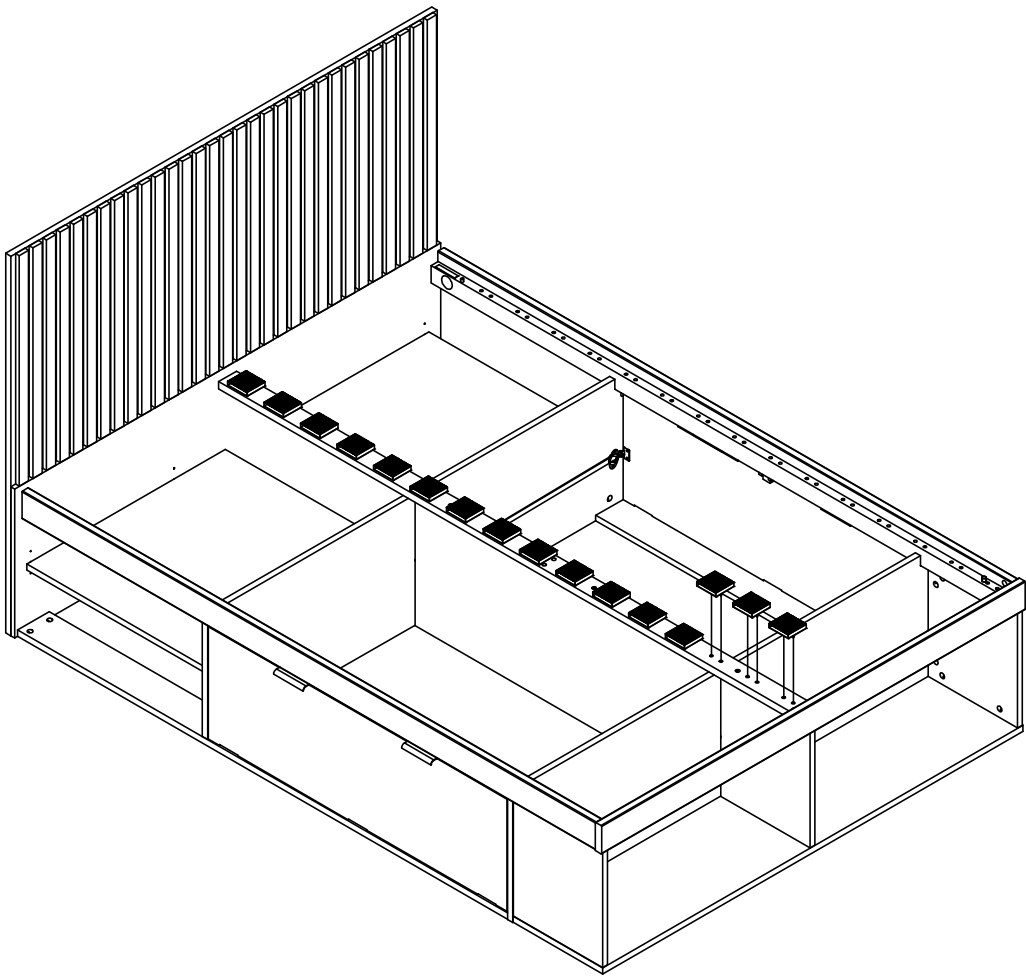


T34	N/A	16	
-----	-----	----	---

23

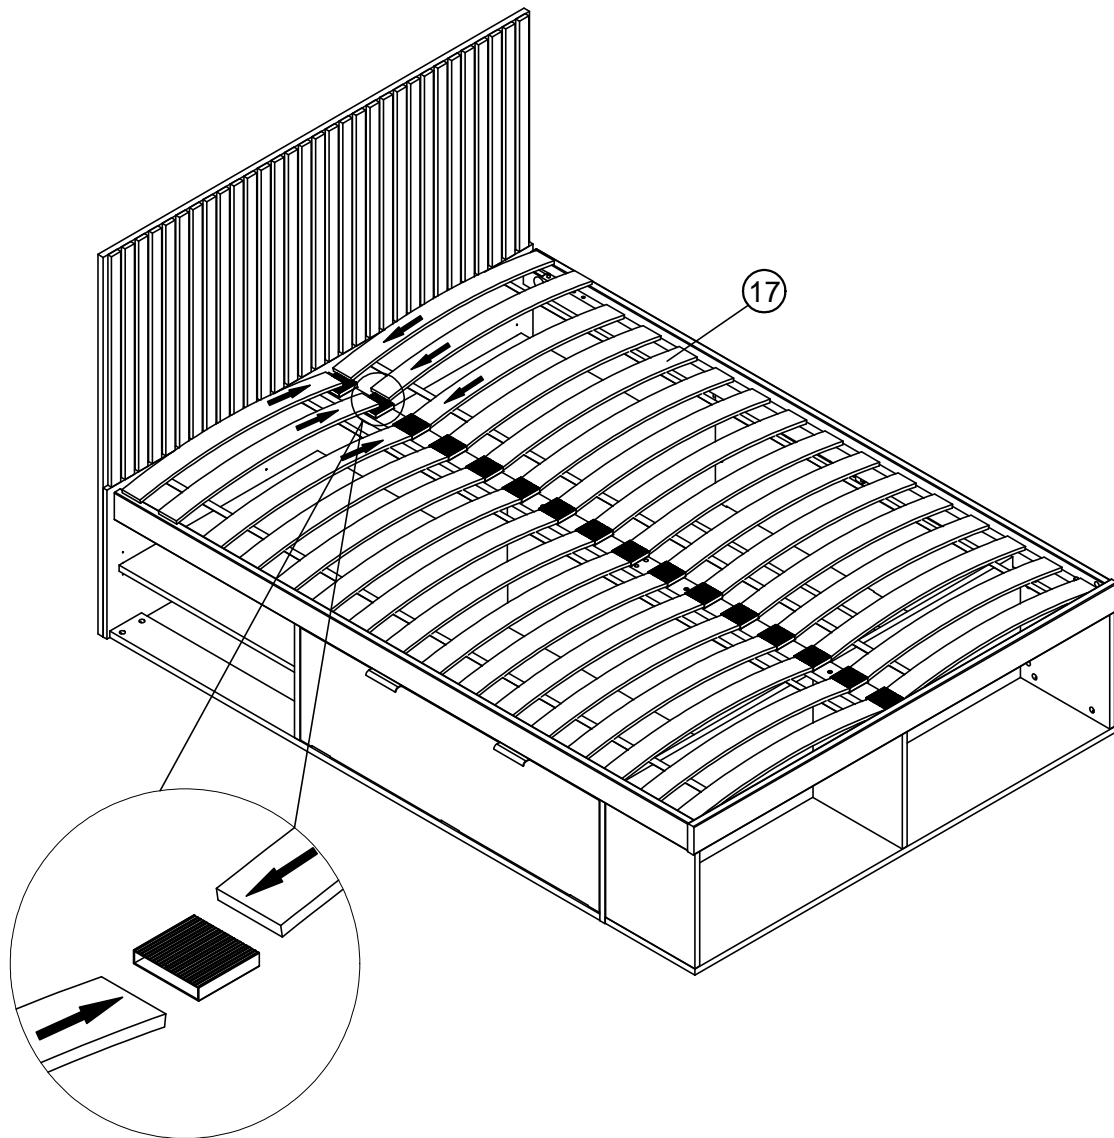

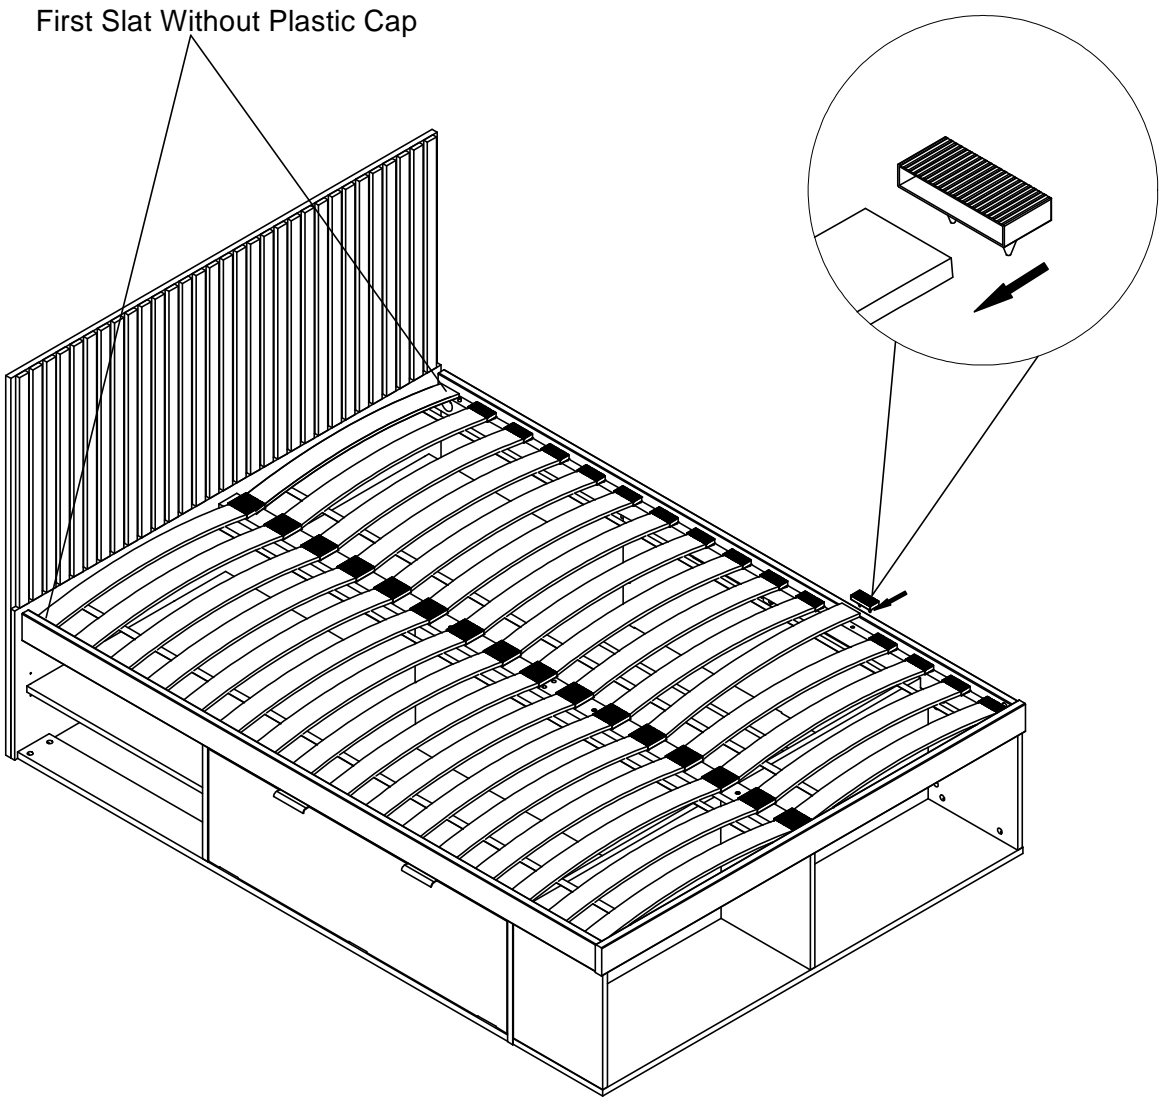


T33	N/A	30	
-----	-----	----	---

# NEXT

## BRONX OAK SLATTED LOFT BED 201962


### Actual product size

DOUBLE:H110 x W141.5 x D197cm

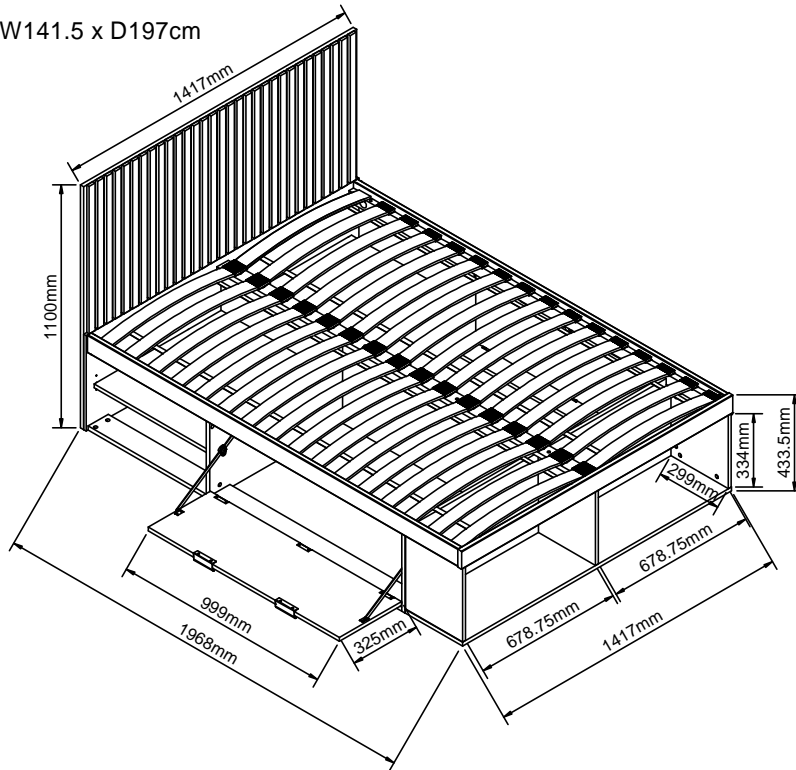

### Actual product size

KING:H110 x W156.5 x D207cm

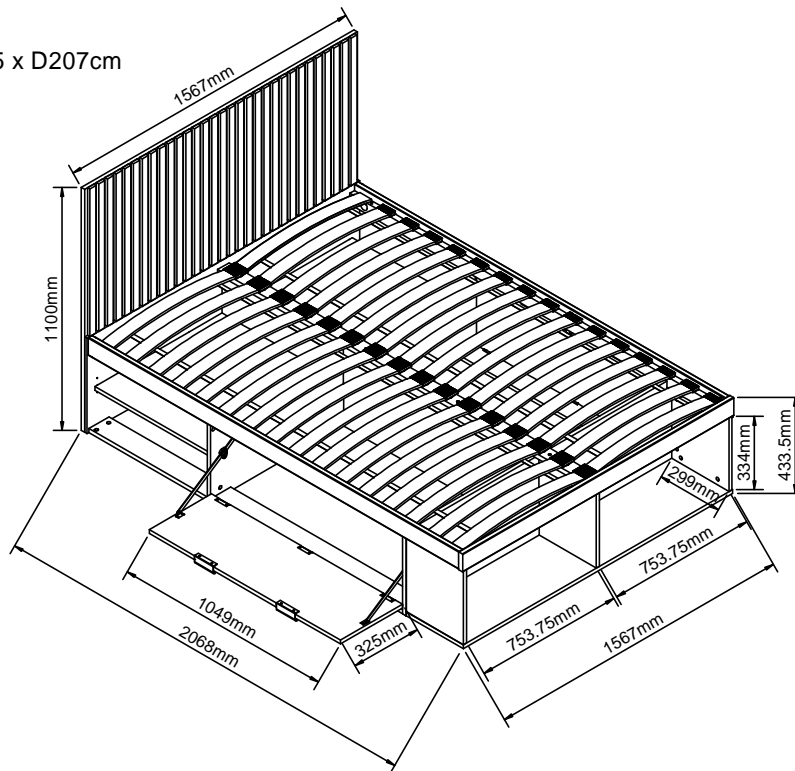

# NEXT

## BRONX OAK SLATTED LOFT BED 201962

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

### Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

### Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

### You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)