

# BEFORE YOU GET STARTED...

*We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.*

*So, let's quickly run through these three steps:*

## 1. COLOUR

Make sure you're happy with the colour  
No need to unpack everything, just check the first component.

## 2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

## 3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

## TIPS FOR RETURNS

Not completely happy with the product? No problem. We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose Fittings and Fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose Fixtures and Fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.

NEXT  
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

# NEXT

## MAYFAIR OTTOMAN HOTEL BED

311083 / 326641 / 323875 / 7866L5

Assembly instructions


### Actual product size (LxWxH mm)

DOUBLE: 2335 x 2060 x 1105


KING: 2485 x 2160 x 1105

Super KING: 2785 x 2160 x 1105

### DOUBLE & KING

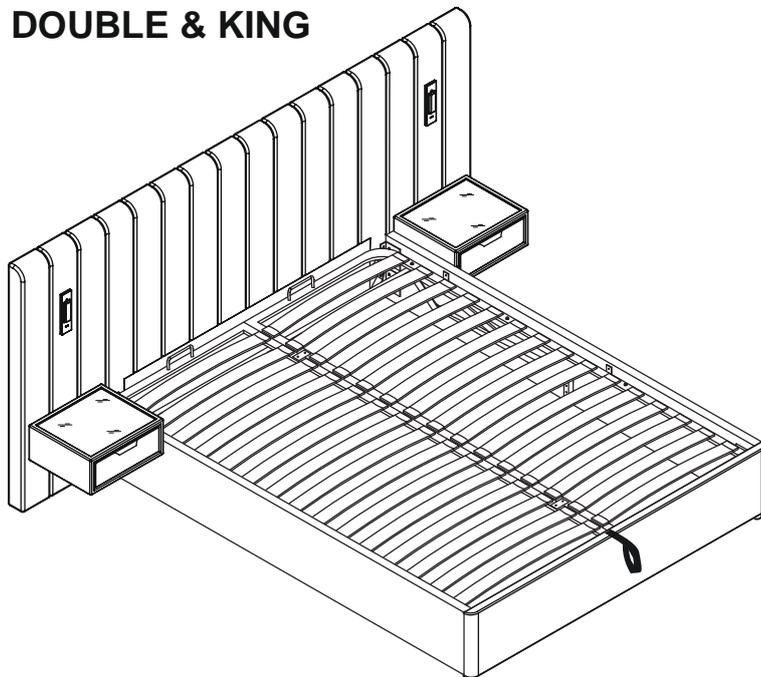

### SUPER KING

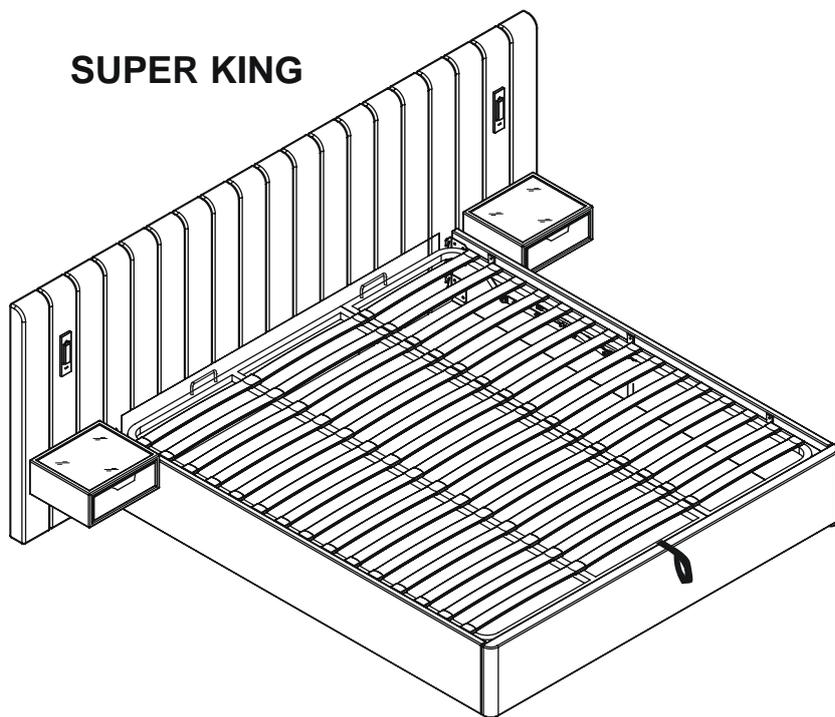

Item No.	Fabric	Content
311083	Steel	100%polyester
326641	Oyster	100%polyester
323875	Navy	100%polyester
7866L5	Plush Oyster	100%polyester

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

## Need Help?

With: Assembly Instructions

Missing or damaged parts

**CALL: 0333 777 8999**

## BEFORE YOU START

### Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

### Do's

Ensure USB devices are unplugged after charging to avoid overheating.

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools, plenty of space.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Unwrap all packaging materials and place the components on a clean surface to protect them from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use. Check fixings regularly to ensure they remain tight.

When moving your assembled bed. It is best to lift the bed and never to drag it. Please check that the centre support rail is securely fixed in place.

When adjusting the support legs ensure that the foot is set 5mm from the floor surface without the mattress in place.

When in use the legs will create the required support for the product.

Never allow any kind of liquid to remain on your furniture. Absorption can cause materials to warp or finishes to de-laminate.

To clean your item, please use a vacuum or lightly brush clean.

### Don'ts

Do not leave items plugged into USB ports in un-ventilated and confined spaces, this could cause the device to overheat.

Do not tighten screws until fully assembled.

Do not over tighten screws or bolts.

Do not drag or pull your furniture.

Do not use this product if parts are missing, damaged or worn.

Never use scourers, abrasives or chemical cleaners.

### Number of people required to assemble

Two people are required to assemble this item



**Time to assemble** 30 minutes



### No More Tools required

### Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on **0333 777 8999** and they will be happy to arrange for a replacement to be sent to you free of charge.

### Home service technicians


If you have a fault with your product please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

### You can write to us at








Home Customer Services  
Next Retail Ltd,  
Desford Road,  
Leicester,  
LE19 4AT,

**To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)**

### GETTING TO KNOW YOUR PRODUCT

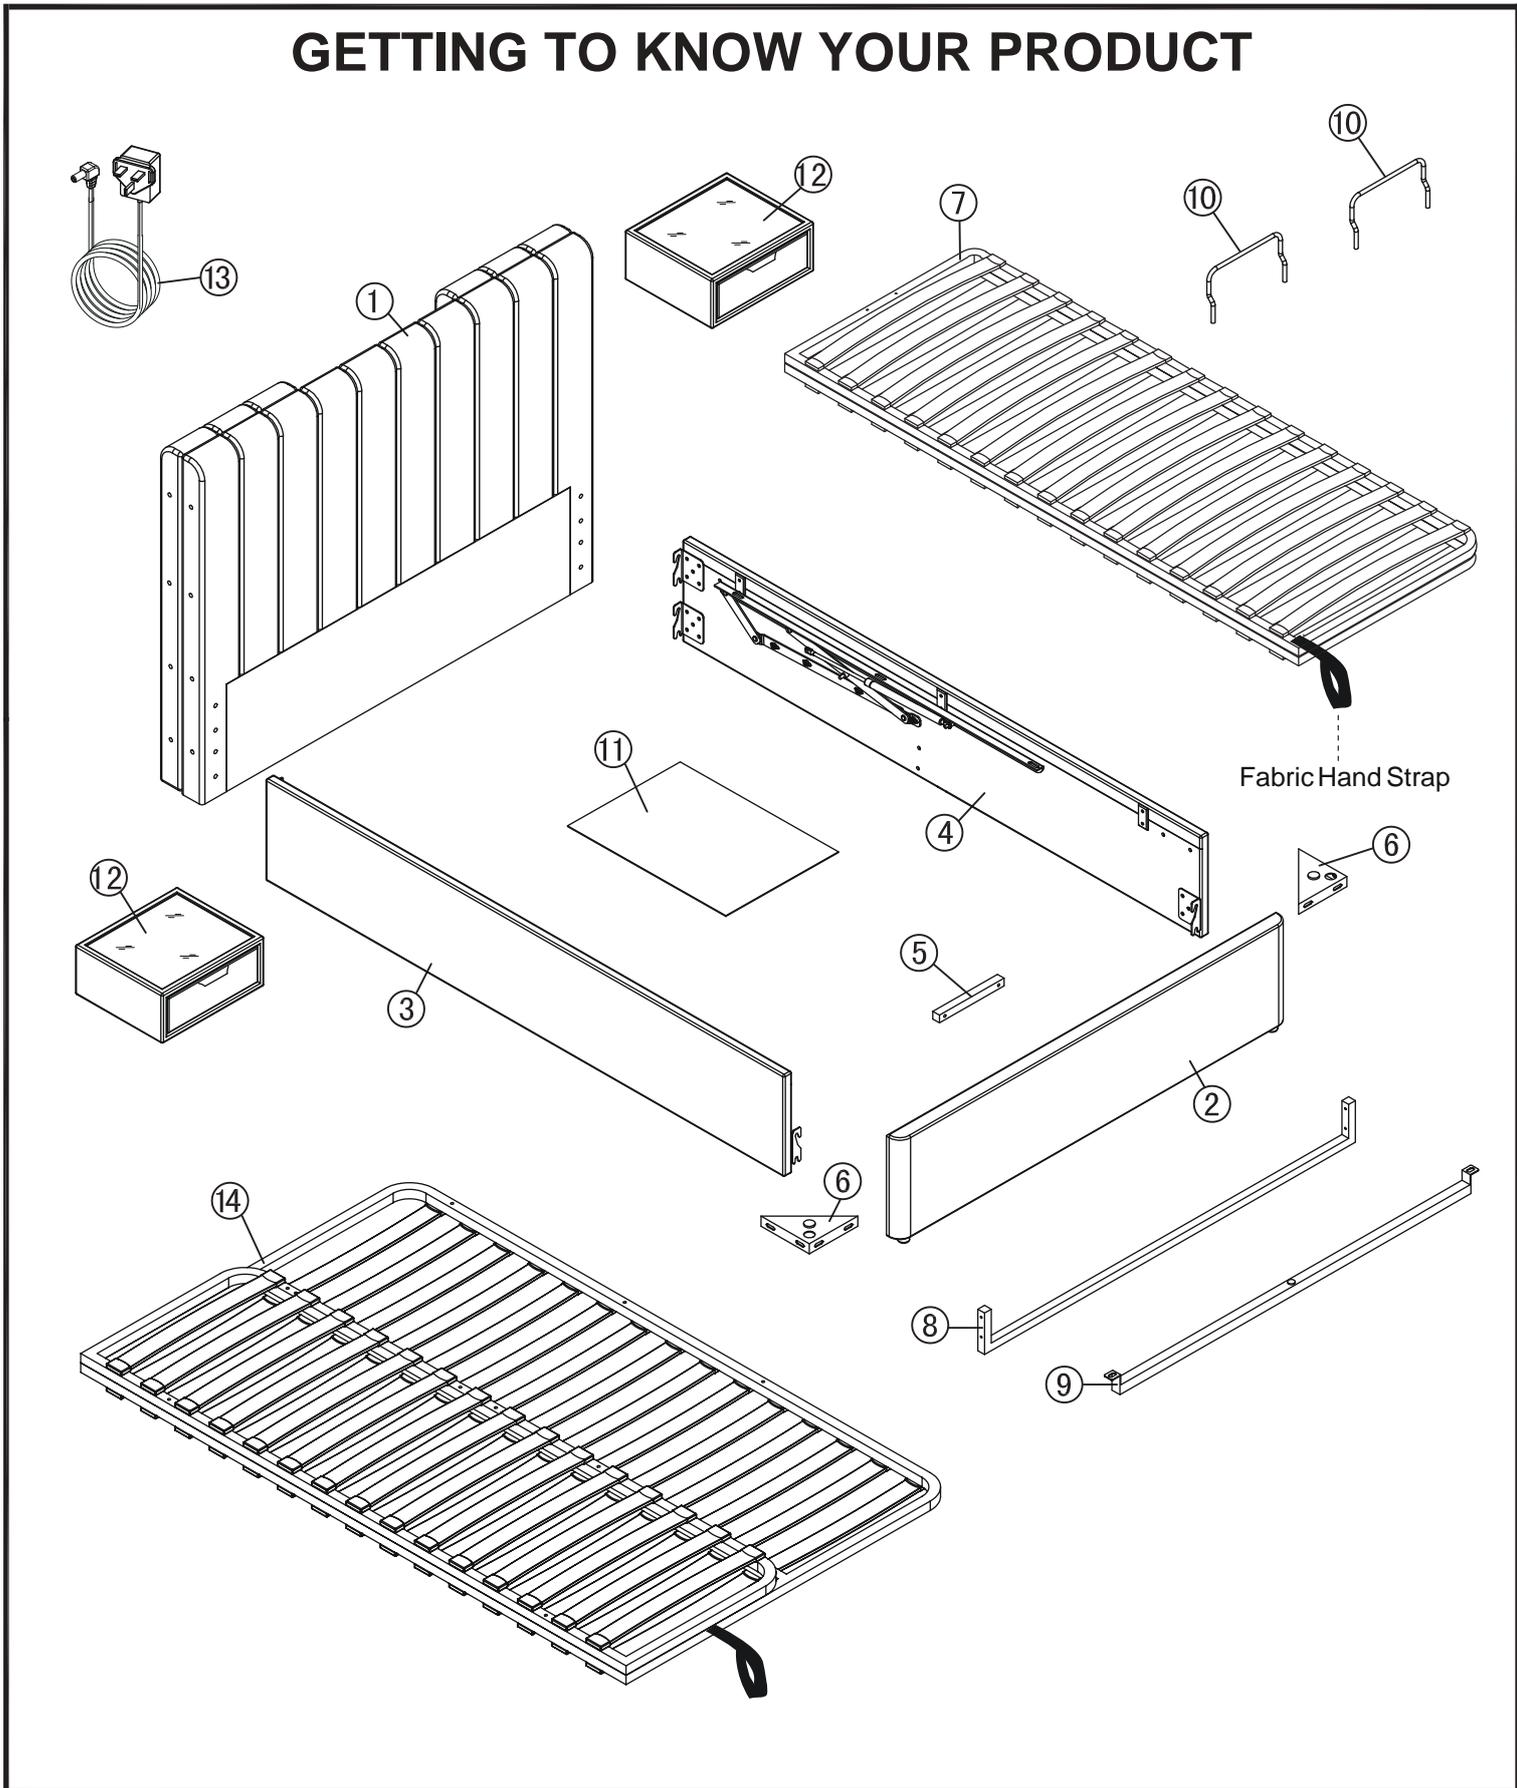


Components supplied. Please use this guide if you require replacement parts.

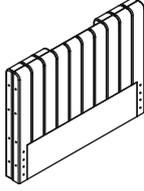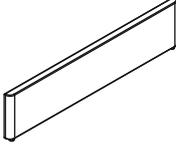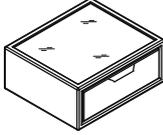Ref	Dimensions	Visal	Qty	Ctn	Ref	Dimensions	Visal	Qty	Ctn
1	Headboard		1	1	8	"U" Shape Bar		1	3
2	Footboard		1	3	9	Cross Bar		1 Double & King Size 2 Super King Size	3
3	Side Rail - Left		1	2	10	Mattress Stoppers		2	3
4	Side Rail - Right		1	2	11	Fabric Base Cover		1	3
5	Slat Frame Support Rail		1	3	12	Bedsides		2	4
6	Angle Bracket		2	3	13	Power Adapter 90° LV Plug		1	1
7	Metal Lift up Slat Frame		1	3	14	Metal Lift up Slat Frame Only for Super King Size		1	3


### Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare	
A	M8x25	26	2	
B	M8x50	Double & King	12	2
		Super King	13	
C	M8x30	12	2	
D	M8x40	8	1	
E	M8x70	4	1	
F	M8	44	2	
G	M8x17	Double & King	44	2
		Super King	45	
H	M8	10	1	
J	M8	2	1	
K	M8	2	N/A	
L	M8	1	N/A	

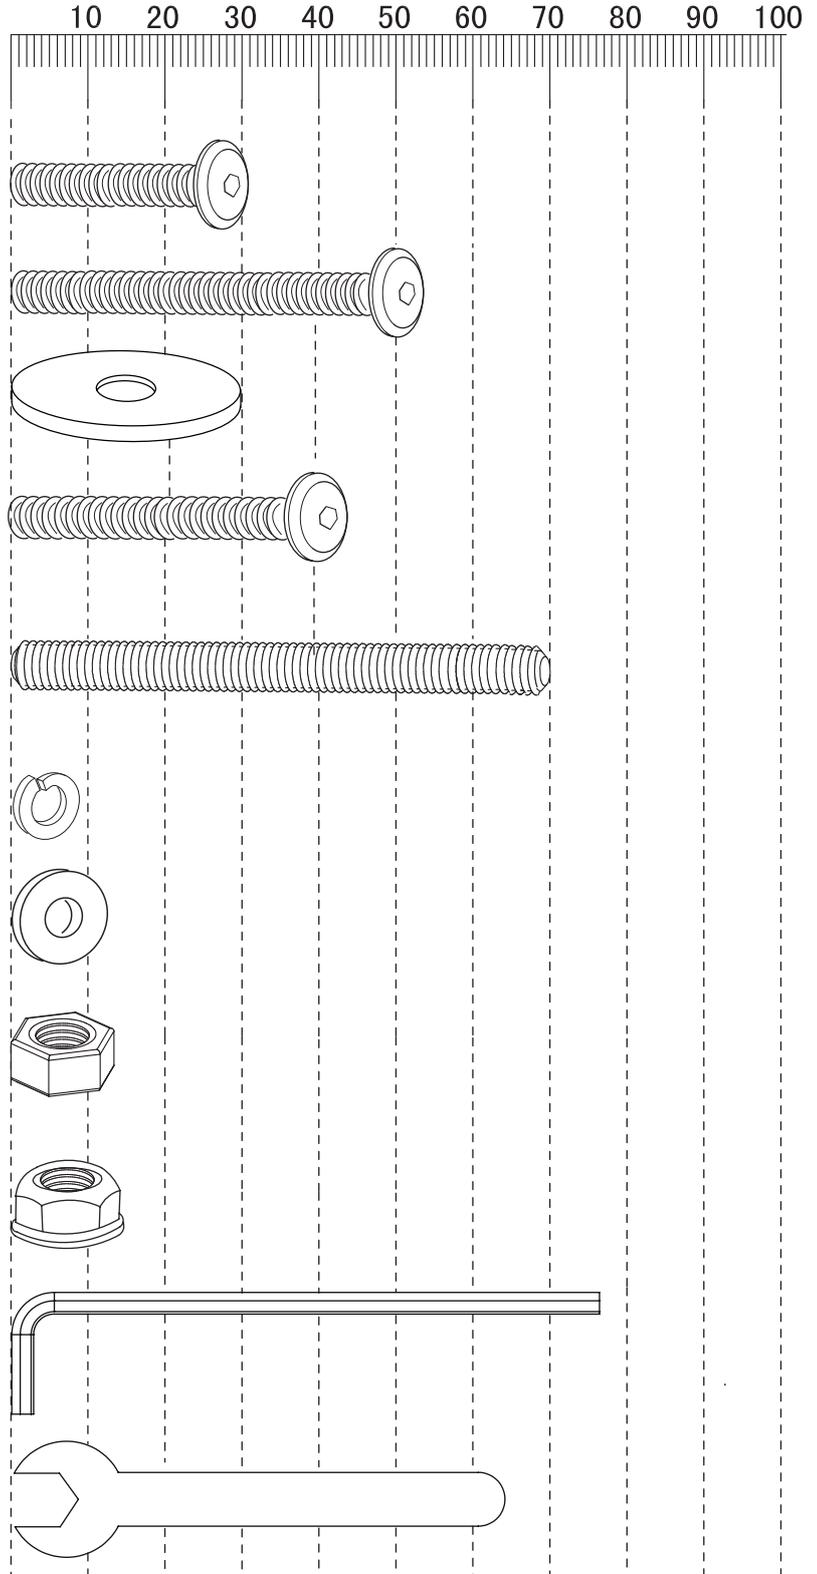


### Fixtures and fittings supplied (not to scale)

Ref	Description	Qty	Spare
M	Metal Connection Plates	2	N/A




Ref	Description	Qty	Spare
N	Box spanner	1	N/A




1


- i) Unfold both wings, unzip compartments and retrieve hardware and cable packs from compartment in the left hand wing.

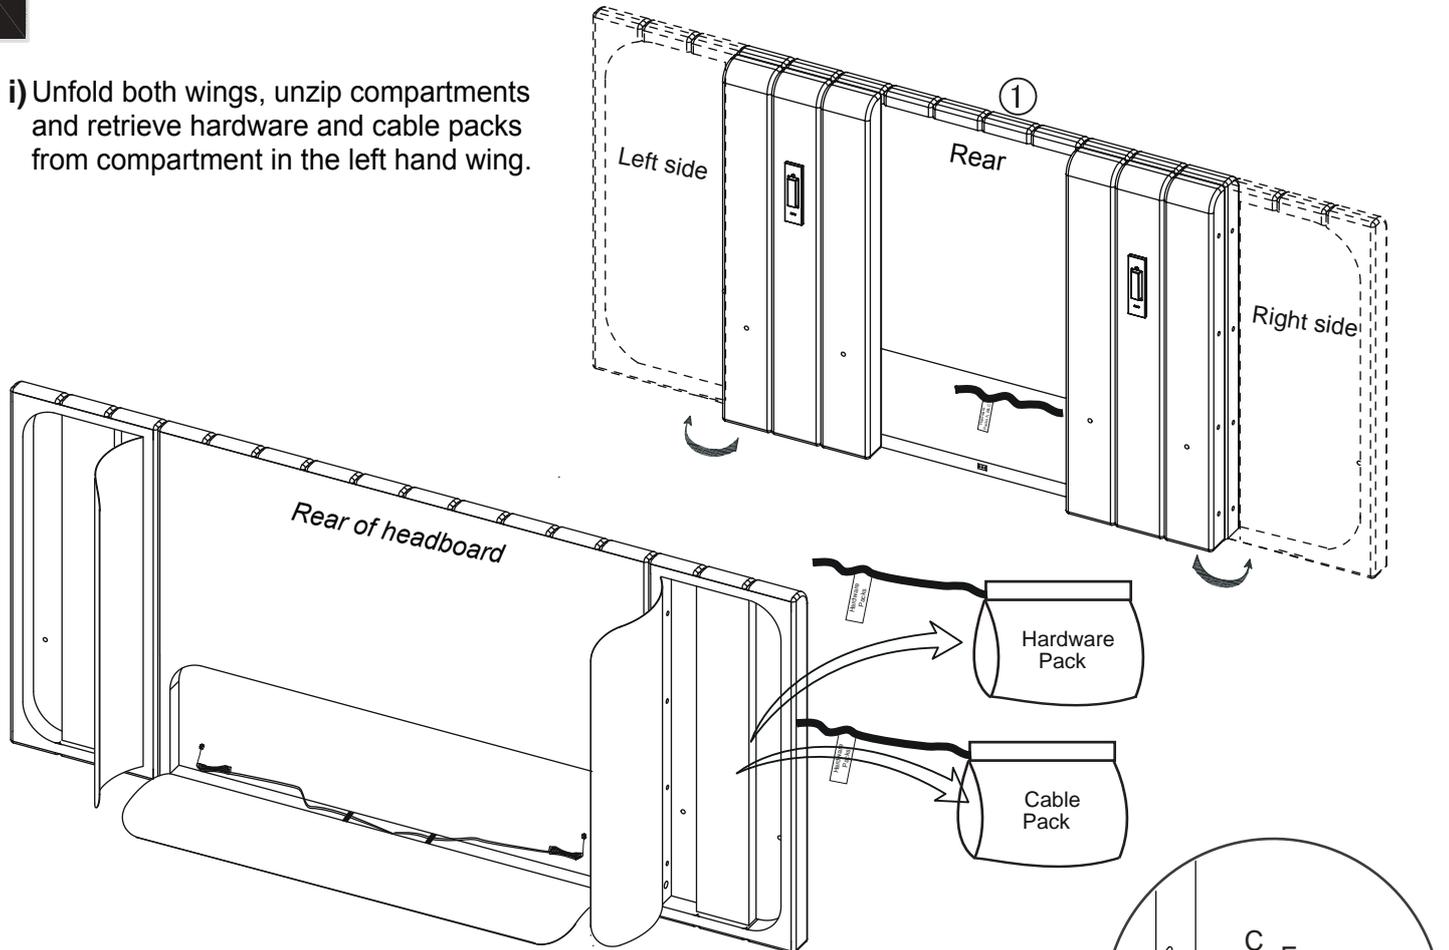

- ii) Bolt each wing to main headboard. Screw three bolt sets (D, F & G), into the pre-tapped holes on each side of the main headboard. Tighten with Allen key (K).

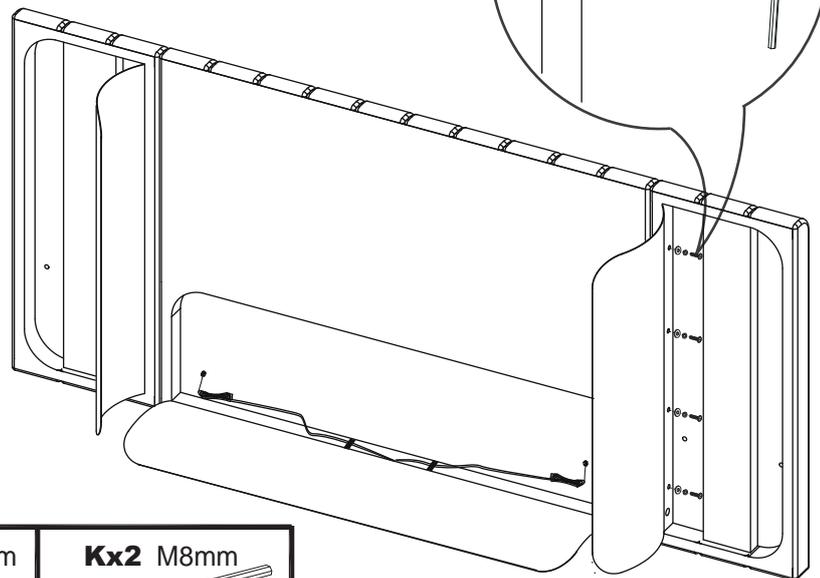

**Dx8** 8x40mm



**Fx8** M8mm



**Cx8** M8X30mm




**Kx2** M8mm




**2**

i) From the compartment in the rear of the main headboard, pass each cable through the access holes into the wings.

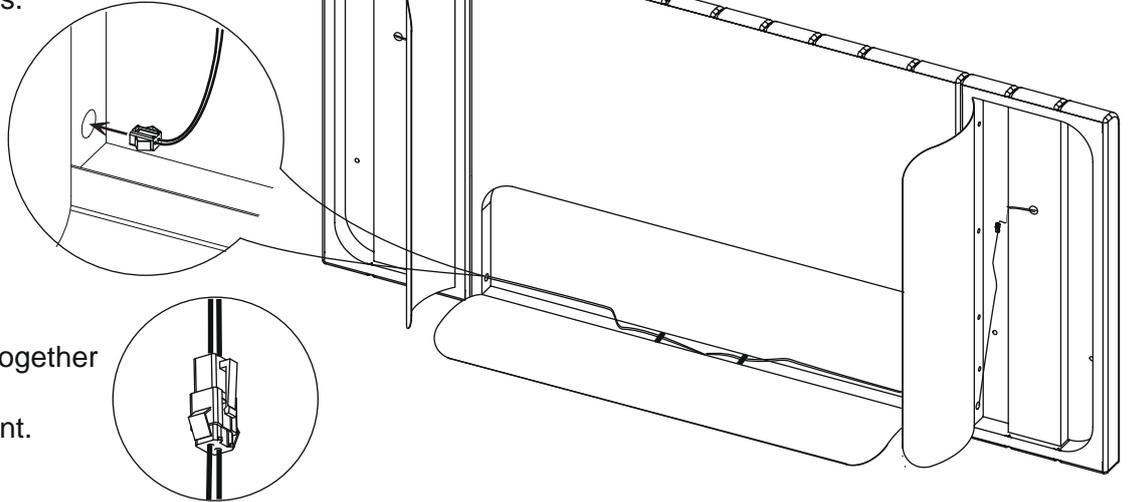

ii) Connect plug & socket together by each reading light  
Re-zip each compartment.

**3**

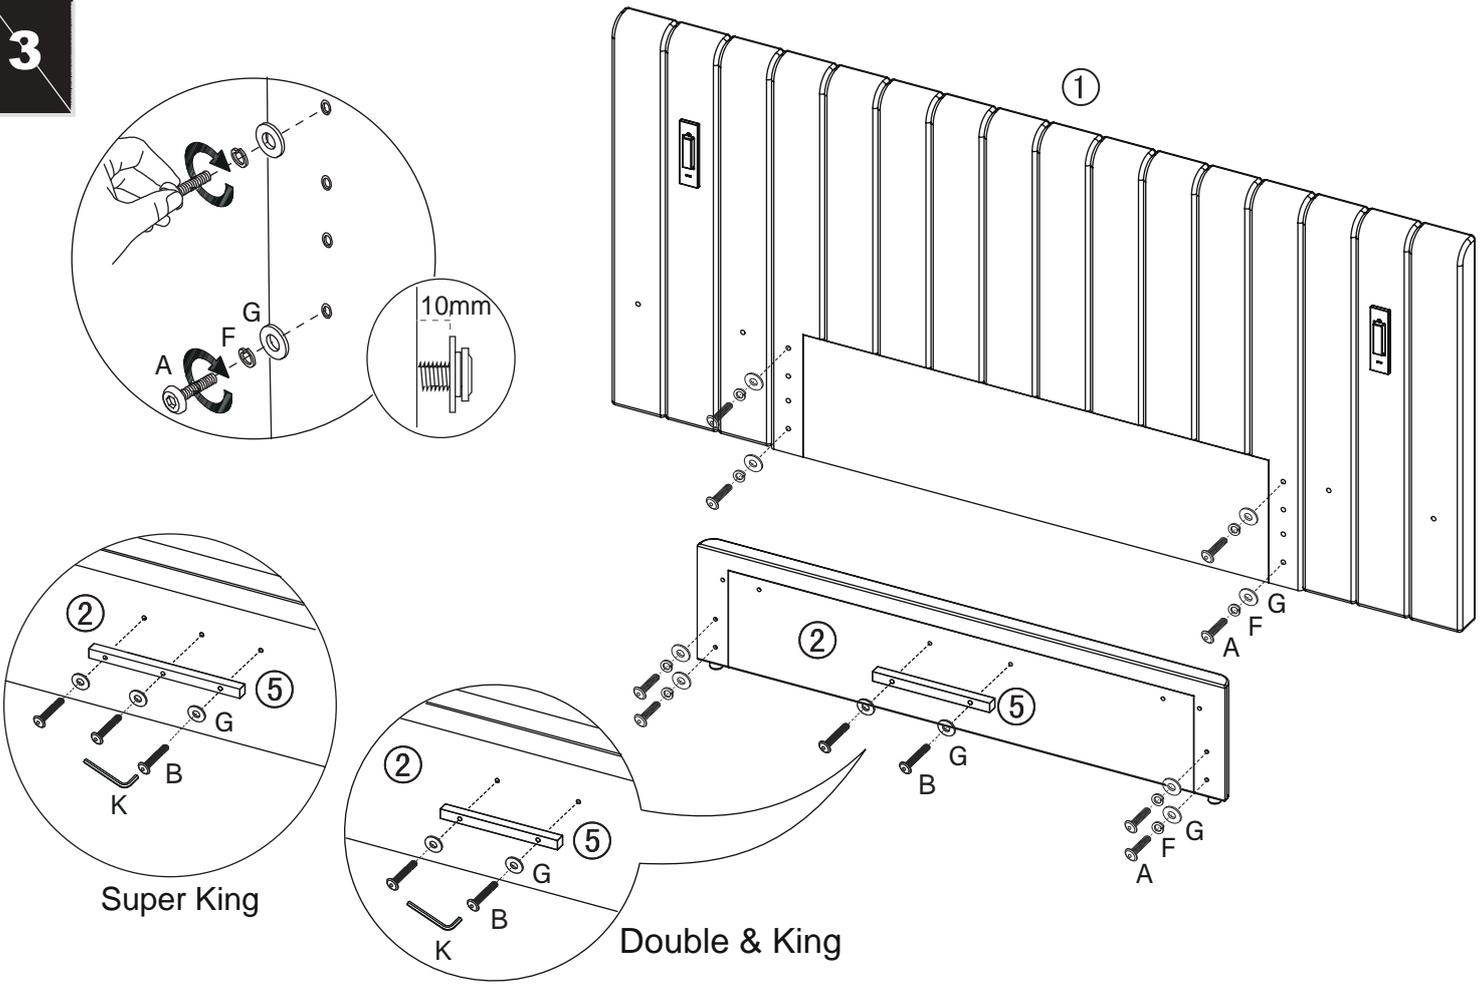

Super King

Double & King

**Ax8** M8x25mm



Double & King  
Super King



**Bx2** M8x50mm  
**Bx3** M8x50mm

**Fx8** M8mm



Double & King  
Super King




**Gx10** M8x17mm  
**Gx11** M8x17mm

**Kx2** M8mm



**4**

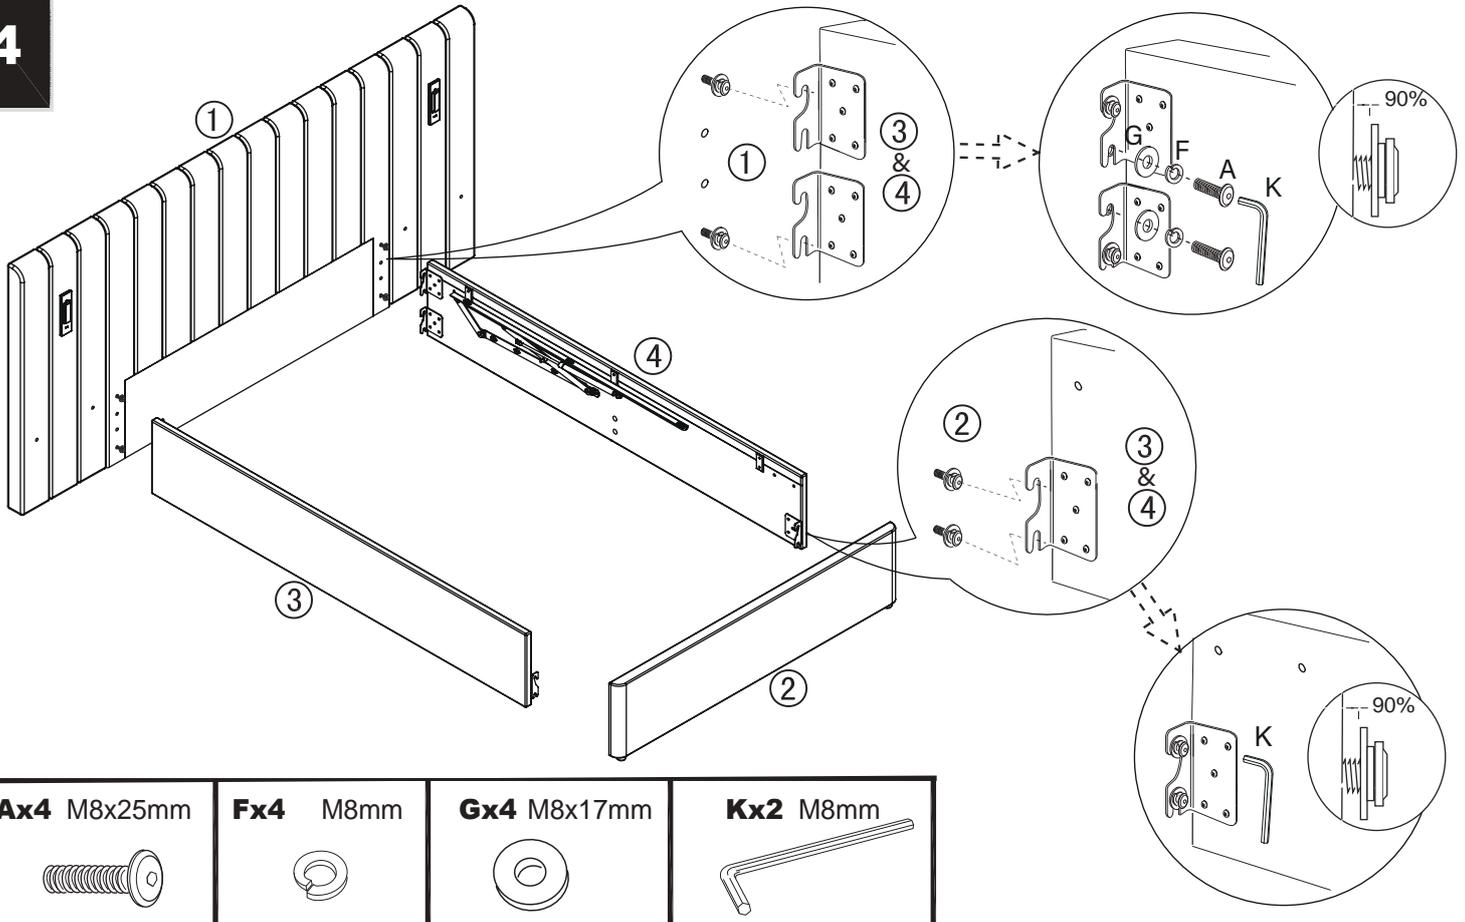

**Ax4** M8x25mm



**Fx4** M8mm



**Gx4** M8x17mm





**Kx2** M8mm




**5**

For safety, remove glass during this step and place well away from the workplace.

**x2**

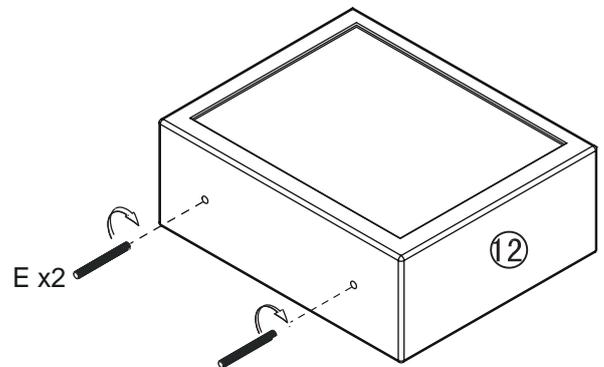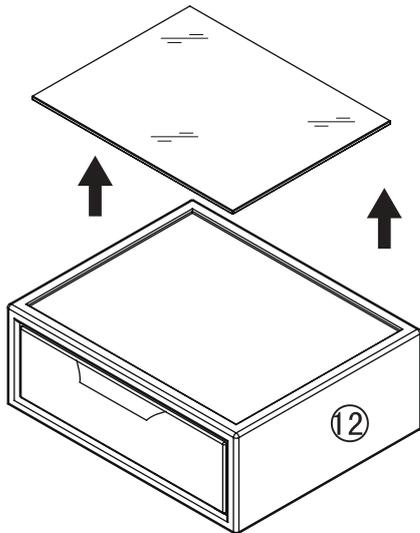


**Ex4** M8x70mm



Screw the threaded bolts (E) into the tapped holes in rear of the bedside chests until they stop, do not over-tighten..

**6**

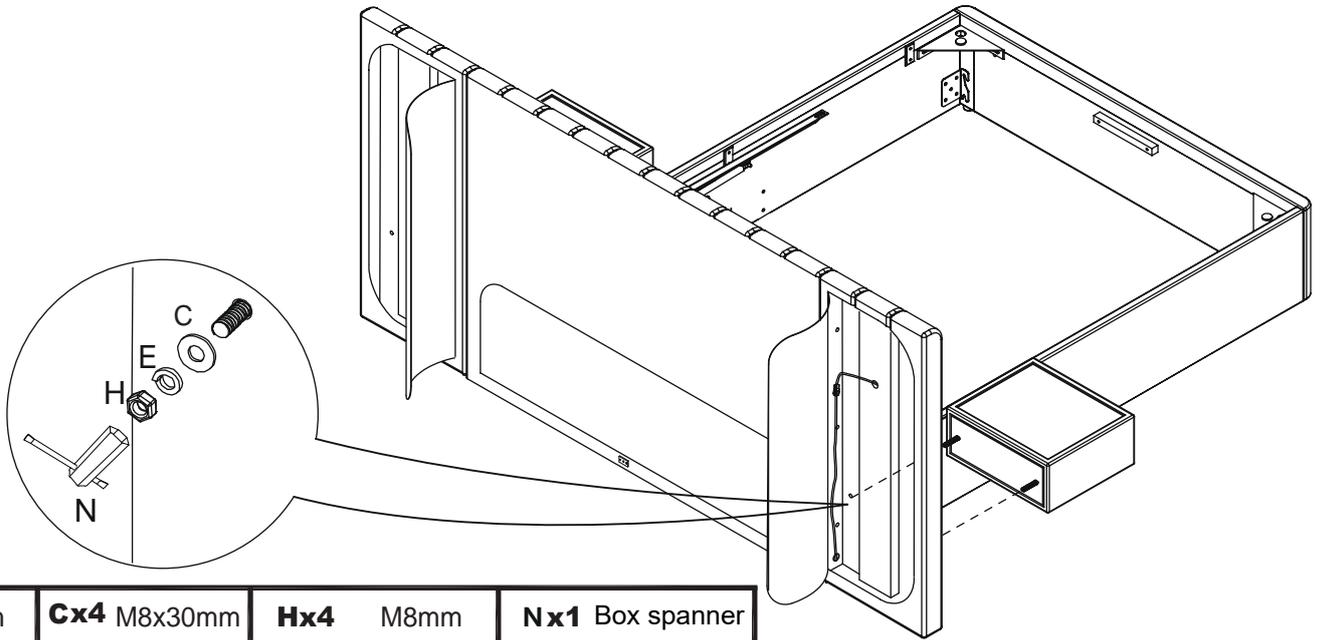

**Fx4** M8mm




**Cx4** M8x30mm




**Hx4** M8mm





**Nx1** Box spanner





**7**

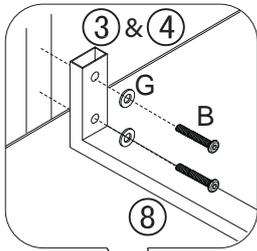


Fit the 'U' shaped cross bar (8) between each side rail across the centre of the bed being careful not to damage the fabric. Bolt the rail into position on each side using bolts (B) and flat washers (G).

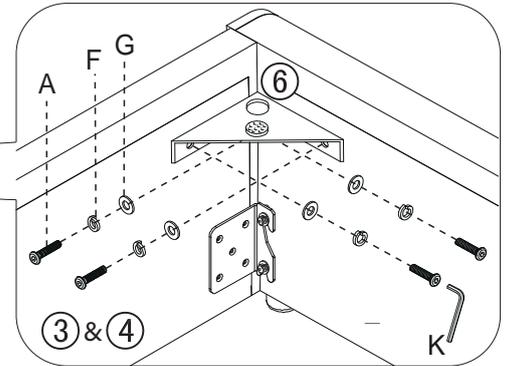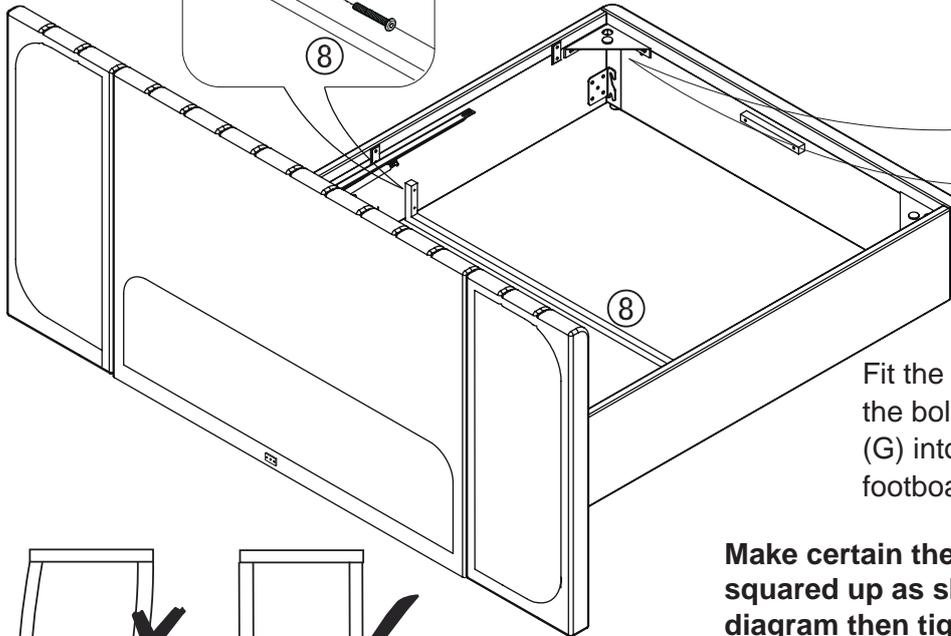

Fit the two angle brackets (6) loosely screwing the bolts (A), spring washers (F) & flat washers (G) into the threaded inserts in the corners of footboard (2) & the side rails (3&4).

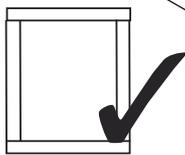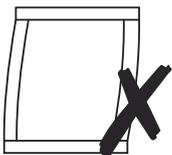

**Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.**

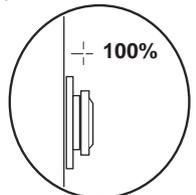

**Ax8** M8x25mm



**Bx4** M8x50mm



**Fx8** M8mm



**Gx12** M8x17mm



**Kx2** M8mm



8

**! WARNING** CAREFULLY LIFT BOTH SIDE RAILS AT THE SAME TIME, DO NOT LET THE BED TWIST.




To fit the fabric base cover (11).

Carefully & evenly lift up the bed from the base end making sure it doesn't twist and turn the headboard onto its back.

For safety, your assistant should hold up the bed whilst the fabric base cover is fitted.


Using the velcro tape, attach the cover to bottom of both side-rails, headboard & footboard making sure that the fabric is fixed evenly all round.

Lower the bed evenly back to the floor.

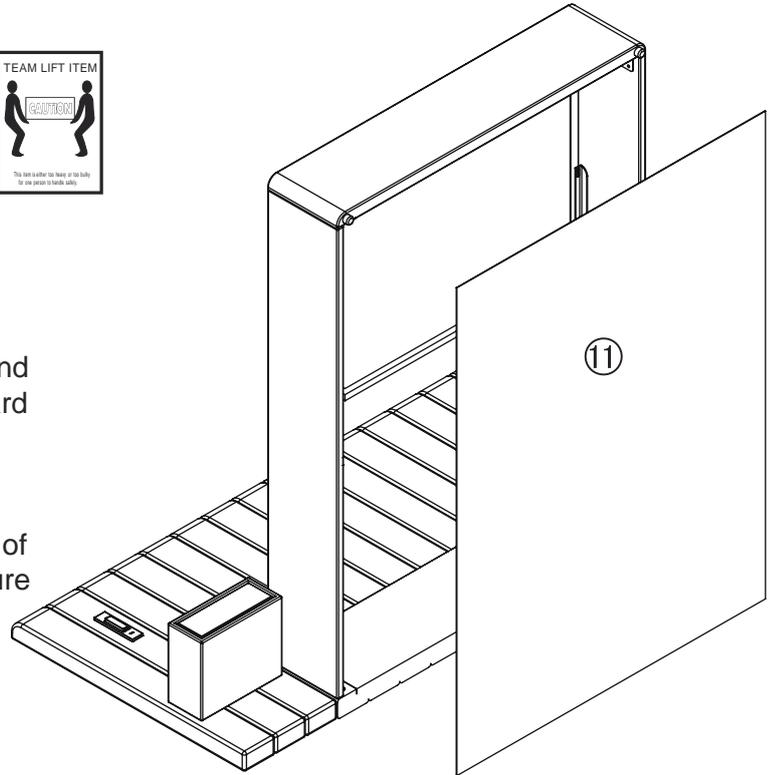

9


i) Connect Mains Power Lead (13) to your wall socket - for safety, this must be an earthed supply.

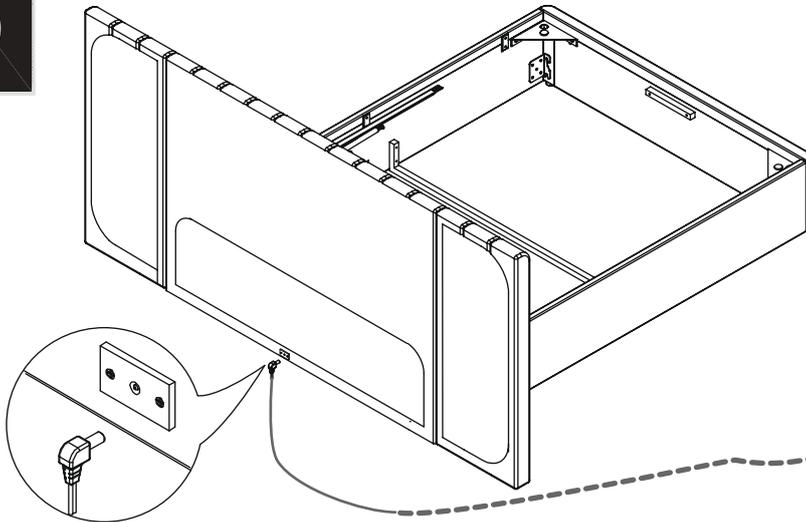


ii) After the power cable is fitted, the lights and USBs should be tested.

iii) Using help, lift the bed back in its final position close up against the wall, please do not drag it.

iv) Make sure bed is still squared up then go onto next step and fit the ottoman frame.

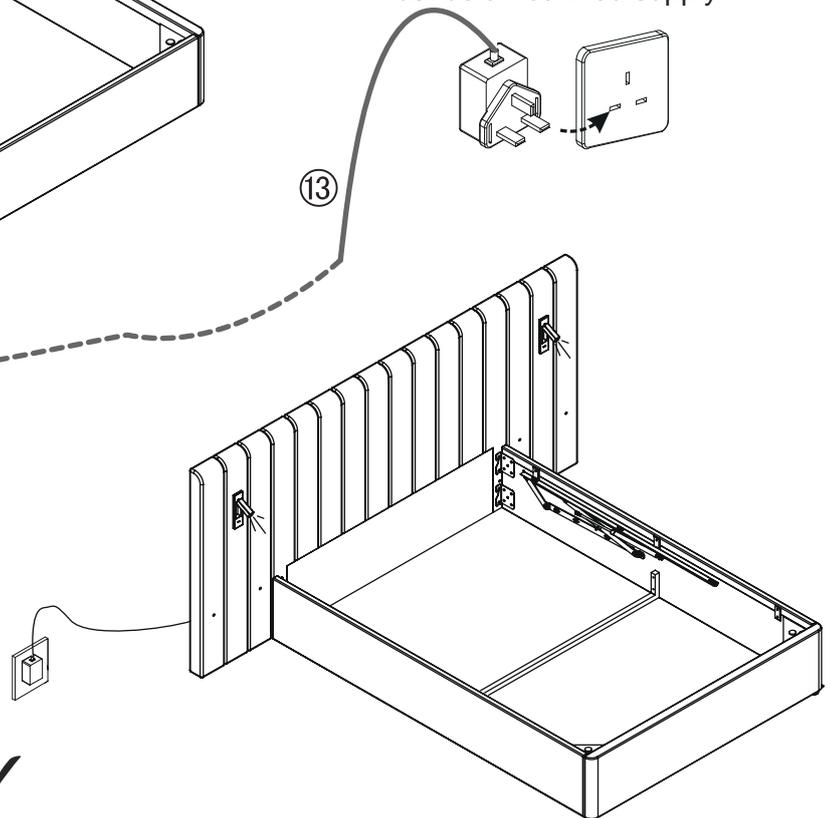


### 10a For Double and King Size

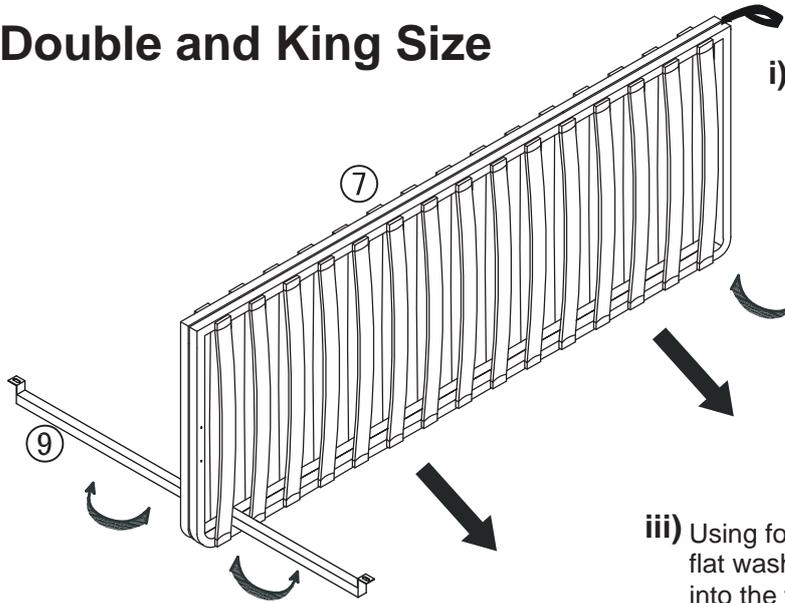


i) Fitting position for cross bar (9) is clearly labeled. Pass bar through metal slat frame (7) between first & second slat. Carefully open the frame.


ii) Ease the plates on top of the cross bar (9) onto top of the slat frame sides and through the holes in the plates, loosely fit two sets of bolts (A), spring washers (F) & flat washers (G) into the threaded inserts. Do not tighten yet.

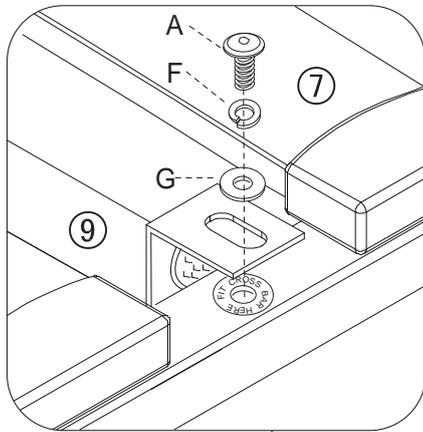

iii) Using four sets of bolts (A), spring washer (F) & flat washers (G) fit the metal connection plates (M) into the threaded inserts on top of the frame. Using Allen key (K), tighten all six bolts 100%.

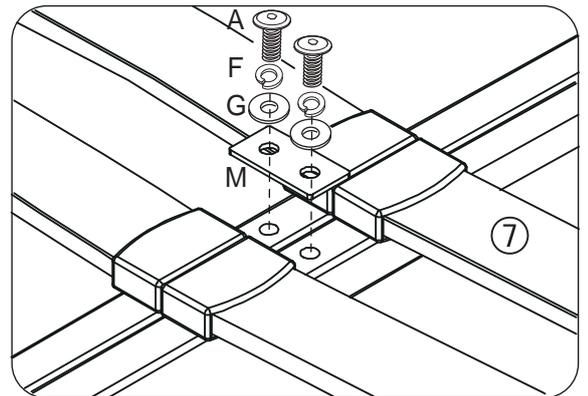

x2

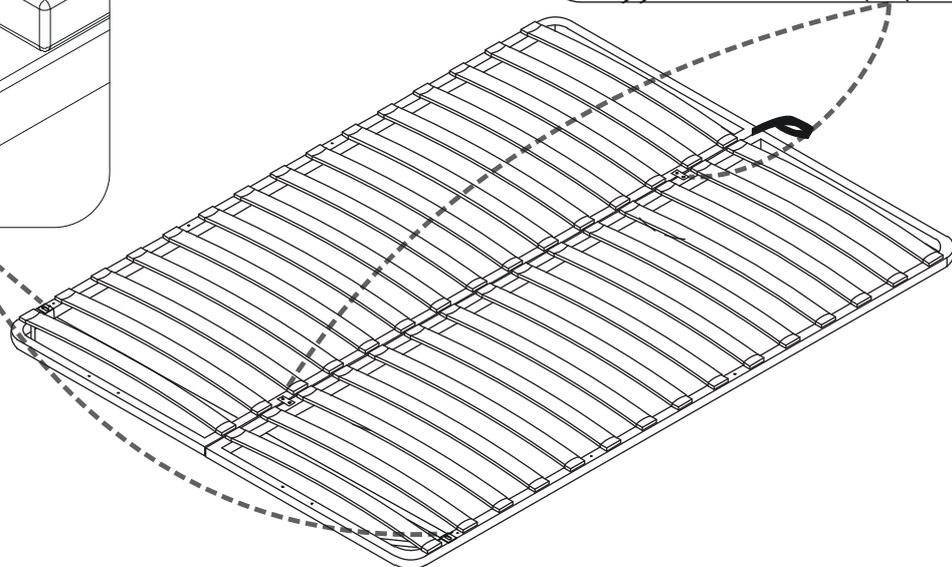

**Ax6** M8x25mm



**Fx6** M8mm




**Gx6** M8x17mm




**Kx2** M8mm



**Mx2**




### 10b For Super King Size

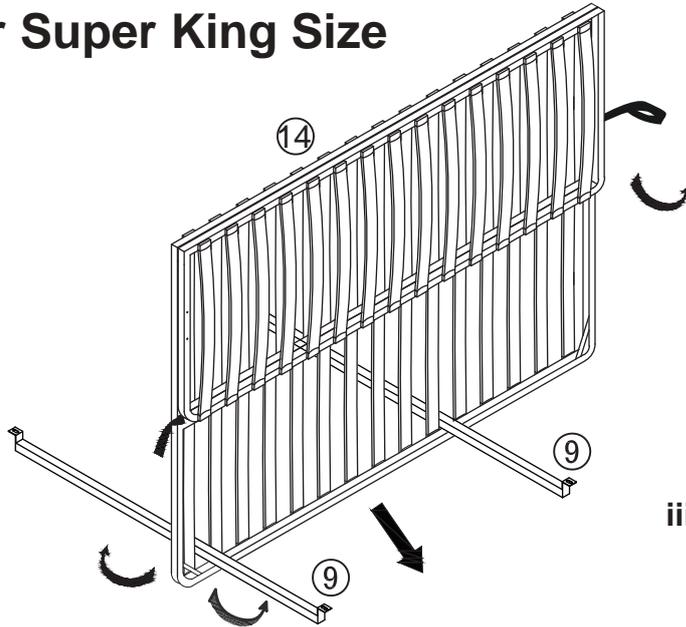


i) Fitting position for cross bars (9) is clearly labeled. Pass one bar through metal slat frame (14) between first & second slat. And pass another bar through between seventh & eighth slat. Carefully open the frame.


ii) Ease the plates on top of the cross bar (9) onto top of the slat frame sides and through the holes in the plates, loosely fit two sets of bolts (A), spring washers (F) & flat washers (G) into the threaded inserts. Do not tighten yet.

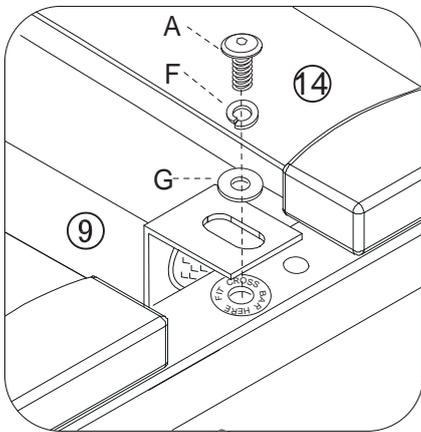

iii) Using four sets of bolts (A), spring washer (F) & flat washers (G) fit the metal connection plates (M) into the threaded inserts on top of the frame. Using Allen key (K), tighten all six bolts 100%.

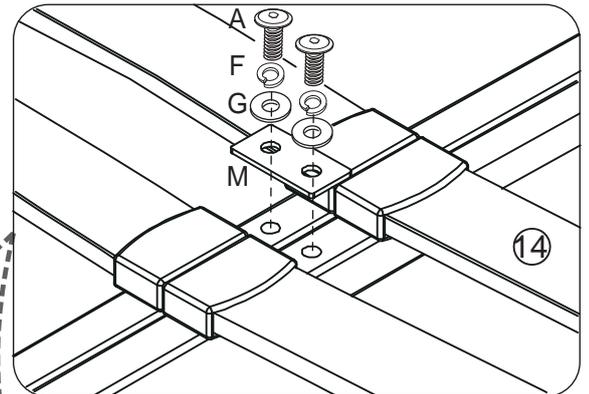

x2

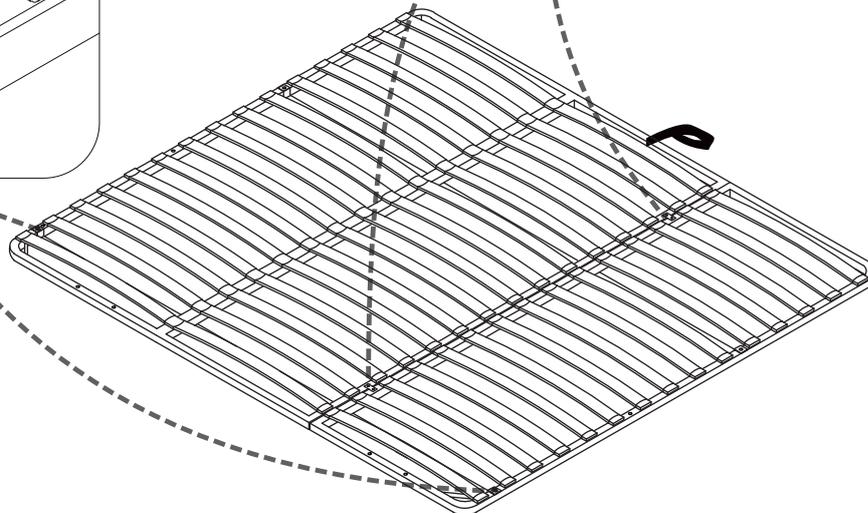

**Ax6** M8x25mm



**Fx6** M8mm




**Gx6** M8x17mm




**Kx2** M8mm




**Mx2**




11

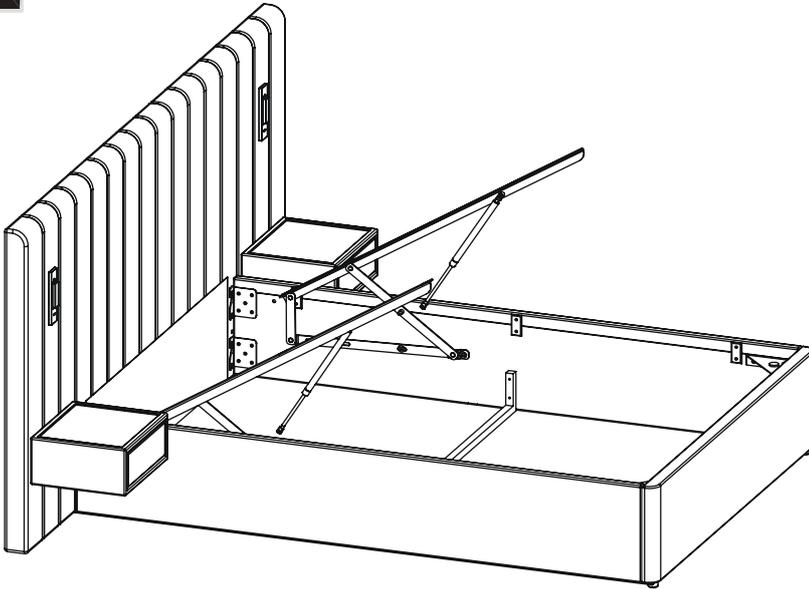


i) Un-tie the mechanisms, and take out the transit blocks.

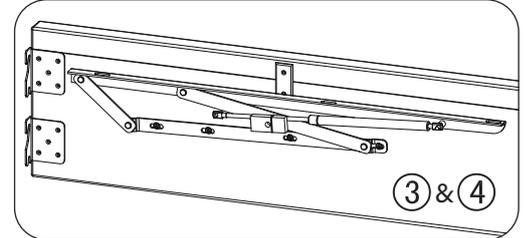

ii) Hold the bars upward

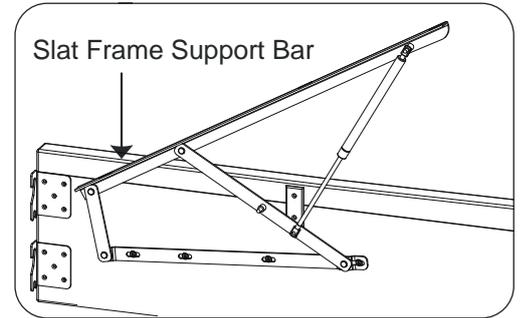


12

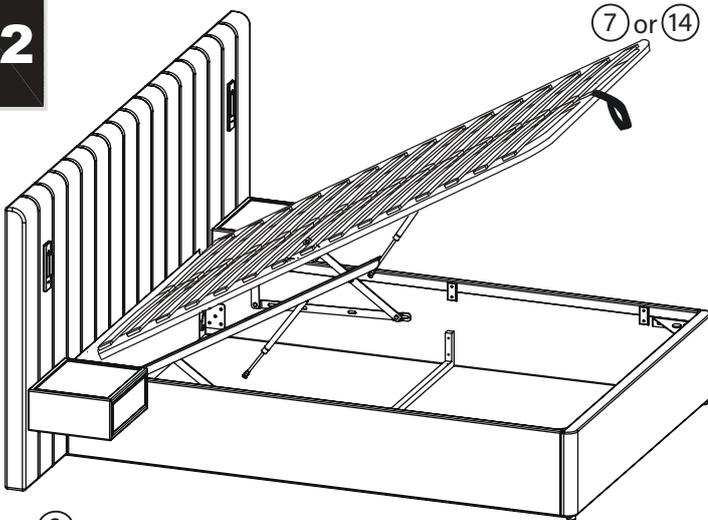


i) With help from your assistant, lift metal slat frame (7 or 14) onto slat frame support bars aligning first set of holes on slat frame with first set of holes in support bars (nearest headboard).

ii) Using three bolt sets on each side (B), (F), (G) & (H), fix slat frame to the support bars but do not tighten fully.

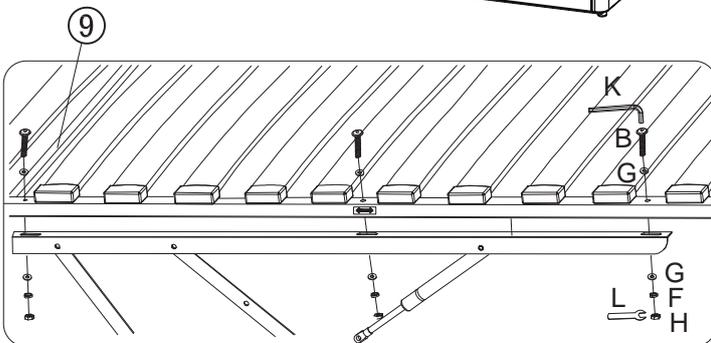

Double & King

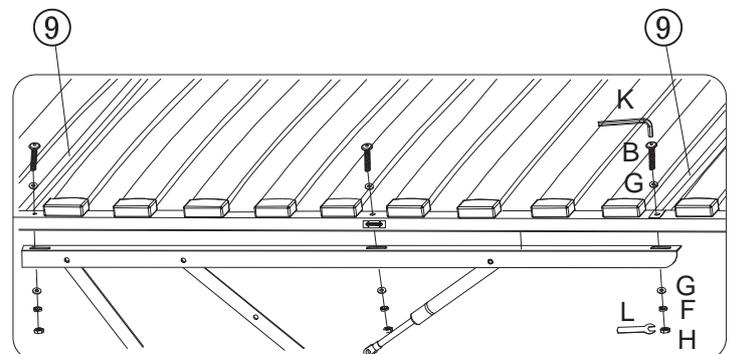

Super King

**Bx6** M8x50mm



**Fx6** M8mm



**Gx12** M8x17mm



**Hx6** M8mm




**Kx2** M8mm




**Lx1** M8mm



**13**

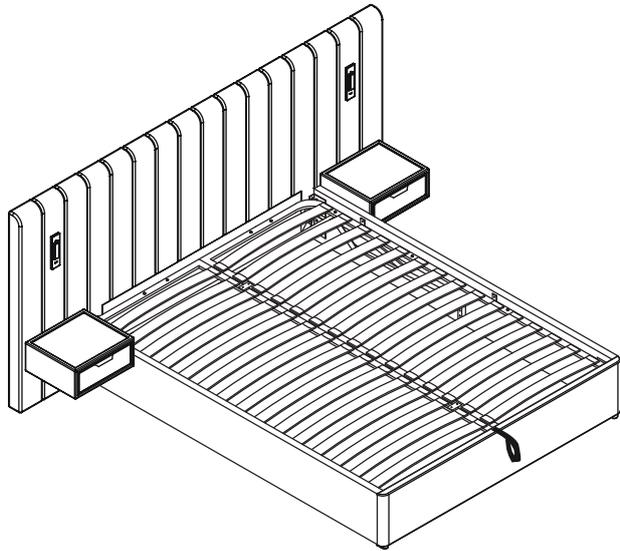


Hold frame securely then tighten all six bolt sets 100% using spanner (L) & Allen key (K).

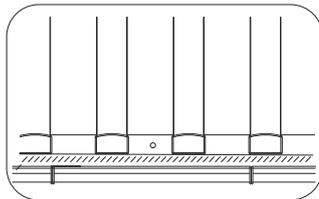

8mm

Carefully lay frame down making sure there is an even gap all round as in the sketch.

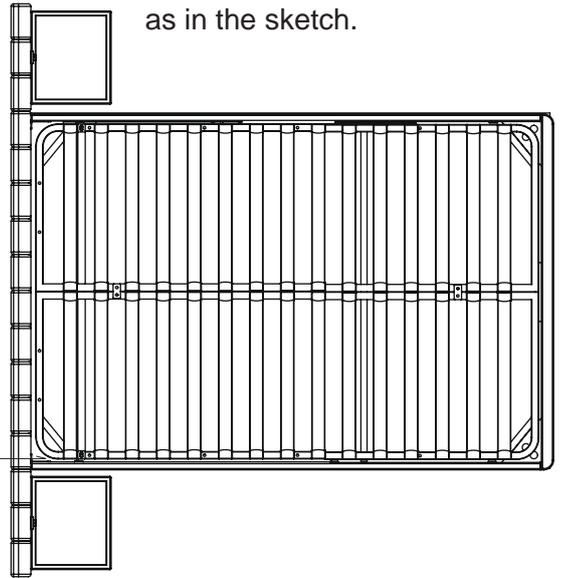


**Kx2** M8mm

**Lx1** M8mm



**14**



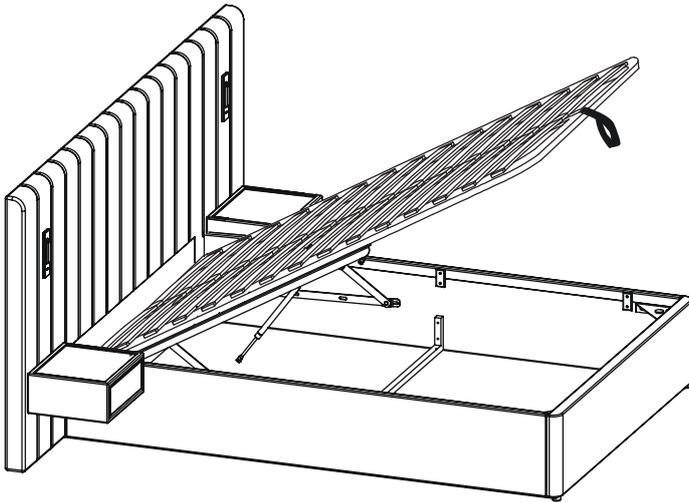


During this next step, the assistant should hold up the slat frame. On the hinge mounted on each side rail, slide gas-lift piston stems (X) onto the axles (Y) then fit the flange lock-nuts (J).

**Jx2** M8mm





**Lx1** M8mm

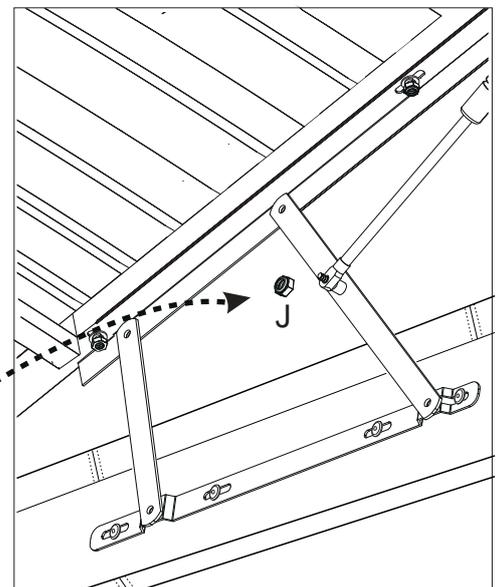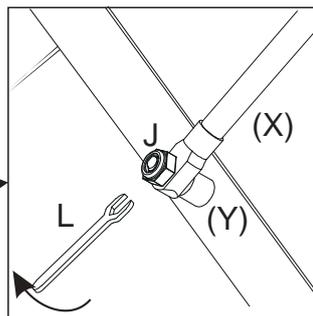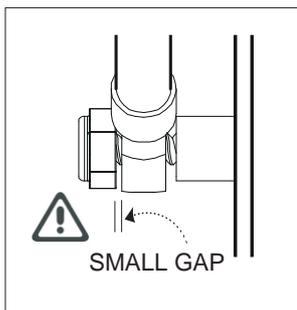


15

Push x2 Mattress Stoppers (10) into metal frame, they should go all the way through the upper & lower metal sections.

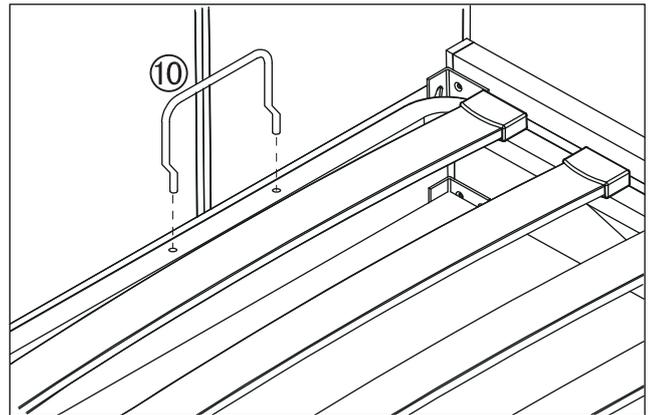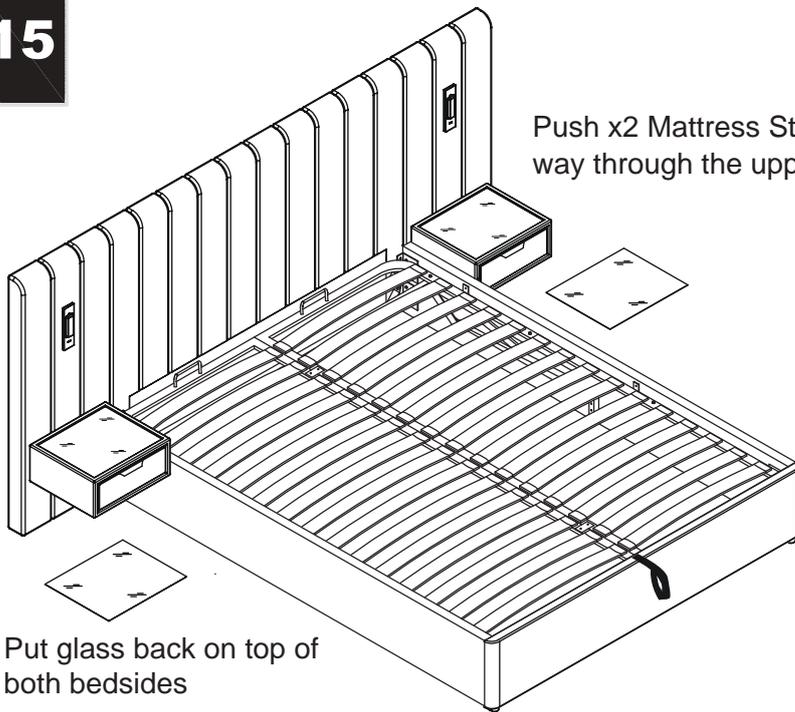

Put glass back on top of both bedsides

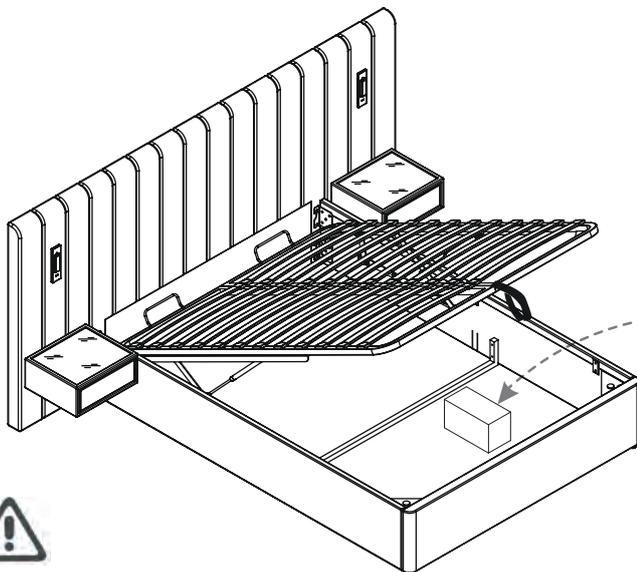

Note: Be very careful what you store under the bed - the top of an item, like a suitcase or a box, must not touch the slats or they may be damaged. Maximum storage height is 280mm.



- 1 Before lifting the slat frame, place your mattress on top of the slats as without a mattress in place the speed of movement is quick and may cause injury so be careful.
- 2 Carefully lower the frame with the hand-strap ensuring the frame sides are aligned with the side rails; there should be an even gap on each side, If not aligned, check bed is still square and if it is, but gaps are still not even, re-align the slat frame,.
- 3 Depending on the weight of the mattress, the rising speed will vary so be careful until you get used to the speed. Always use the strap to lift or lower the frame - keep fingers well away from the moving parts.
- 4 To help prevent any accidental entrapment, please make certain the ottoman is lifted right to the top of it's travel before putting in or retrieving an item from the storage area.
- 5 When finished, slowly lower the frame back to the lower rest position using the hand strap only.

**When fully assembled and with the mattress in position, please raise & lower the ottoman 4/5 times to ensure the gas pistons are fully lubricated.**

### Technical Specifications

#### Overall Dimensions (LWH mm)

Double: 2060 x 2335 x 1105  
 King: 2160 x 2485 x 1105  
 Super King: 2160 x 2785 x 1105

#### Internal Dimensions (LWH mm)

Double: 1930 x 1380 x 300  
 King: 2030 x 1530 x 300  
 Super King: 2030 x 1830 x 300

#### Bedside Dimensions, (WDH mm)

380 x 325 x 155

#### Distance between slats (mm)

70

#### Ottoman Piston Rating


Double & King: 900 N  
 Super King: 1200 N

#### Slat Dimensions (LWH mm)

Double: 670 x 53 x 9  
 King: 745 x 53 x 9  
 Super King: 615 x 53 x 9

#### MAX MATTRESS WEIGHT

DOUBLE: 50 KG  
 KING: 55 KG  
 SUPER KING: 60KG

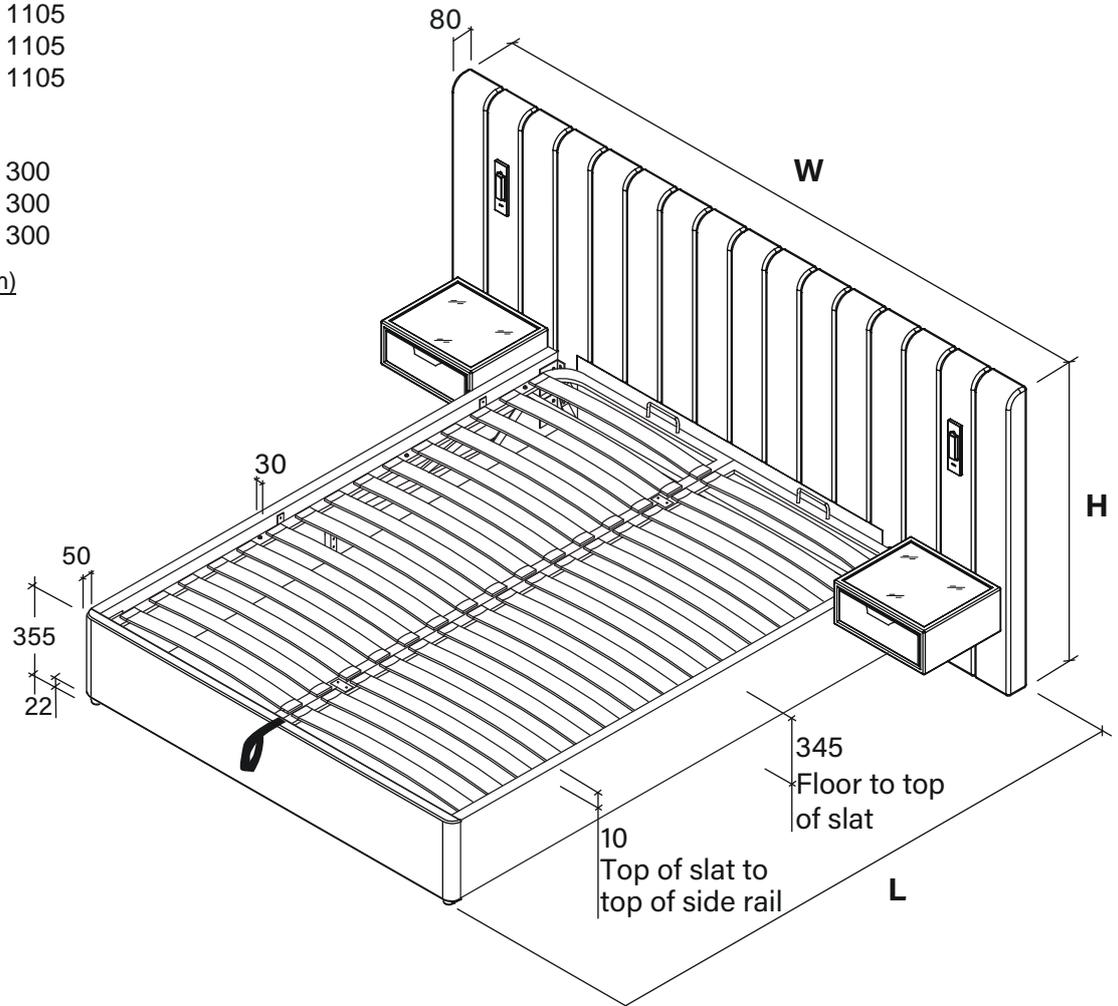

### LUMINAIRES

We like to keep our customer's safe so these Luminaires are prepared with class II and class III electrical circuits. There is no mains electricity in the bed and overall power rating for lights & USBs is 12V 2A and 5V 2A respectively, both DC - (direct current). The USBs have integrated safety circuits that prevent overloading and consequentially, overheating. The 220/240V power adapter should be plugged into a properly earthed wall socket. This adapter has an input rating of 100/240V 50/60 Hz - 1.5A AC - output is 12V 2A DC - for safety please only use the adapter that was supplied with the bed. The testing of the system has been carried out by an accredited laboratory and meets or exceeds the standards below. The whole system is fully approved for use in Europe & UK and to carry CE marking if required.

CE / LVD / UKCA BS EN IEC 60598-2-1:2021 BS EN 60598-1:2015+A1:2018 BS EN 62493:2015  
 IEC 60598-2-1:1979 AMD1:1987 IEC 60598-1:2014 AMD1:2017 IEC 62493:2015 EN 60598-2-1:1989  
 EN 60598-1:2015+A1:2018 EN 62493:2015 POWER SUPPLY BS EN 55032:2015  
 BS EN 55035:2017 BS EN IEC 61000-3-2:2019 BS EN 61000-3-3:2013+A1:2019

# NEXT

## MAYFAIR OTTOMAN HOTEL BED

311083 / 326641 / 323875 / 7866L5

Assembly instructions



### ENERGY

Next

526938



**2** kWh/1000h




### ENERGIA

енергия · ενεργεια

Next

526938

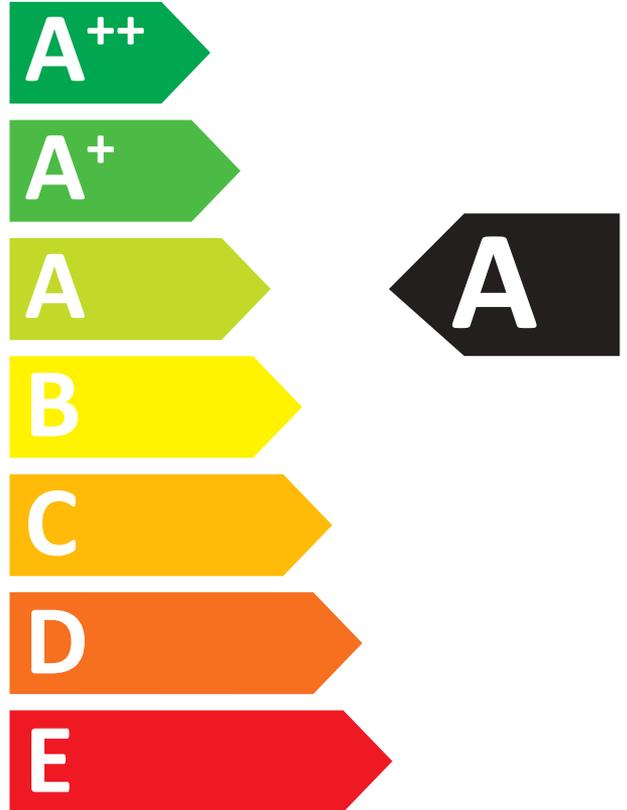

**2** kWh/1000h