

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour

No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem.

We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly - as it may get damaged.

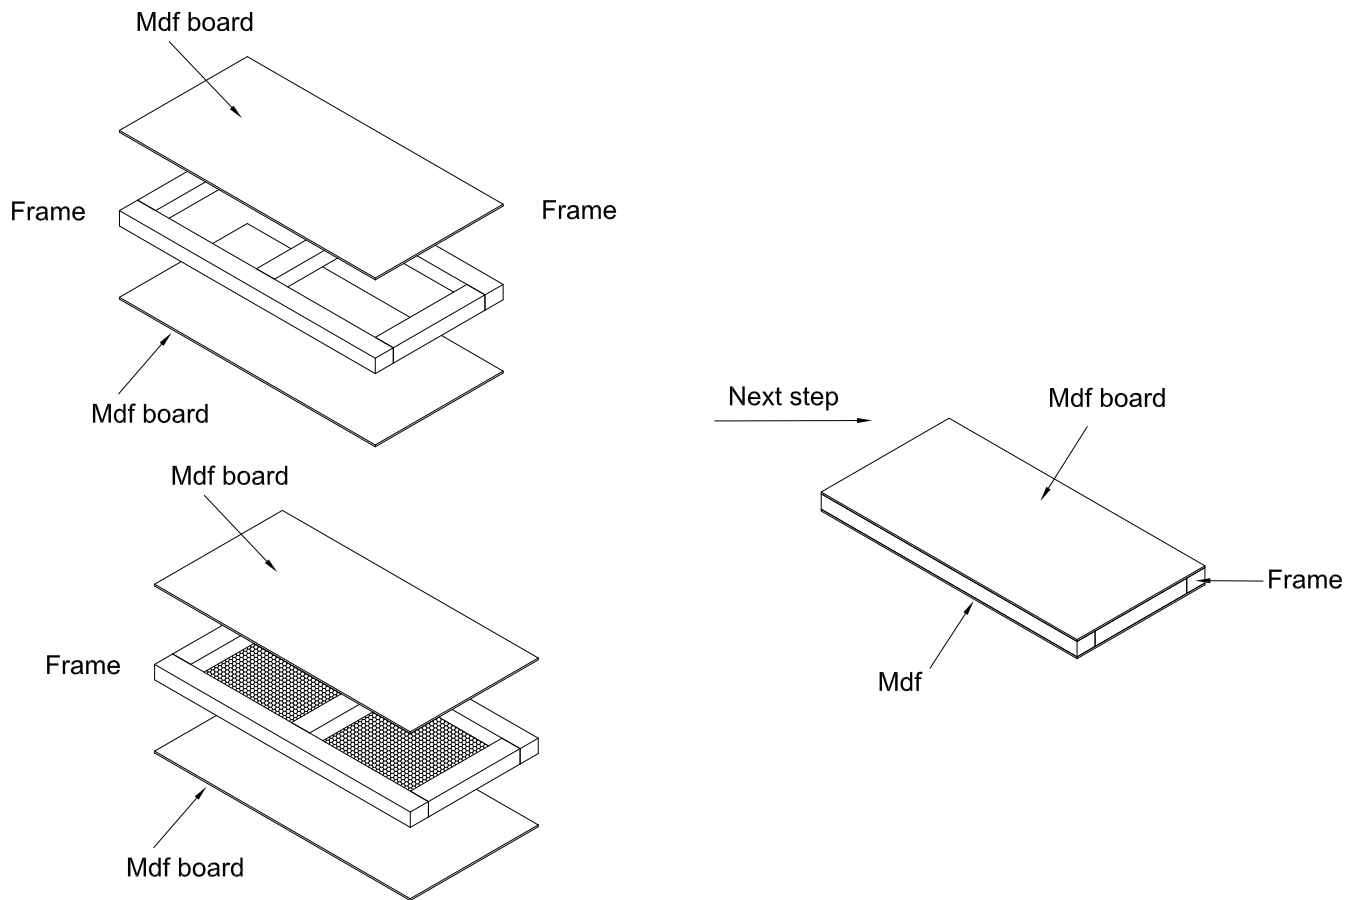
NEXT
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.




Care instructions for hollow board & Honeycomb board during you assembling the product

The structures of hollow board & honeycomb board are as below:



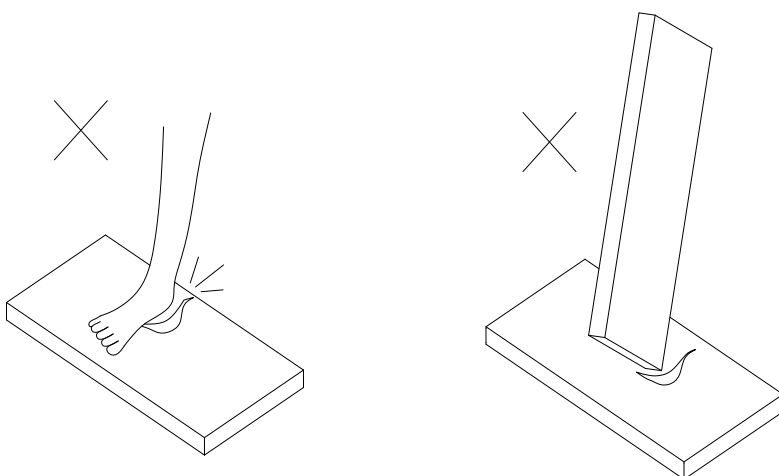The centre of Hollow board & Honeycomb board is hollow. To avoid damaging the hollow board/honeycomb board, we suggest you not step on the hollow board/honeycomb board or not put other part on the board on the end when you assemble the product.




NEXT

MALVERN LOFT BED AB7058D/AB7058K Assembly instructions

Actual product size

DOUBLE:H109xW143xD203.5cm

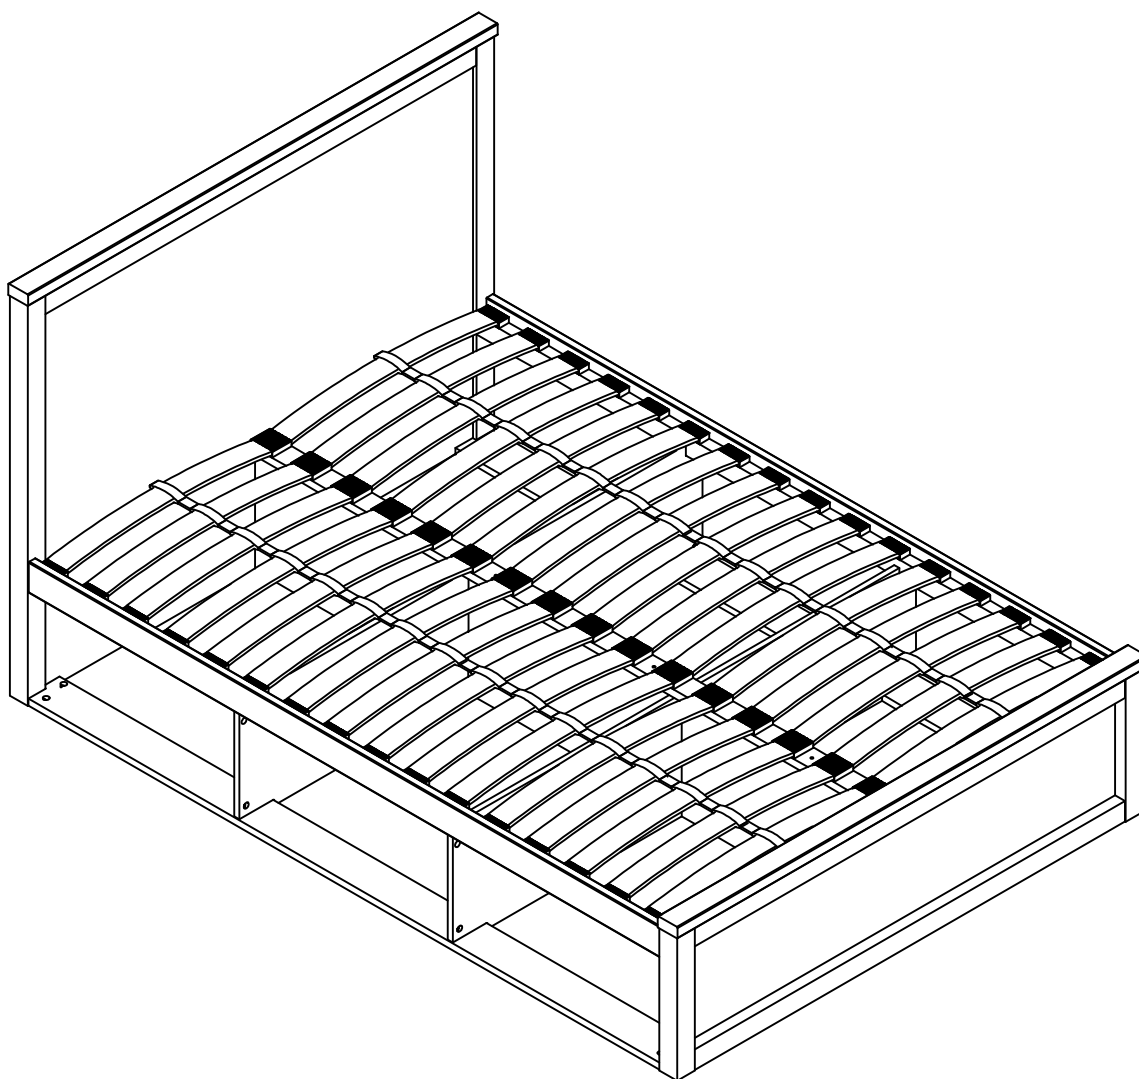KING:H109xW158xD213.5cm



Need Help ?

With: Assembly instruction

Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

BEFORE YOU START

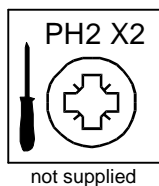
Number of people required to assemble

Two people are required to assemble this item



Time to assemble : 1 Hour

Tools required



Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

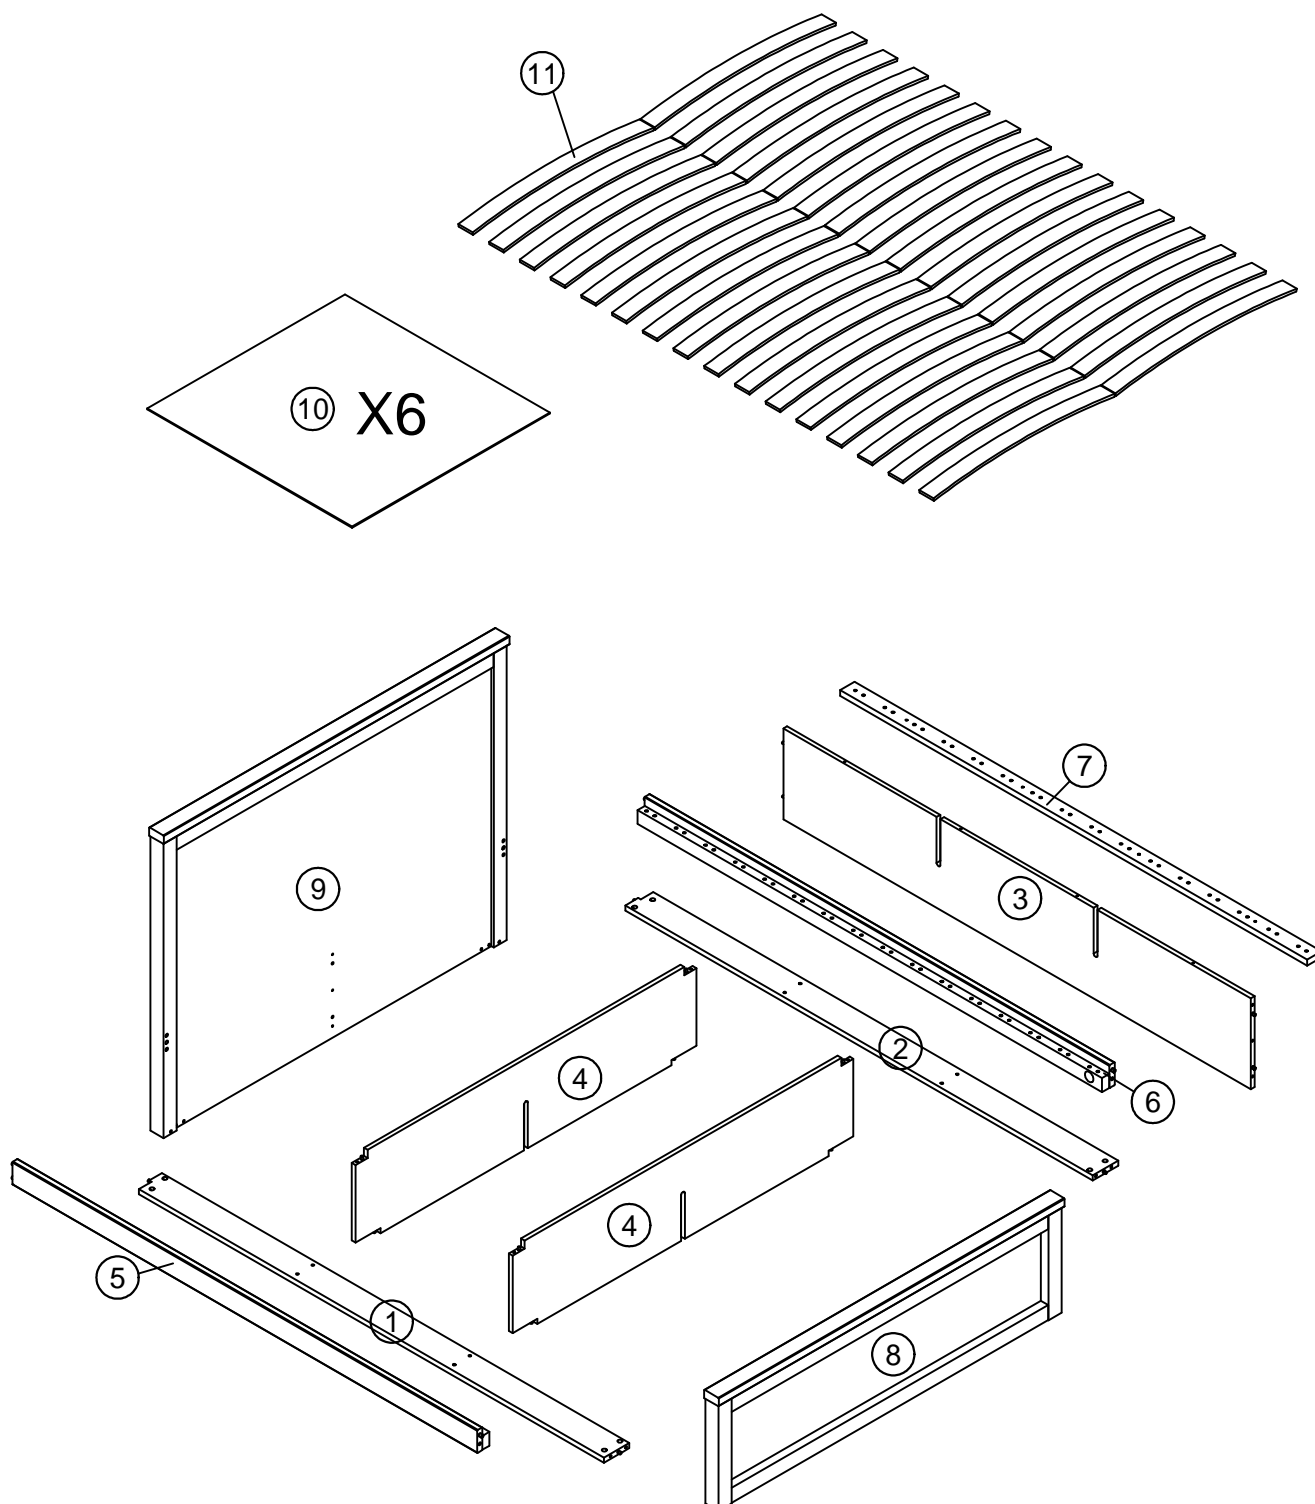
Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

NEXT MALVERN LOFT BED

AB7058D/AB7058K
Assembly instructions

GETTING TO KNOW YOUR PRODUCT

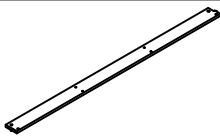
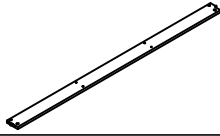
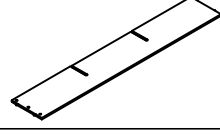
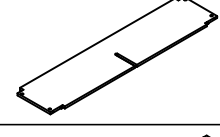
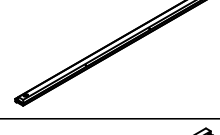
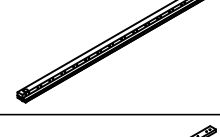
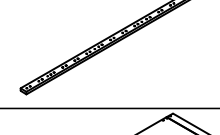



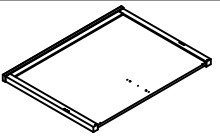
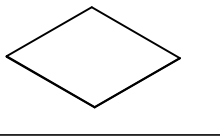
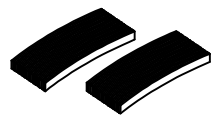
NEXT MALVERN LOFT BED-KING

AB7058D/AB7058K

Assembly instructions

Components supplied. Please use this guide if you require replacement parts.









Ref	Dimensions	Visual	Qty	Ctn
1	10.5x203cm		1	1
2	10.5x203cm		1	1
3	32.5x203cm		1	1
4	32.5x156cm		2	3
5	8x202cm		1	1
6	8x202cm		1	1
7	6x203cm		1	1
8	41x158cm		1	3




Ref	Dimensions	Visual	Qty	Ctn
9	109x158cm		1	2
10	66.5x66.5cm		6	2
11	6x75.5cm		32	1

NEXT MALVERN LOFT BED-DOUBLE

AB7058D/AB7058K
Assembly instructions

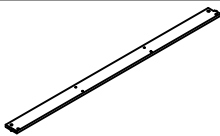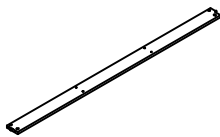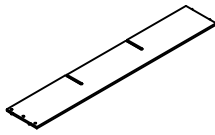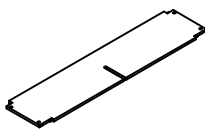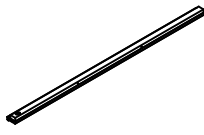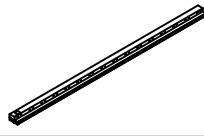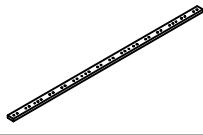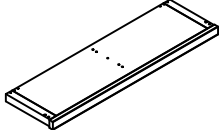Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	10.5x193cm		1	1
2	10.5x193cm		1	1
3	32.5x193cm		1	1
4	32.5x141cm		2	3
5	8x192cm		1	1
6	8x192cm		1	1
7	6x193cm		1	1
8	41x143cm		1	3

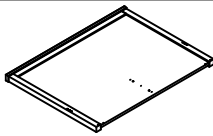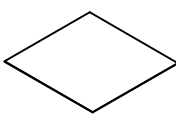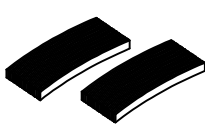Ref	Dimensions	Visual	Qty	Ctn
9	109x143cm		1	2
10	59x63cm		6	2
11	6x68cm		32	1


NEXT MALVERN LOFT BED

AB7058D/AB7058K

Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	19	2
B12	Ø7.5 x 33mm	19	2
B24	Ø6 x 22mm	2	N/A
Y8	Ø6 x 50mm	7	1
D6	Ø8 x 30mm	N/A	2
V97	Ø8 x 80mm	2	1
D9	Ø10 x 40mm	N/A	1
B25	Ø35 x 17mm	2	N/A

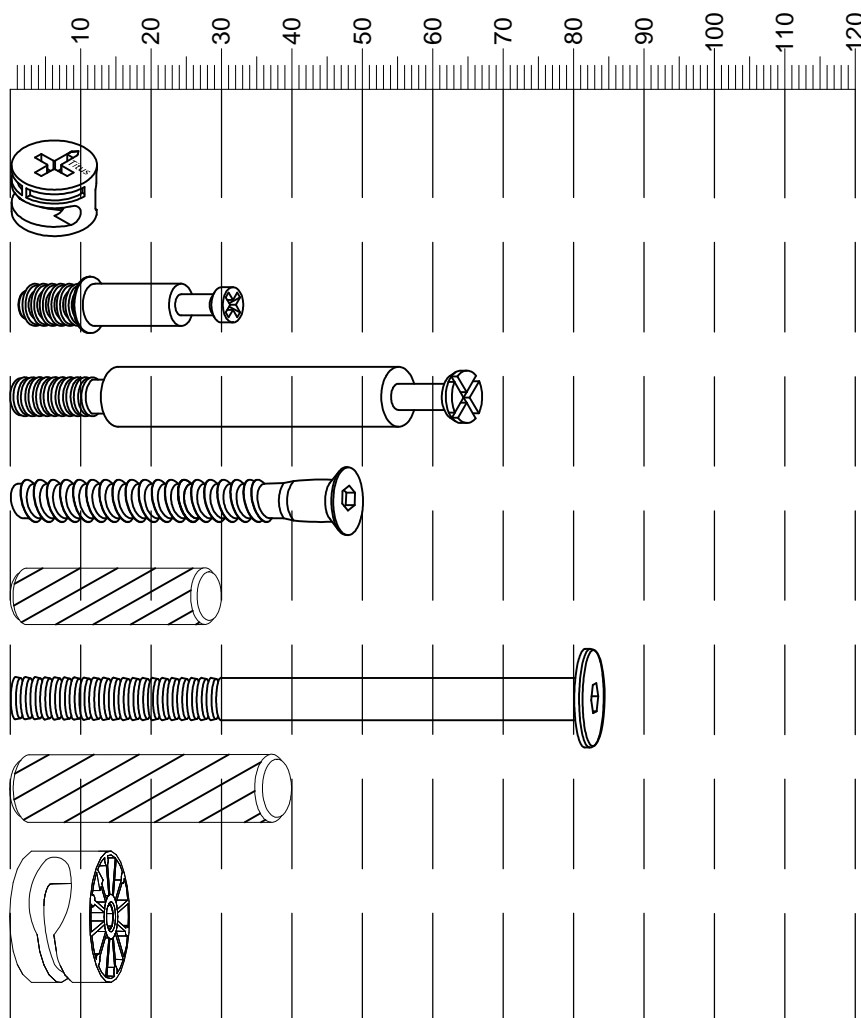

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T41	N/A	2	N/A	
T34	N/A	16	N/A	
T33	N/A	32	N/A	
T6	N/A	1	N/A	



Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
T7	N/A	1	N/A	
T1	N/A	1	N/A	
O1	N/A	16	2	


NEXT MALVERN LOFT BED

AB7058D/AB7058K
Assembly instructions

1

B12	Ø7.5 x 33mm	8		 PH2 not supplied
-----	-------------	---	---	--


2

B25	Ø35 x 17mm	2		
-----	------------	---	---	--

NEXT MALVERN LOFT BED

AB7058D/AB7058K
Assembly instructions

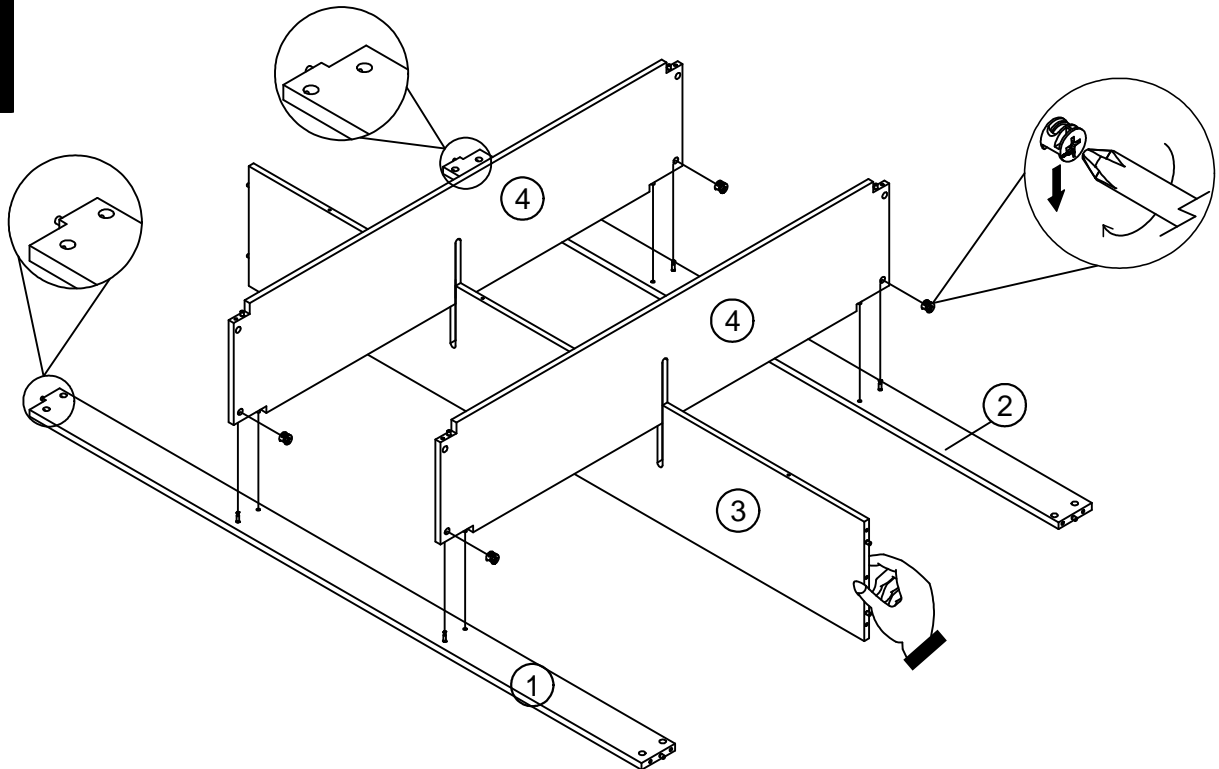3




B3 Ø15x 12mm

4



PH2
not supplied

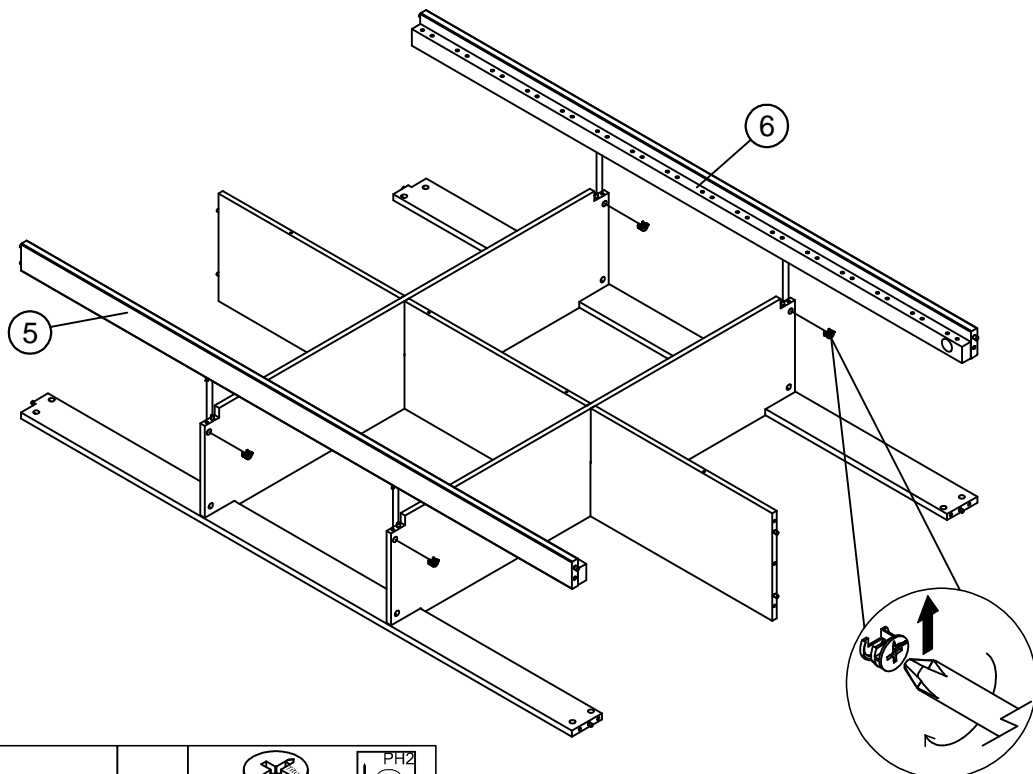4



B3 Ø15x 12mm

4






PH2
not supplied

NEXT

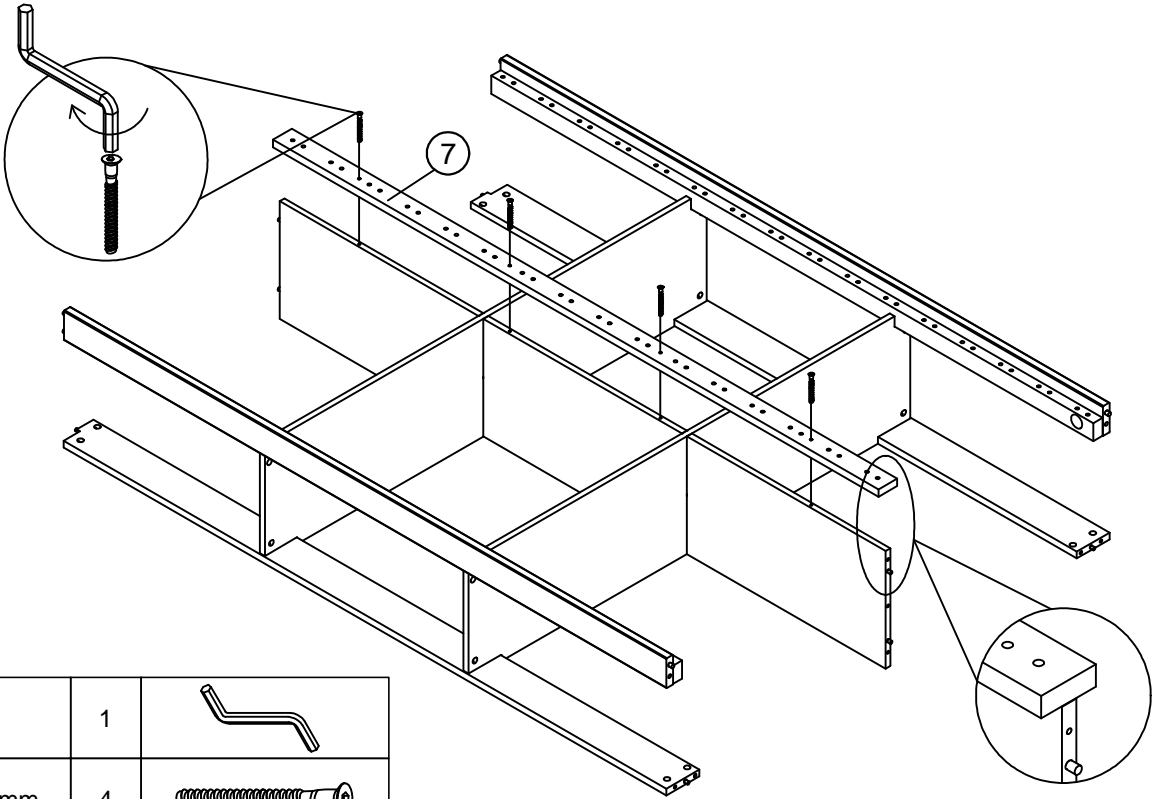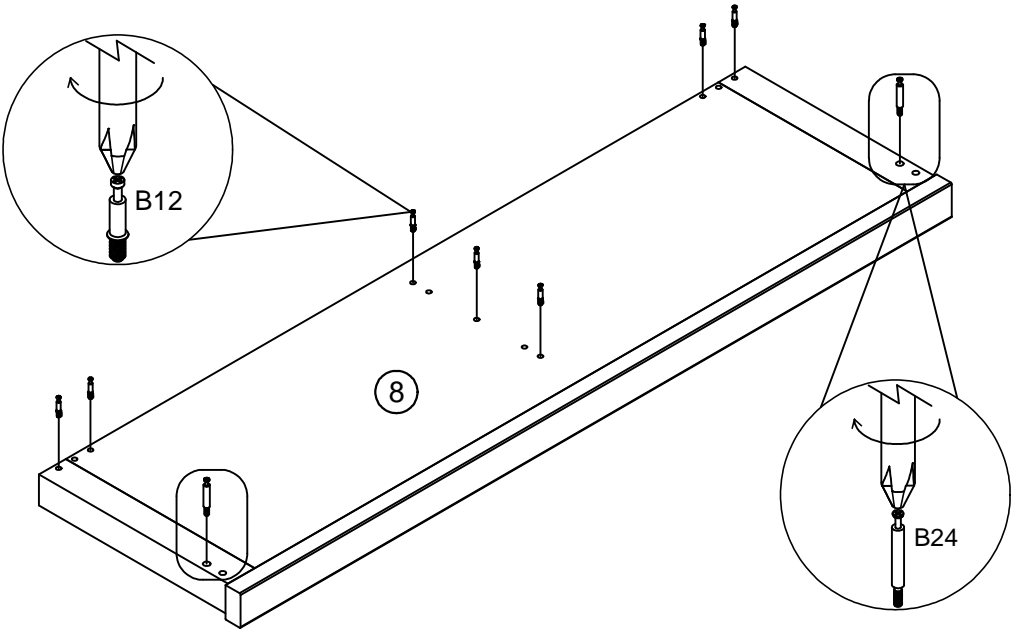
MALVERN LOFT BED
AB7058D/AB7058K
Assembly instructions





5



T1	N/A	1	
Y8	Ø6 x 50mm	4	

6



B12	Ø7.5 x 33mm	7	  not supplied
B24	Ø8.5 x 63mm	2	  not supplied

7

Diagram illustrating the assembly of the bottom rail (B3) and the attachment of the bottom panel (T7) to the frame.

The diagram shows the frame structure with the bottom rail (B3) being installed. The rail is secured using screws (Ø15x 12mm) and a PH2 screwdriver. The bottom panel (T7) is then attached to the rail using a clip (N/A).

Callouts provide detailed views of the rail attachment and the panel being secured.

T7	N/A	1	
B3	Ø15x 12mm	7	 not supplied

1



Ø15x 12mm



7



PH2
not supplied


8

The diagram illustrates the assembly of a square frame. The frame consists of four rectangular sections joined at the corners. A circular inset provides a detailed view of the corner joint, showing a screw being driven into a pre-drilled hole in the frame's profile. The screw is labeled 'B12' and has a length of 'Ø7.5 x 33mm'. The inset also shows a Phillips screwdriver (PH2) being used to drive the screw. The number '9' is circled in the center of the frame, indicating the next step in the assembly process. The text 'not supplied' is written below the screw icon, indicating that the screw is not included in the package.

B12	Ø7.5 x 33mm	4	 not supplied	
-----	-------------	---	---	---

Ø7.5 x 33mm


4









NEXT

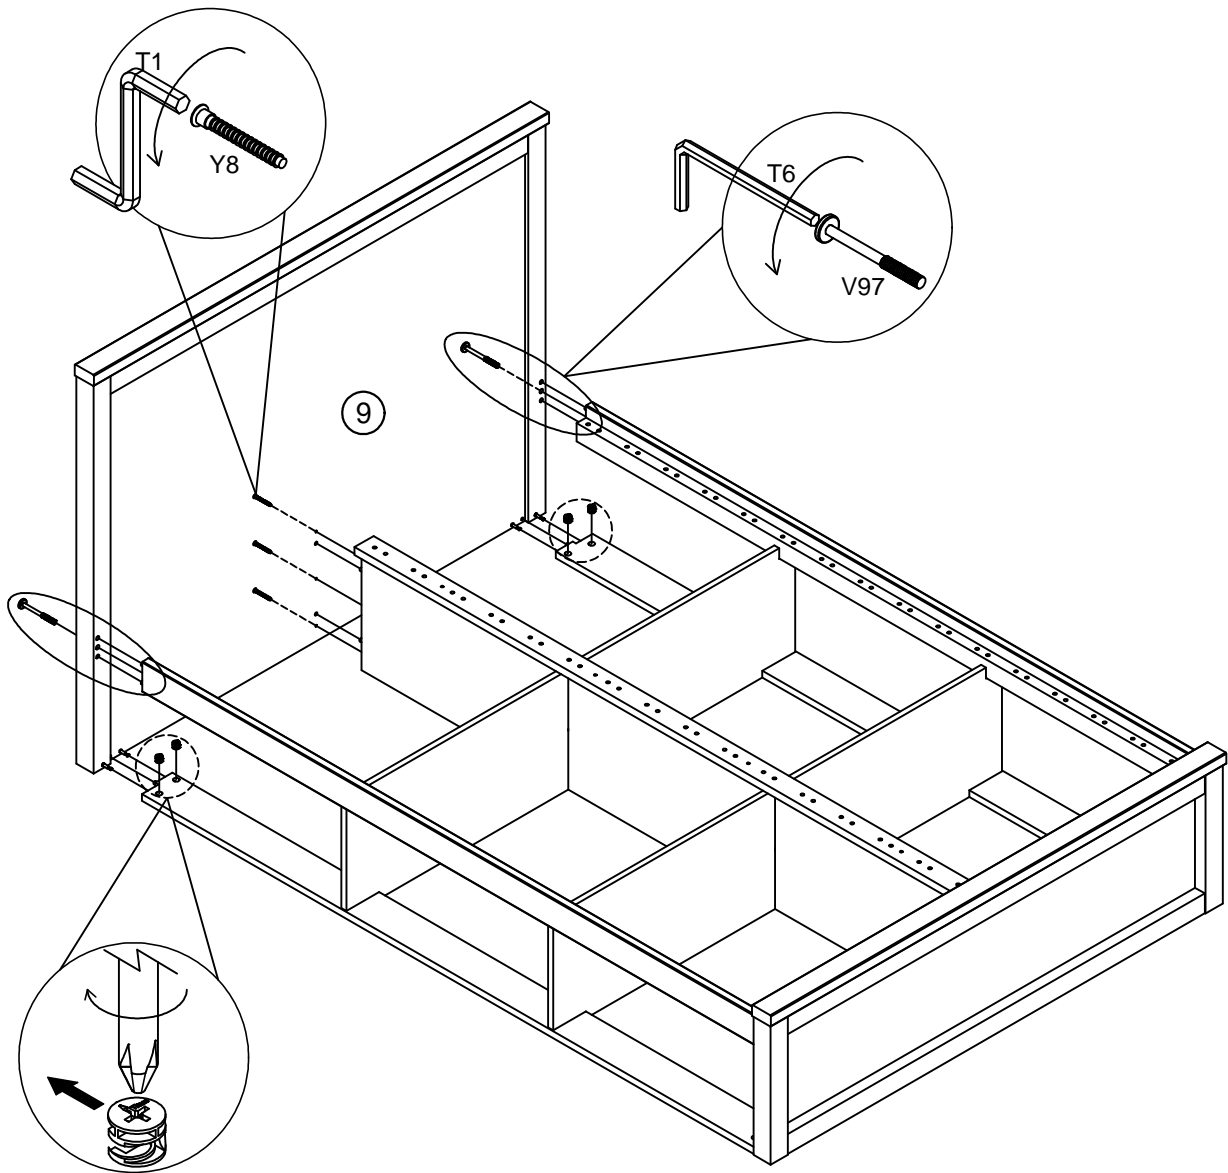
MALVERN LOFT BED
AB7058D/AB7058K
Assembly instructions


9




T6	N/A	1					
T1	N/A	1		V97	Ø8 x 80mm	2	
B3	Ø15x 12mm	4	  not supplied	Y8	Ø6 x 50mm	3	

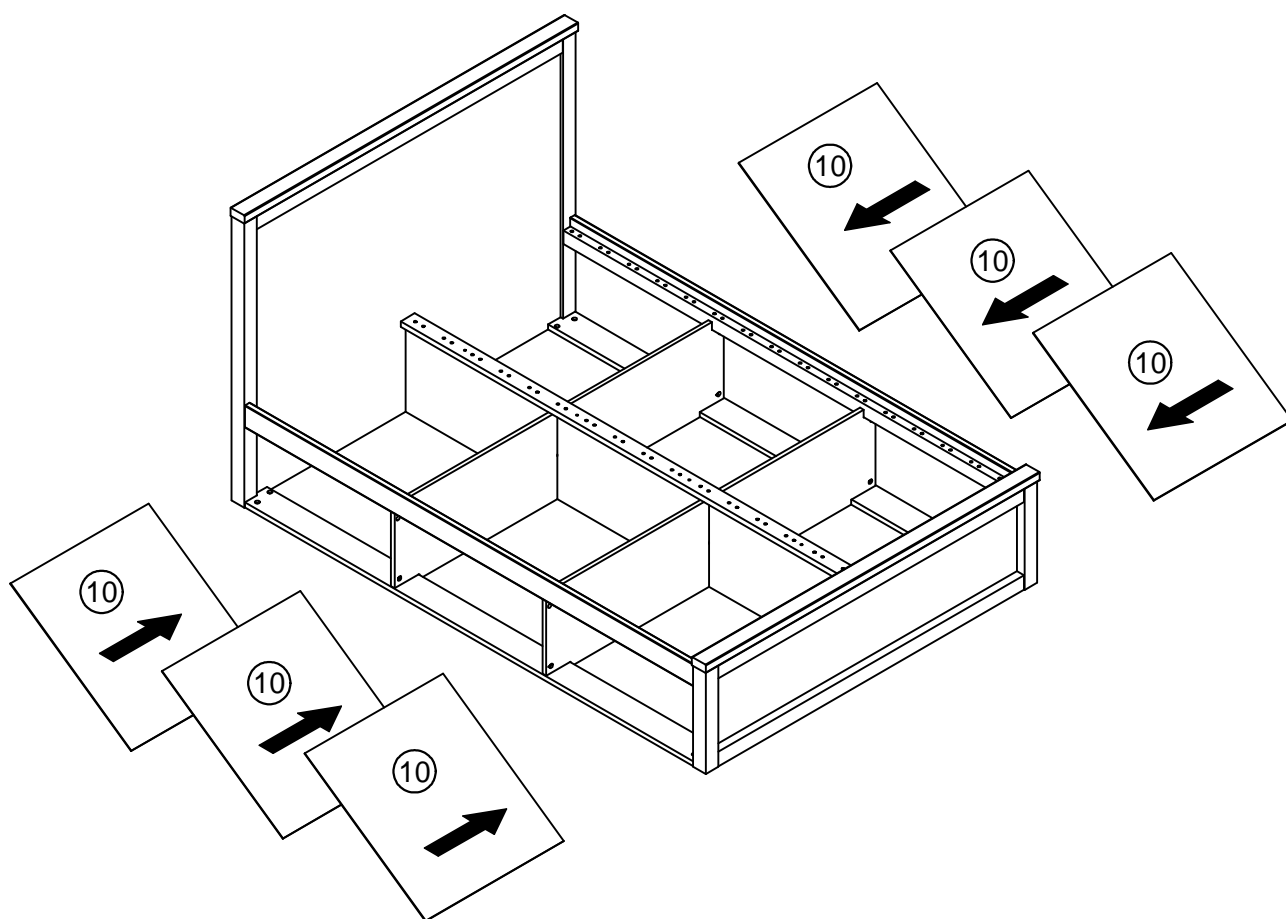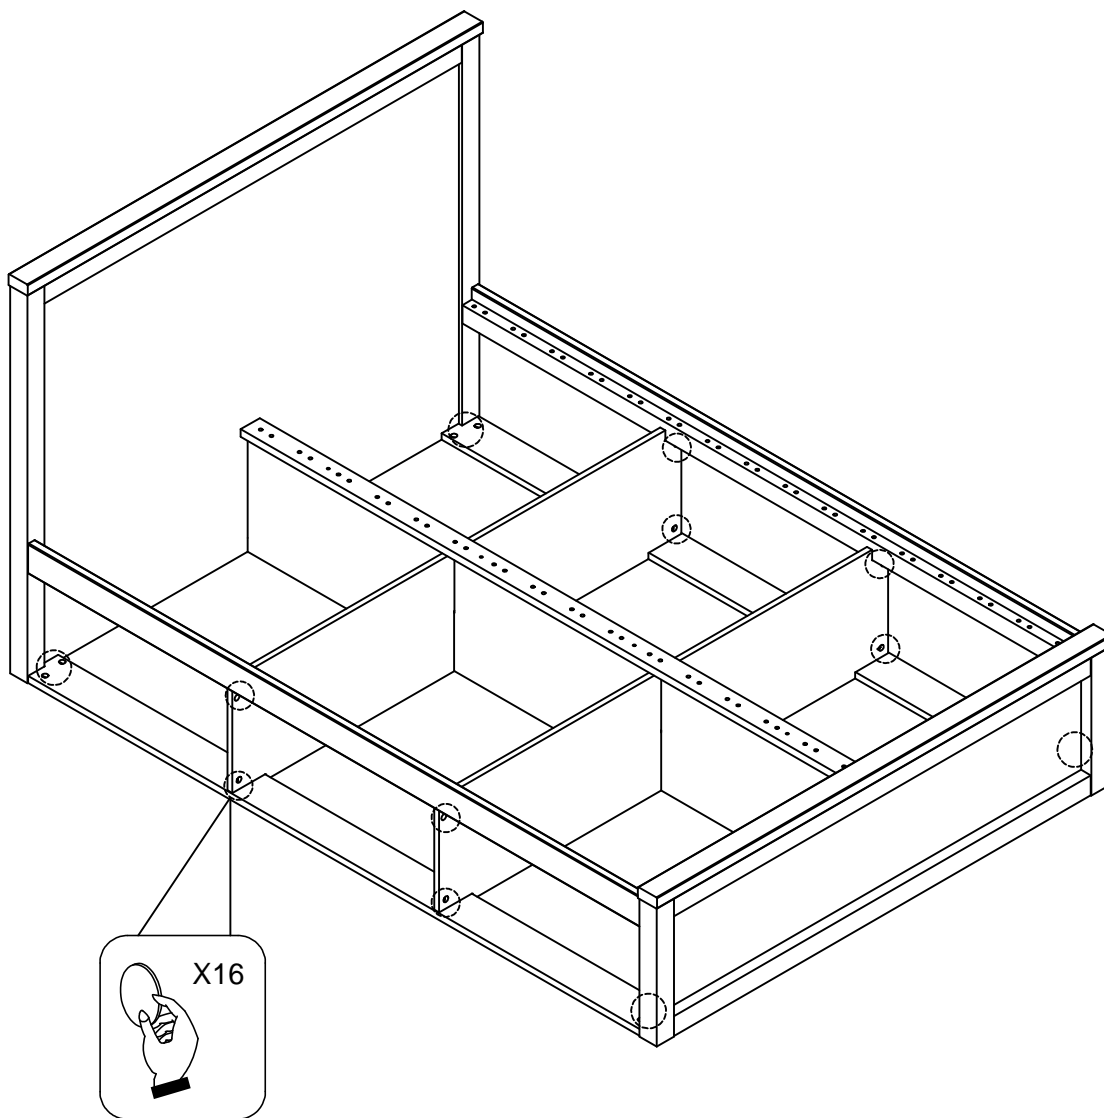10






Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.


O1	N/A	16	
----	-----	----	---

NEXT

MALVERN LOFT BED
AB7058D/AB7058K
Assembly instructions

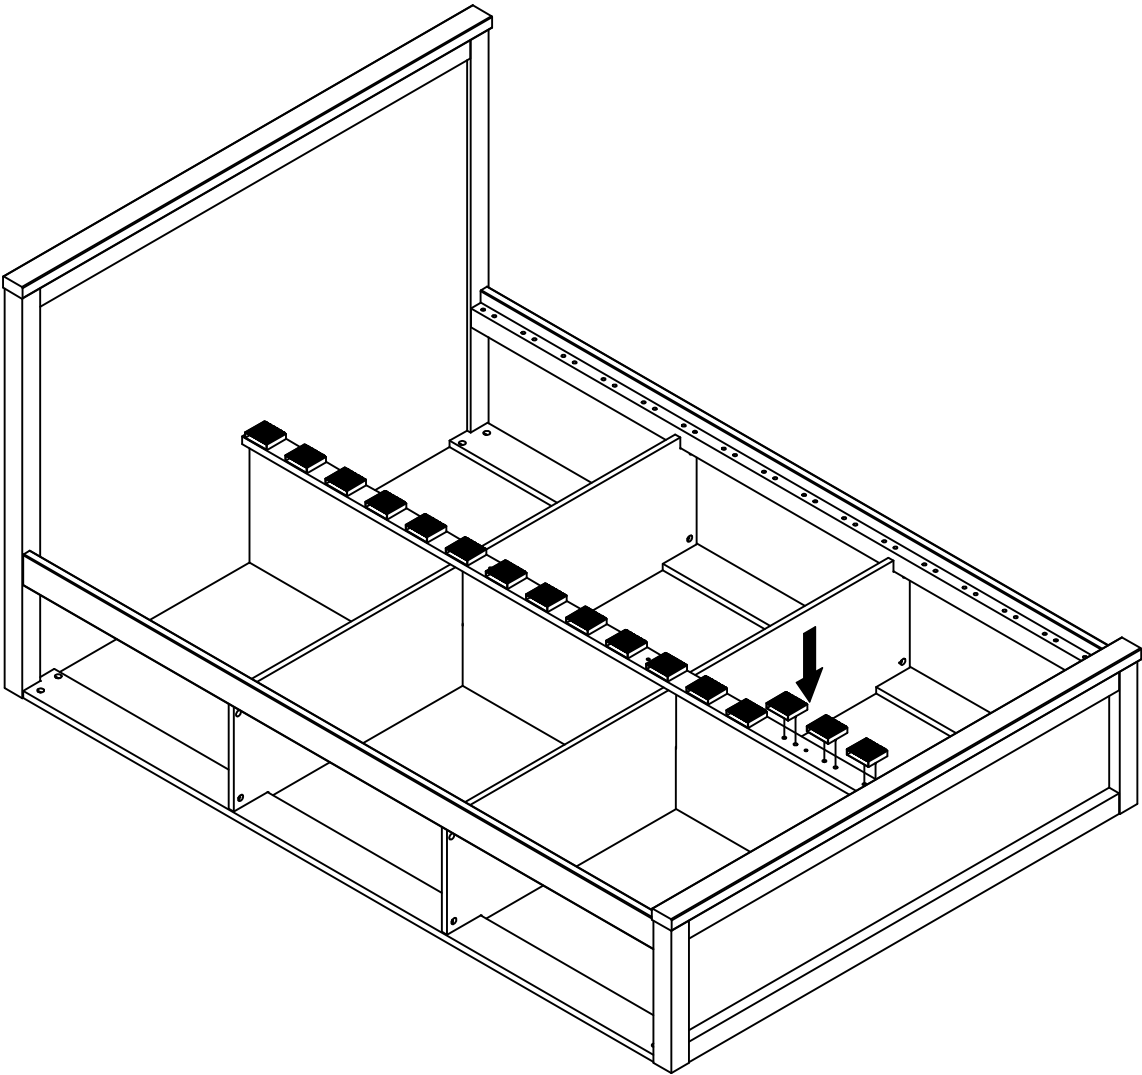12




T34	N/A	16	
-----	-----	----	---

The diagram illustrates a two-step assembly process for a curved structure. In the first step, a base layer labeled **X16** is shown with multiple parallel strips being attached to its surface. Dashed arrows indicate the direction of attachment. An inset provides a close-up view of a strip being joined to the base. A large black arrow points to the second step, showing the completed structure labeled **X2**, which is a curved surface composed of many parallel strips joined together.

The diagram shows two parallel curved structures, each composed of a grid of strips. A series of small components, represented by black squares, are shown being placed along the outer edge of the structure. A large black arrow points to the right, indicating the direction of assembly. A detailed inset shows a close-up of a component being placed onto a strip, with a small black arrow pointing to the right.

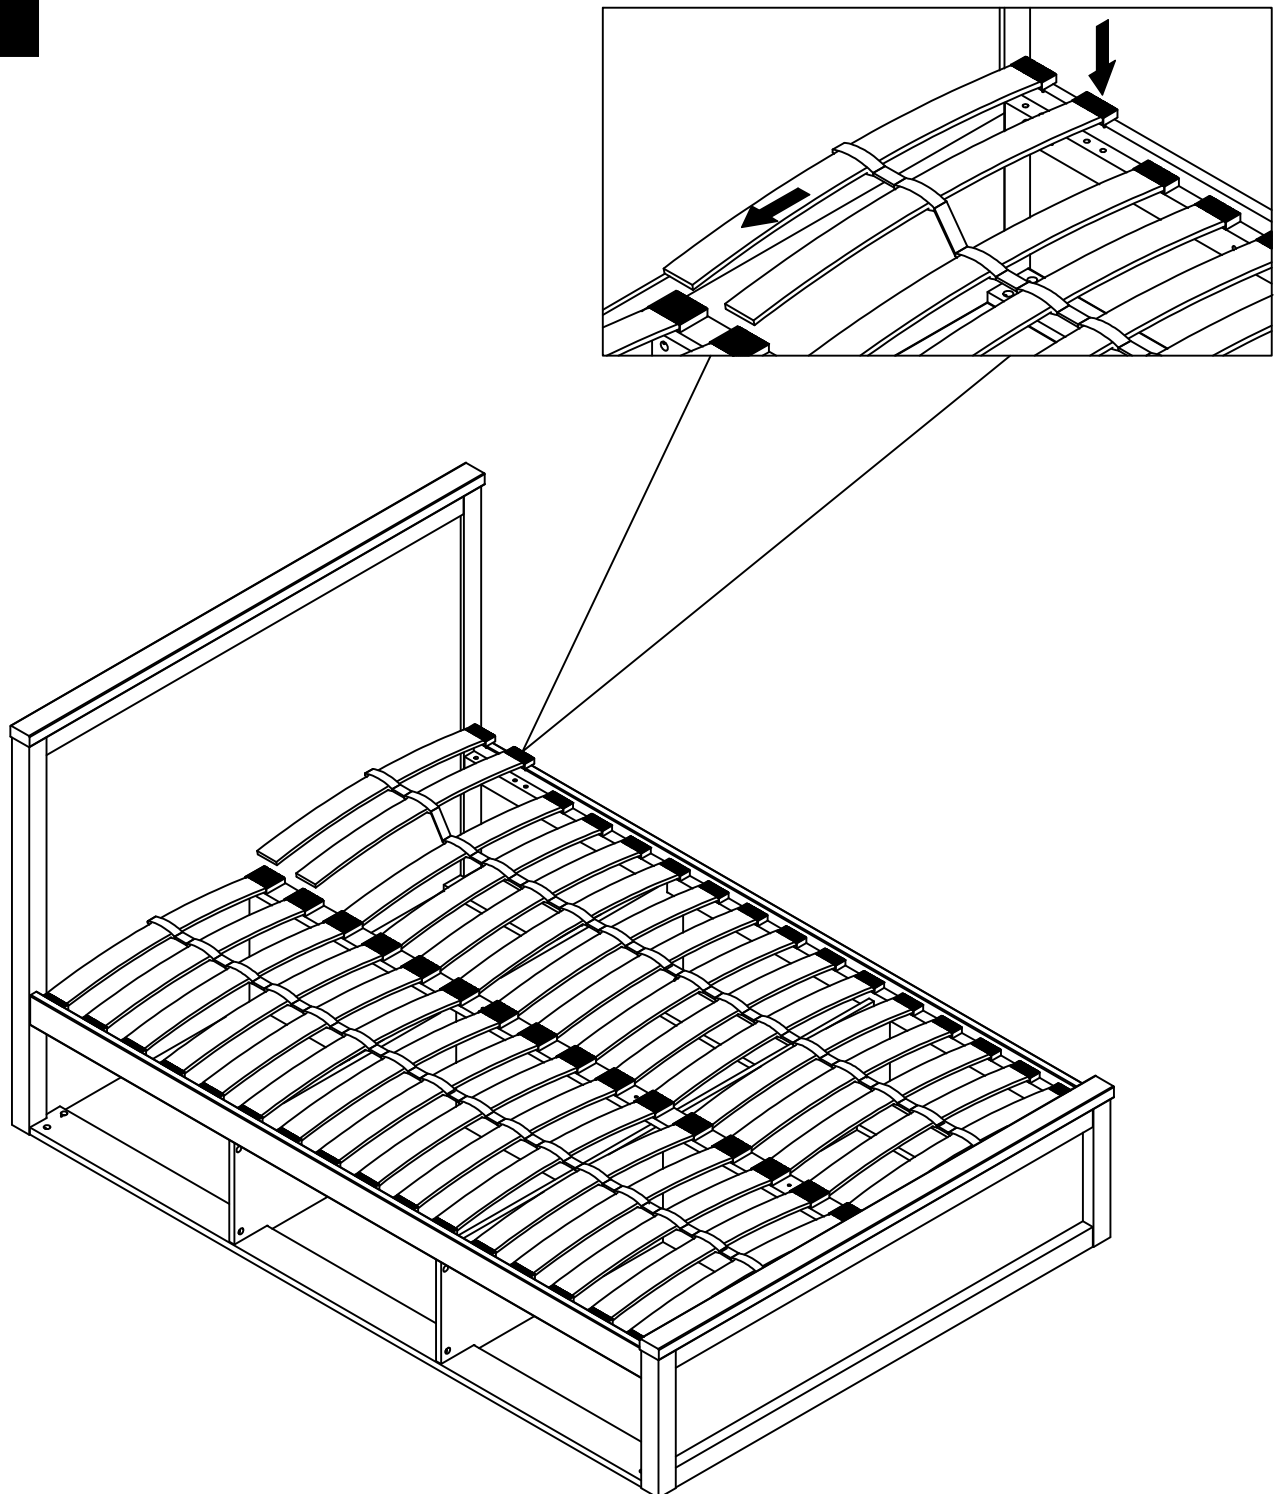Produced in China for Next Retail Ltd.
AB7058D/AB7058K-2025-V1.




NEXT MALVERN LOFT BED
AB7058D/AB7058K

NEXT MALVERN LOFT BED
AB7058D/AB7058K

NEXT MALVERN LOFT BED
AB7058D/AB7058K


Actual product size
DOUBLE:H109xW143xD203.5cm

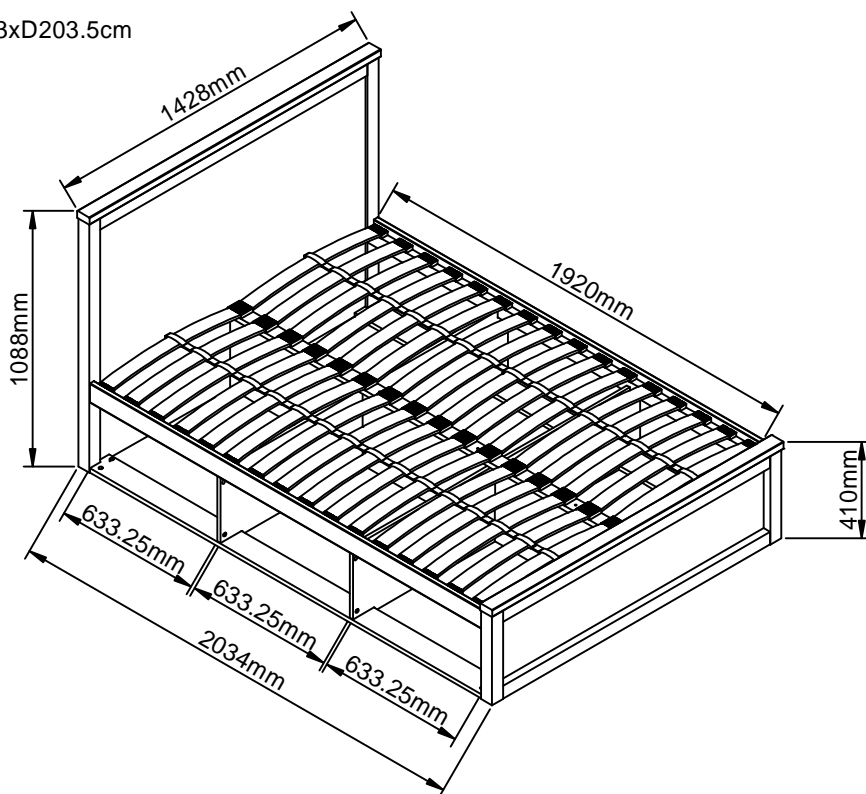Actual product size
DOUBLE:H109xW143xD203.5cm



Actual product size
KING:H109xW158xD213.5cm

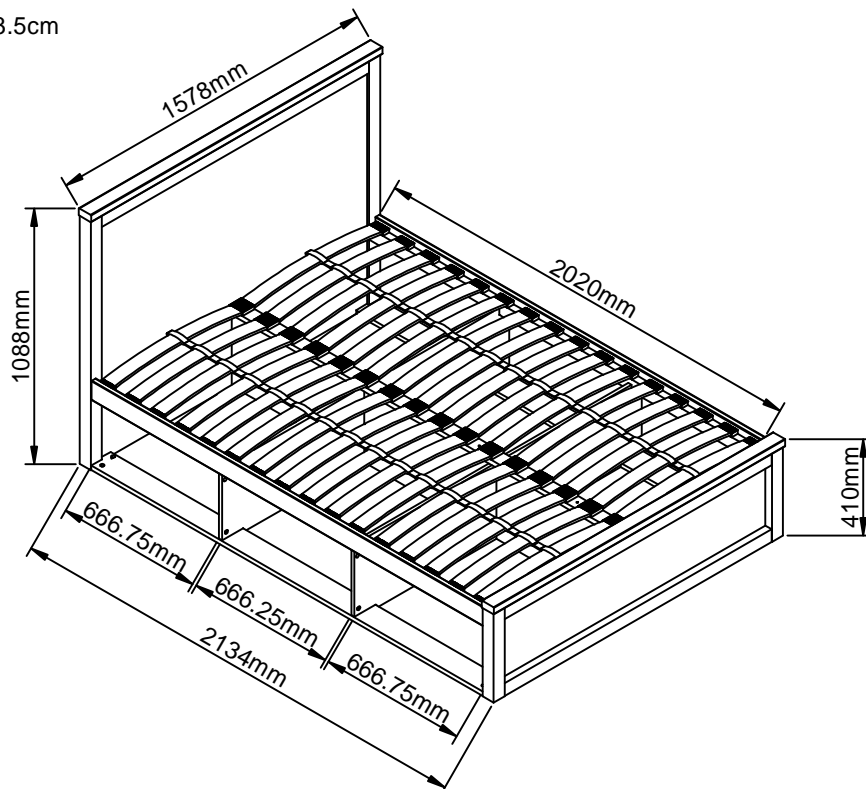Actual product size
KING:H109xW158xD213.5cm



NEXT

MALVERN LOFT BED

AB7058D/AB7058K

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

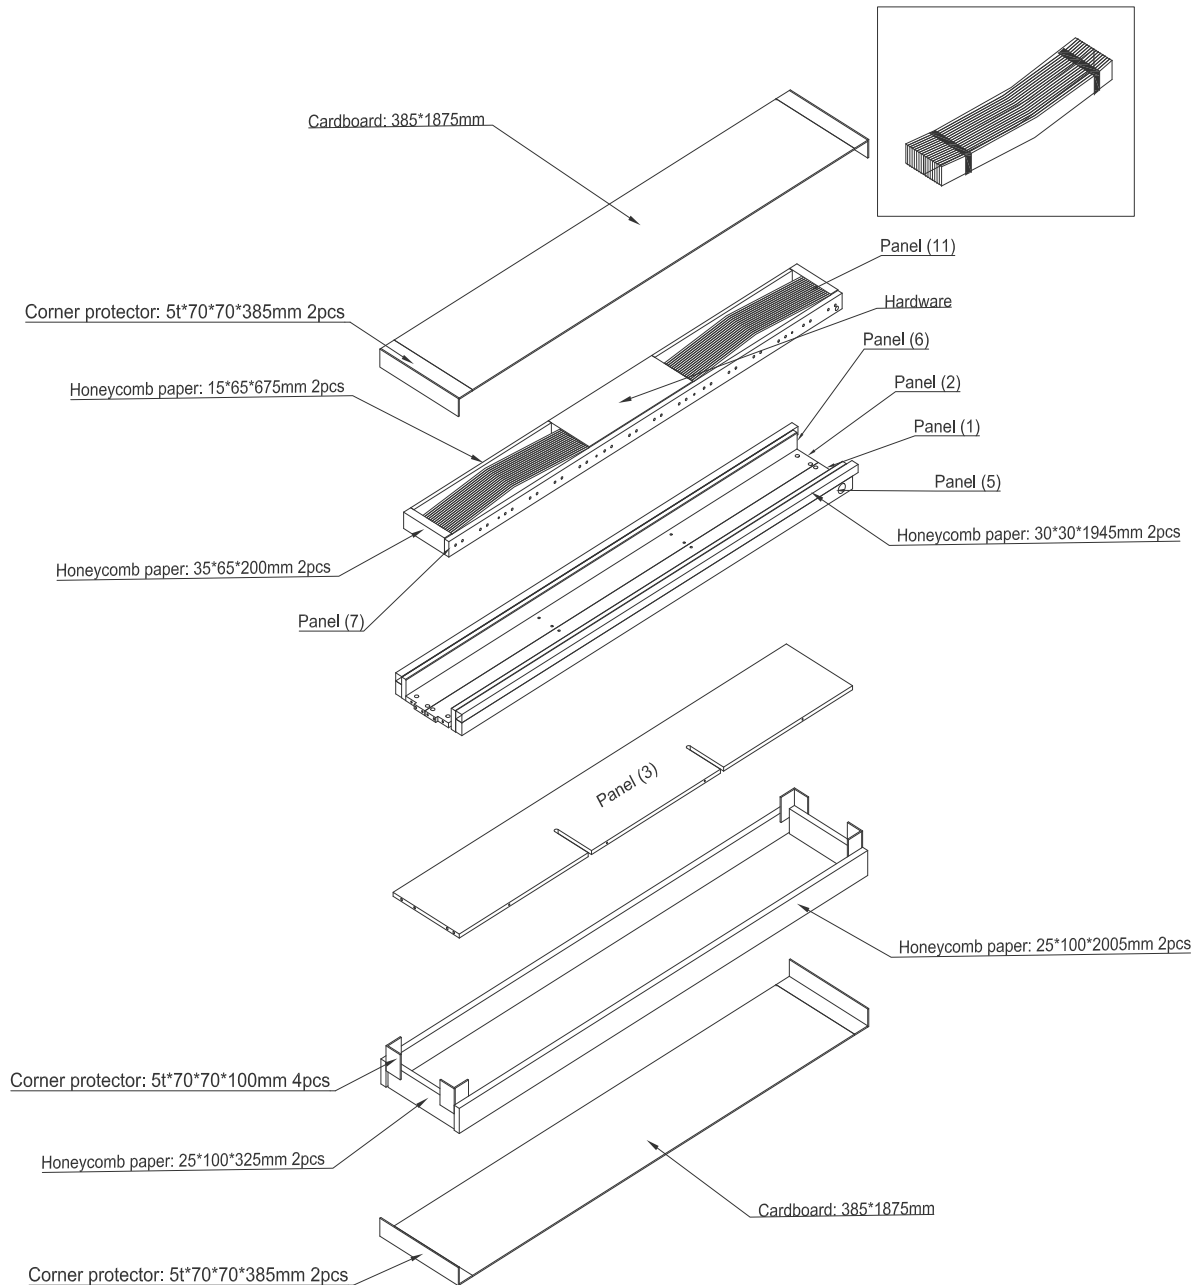
You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk

MALVERN LOFT BED-DOUBLE REPACK INSTRUCTION (3-1)


NEXT



Next Retail Ltd, Desford Road, Leicester, LE19 4AT

MALVERN LOFT BED-DOUBLE REPACK INSTRUCTION (3-2)

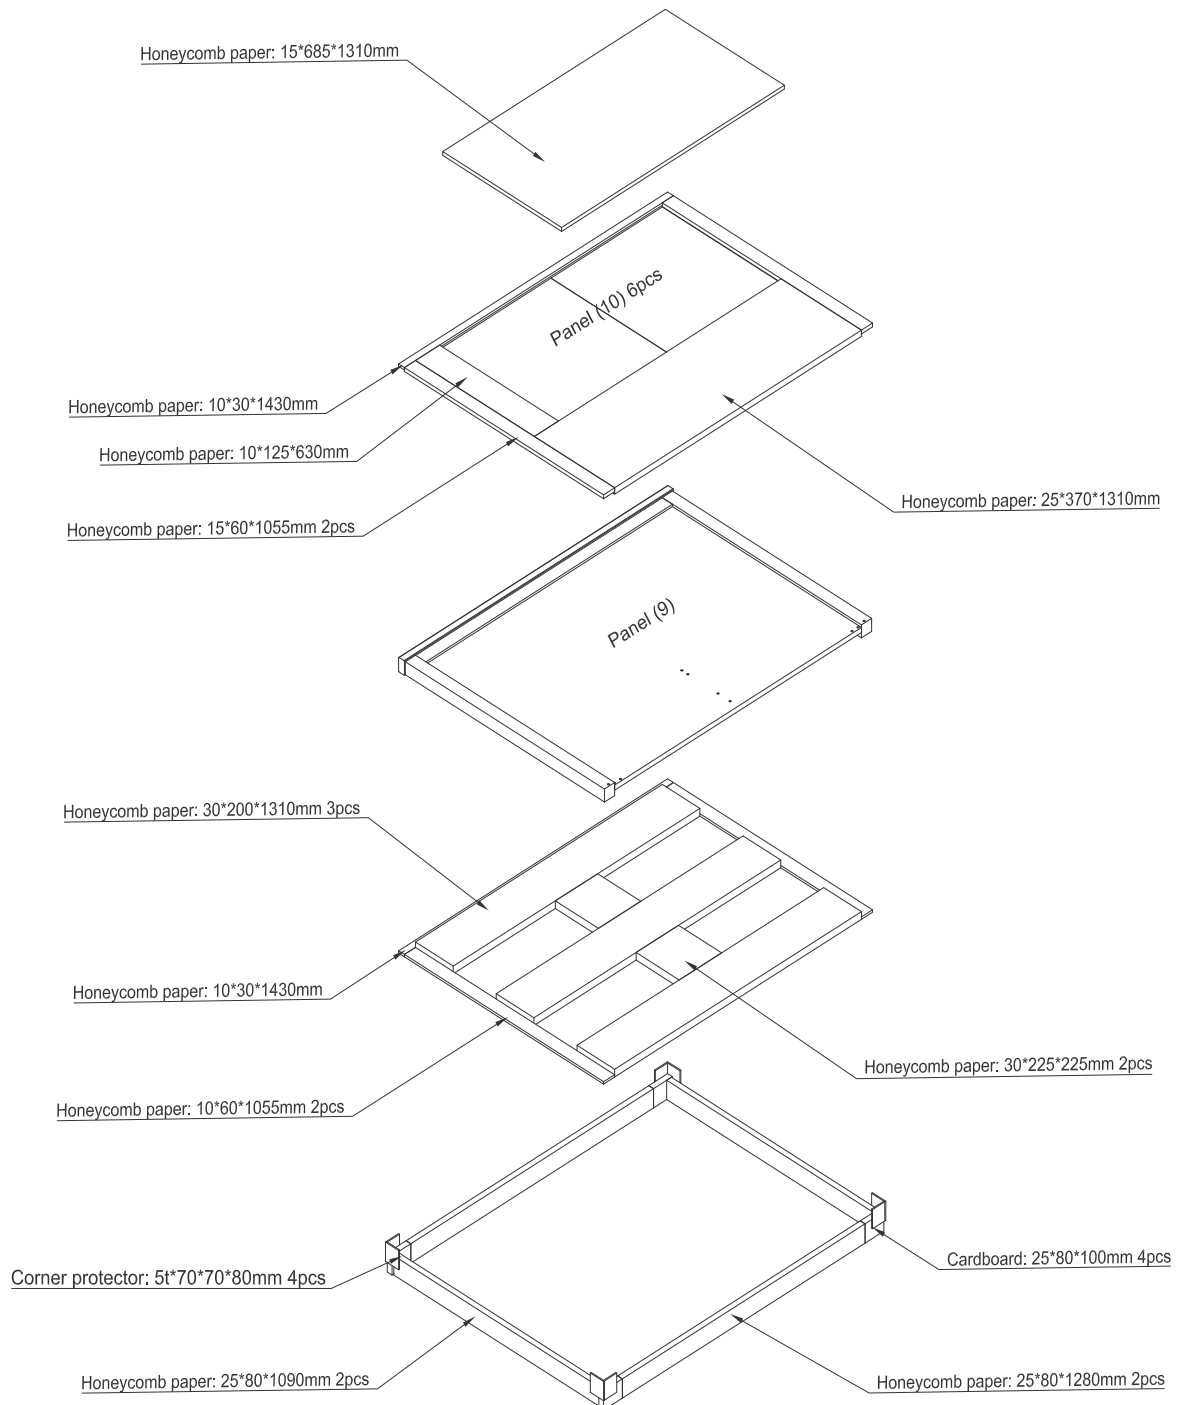
NEXT



Next Retail Ltd, Desford Road, Leicester, LE19 4AT

MALVERN LOFT BED-DOUBLE REPACK INSTRUCTION (3-3)

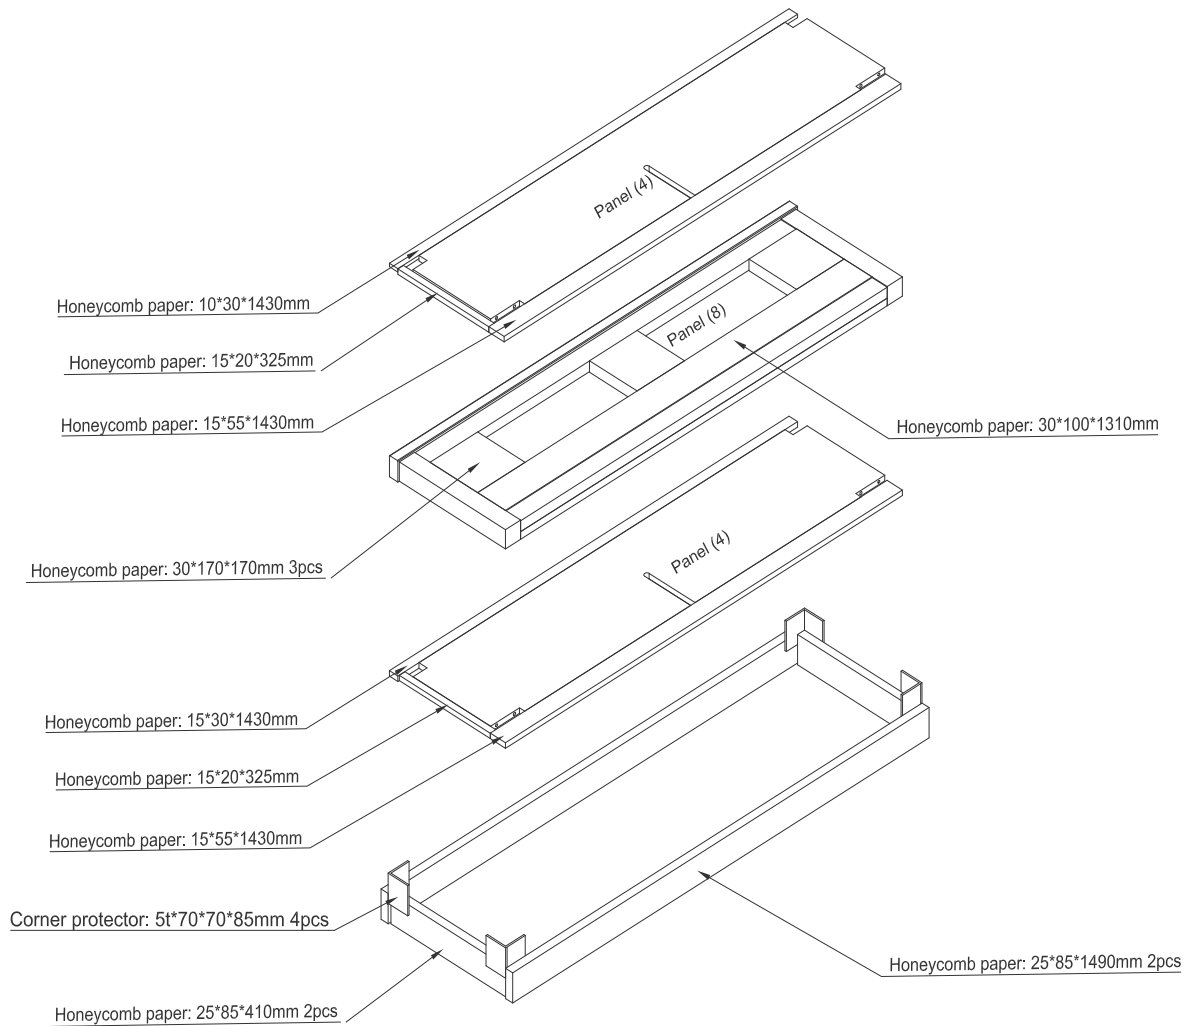
NEXT



Next Retail Ltd, Desford Road, Leicester, LE19 4AT

MALVERN LOFT BED-KING REPACK INSTRUCTION (3-1)

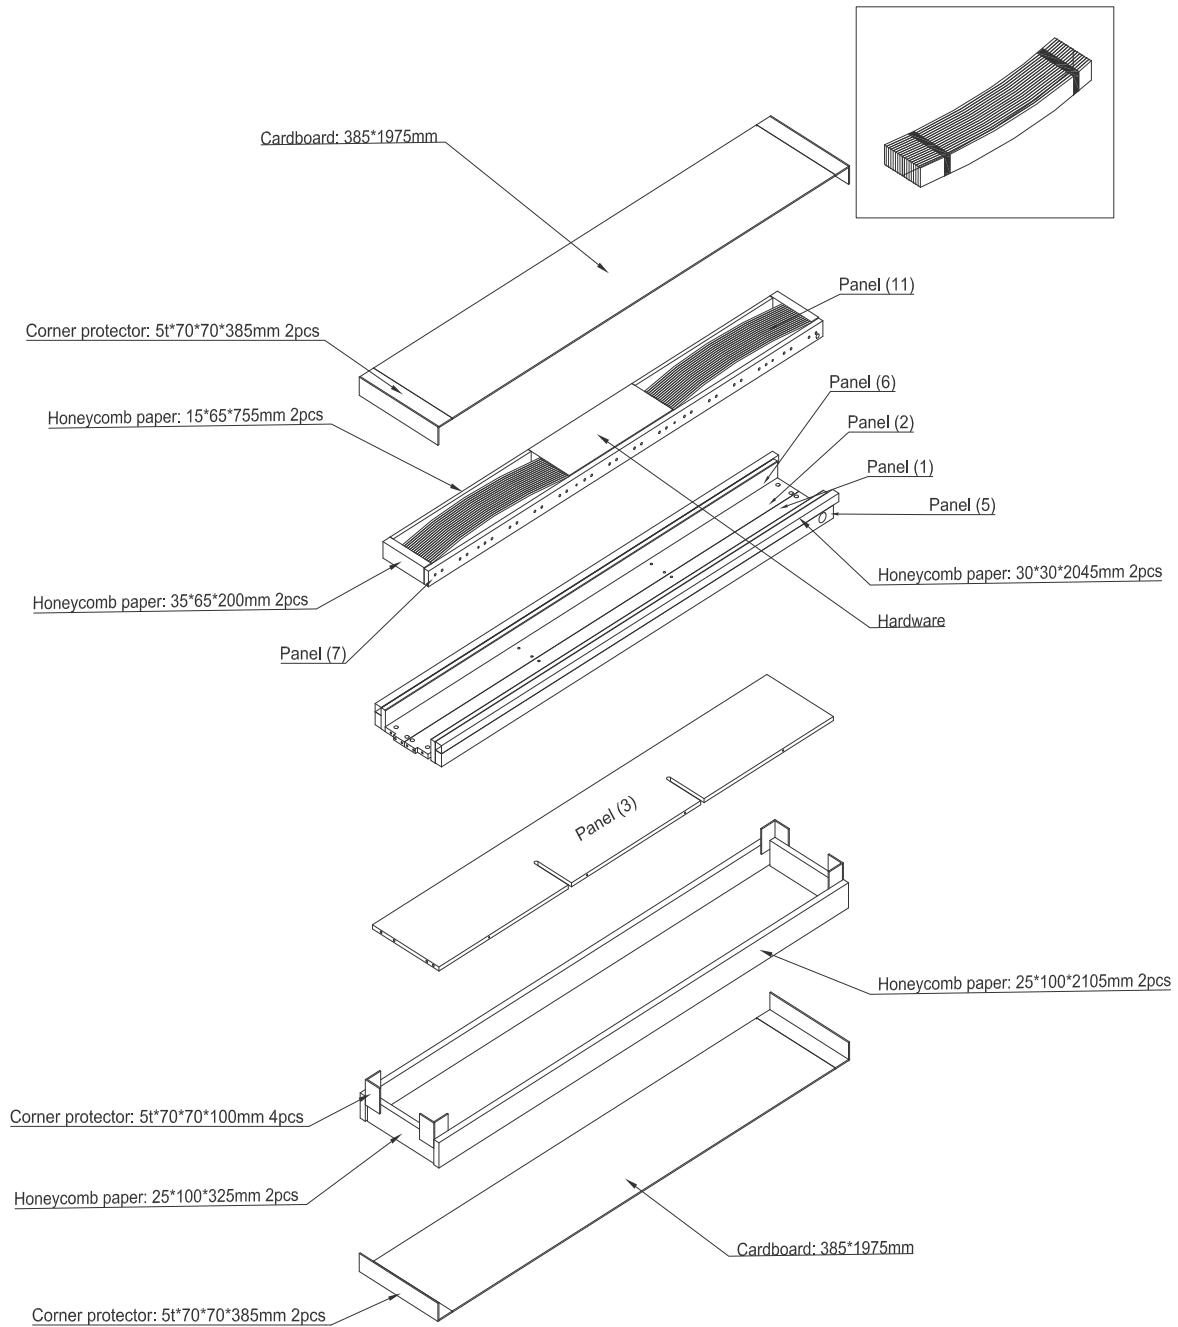
NEXT



Next Retail Ltd, Desford Road, Leicester, LE19 4AT

MALVERN LOFT BED-KING REPACK INSTRUCTION (3-2)

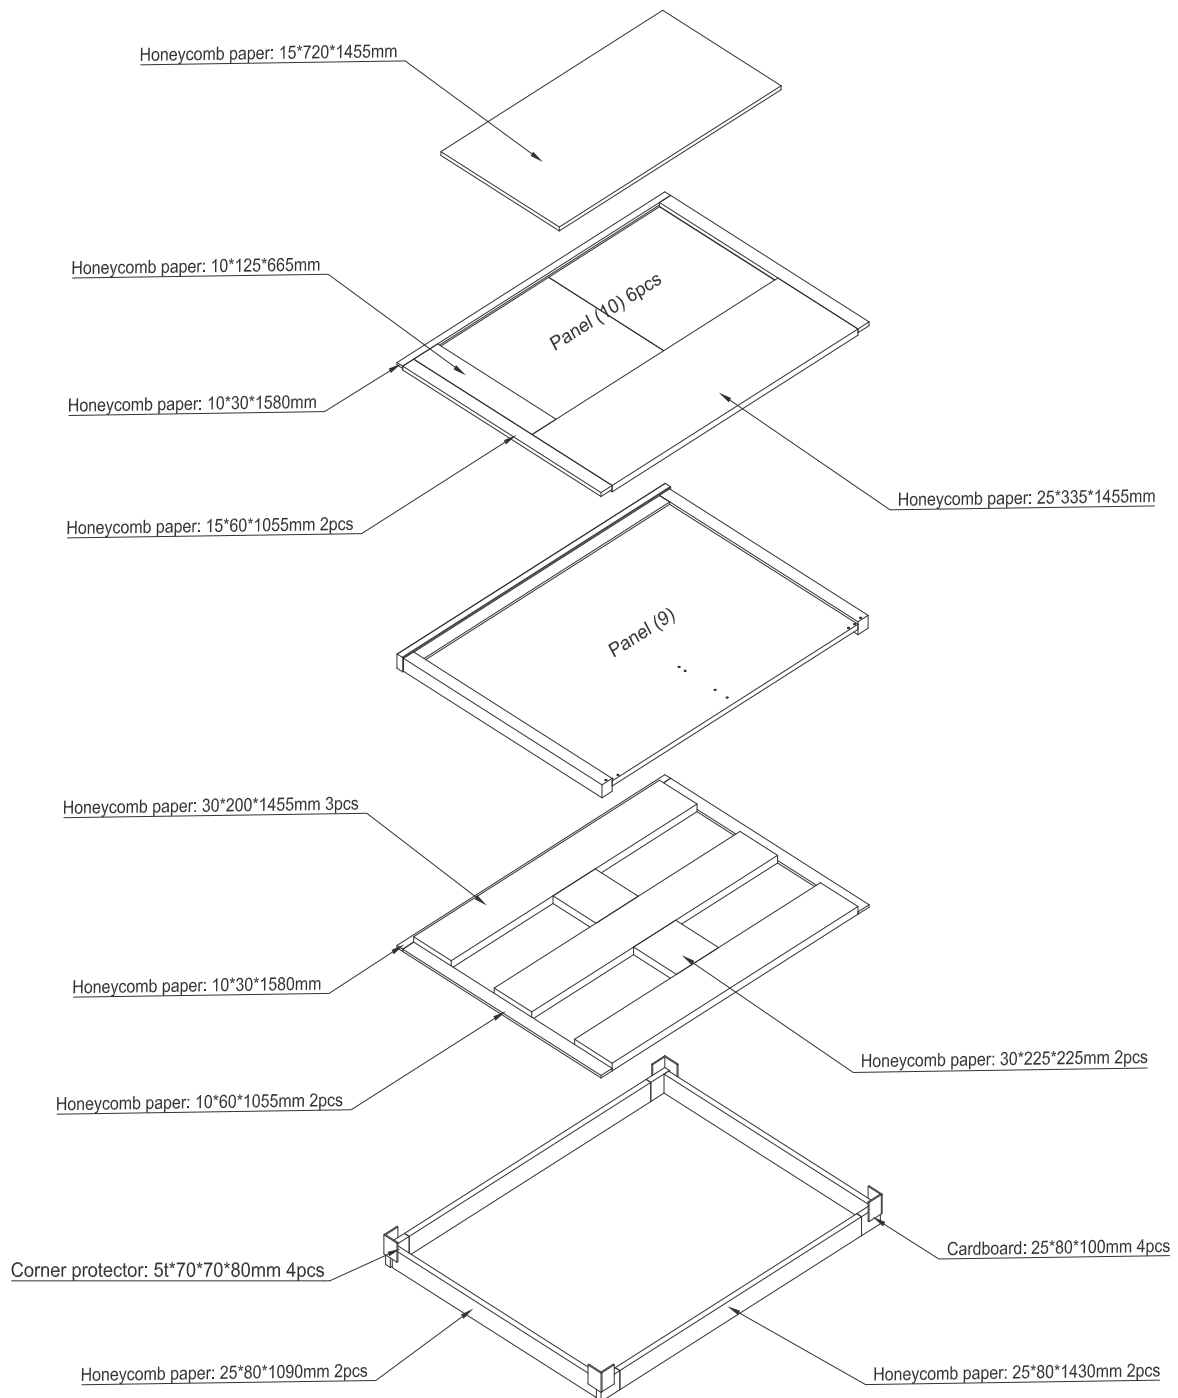
NEXT



Next Retail Ltd, Desford Road, Leicester, LE19 4AT

MALVERN LOFT BED-KING REPACK INSTRUCTION (3-3)

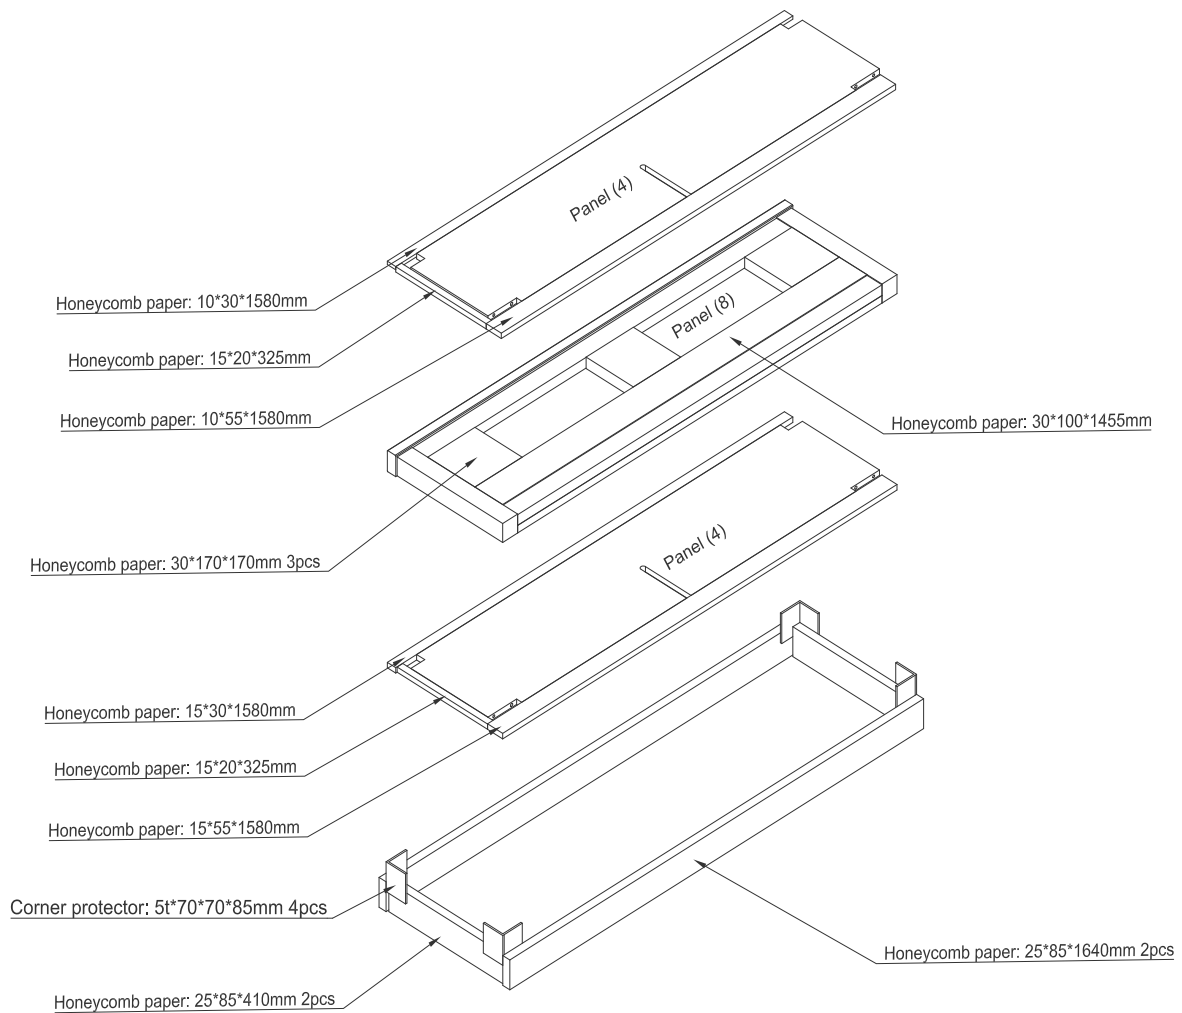NEXT



Next Retail Ltd, Desford Road, Leicester, LE19 4AT