

# BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

## 1. COLOUR

Make sure you're happy with the colour

No need to unpack everything, just check the first component.

## 2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

## 3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

## TIPS FOR RETURNS

Not completely happy with the product? No problem.

We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose fittings and fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose fixtures and fittings straight into the box.
- Throw it back in the box carelessly - as it may get damaged.


**NEXT**  
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.




## Care instructions for hollow board & Honeycomb board during you assembling the product

The structures of hollow board & honeycomb board are as below:

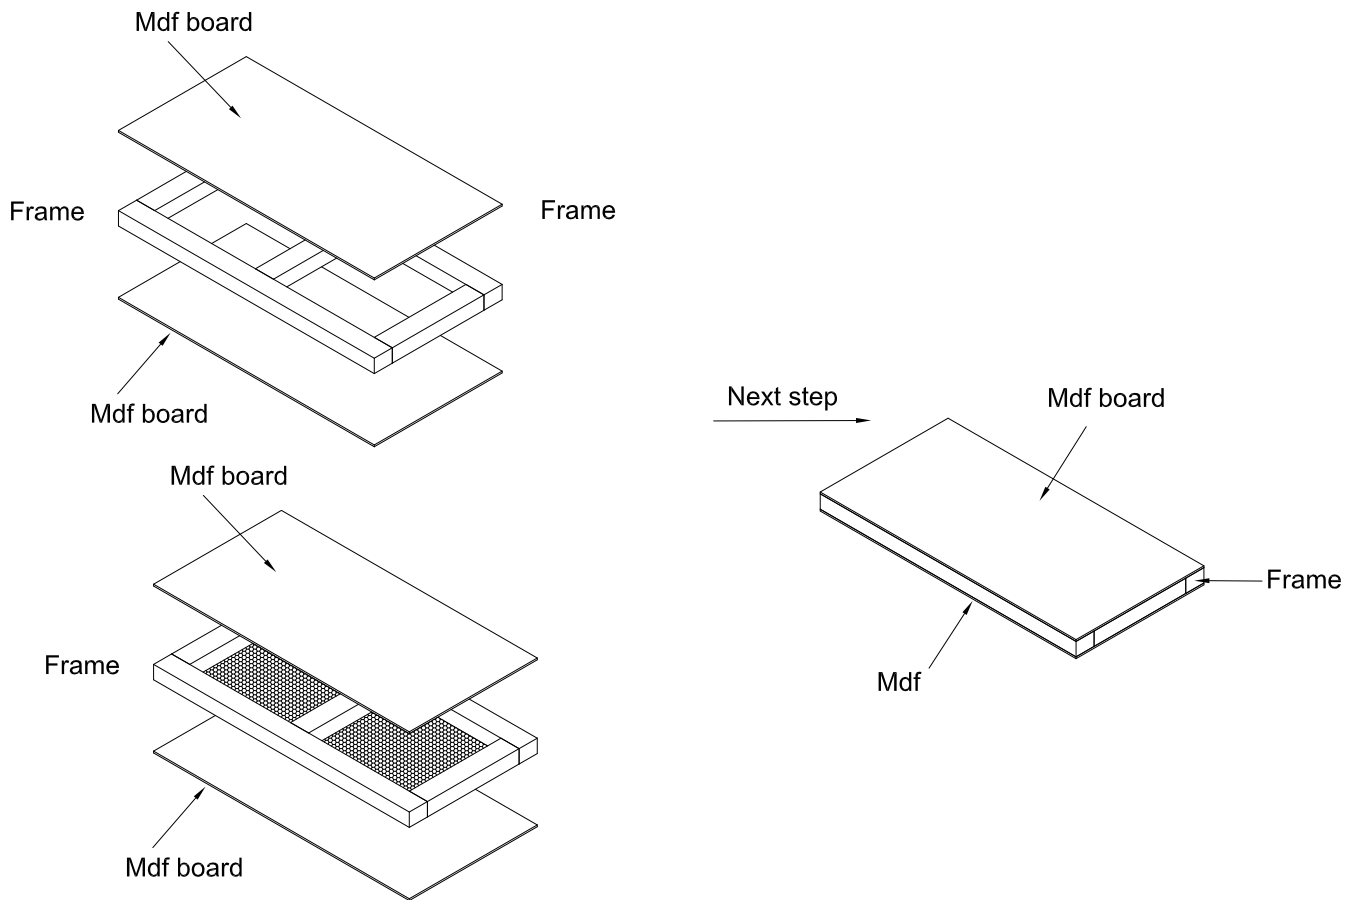

The centre of Hollow board & Honeycomb board is hollow. To avoid damaging the hollow board/honeycomb board, we suggest you not step on the hollow board/honeycomb board or not put other part on the board on the end when you assemble the product.

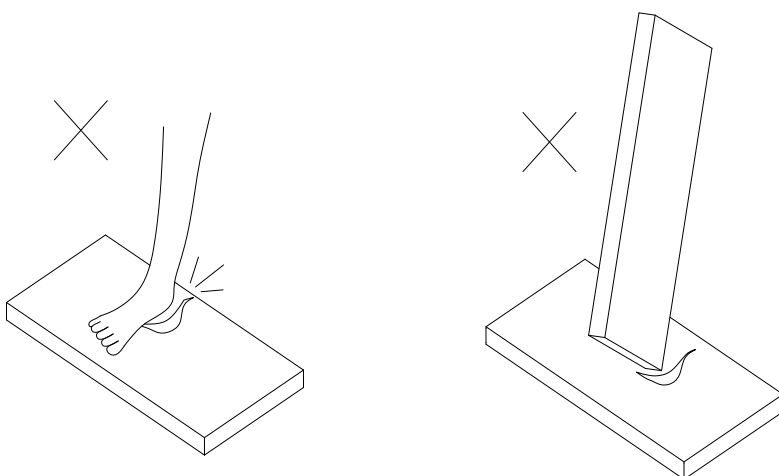


# NEXT

BRONX/BRONX LIGHT / BRONX WHITE SLAT XL BED WITH BEDSIDES  
C24482/Q96760/B06753  
Assembly instructions

**Actual product size**

SUPER KING:H110 x W266 x D207cm

KING:H110xW236xD207cm

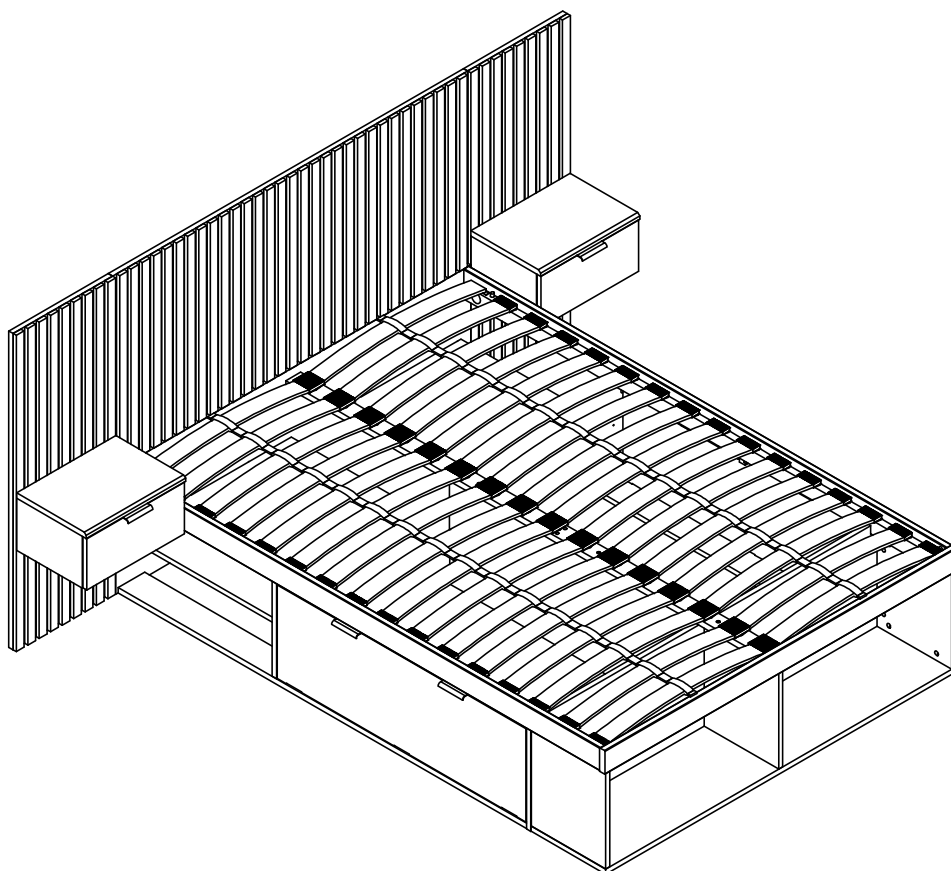

## Need Help ?

With: Assembly instruction

Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

## BEFORE YOU START


### Number of people required to assemble

Two people are required to assemble this item



**Time to assemble : 1 hour**

### Tools required

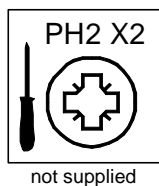

### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

### Don'ts

Do not drag or pull your furniture.



Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.  
Absorption can cause wood to warp or finishes to de-laminate.















Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

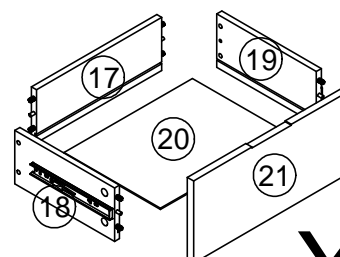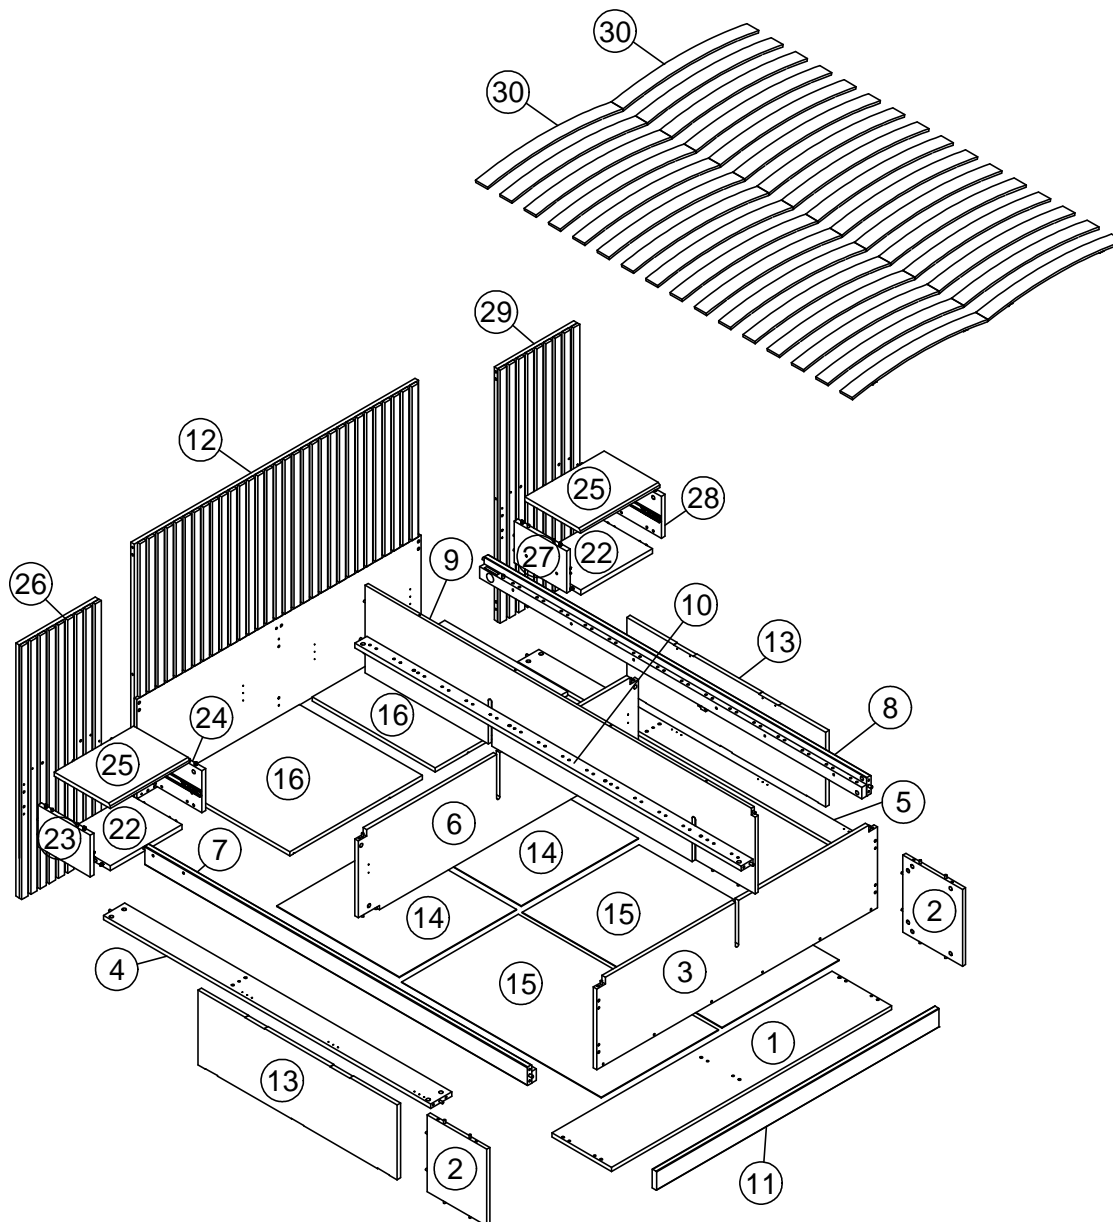















## GETTING TO KNOW YOUR PRODUCT

















**X2**

















Components supplied. Please use this guide if you require replacement parts.

| Ref | Dimensions     | Visual  | Qty | Ctn |
|-----|----------------|---|-----|-----|
| 1   | 30 x 155.5cm   |    | 1   | 1   |
| 2   | 30 x 33.5cm    |    | 2   | 2   |
| 3   | 38 x 156cm     |    | 1   | 3   |
| 4   | 10.5 x 172.5cm |    | 1   | 1   |
| 5   | 10.5 x 172.5cm |    | 1   | 1   |
| 6   | 38 x 155.5cm   |  | 1   | 3   |
| 7   | 8 x 202cm      |  | 1   | 1   |
| 8   | 8 x 202cm      |  | 1   | 1   |
| 9   | 38 x 204cm     |  | 1   | 1   |
| 10  | 6 x 202cm      |  | 1   | 1   |
| 11  | 8 x 156.5cm    |  | 1   | 1   |
| 12  | 110 x 156.5cm  |  | 1   | 3   |
| 13  | 32.5 x 105cm   |  | 2   | 2   |
| 14  | 65 x 66.5cm    |  | 2   | 3   |

| Ref | Dimensions     | Visual  | Qty | Ctn |
|-----|----------------|---|-----|-----|
| 15  | 66.5 x 105.5cm |    | 2   | 3   |
| 16  | 65 x 75cm      |    | 2   | 3   |
| 17  | 11.5 x 31cm    |    | 2   | 2   |
| 18  | 11.5 x 25cm    |    | 2   | 2   |
| 19  | 11.5 x 25cm    |    | 2   | 2   |
| 20  | 24.5 x 32cm    |   | 2   | 2   |
| 21  | 18 x 39cm      |  | 2   | 2   |
| 22  | 26 x 36cm      |  | 2   | 2   |
| 23  | 18 x 26.5cm    |  | 1   | 2   |
| 24  | 18 x 26.5cm    |  | 1   | 2   |
| 25  | 28 x 40cm      |  | 2   | 2   |
| 26  | 40 x 110cm     |  | 1   | 2   |
| 27  | 18 x 26.5cm    |  | 1   | 2   |
| 28  | 18 x 26.5cm    |  | 1   | 2   |
| 29  | 40 x 110cm     |  | 1   | 2   |
| 30  | 6 x 75.5cm     |  | 32  | 1   |


Components supplied. Please use this guide if you require replacement parts.

| Ref | Dimensions     | Visual  | Qty | Ctn |
|-----|----------------|---|-----|-----|
| 1   | 30 x 185.5cm   |    | 1   | 1   |
| 2   | 30 x 33.5cm    |    | 2   | 2   |
| 3   | 38 x 186cm     |    | 1   | 3   |
| 4   | 10.5 x 172.5cm |    | 1   | 1   |
| 5   | 10.5 x 172.5cm |    | 1   | 1   |
| 6   | 38 x 155.5cm   |  | 1   | 3   |
| 7   | 8 x 202cm      |  | 1   | 1   |
| 8   | 8 x 202cm      |  | 1   | 1   |
| 9   | 38 x 204cm     |  | 1   | 1   |
| 10  | 6 x 202cm      |  | 1   | 1   |
| 11  | 8 x 186.5cm    |  | 1   | 1   |
| 12  | 110 x 186.5cm  |  | 1   | 3   |
| 13  | 32.5 x 105cm   |  | 2   | 2   |
| 14  | 65 x 81.5cm    |  | 2   | 3   |


| Ref | Dimensions     | Visual  | Qty | Ctn |
|-----|----------------|---|-----|-----|
| 15  | 81.5 x 105.5cm |    | 2   | 3   |
| 16  | 65 x 90cm      |    | 2   | 3   |
| 17  | 11.5 x 31cm    |    | 2   | 2   |
| 18  | 11.5 x 25cm    |    | 2   | 2   |
| 19  | 11.5 x 25cm    |    | 2   | 2   |
| 20  | 24.5 x 32cm    |   | 2   | 2   |
| 21  | 18 x 39cm      |  | 2   | 2   |
| 22  | 26 x 36cm      |  | 2   | 2   |
| 23  | 18 x 26.5cm    |  | 1   | 2   |
| 24  | 18 x 26.5cm    |  | 1   | 2   |
| 25  | 28 x 40cm      |  | 2   | 2   |
| 26  | 40 x 110cm     |  | 1   | 2   |
| 27  | 18 x 26.5cm    |  | 1   | 2   |
| 28  | 18 x 26.5cm    |  | 1   | 2   |
| 29  | 40 x 110cm     |  | 1   | 2   |
| 30  | 6 x 90.5cm     |  | 32  | 1   |

# NEXT


## TITUS TIGHTENING INSTRUCTIONS

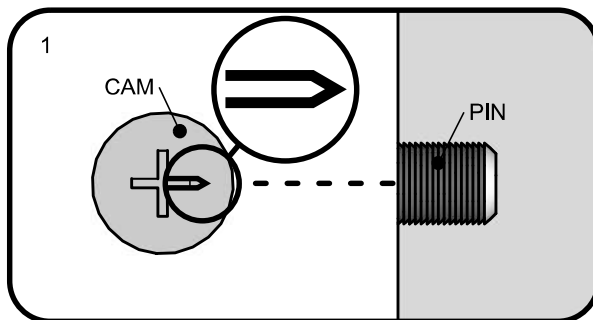


Line up the arrow on the CAM with the PIN.

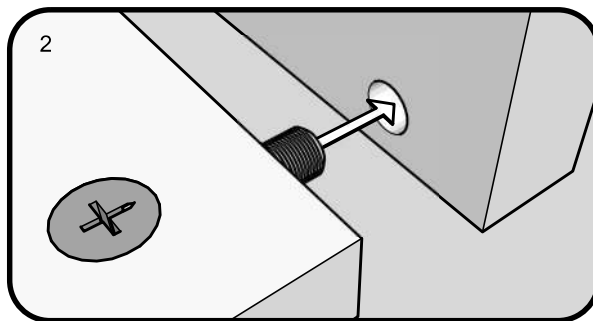


Push the pins into the holes in the panel to be joined.

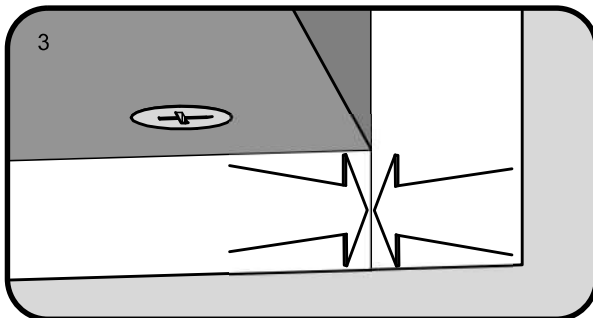

Make sure there is no gap between the panels.

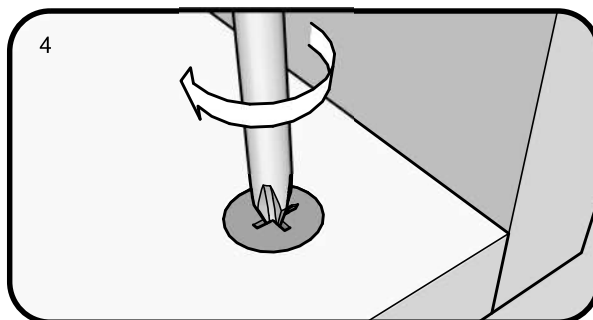

Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.

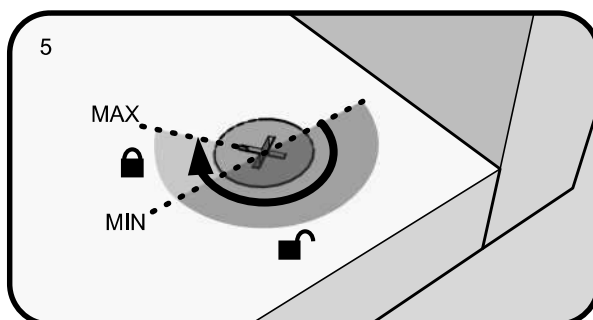


The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)







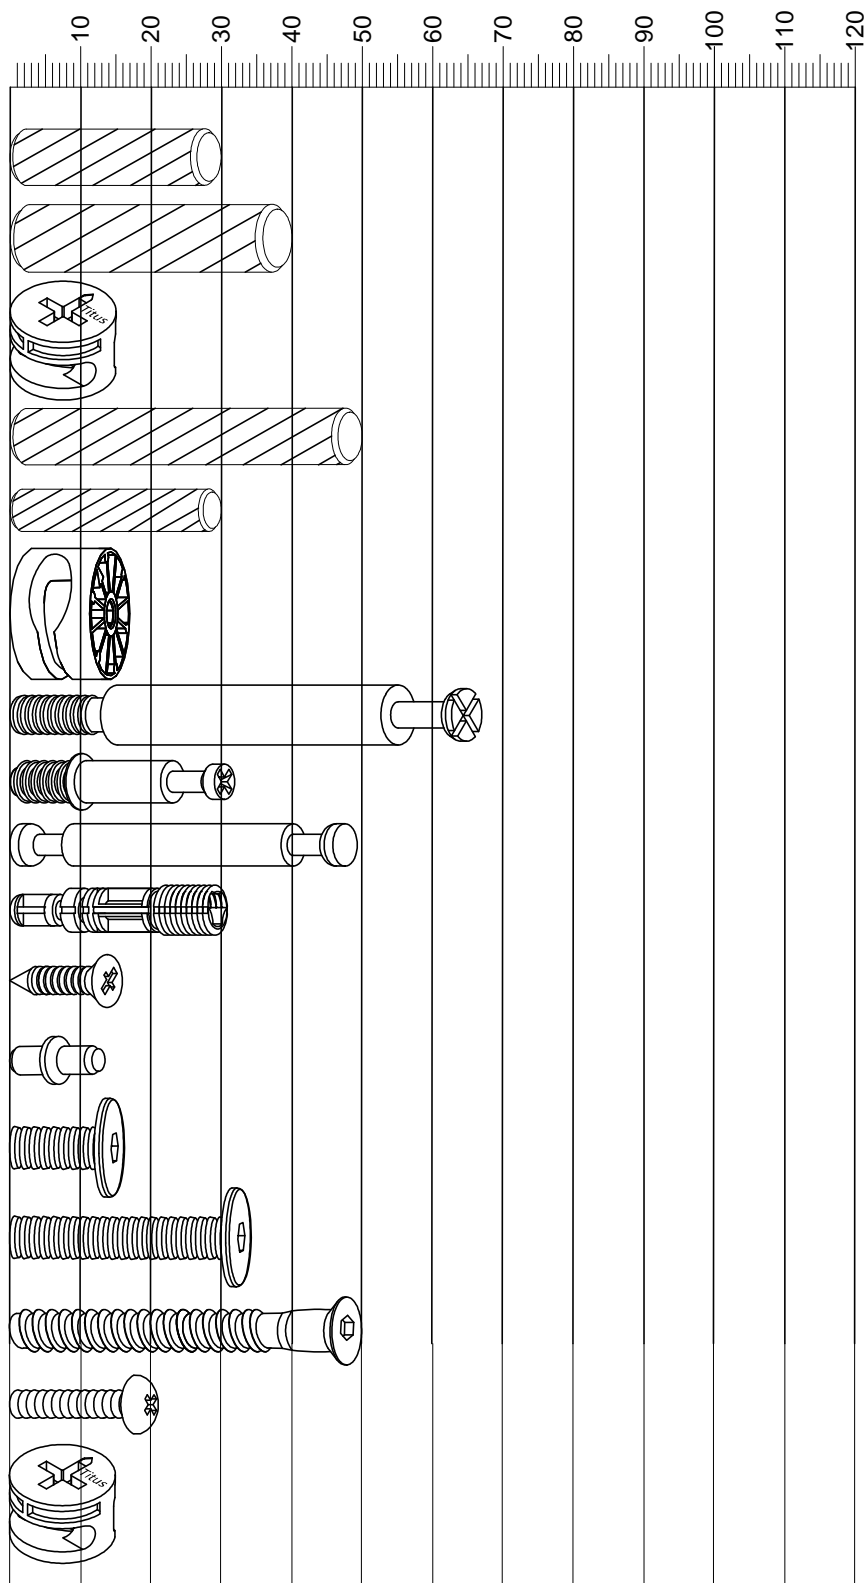







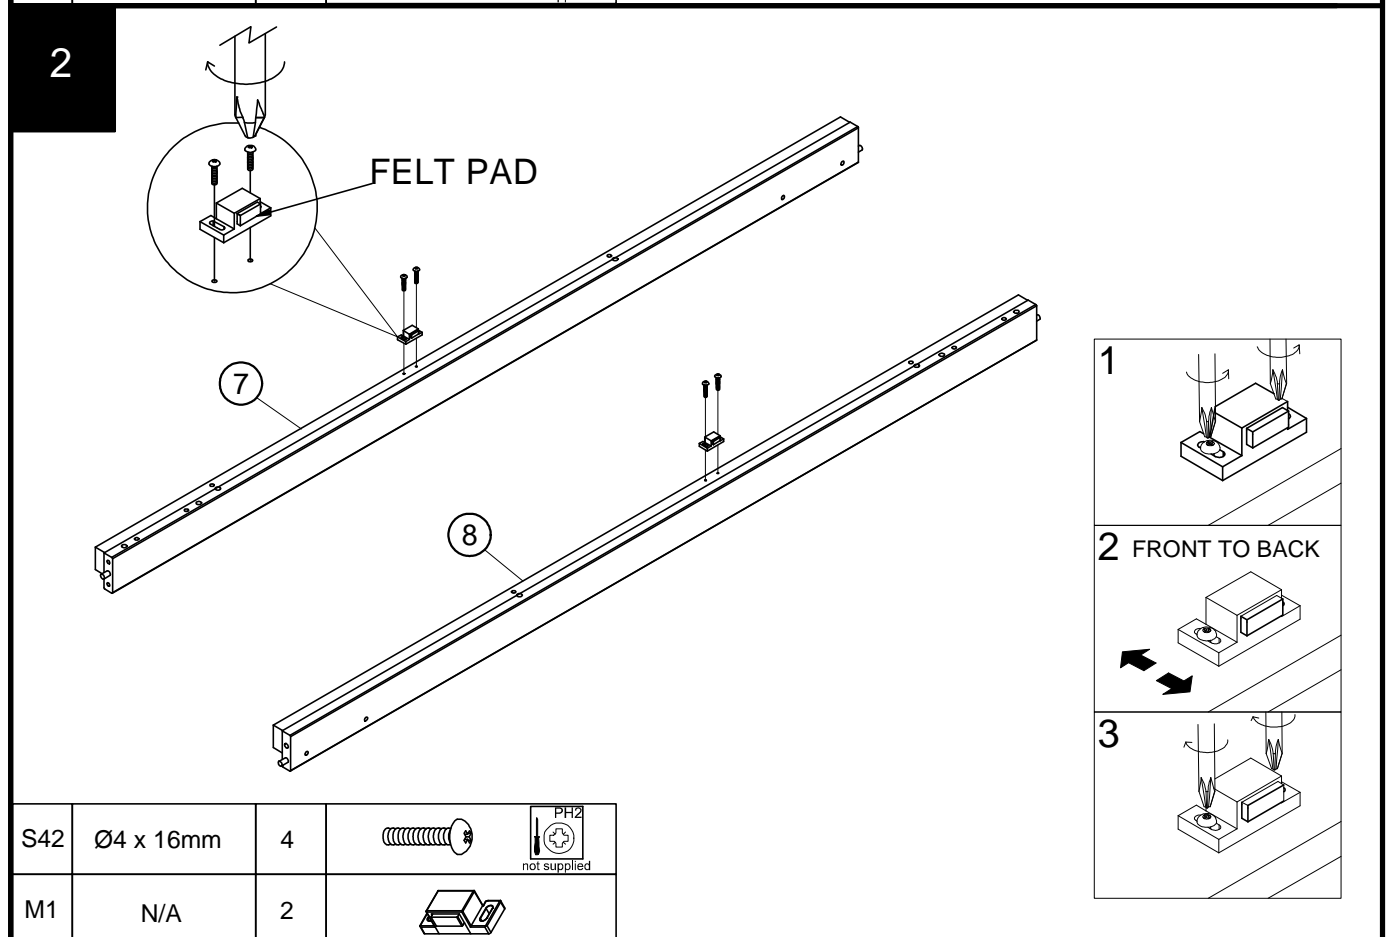
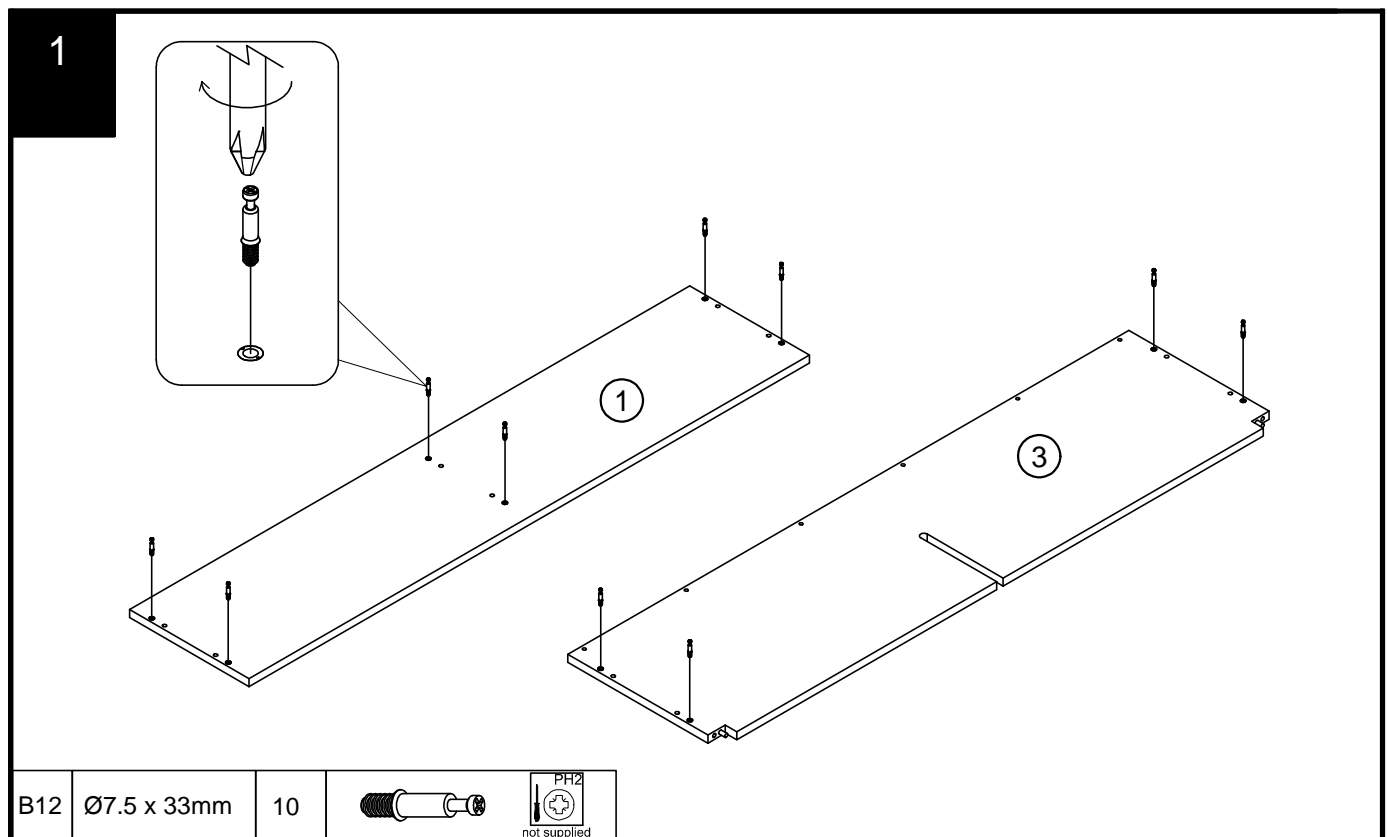
**Fixtures and fittings  
supplied (actual size)**

| Ref  | Dimensions  | Qty | Spare Qty |
|------|-------------|-----|-----------|
| D6   | Ø8 x 30mm   | N/A | 2         |
| D9   | Ø10 x 40mm  | N/A | 1         |
| B4   | Ø15 x 12mm  | 48  | 2         |
| D24  | Ø8 x 40mm   | 4   | 1         |
| D3   | Ø6 x 30mm   | N/A | 1         |
| B25  | Ø35 x 17mm  | 2   | N/A       |
| B24  | Ø8.5 x 63mm | 2   | N/A       |
| B12  | Ø7.5 x 33mm | 36  | 2         |
| B15  | Ø6 x 49.5mm | 6   | 1         |
| B8   | Ø8 x 38mm   | N/A | 2         |
| U123 | Ø4 x 16mm   | 58  | 2         |
| P3   | Ø5 x 16mm   | 8   | 1         |
| V35  | Ø6 x 12mm   | 16  | 2         |
| V53  | Ø6 x 30mm   | 4   | 1         |
| Y8   | Ø6 x 50mm   | 22  | 2         |
| S42  | Ø4 x 16mm   | 4   | 1         |
| B2   | Ø15 x 10mm  | N/A | 2         |



**Fixtures and fittings supplied ( not to scale)**



| Ref | Dimensions | Qty | Spare Qty | Visual  |
|-----|------------|-----|-----------|---|
| H38 | N/A        | 4   | N/A       |    |
| H29 | N/A        | 6   | N/A       |    |
| E39 | N/A        | 6   | N/A       |    |
| T34 | N/A        | 16  | N/A       |    |
| T33 | N/A        | 30  | N/A       |    |
| T7  | N/A        | 1   | N/A       |    |
| T1  | N/A        | 2   | N/A       |  |
| N30 | N/A        | 4   | N/A       |  |
| M1  | N/A        | 2   | N/A       |  |
| O1  | Ø21mm      | 40  | 2         |  |
| O2  | Ø21mm      | 12  | 2         |  |
| T40 | N/A        | 2   | N/A       |  |




3

## DON'T STOP UNTIL THE 2 O'CLOCK LOCK


TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE  
ARROW POINTS IN THE POSITIONS SHOWN IN THE  
DIAGRAMS BELOW

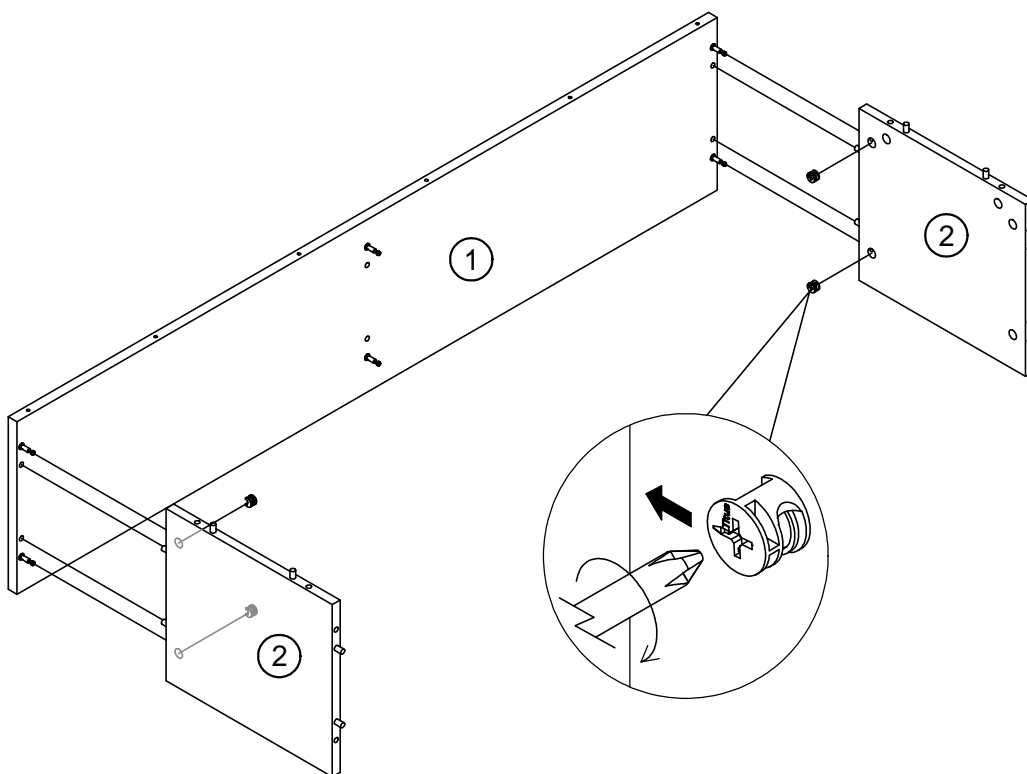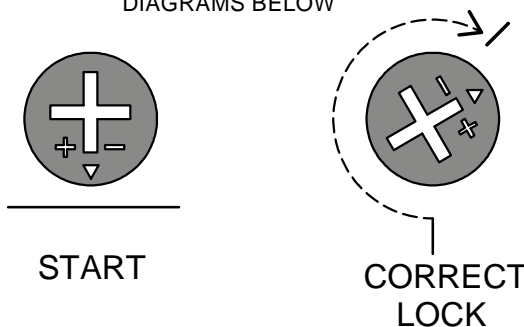

PUSH THE TWO PANELS TOGETHER ALLOWING THE  
DOWEL TO ALIGN WITH THE HOLE

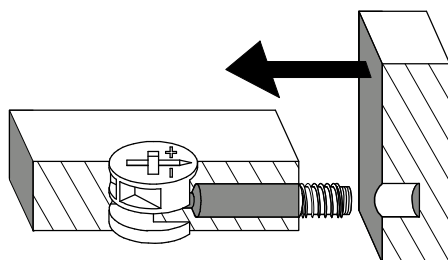

TURN THE CAM IN A CLOCKWISE DIRECTION

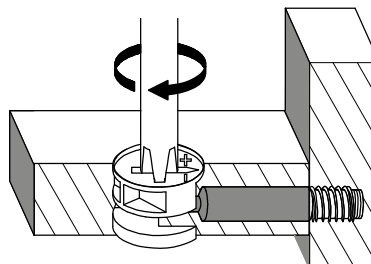


B4 Ø15 x 12mm





4

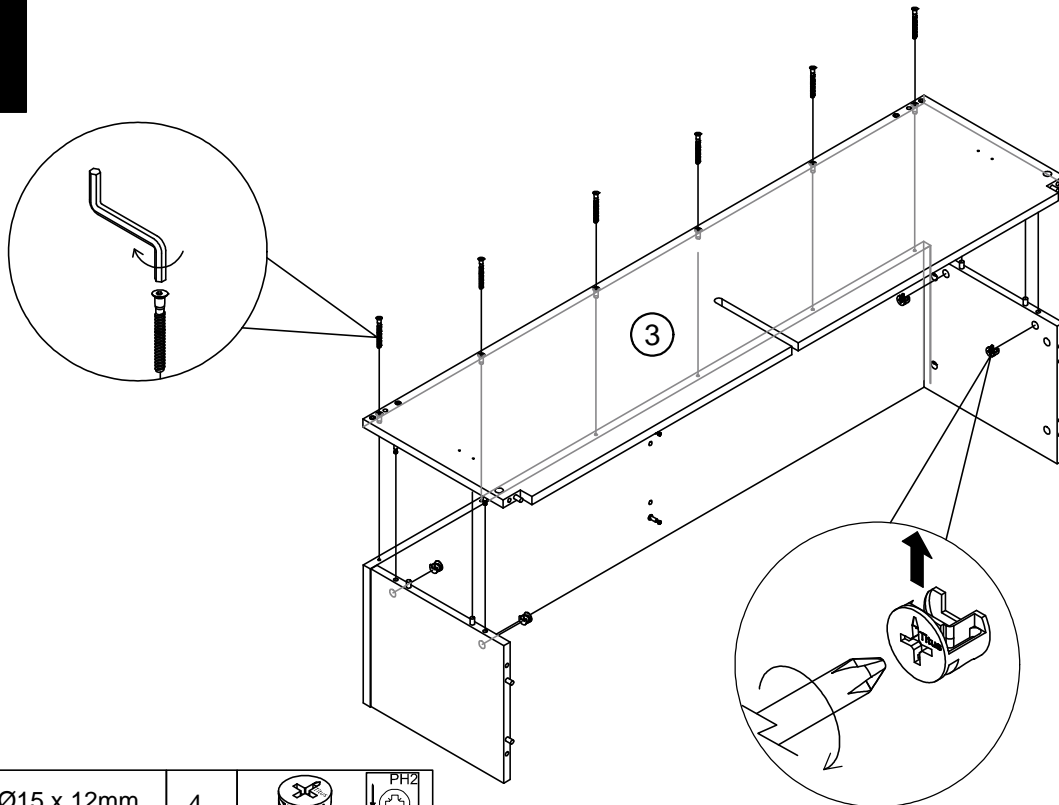


not supplied



4




|    |            |   |   |
|----|------------|---|---|
| B4 | Ø15 x 12mm | 4 |  <br>not supplied |
| T1 | N/A        | 2 |    |
| Y8 | Ø6 x 50mm  | 6 |    |

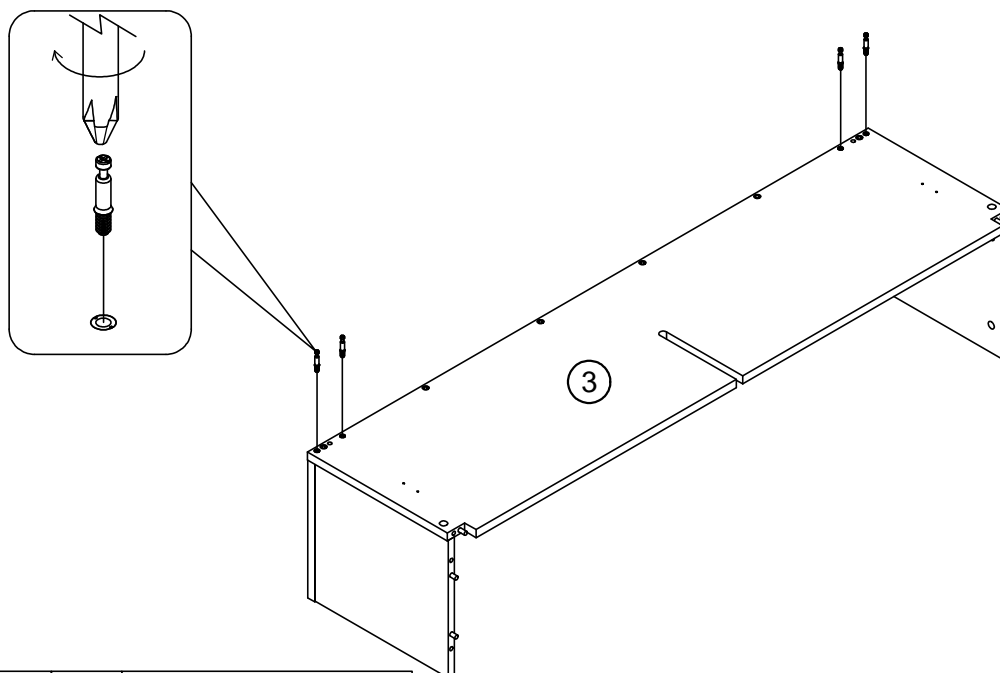



5




|     |             |   |   |
|-----|-------------|---|---|
| B12 | Ø7.5 x 33mm | 4 |  <br>not supplied |
|-----|-------------|---|---|

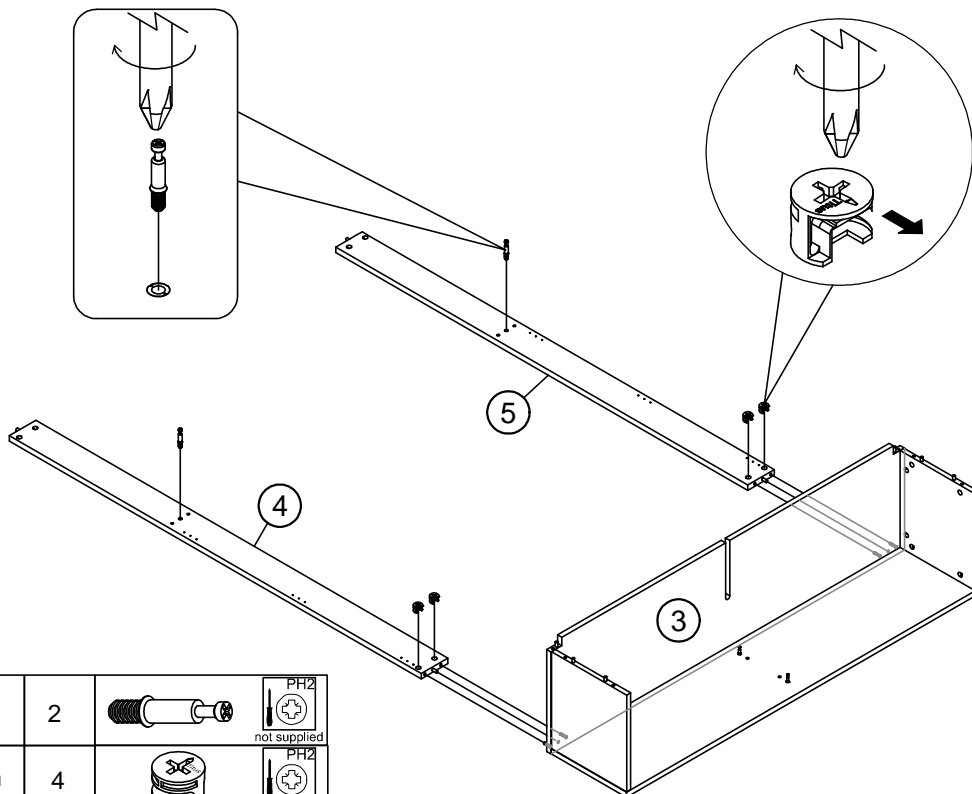

6




|     |             |   |   |   |
|-----|-------------|---|---|---|
| B12 | Ø7.5 x 33mm | 2 |   | <br>not supplied  |
| B4  | Ø15 x 12mm  | 4 |  | <br>not supplied |

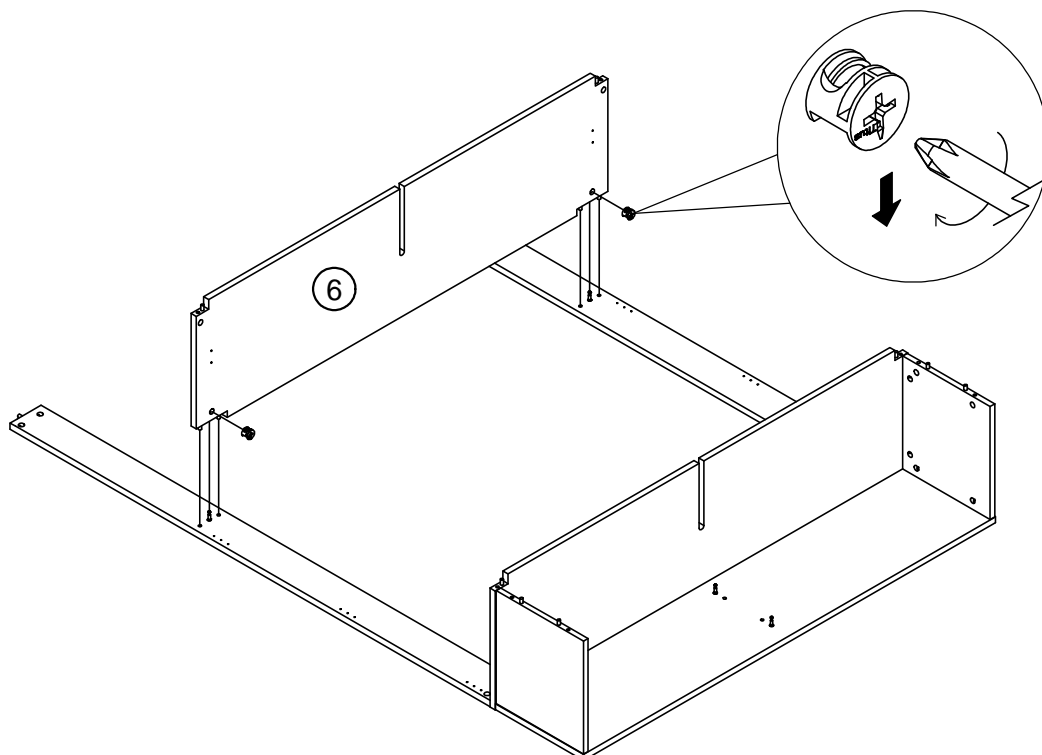


7





|    |            |   |   |   |
|----|------------|---|---|---|
| B4 | Ø15 x 12mm | 2 |  | <br>not supplied |
|----|------------|---|---|---|

8

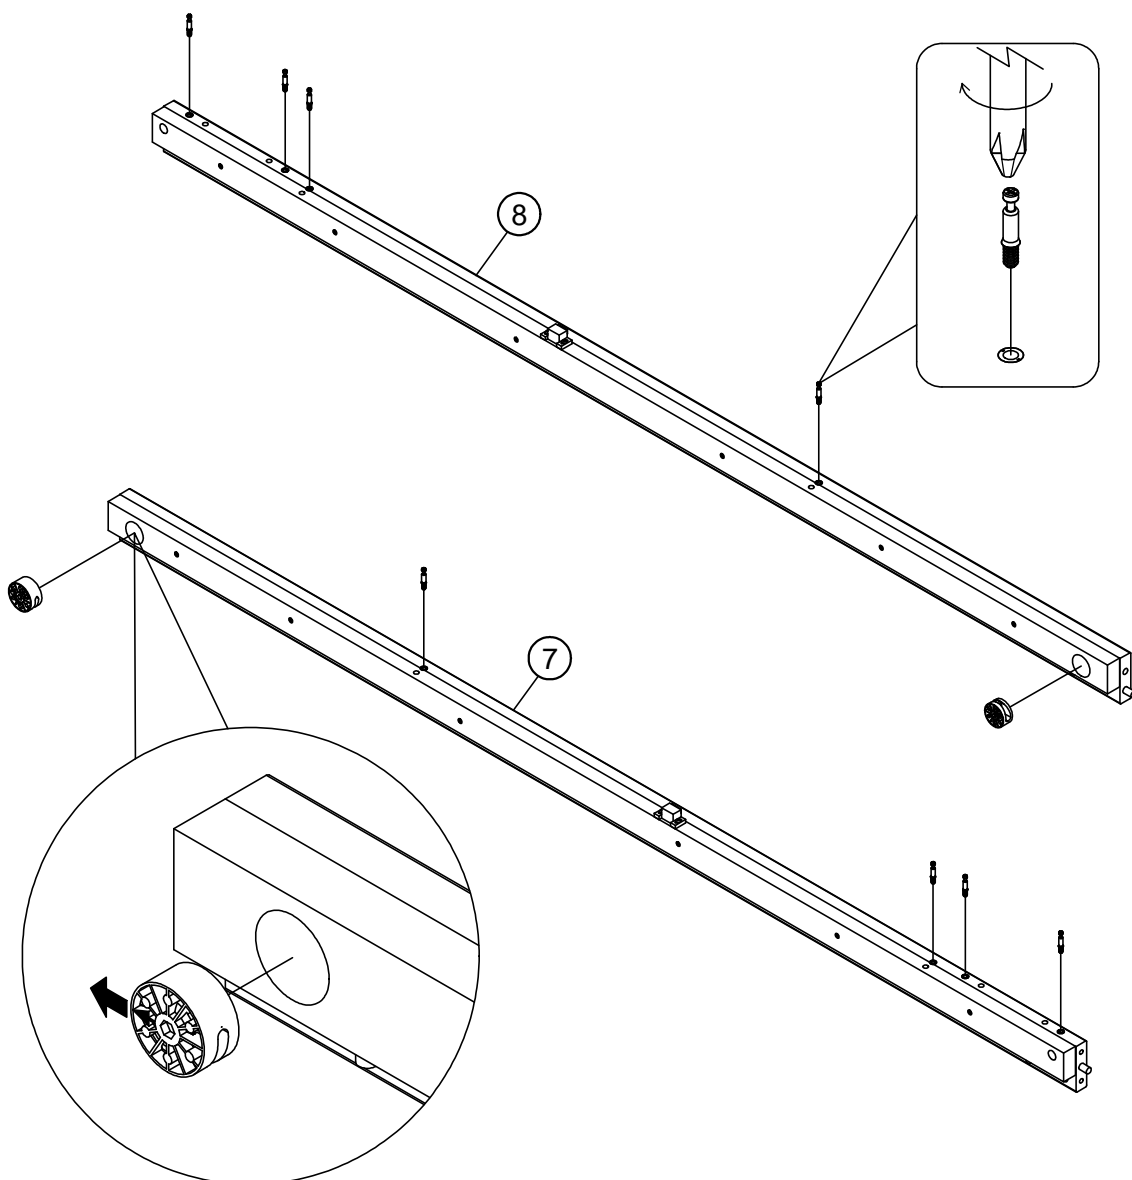

|     |             |   |   |
|-----|-------------|---|---|
| B25 | Ø35 x 17mm  | 2 |    |
| B12 | Ø7.5 x 33mm | 8 |  <br>not supplied |

9

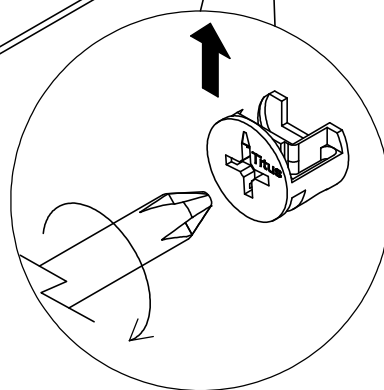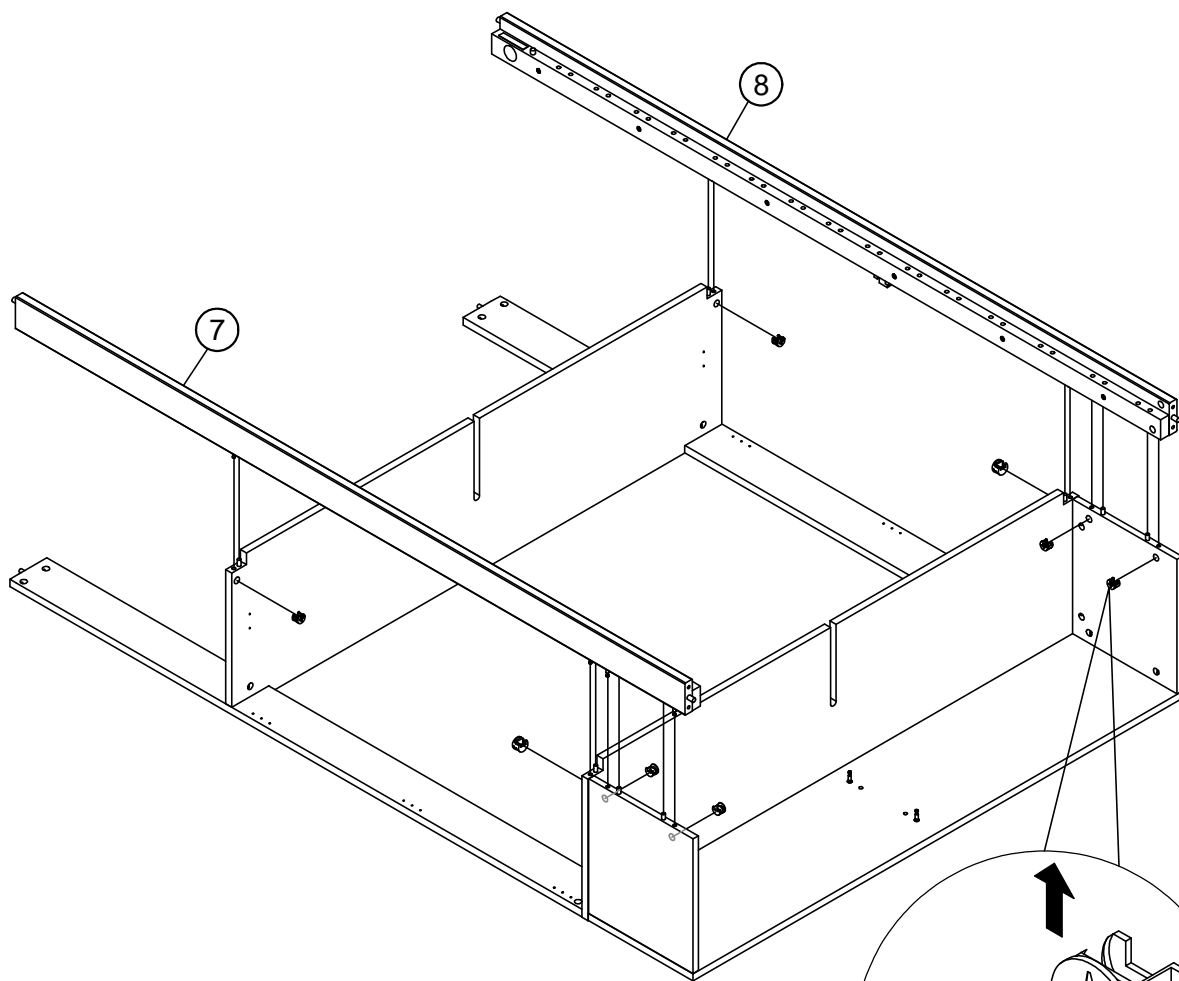

B4

Ø15 x 12mm


8



not supplied



10

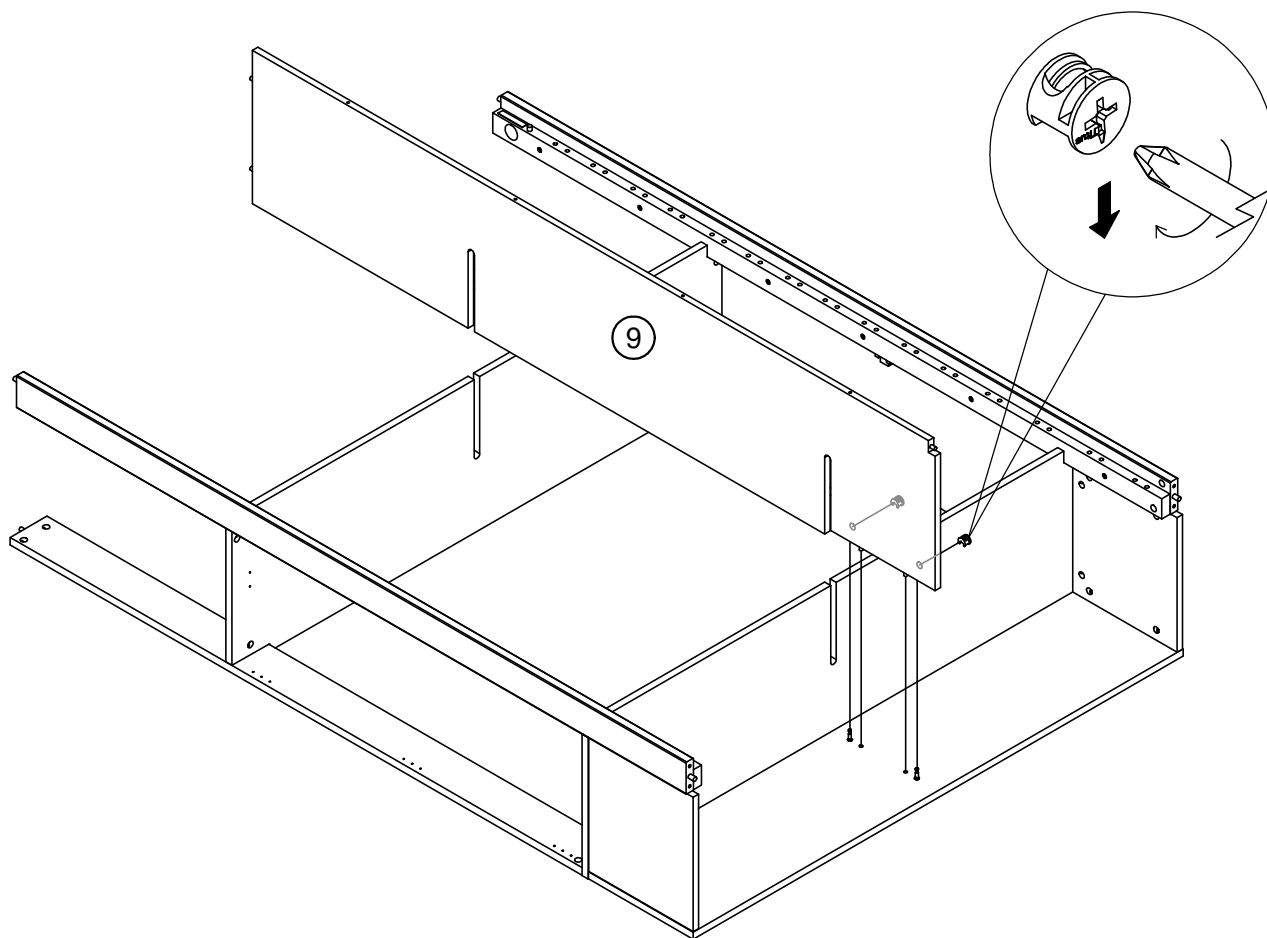

B4


Ø15 x 12mm


2




not supplied




11

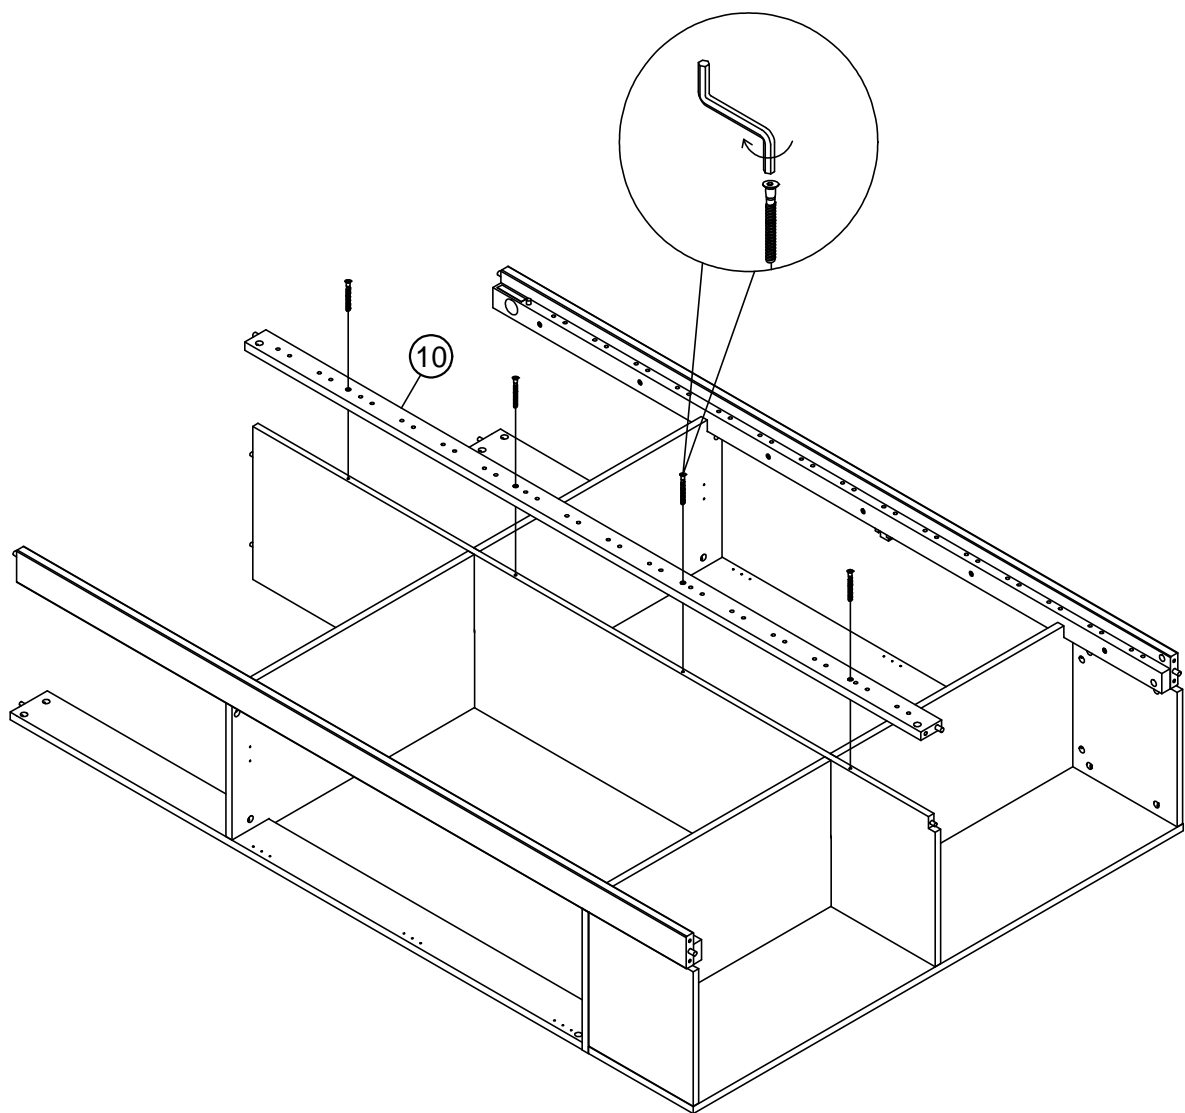

|    |           |   |   |
|----|-----------|---|---|
| T1 | N/A       | 2 |  |
| Y8 | Ø6 x 50mm | 4 |  |


12

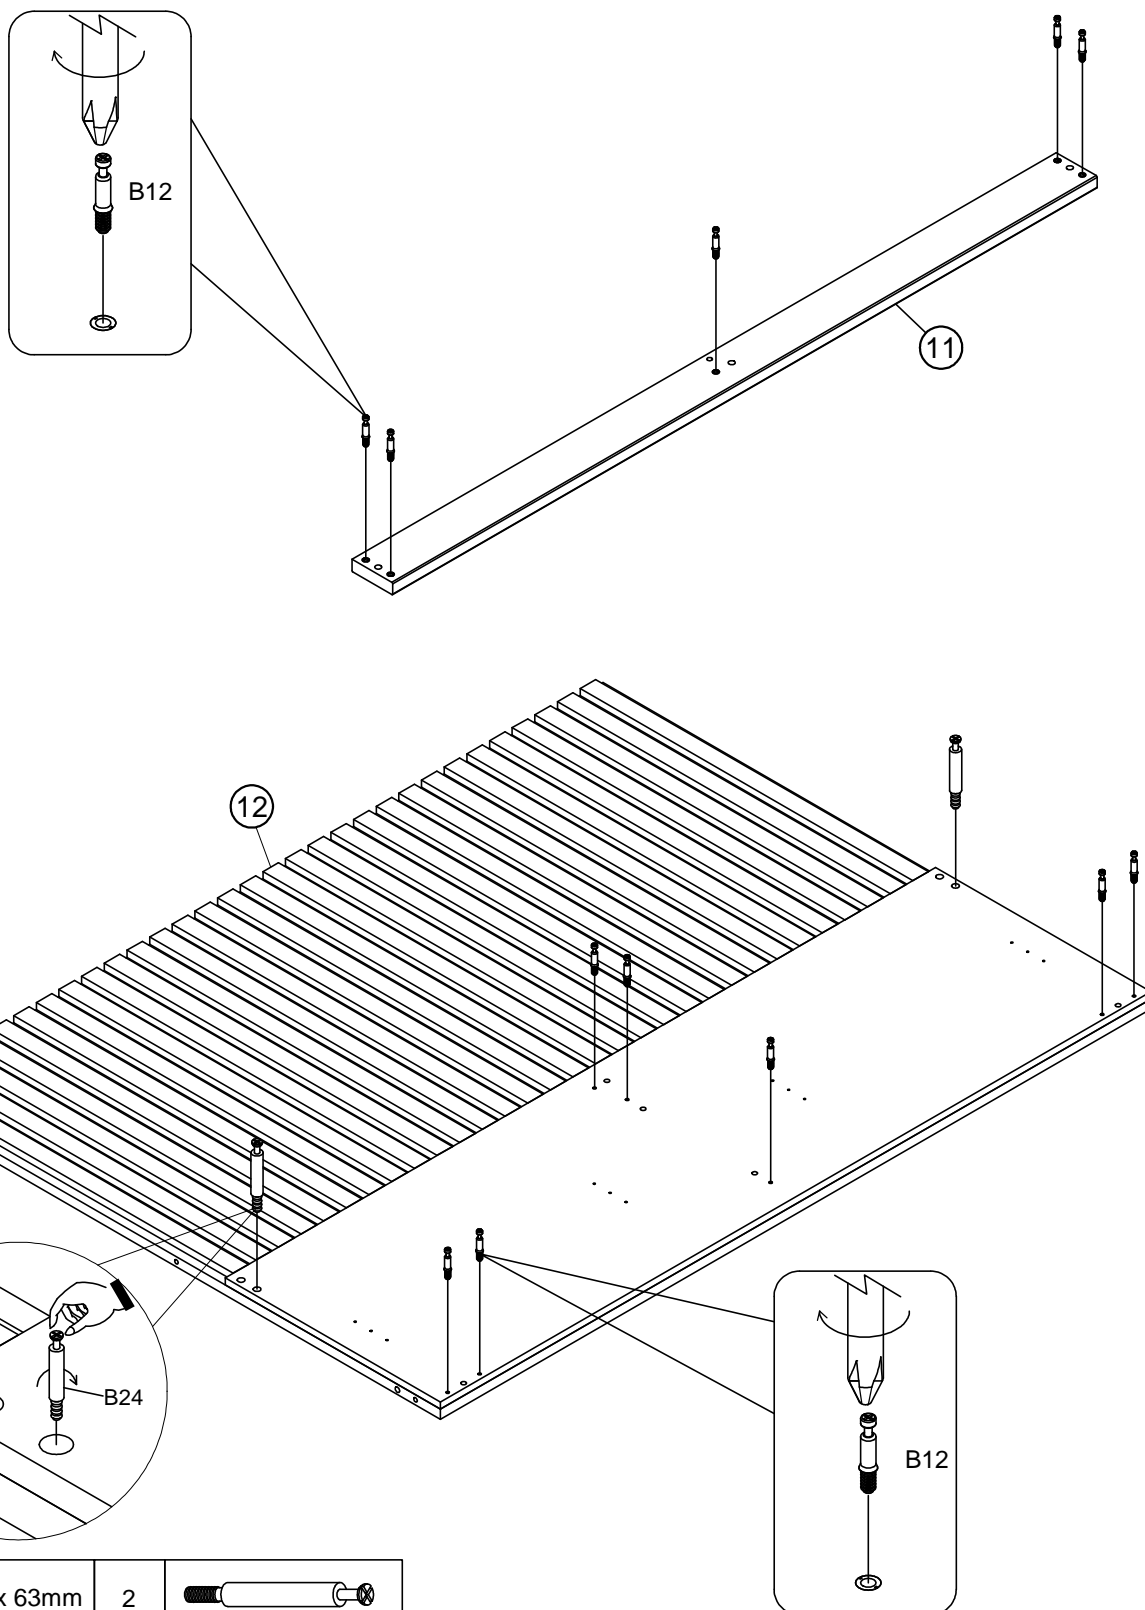



|     |             |    |   |
|-----|-------------|----|---|
| B24 | Ø8.5 x 63mm | 2  |    |
| B12 | Ø7.5 x 33mm | 12 |   |

not supplied

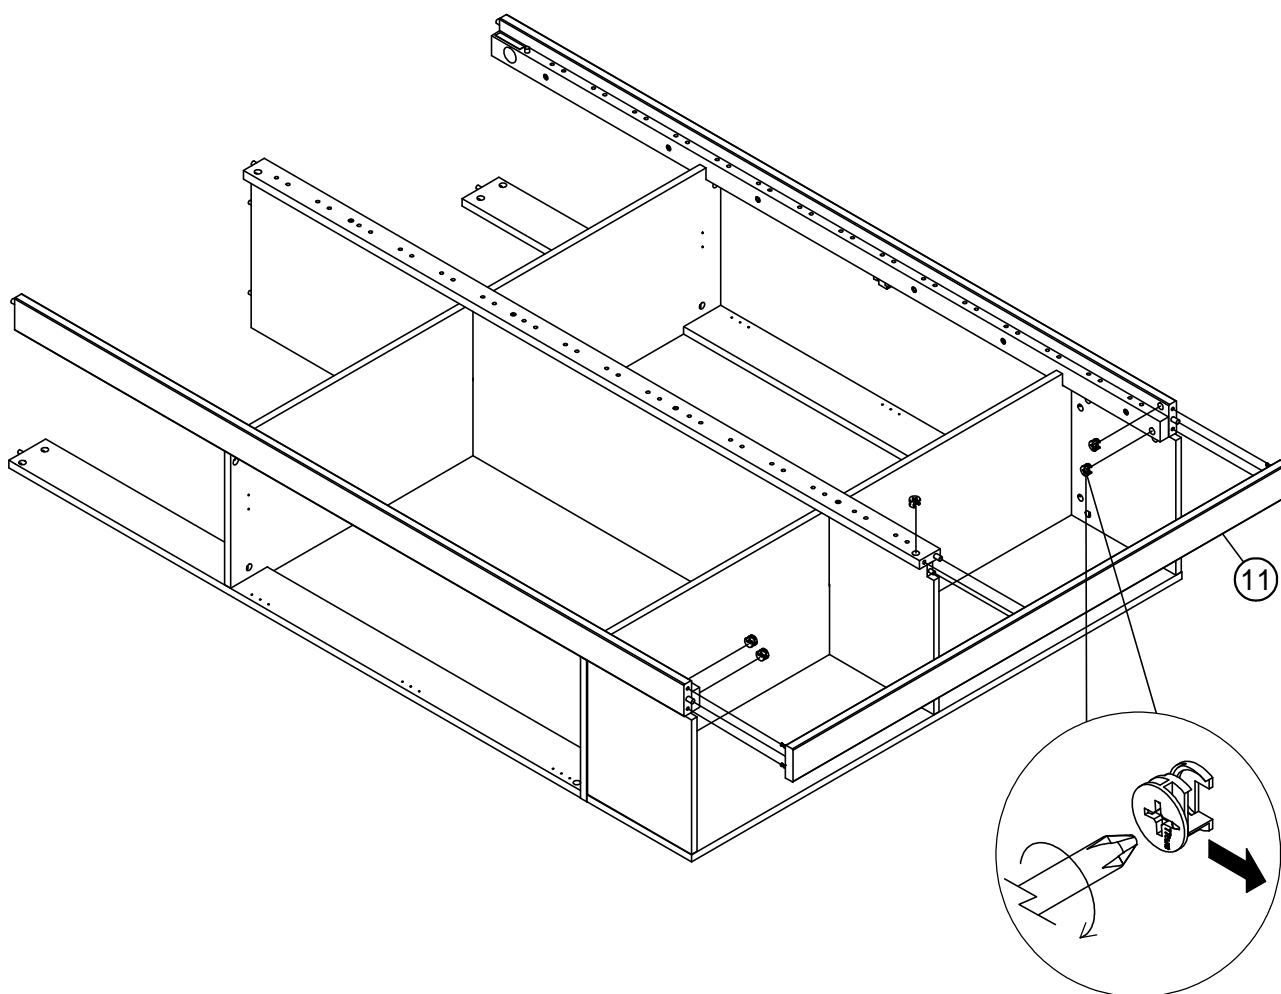13




|    |            |   |   |   |
|----|------------|---|---|---|
| B4 | Ø15 x 12mm | 5 |  | <br>not supplied |
|----|------------|---|---|---|

14




|    |            |   |                  |
|----|------------|---|------------------|
| T7 | N/A        | 1 |                  |
| B4 | Ø15 x 12mm | 7 | <br>not supplied |

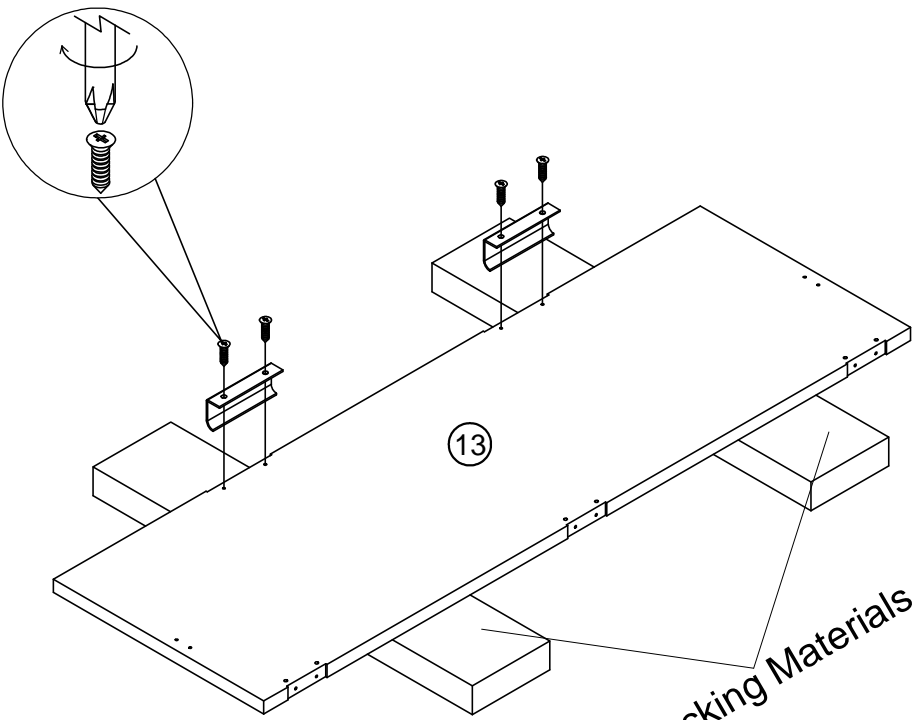15




Packing Materials




X2

|     |     |   |   |
|-----|-----|---|---|
| E39 | N/A | 4 |   <br>not supplied |
|-----|-----|---|---|

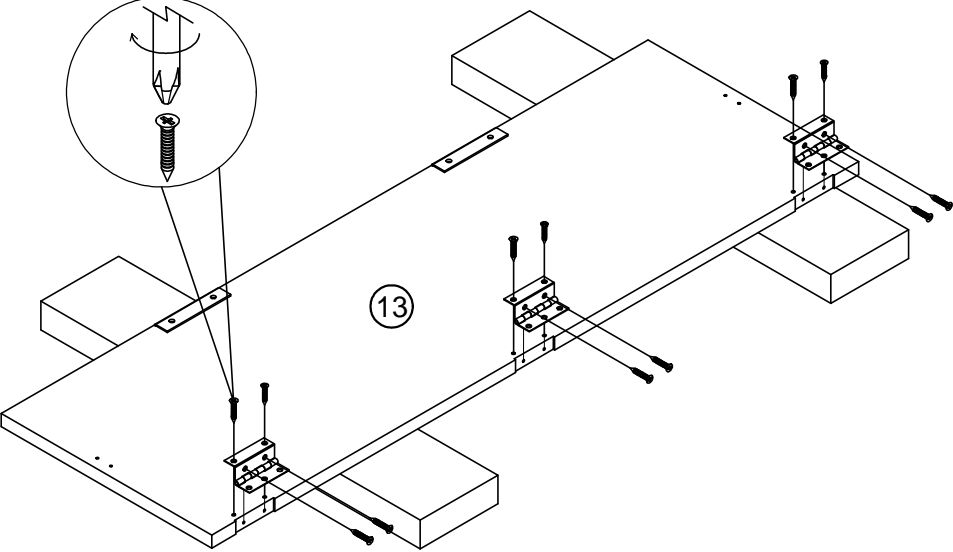
16





X2


|      |           |    |   |
|------|-----------|----|---|
| U123 | Ø4 x 16mm | 24 |  <br>not supplied |
| H29  | N/A       | 6  |    |

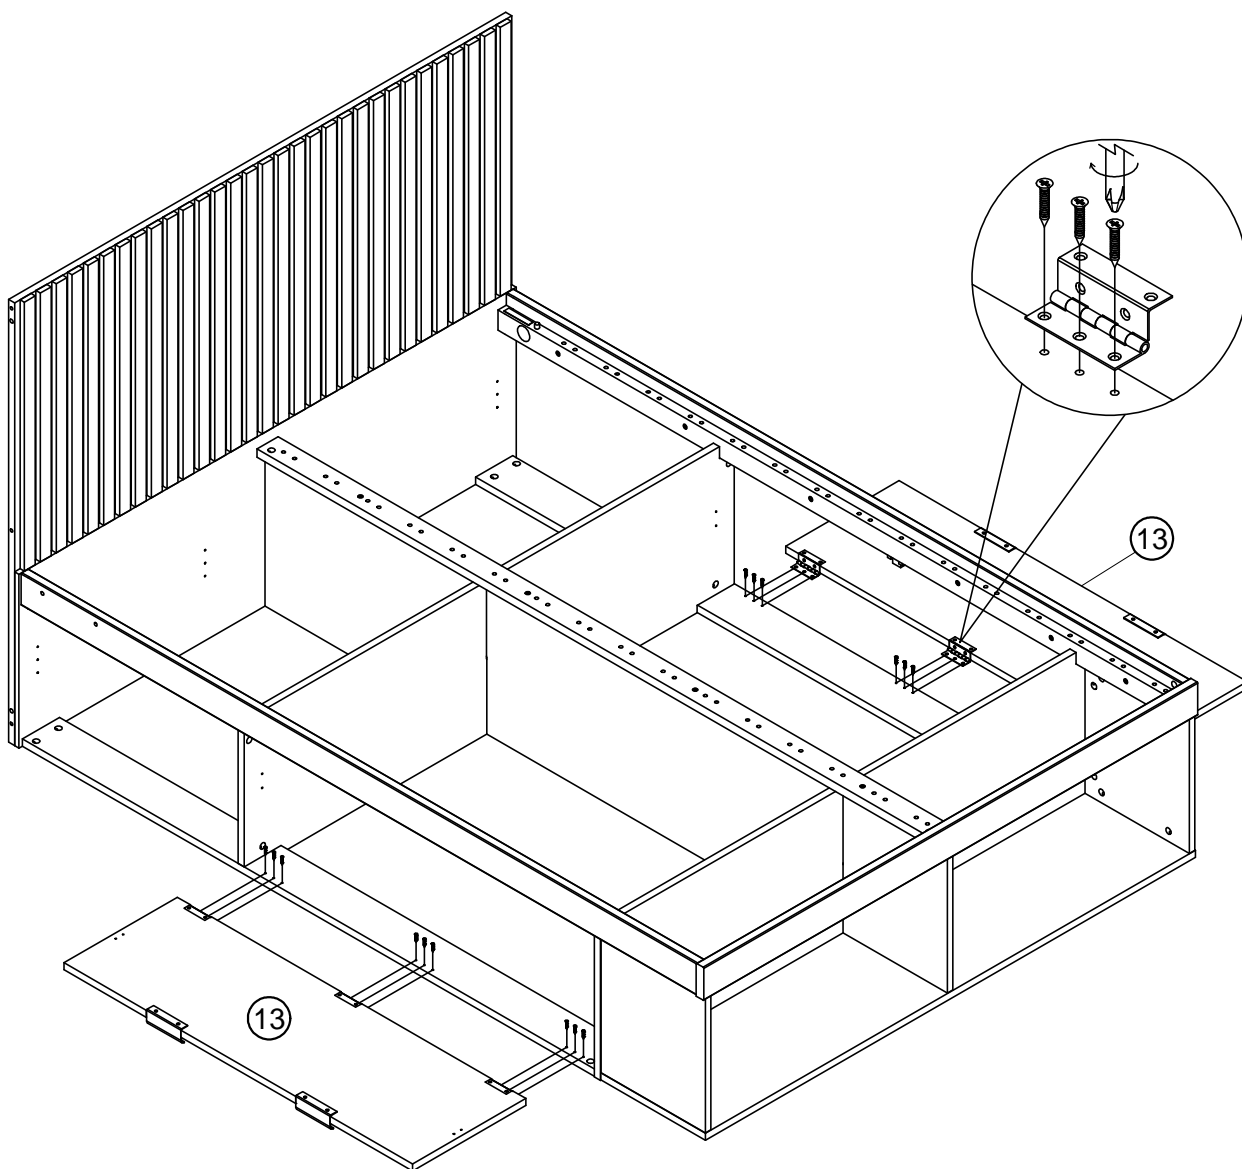


17



|      |           |    |   |   |
|------|-----------|----|---|---|
| U123 | Ø4 x 16mm | 18 |  | <br>not supplied |
|------|-----------|----|---|---|

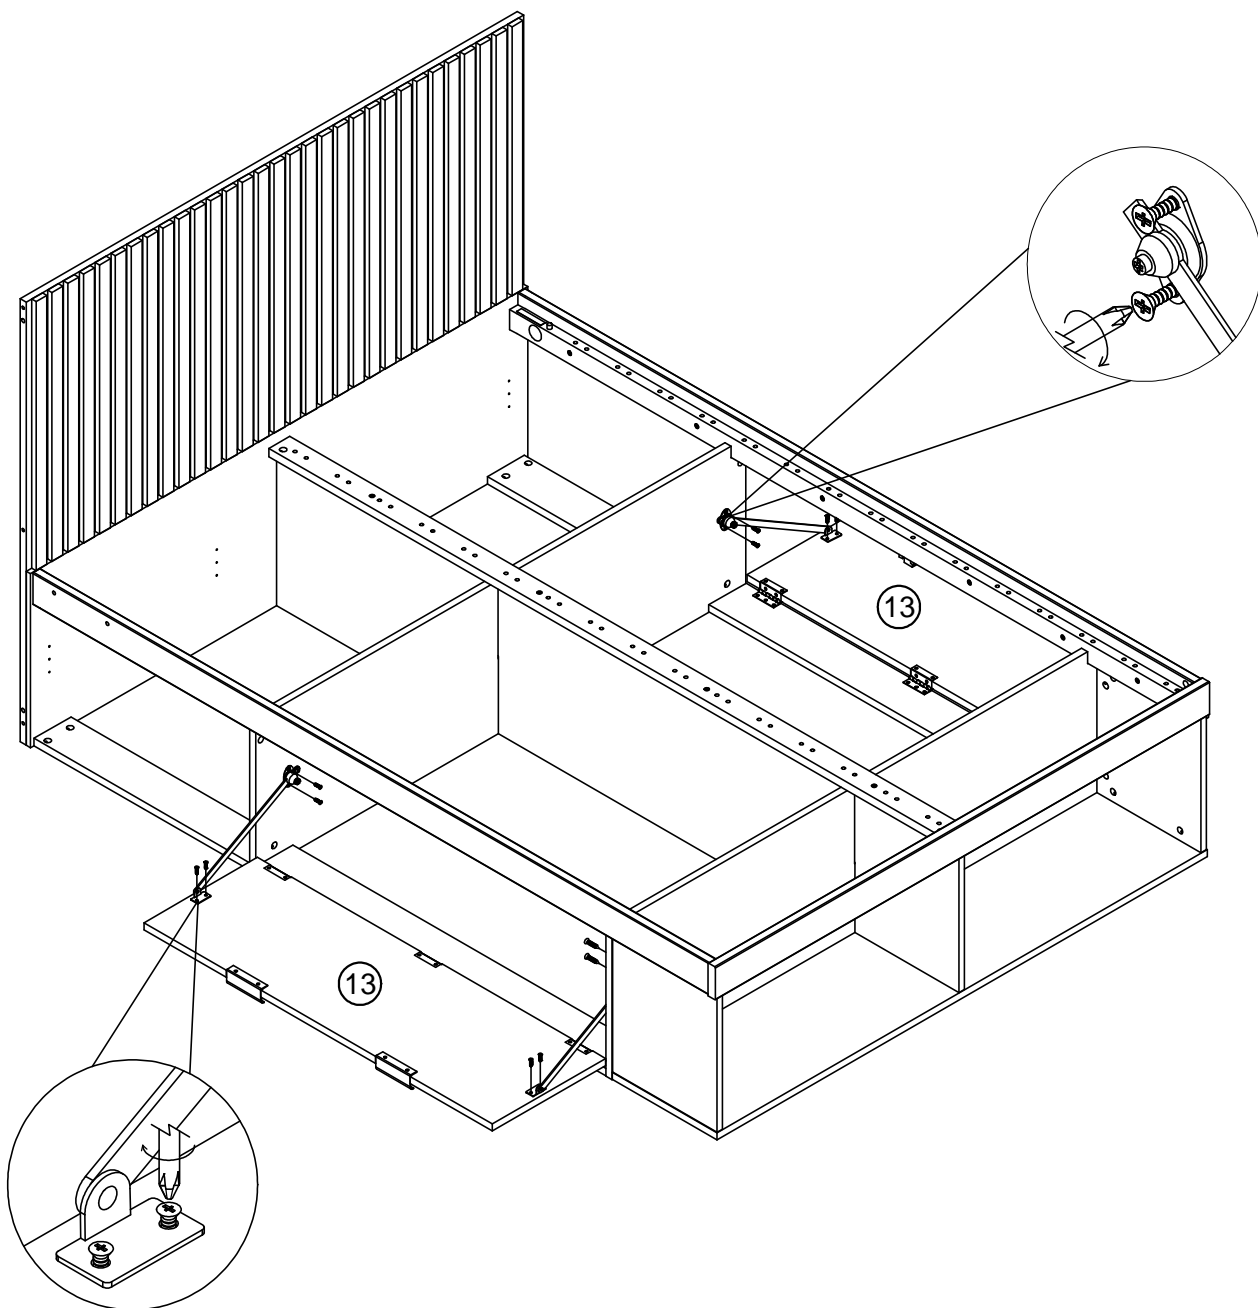
18






|      |           |    |   |   |
|------|-----------|----|---|---|
| U123 | Ø4 x 16mm | 16 |  | <br>not supplied |
| H38  | N/A       | 4  |  |   |



19

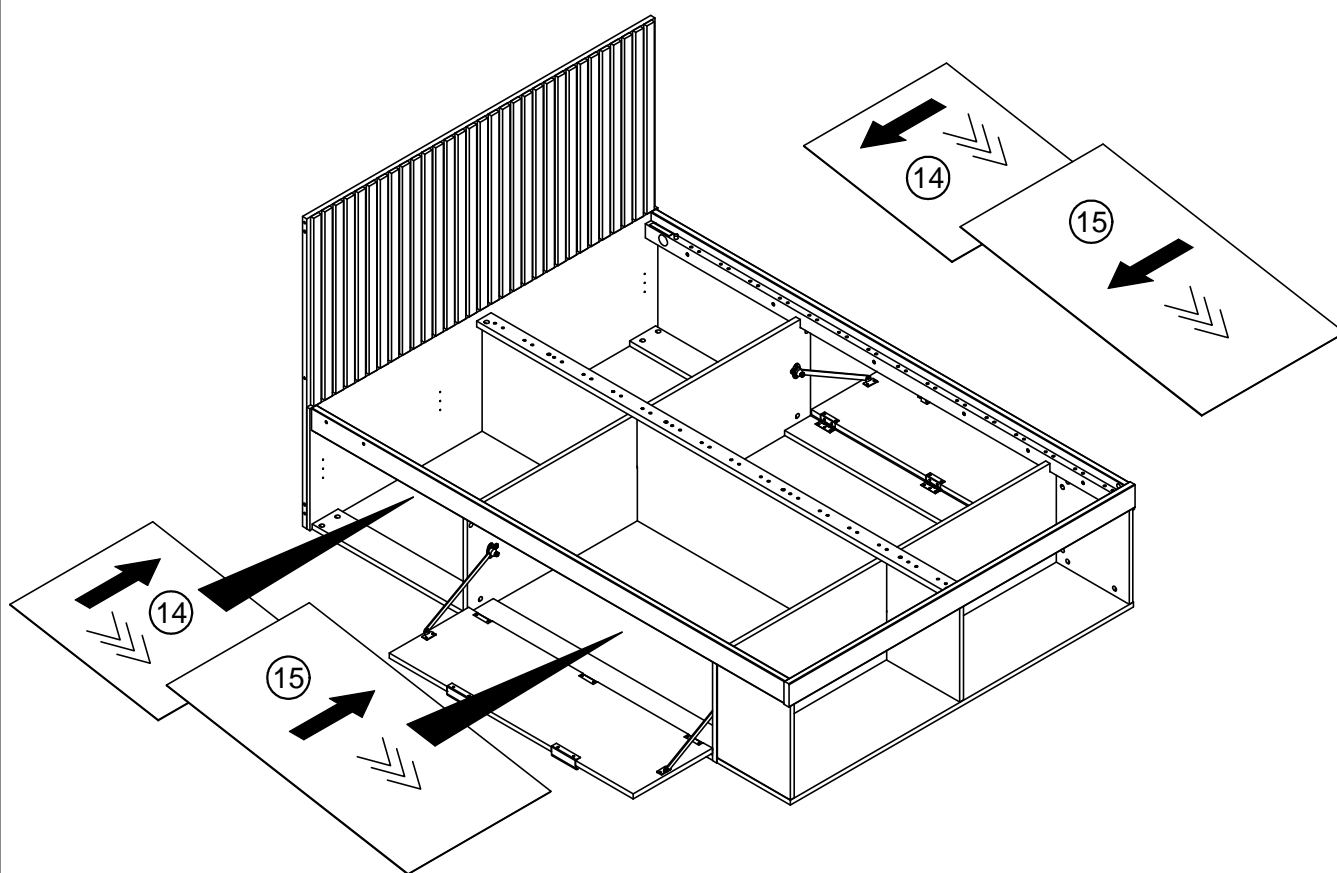


20

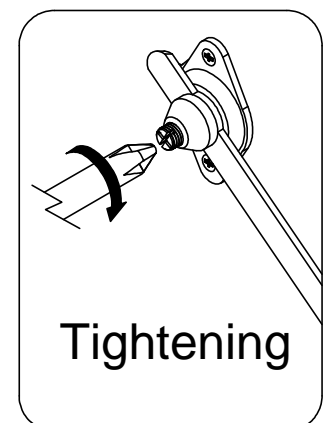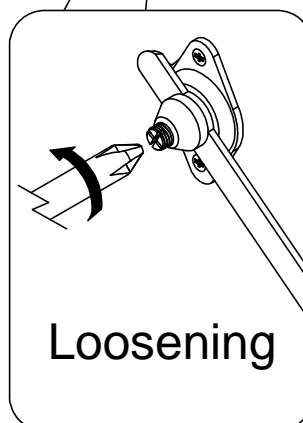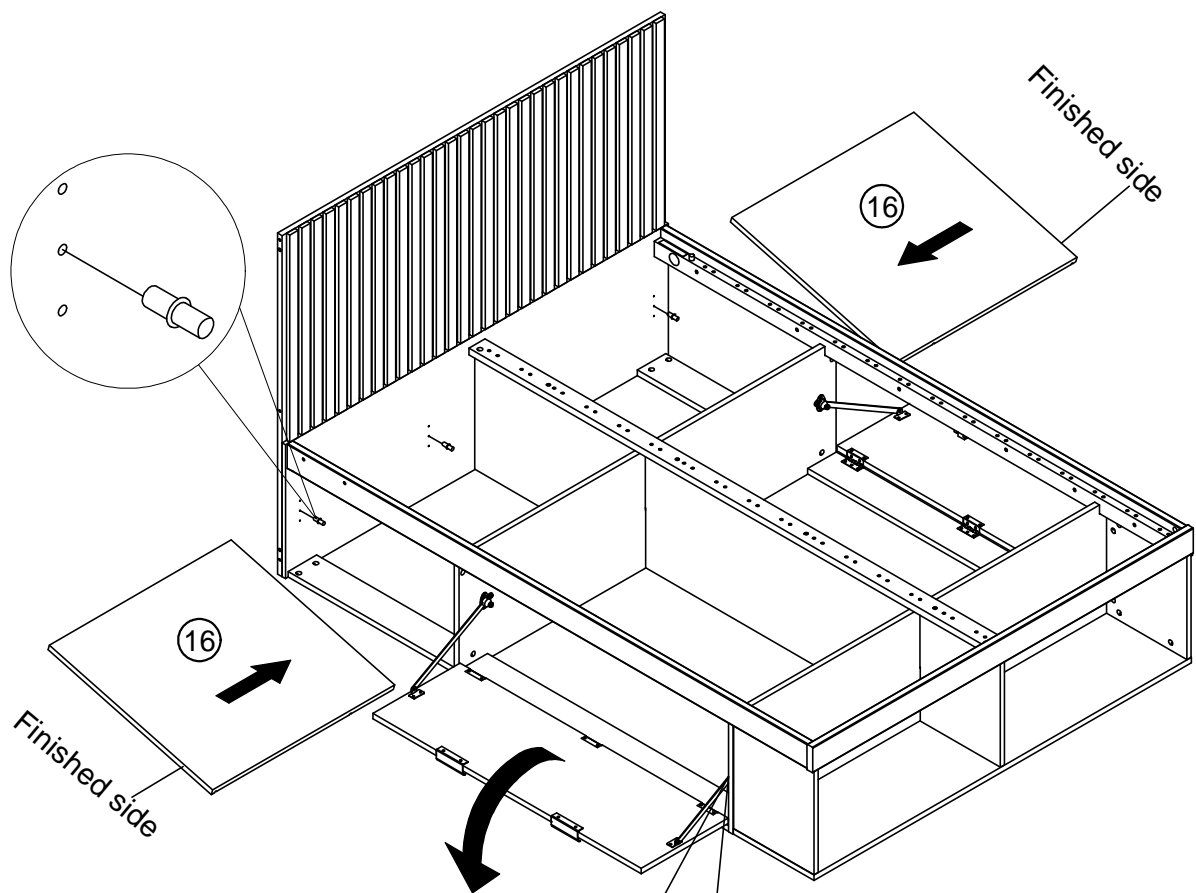


|    |           |   |  |
|----|-----------|---|--|
| P3 | Ø5 x 16mm | 8 |  |
|----|-----------|---|--|

21

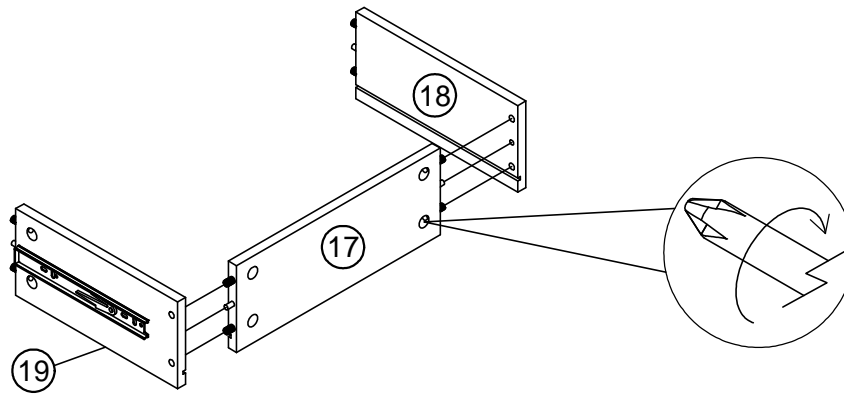


X2

22

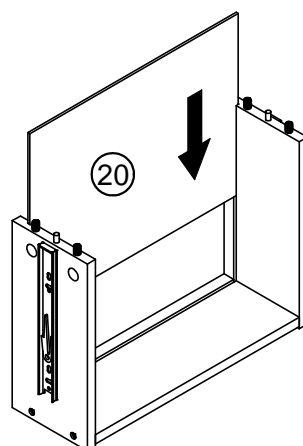


X2

23

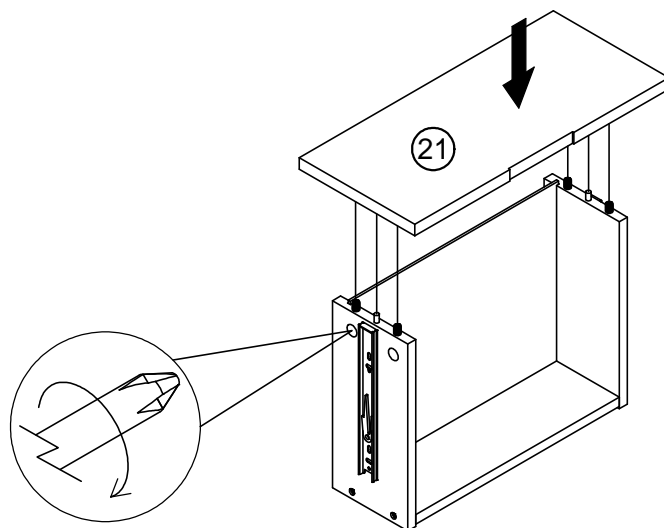




X2

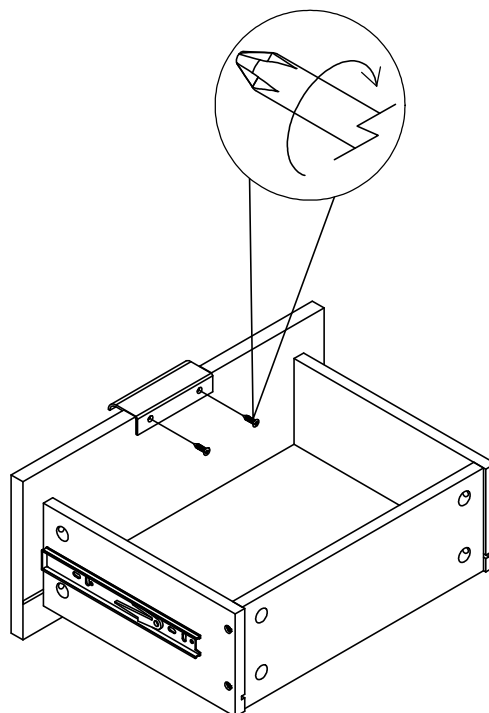
24




X2

|     |     |   |   |   |   |
|-----|-----|---|---|---|---|
| E39 | N/A | 2 |  |  | <br>not supplied |
|-----|-----|---|---|---|---|


25

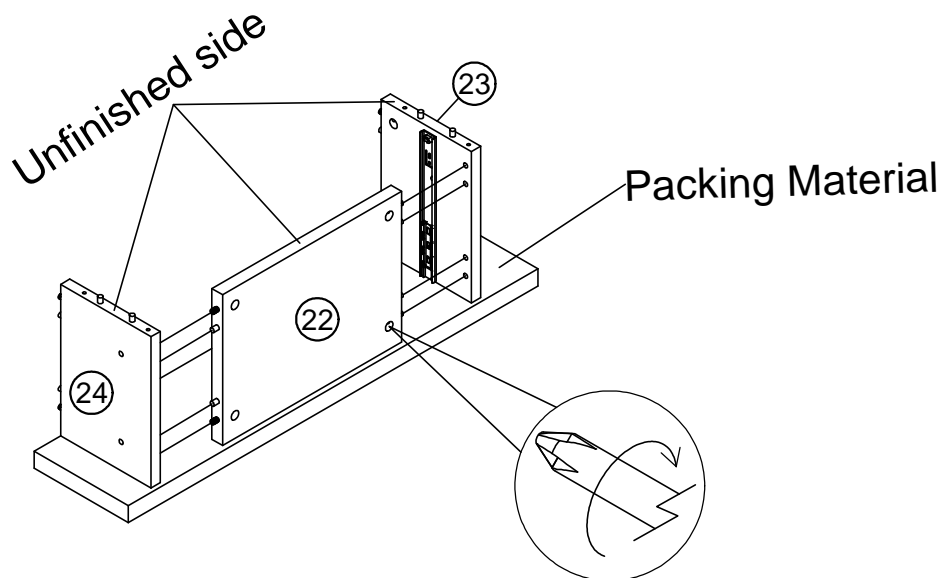


26

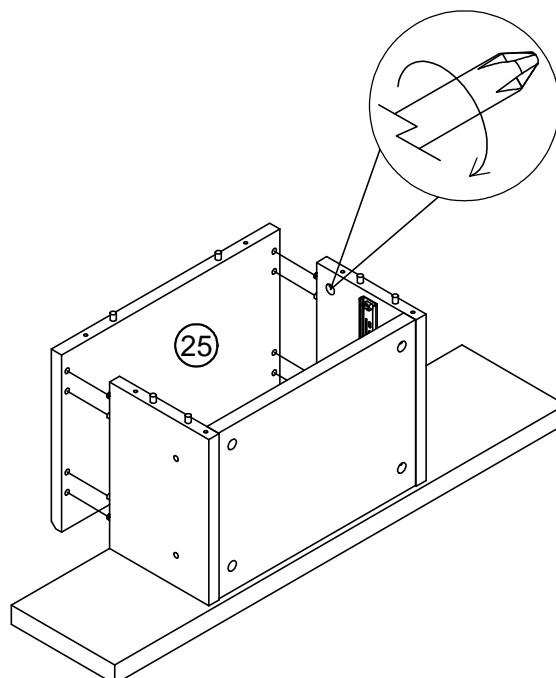



27

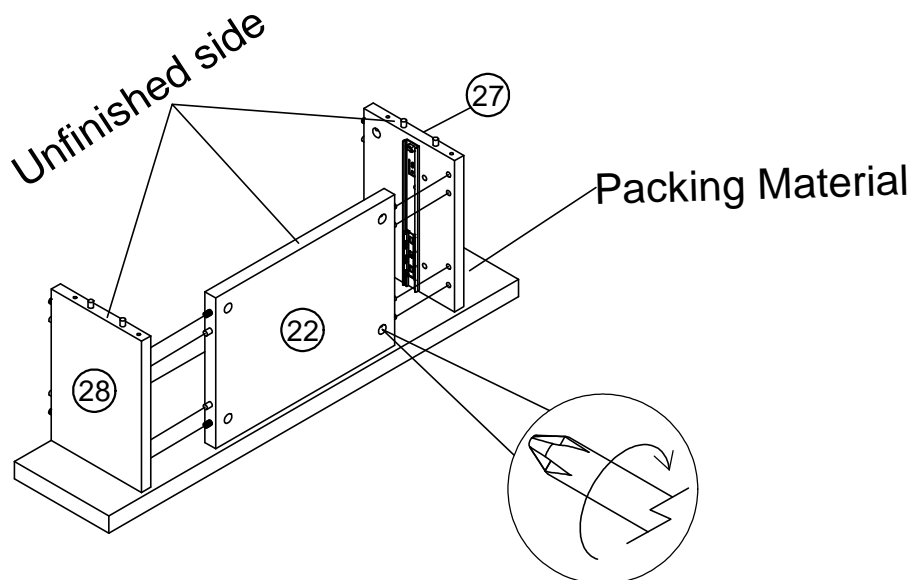

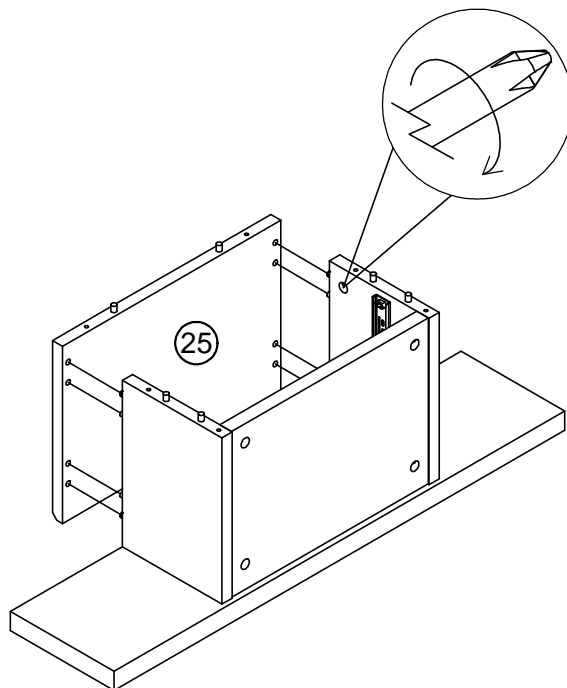

28

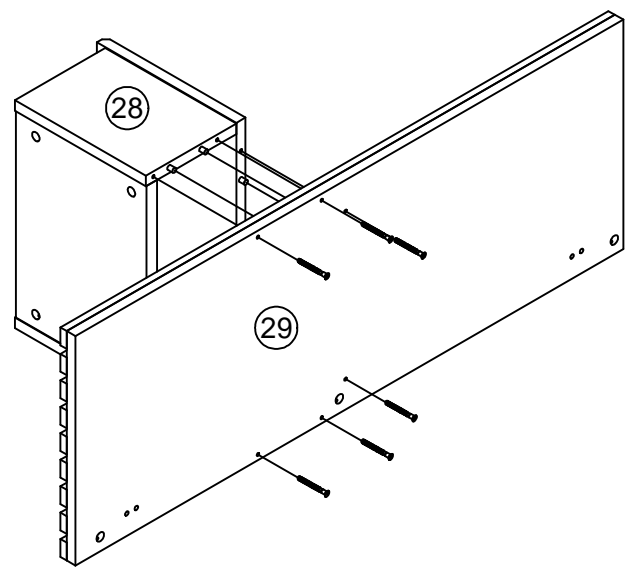
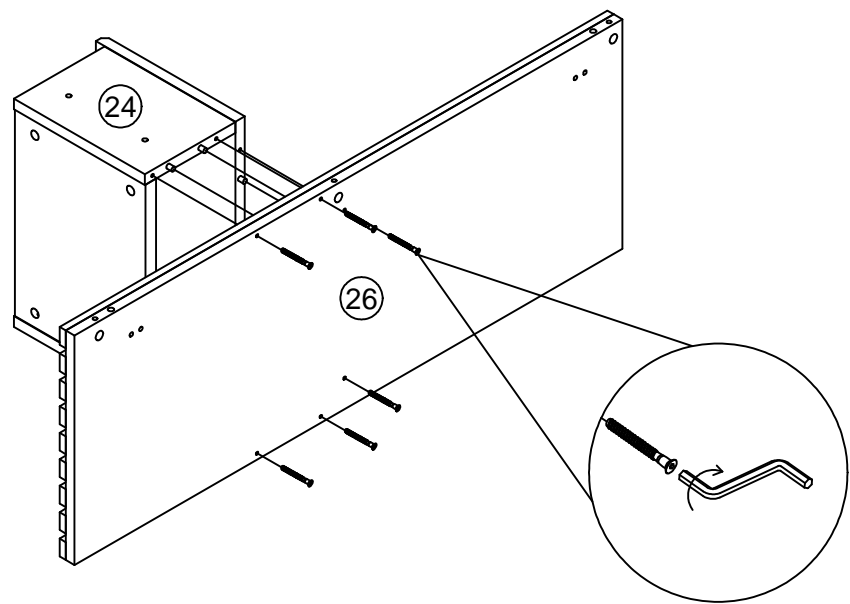





29



|    |           |    |   |
|----|-----------|----|---|
| T1 | N/A       | 2  |  |
| Y8 | Ø6 x 50mm | 12 |  |


30

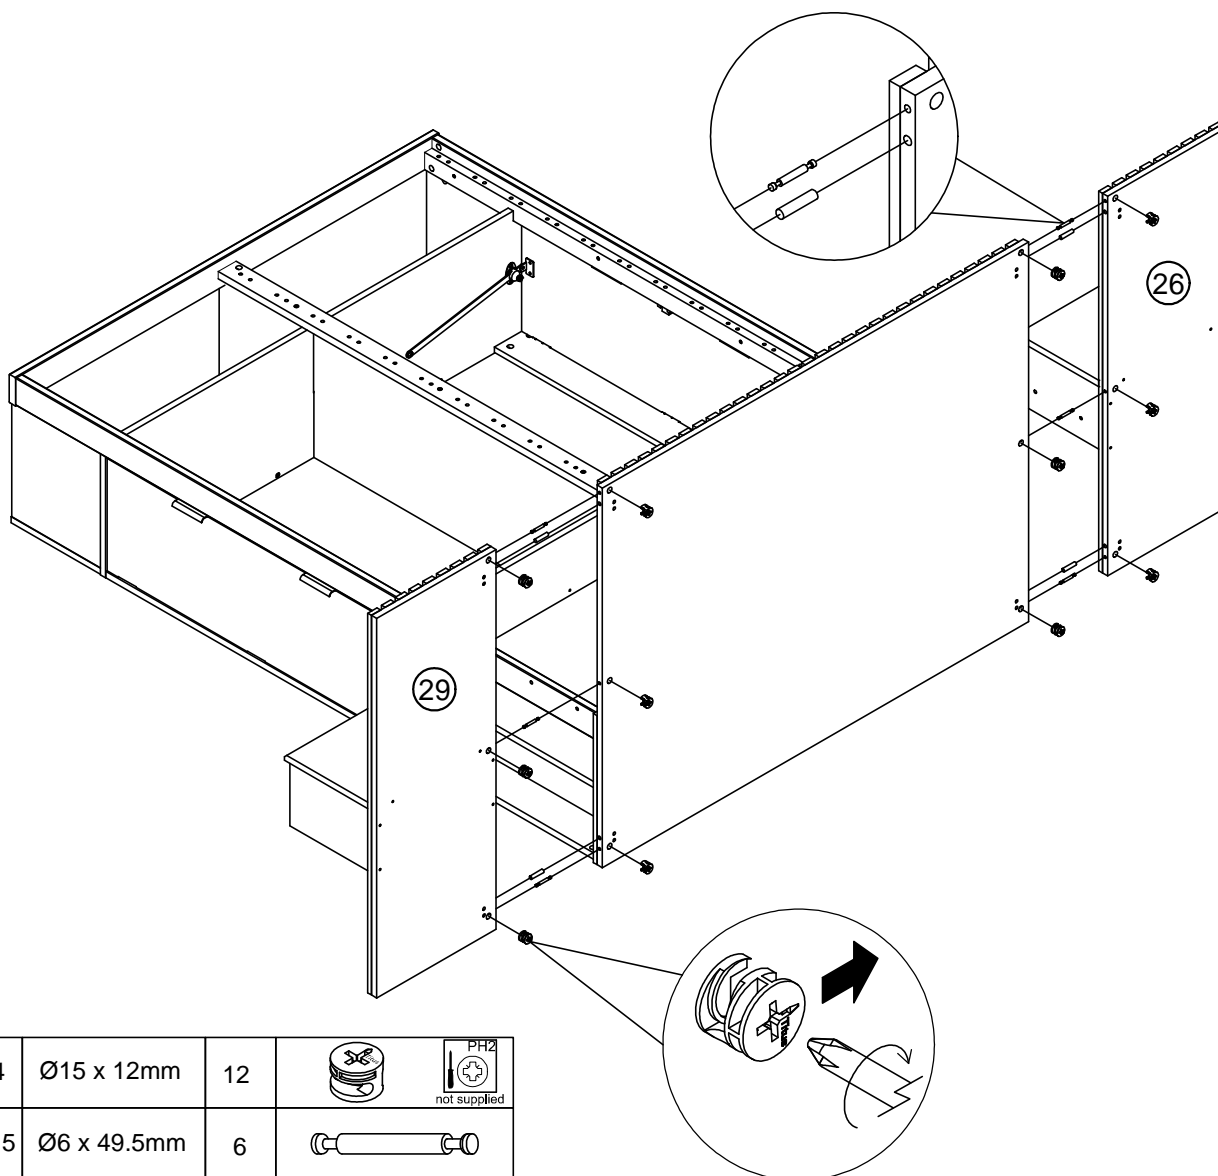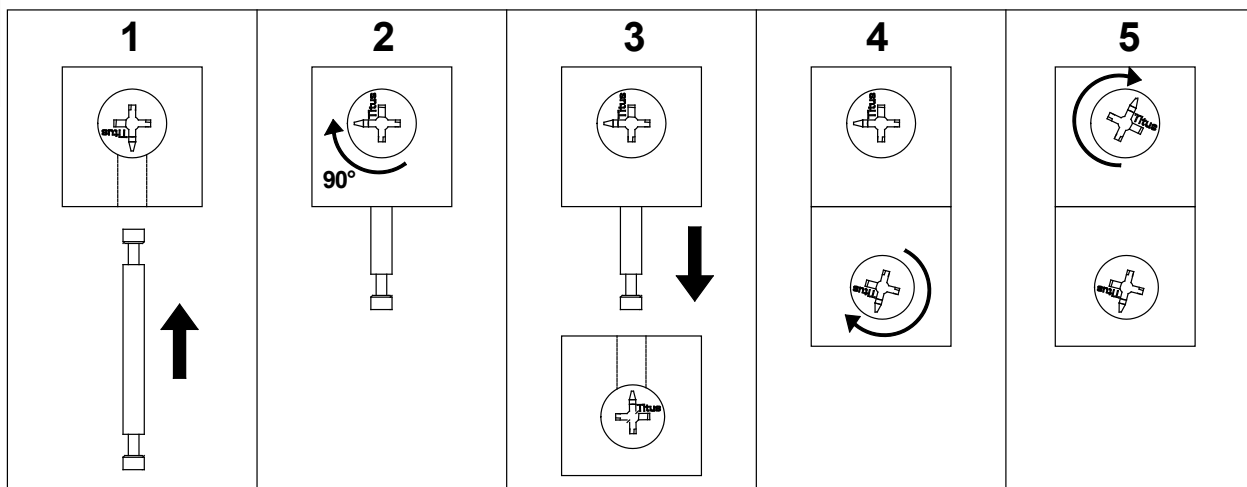

|     |             |    |   |
|-----|-------------|----|---|
| B4  | Ø15 x 12mm  | 12 | <br>not supplied |
| B15 | Ø6 x 49.5mm | 6  |                  |
| D24 | Ø8x 40mm    | 4  |                  |




31

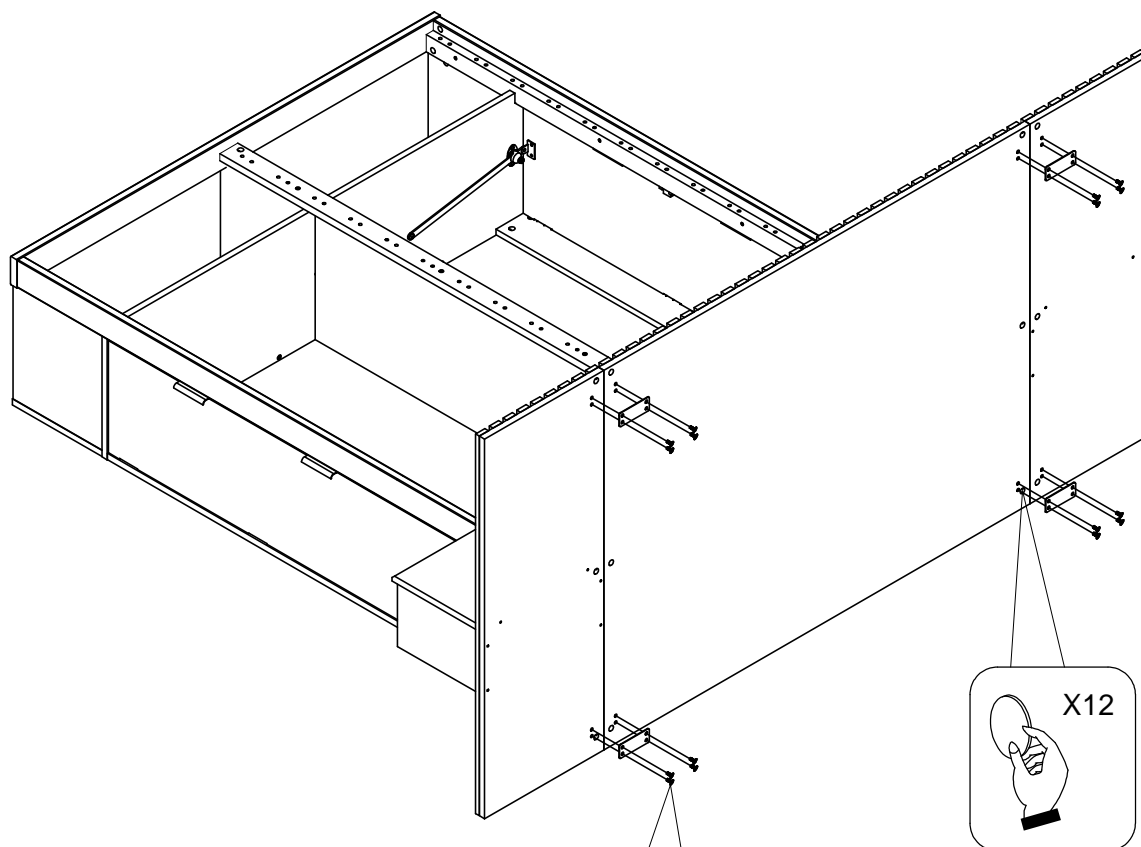


Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.

|     |           |    |  |
|-----|-----------|----|--|
| O2  | Ø21mm     | 12 |  |
| T1  | N/A       | 2  |  |
| V35 | Ø6 x 12mm | 16 |  |
| N30 | N/A       | 4  |  |

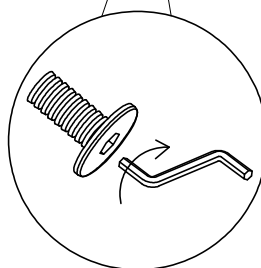




32

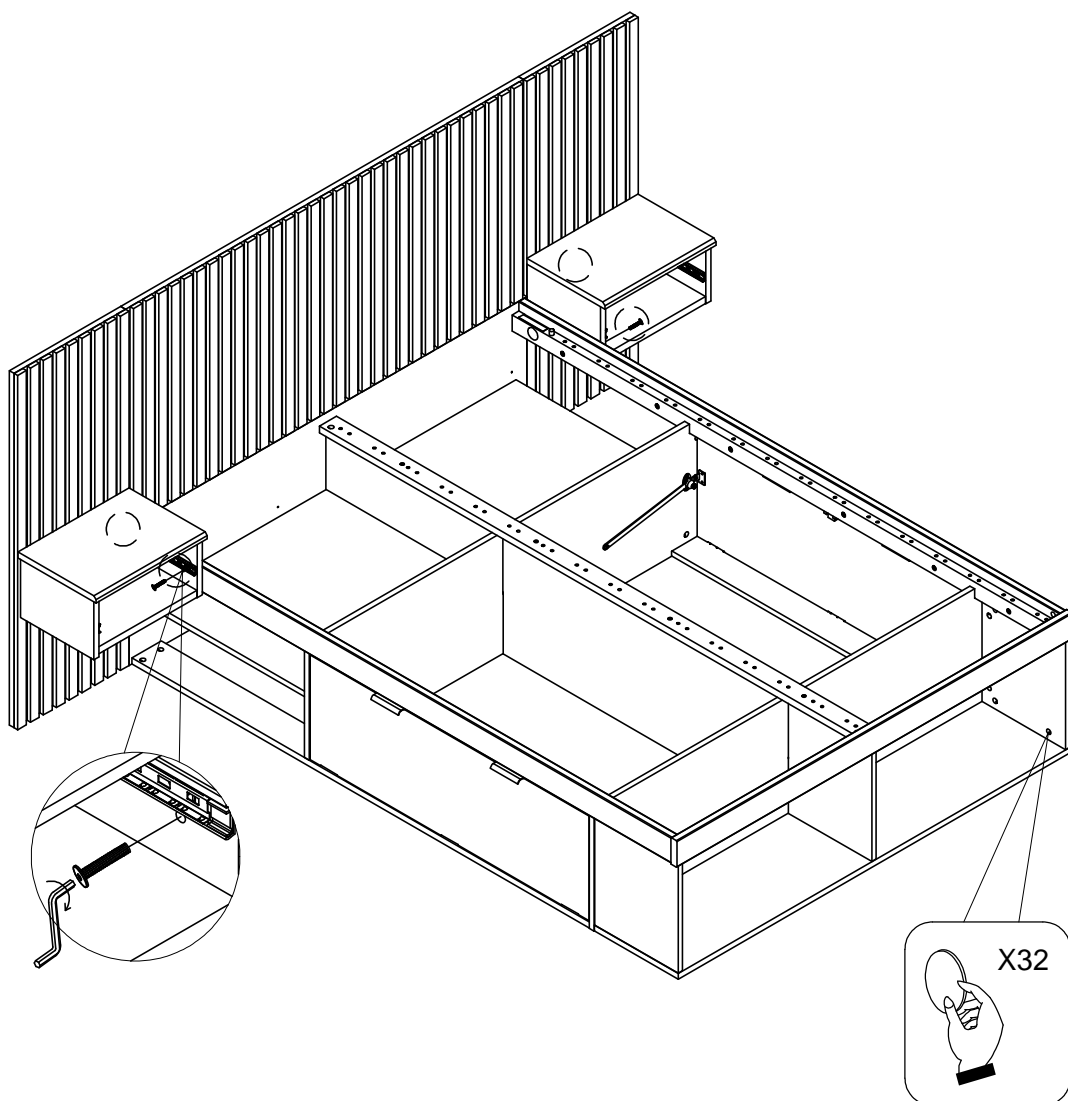

|     |           |    |  |
|-----|-----------|----|--|
| O1  | Ø21mm     | 32 |  |
| T1  | N/A       | 2  |  |
| V53 | Ø6 x 30mm | 4  |  |

Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.


33

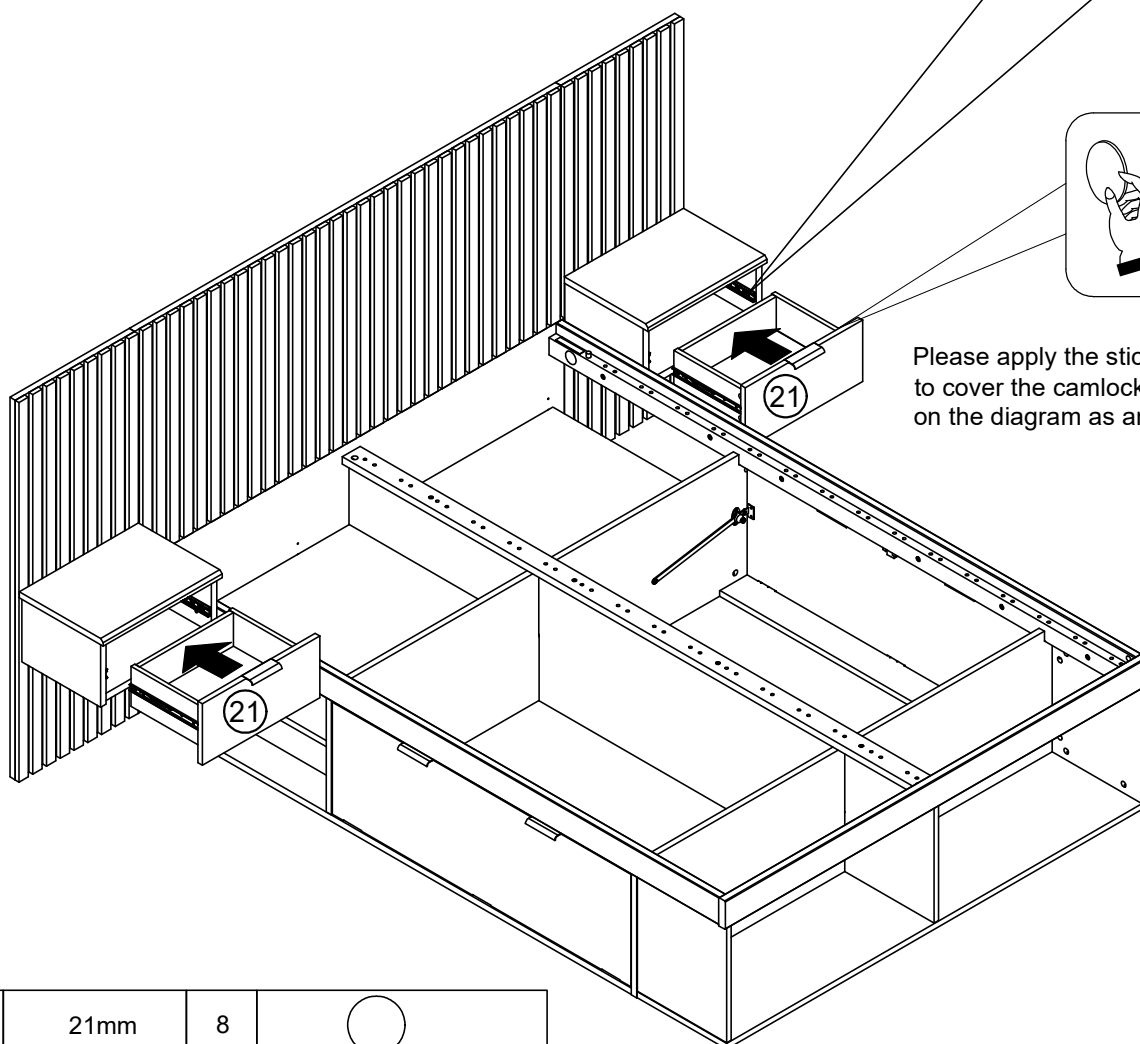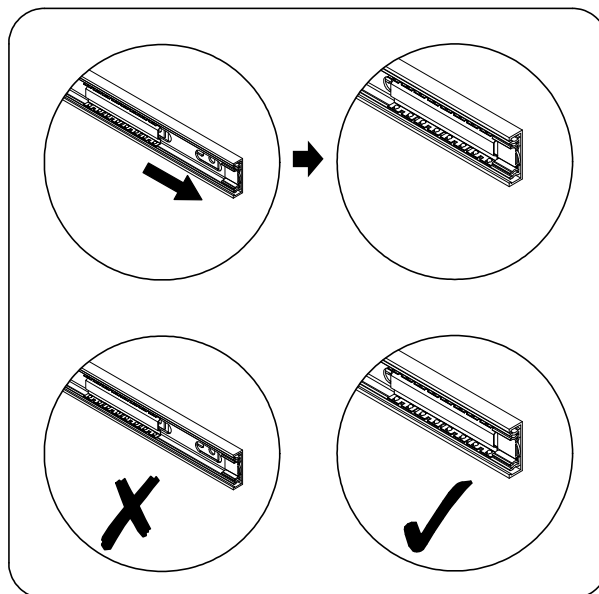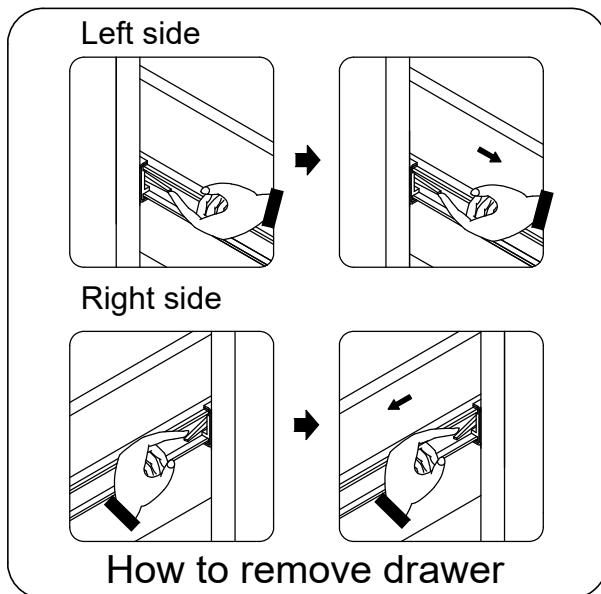


Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.


|    |      |   |  |
|----|------|---|--|
| O1 | 21mm | 8 |  |
|----|------|---|--|

34

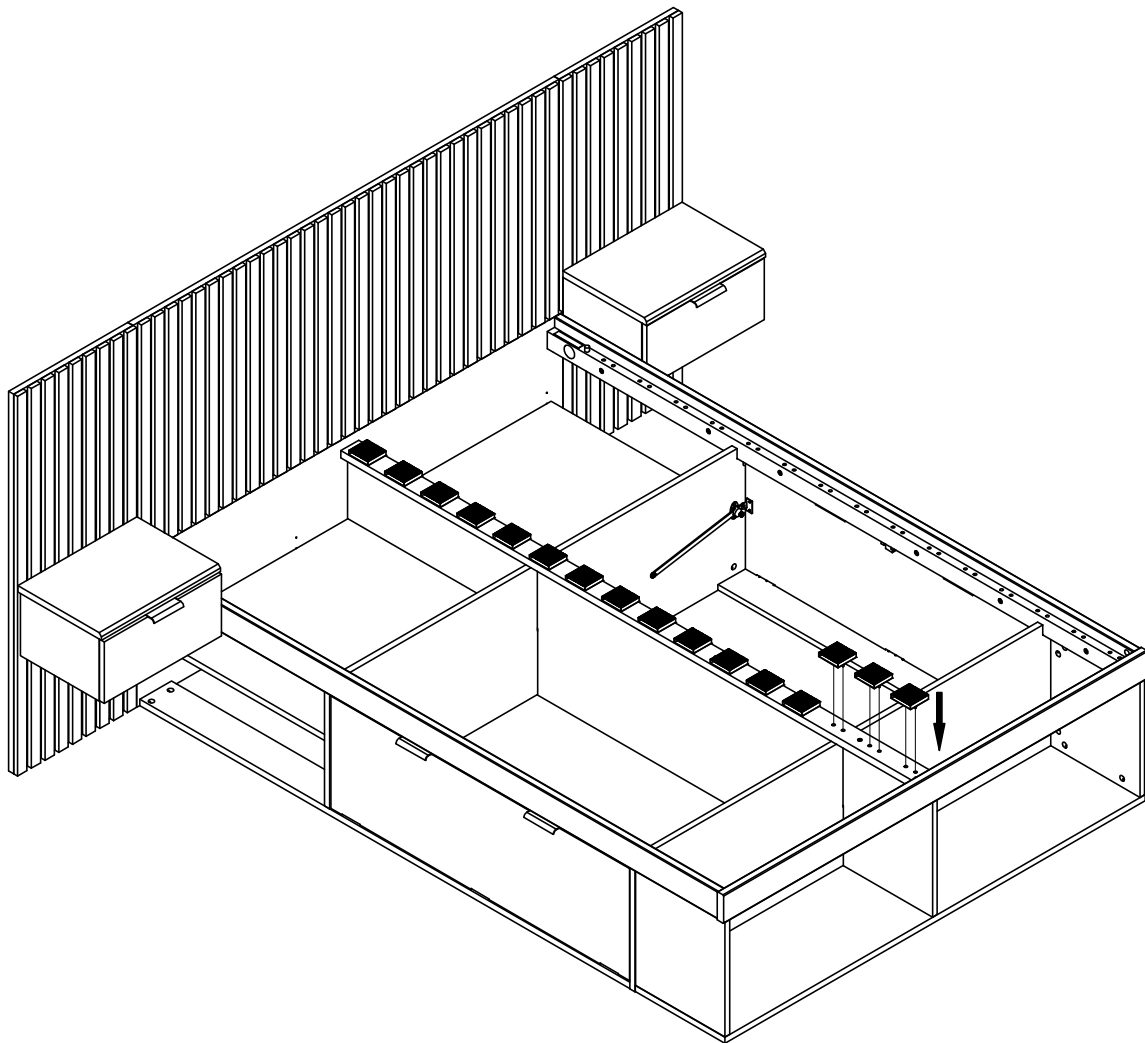

|     |     |    |   |
|-----|-----|----|---|
| T34 | N/A | 16 |  |
|-----|-----|----|---|

35

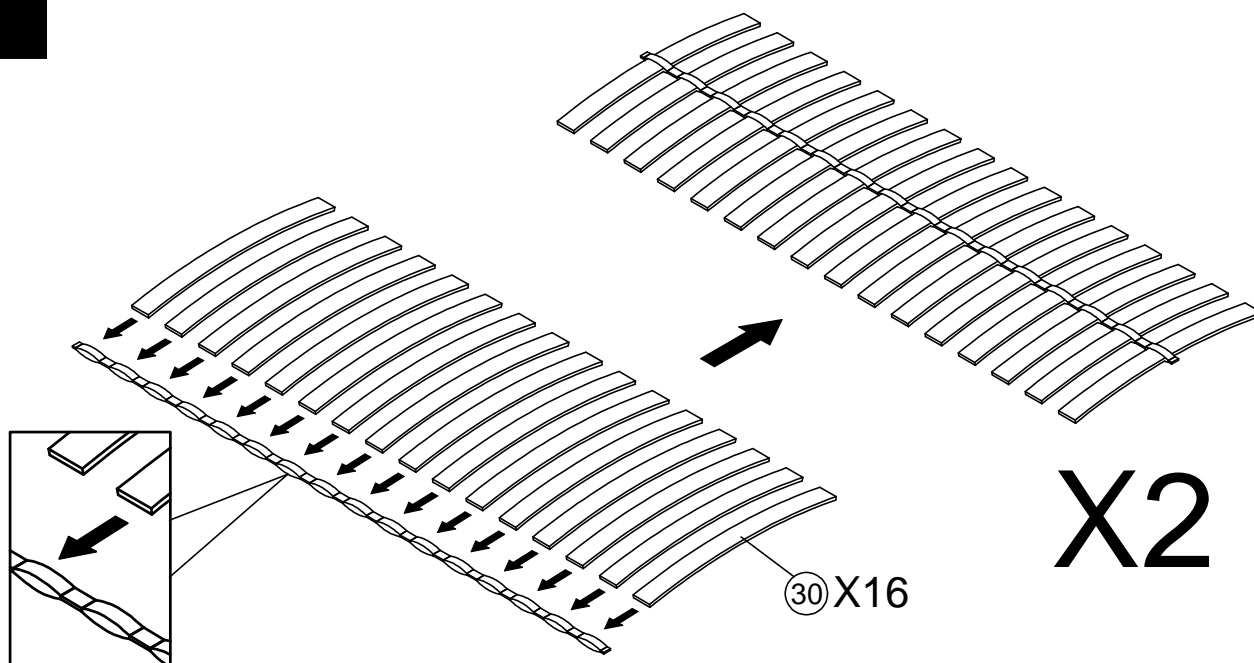


T40

N/A

2



36

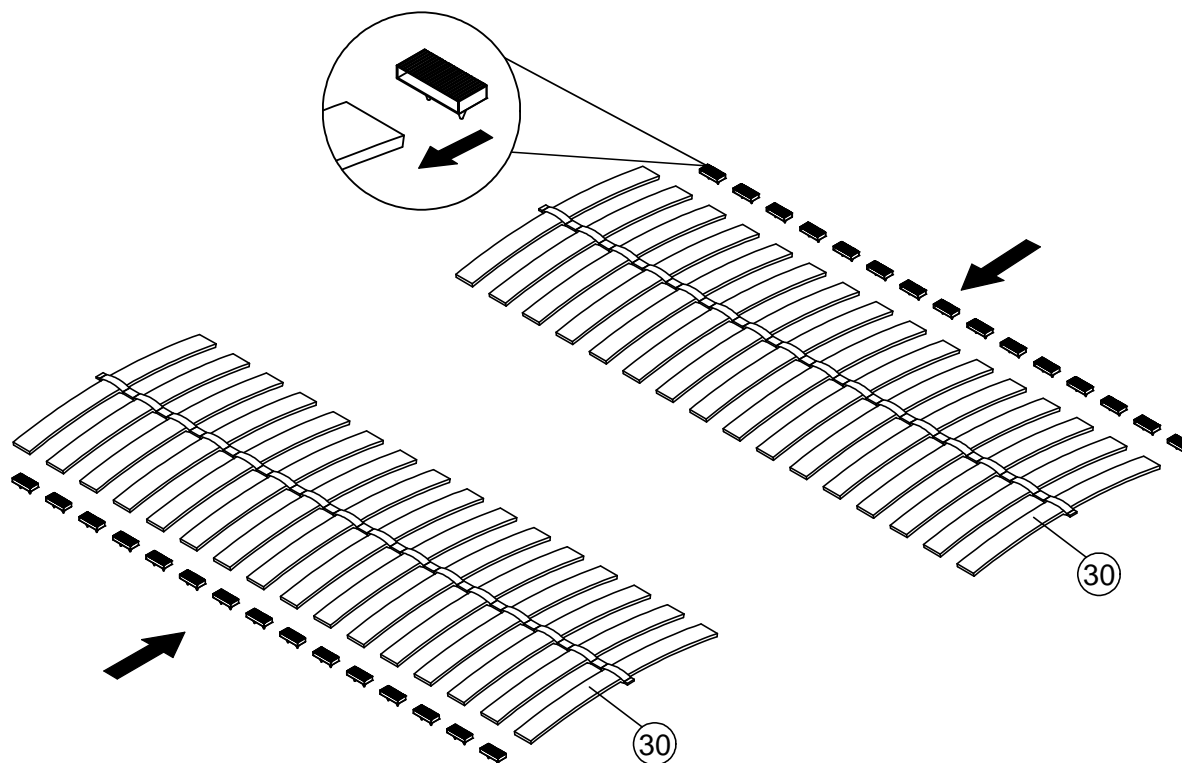


T33

N/A


30



37

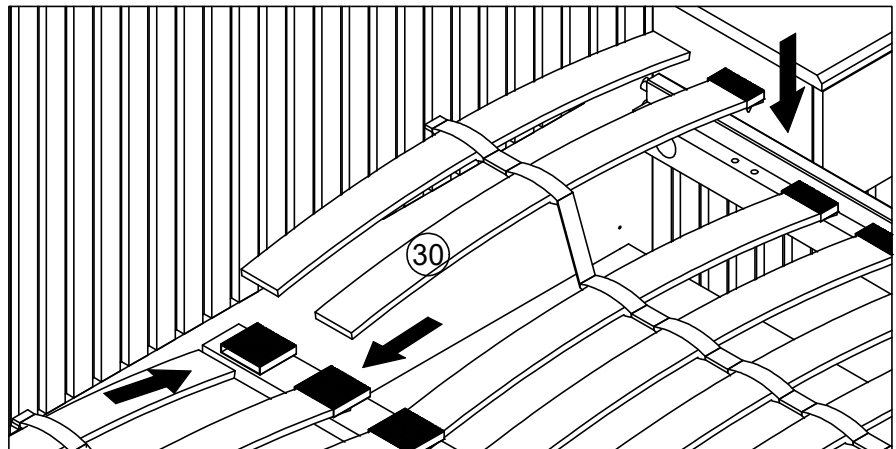

First Slat Without Plastic Cap



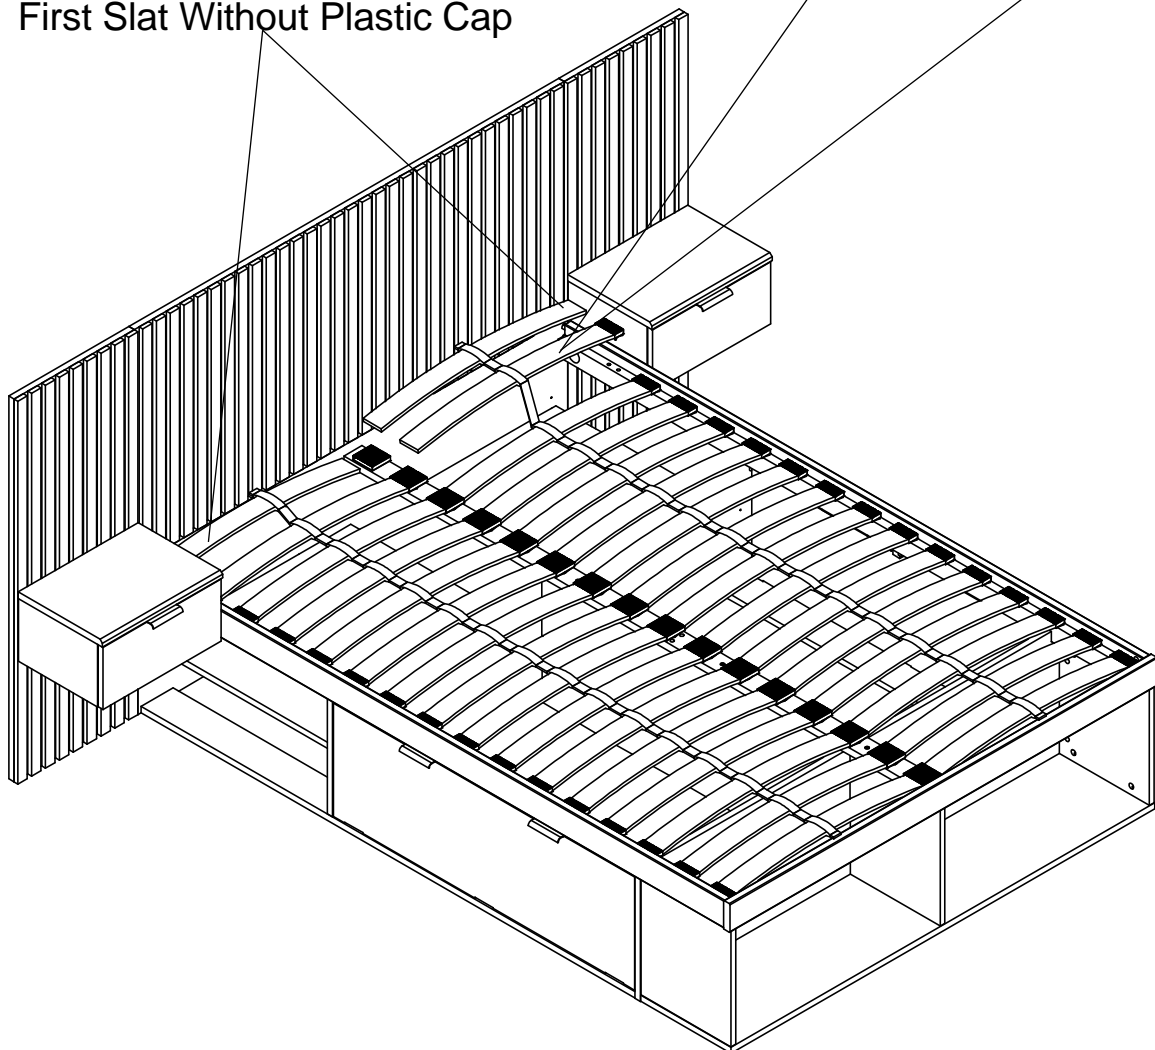


# NEXT

BRONX/BRONX LIGHT / BRONX WHITE SLAT XL BED WITH BEDSIDES  
C24482/Q96760/B06753

## Actual product size

KING: H110 x W236 x D207cm

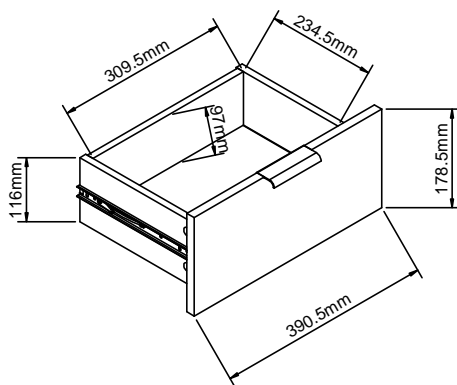
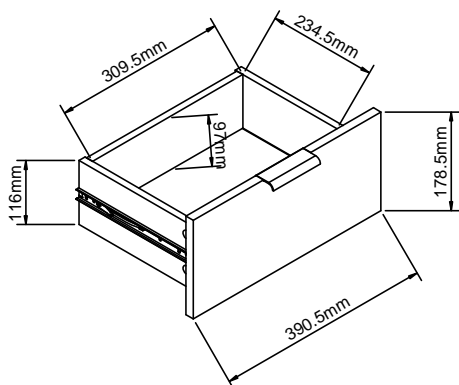
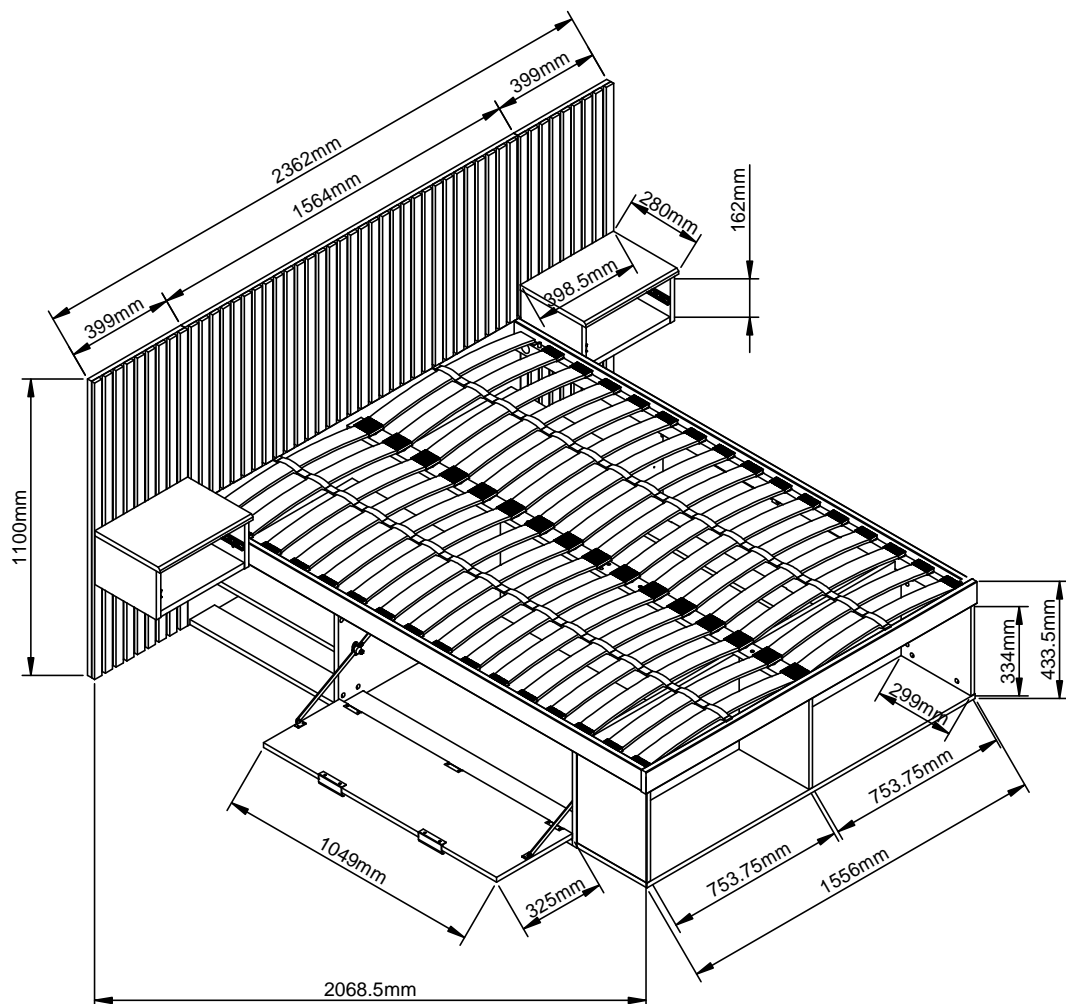


# NEXT

BRONX/BRONX LIGHT / BRONX WHITE SLAT XL BED WITH BEDSIDES  
C24482/Q96760/B06753

## Actual product size

SUPER KING:H110 x W266 x D207cm

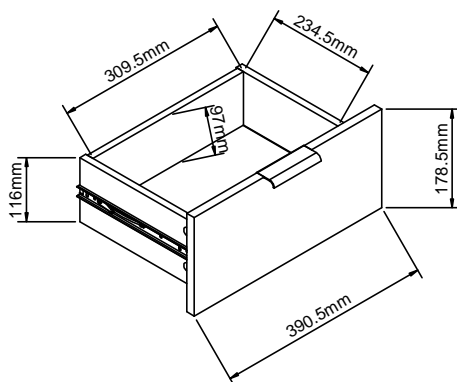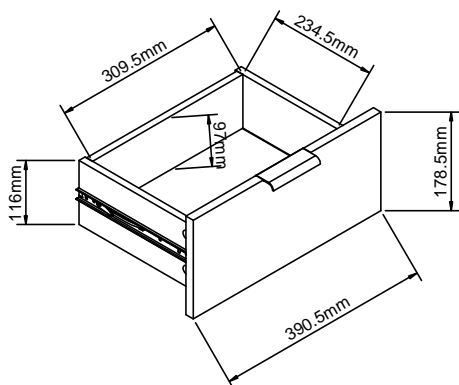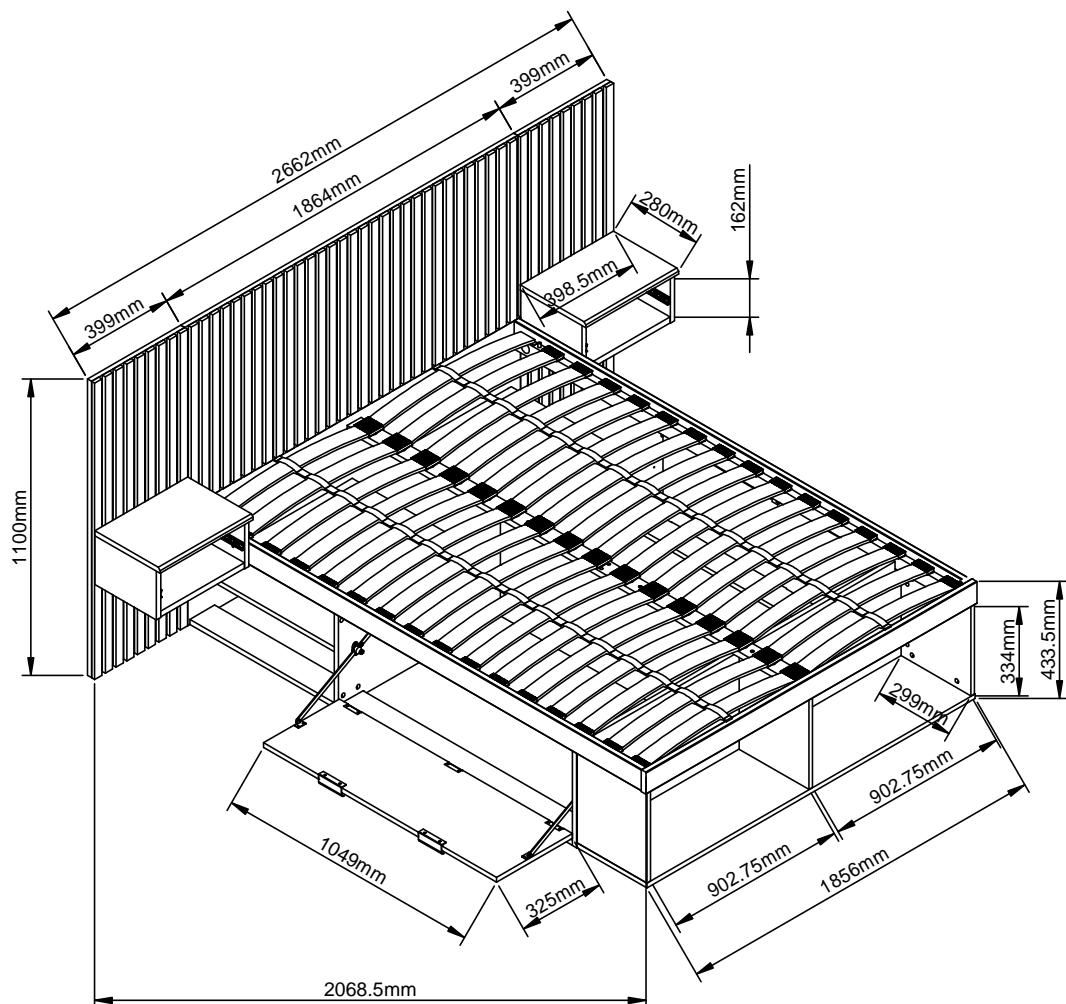



## Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

## Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## You can write to us at


Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)

# BRONX/BRONX LIGHT/BRONX WHITE SLAT XL BED WITH BEDSIDES KING

## REPACK INSTRUCTION 3-1

**NEXT**

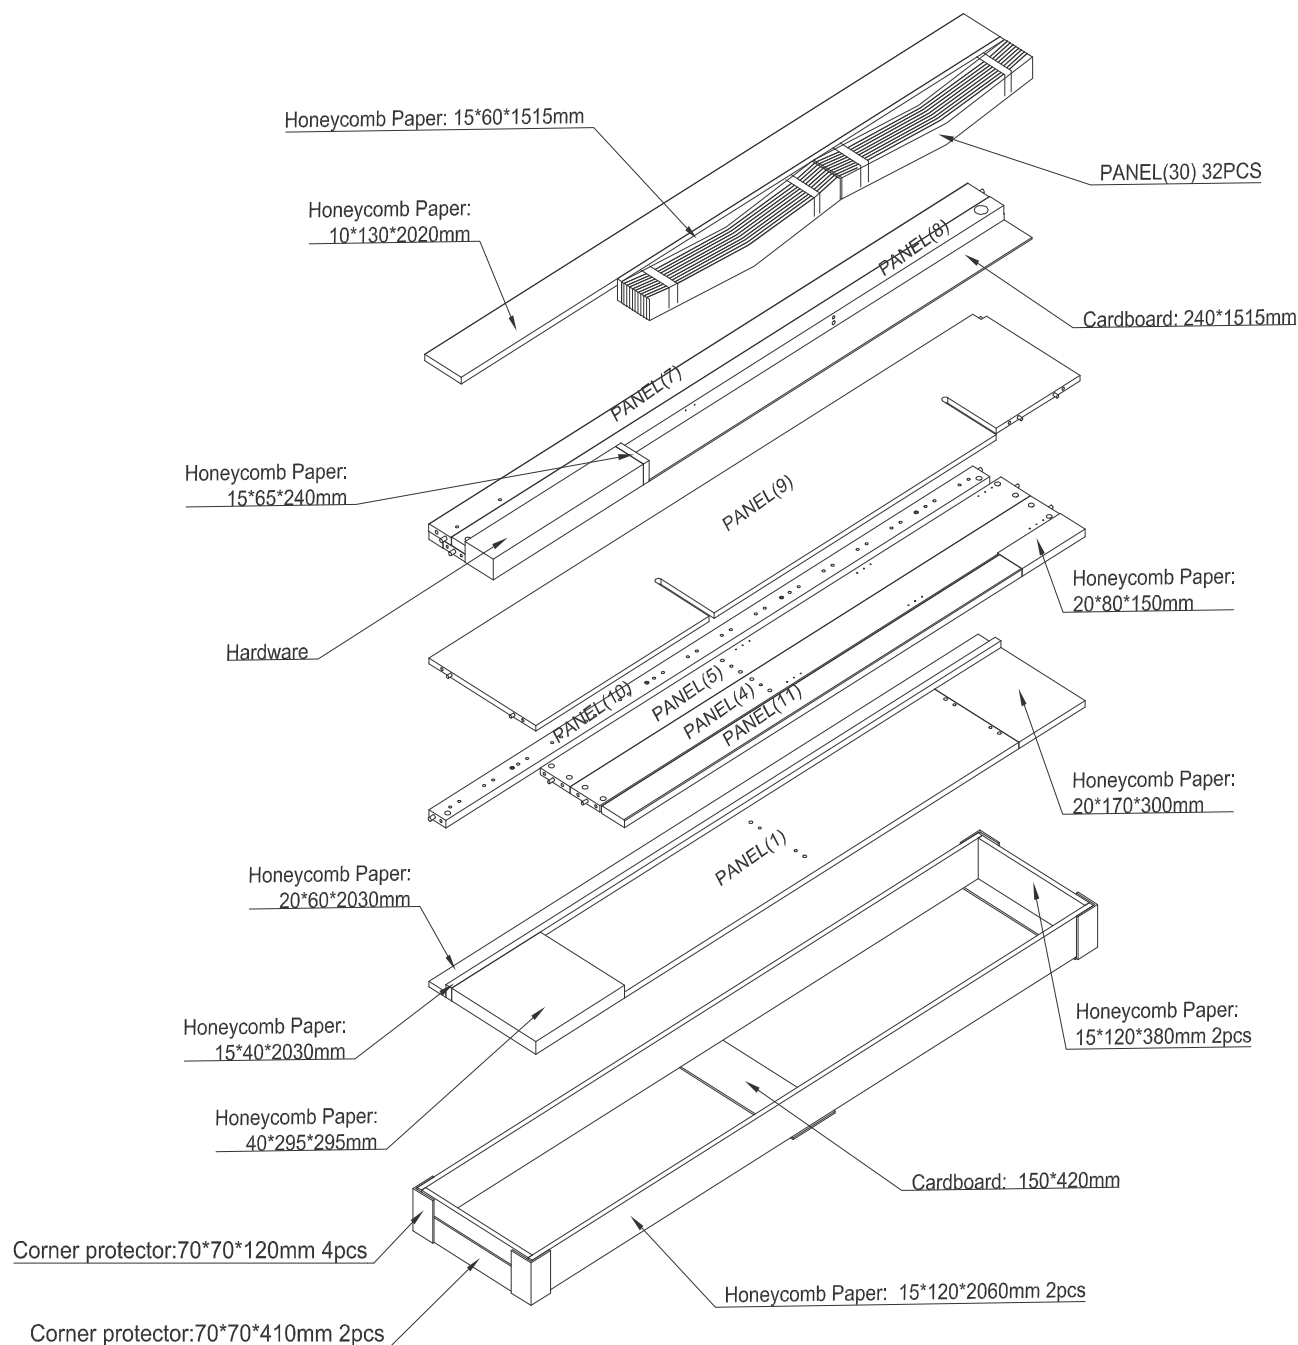


Next Retail Ltd, Desford Road, Leicester, LE19 4AT

# BRONX/BRONX LIGHT/BRONX WHITE SLAT XL BED WITH BEDSIDES KING

## REPACK INSTRUCTION 3-2


**NEXT**

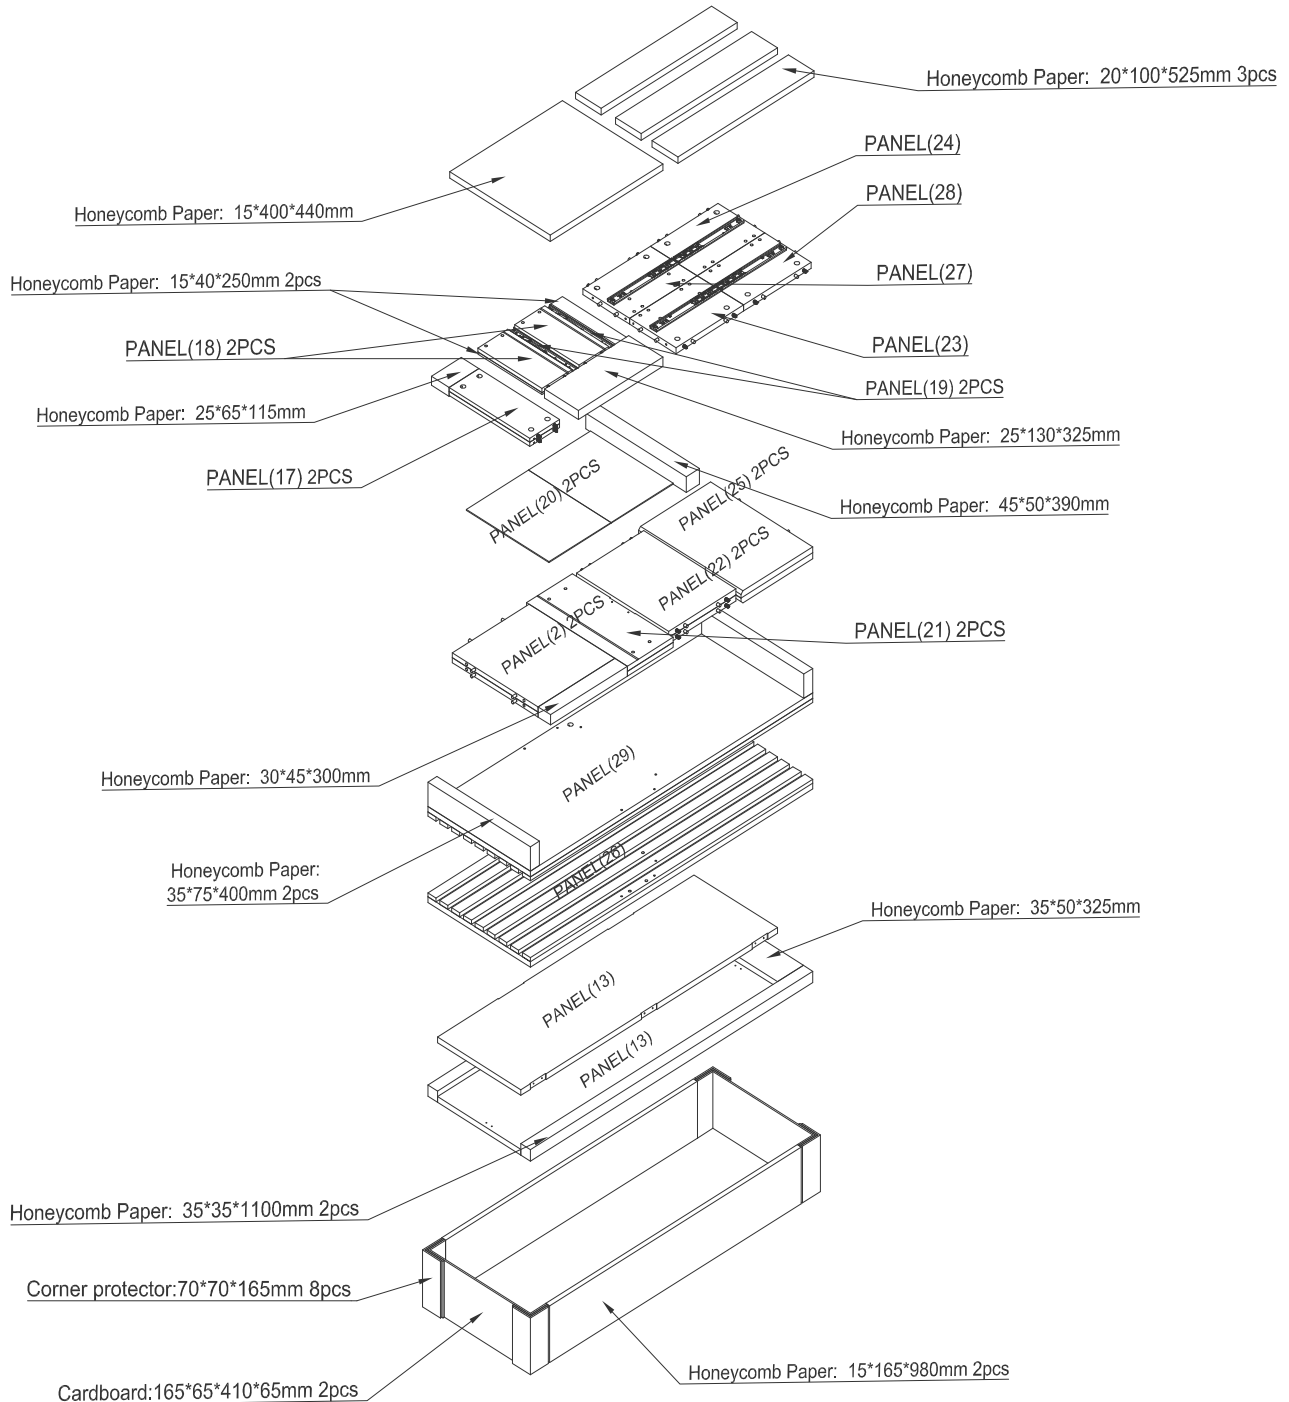

Next Retail Ltd, Desford Road, Leicester, LE19 4AT


BRONX/BRONX LIGHT/BRONX WHITE SLAT XL BED WITH BEDSIDES KING  
REPACK INSTRUCTION 3-3

NEXT

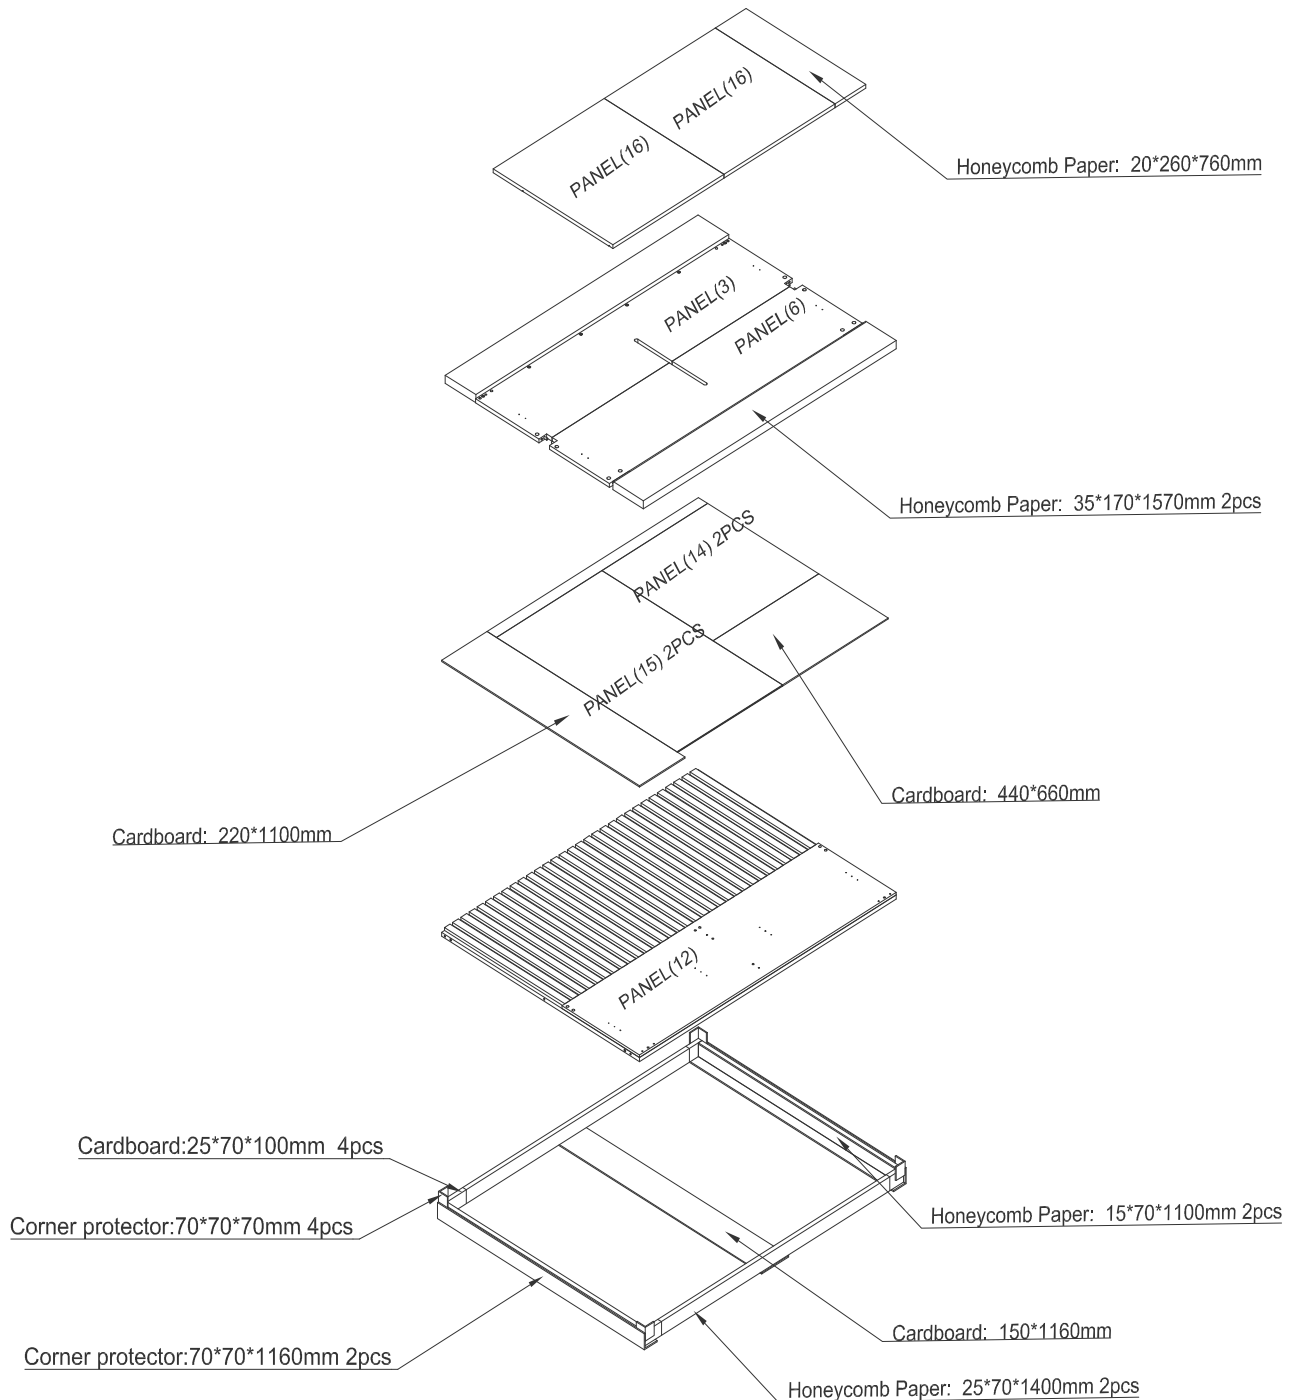

Next Retail Ltd, Desford Road, Leicester, LE19 4AT


REPACK INSTRUCTION (3-1)

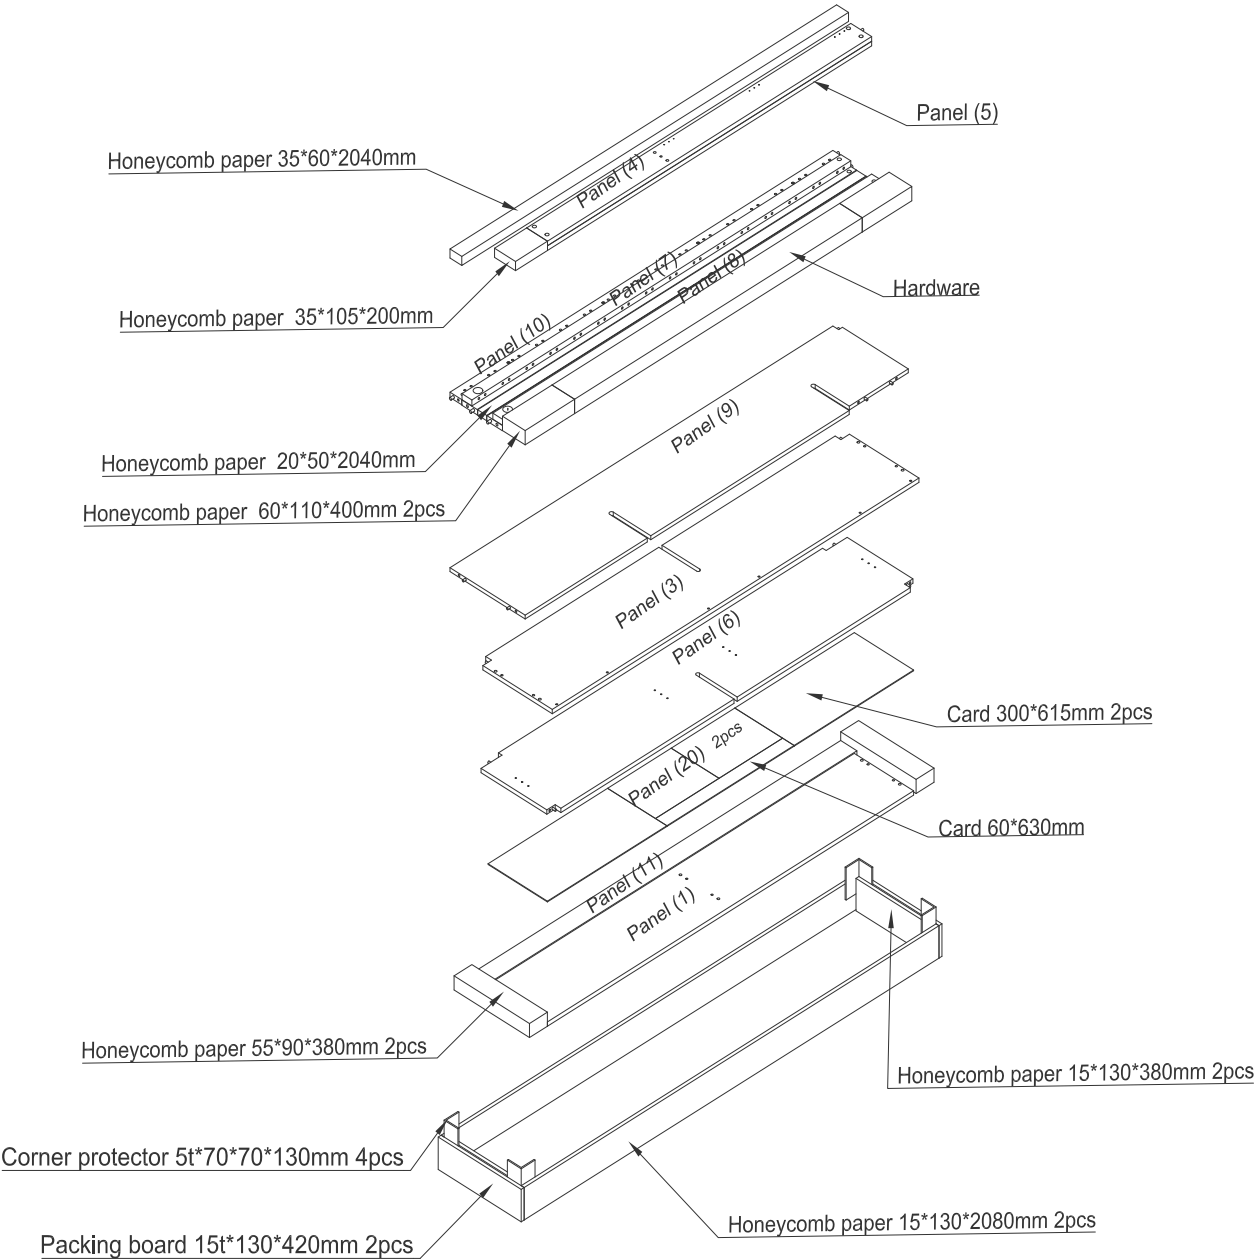

# BRONX/BRONX LIGHT/BRONX WHITE SLAT XL BED WITH BEDSIDES SUPER KING

## REPACK INSTRUCTION (3-2)

NEXT

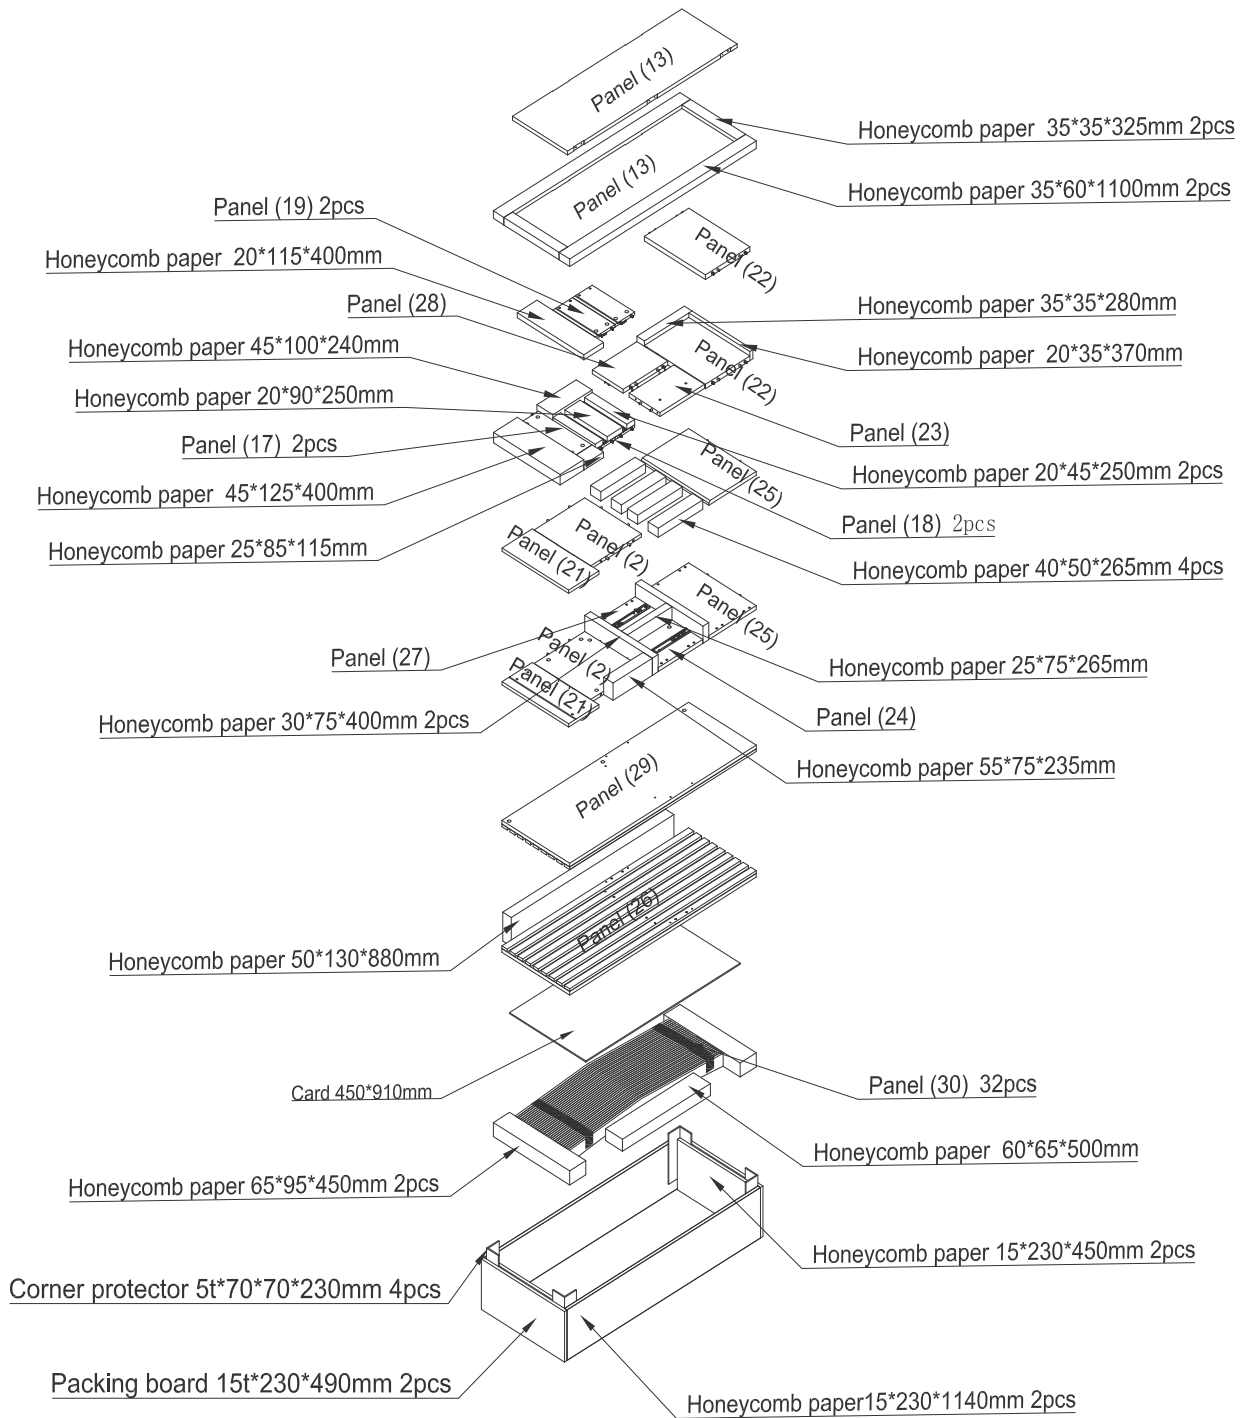

Next Retail Ltd, Desford Road, Leicester, LE19 4AT

BRONX/BRONX LIGHT/BRONX WHITE SLAT XL BED WITH BEDSIDES SUPER KING

REPACK INSTRUCTION (3-3)

