

next


CADDY WIDE PINK

E04463

Assembly instructions

Product size:

H70 x W36.6 x D28.2 cm

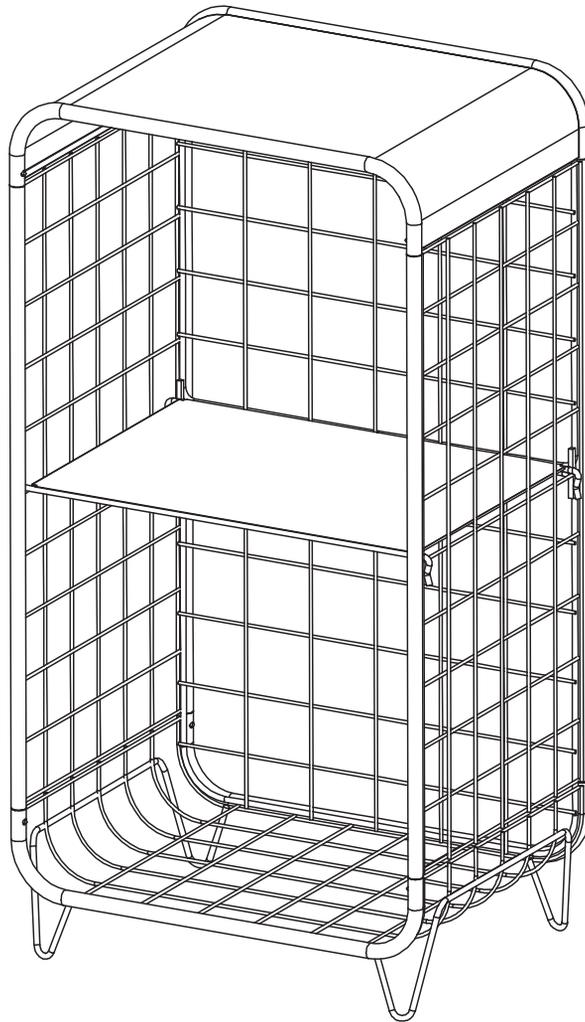


Need Help?

With: Assembly instructions
Missing or damaged parts


CALL: 0333 777 8999

IMPORTANT – RETAIN FOR FUTURE REFERENCE

GETTING TO KNOW YOUR PRODUCT

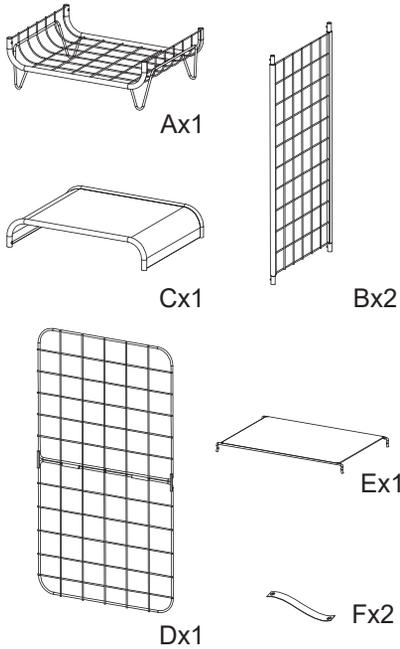


1

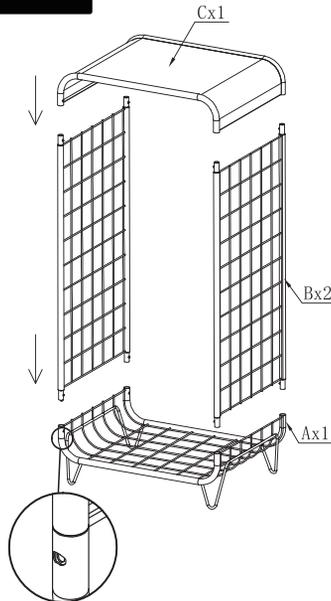


Combine the frame A, B and C until the spring pin comes through the hole.

2

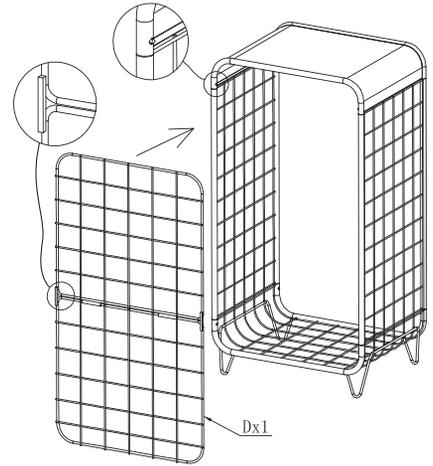


Push the back panel D into the frame from front to back.

3

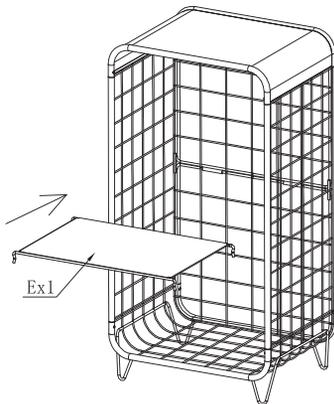


Set the height of E as you like and lock part E into the frame correctly.

4

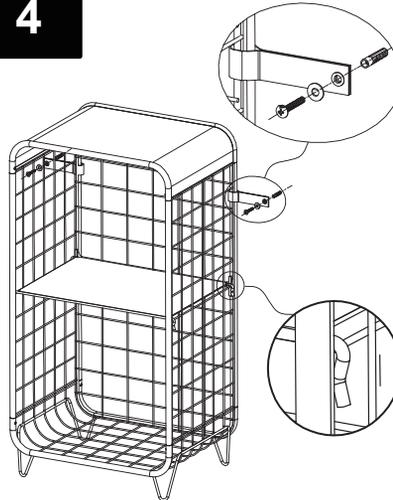

Fix the caddy to the wall with component F and fixings appropriate for your wall type (not included).

5

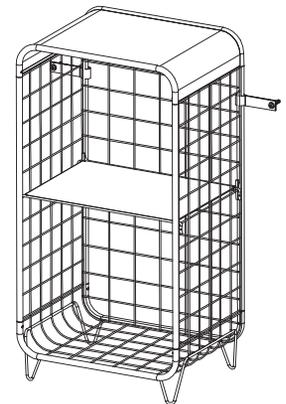

All steps completed.