


cult

Thank you for your order

Get ready to assemble with ease + elevate your space with our easy to follow assembly instructions.

Should you require any additional help with your build, please contact our friendly + knowledgeable customer service team.

 +44 (0) 208 185 6960








 info@cultfurniture.com

 www.cultfurniture.com



Santana Sideboard, Sintered Stone & Smokey Oak

CF_HE2374-1/SIN-STONE/SMK-OAK_bundle



PRODUCT PARTS INCLUDED

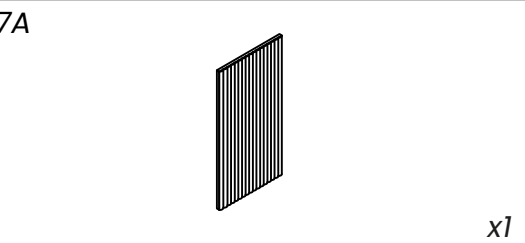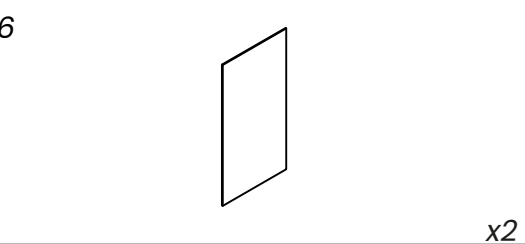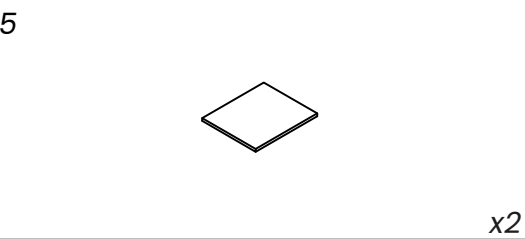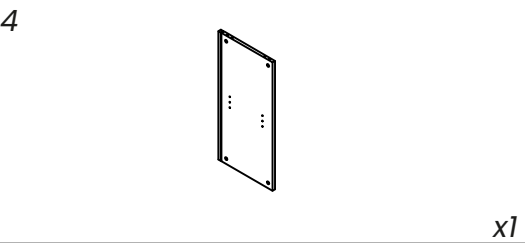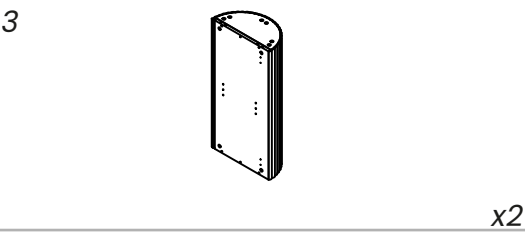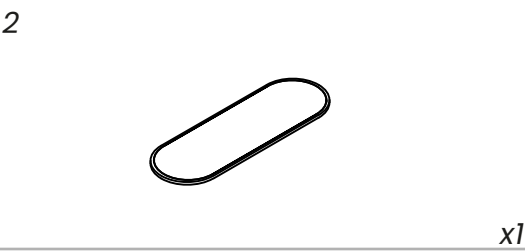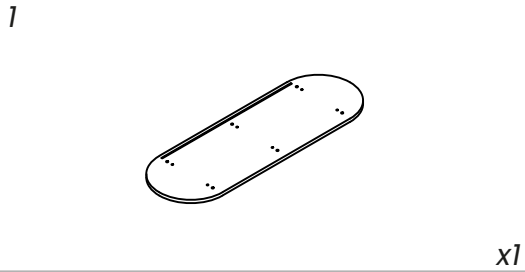

STEP 1

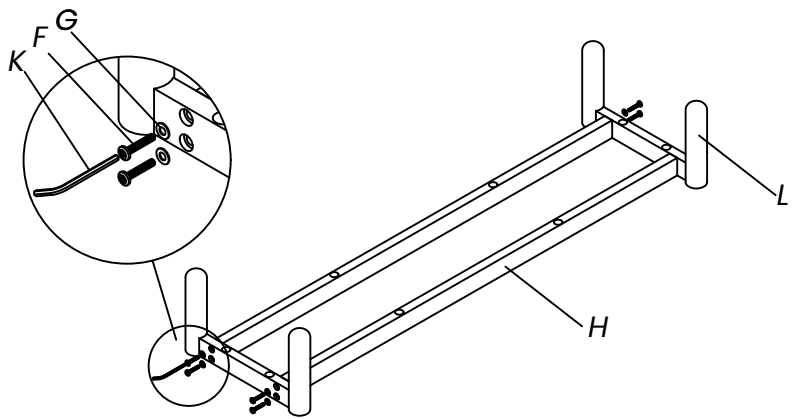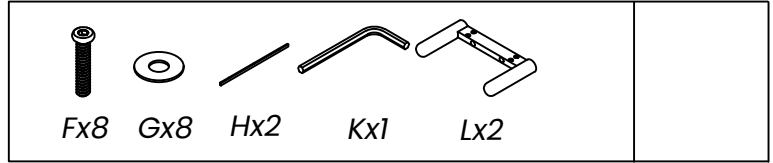

STEP 2

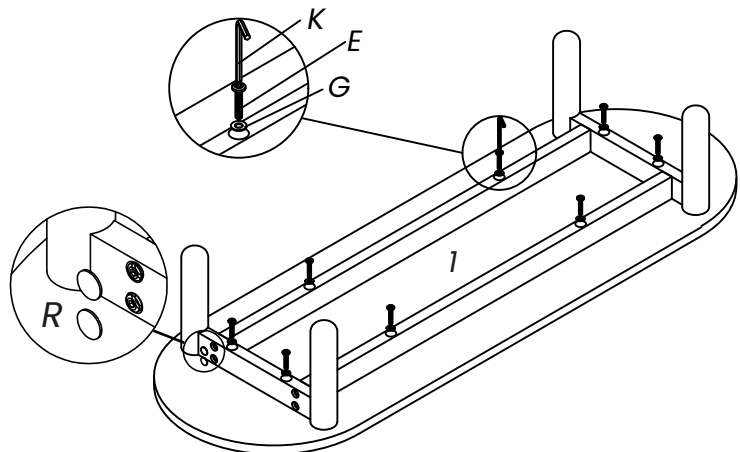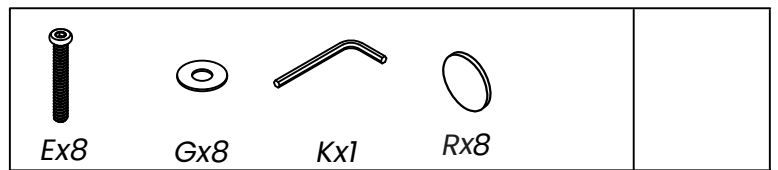




Santana Sideboard, Sintered Stone & Smokey Oak

CF_HE2374-1/SIN-STONE/SMK-OAK_bundle



PRODUCT PARTS INCLUDED

7B




x1

STEP 3

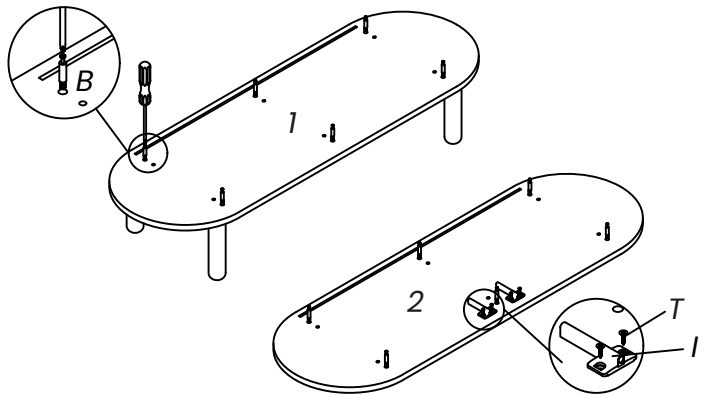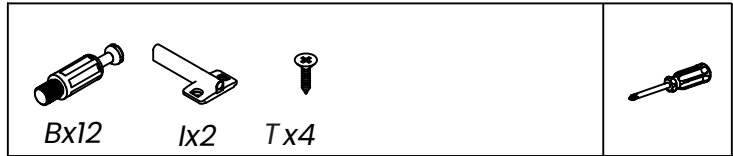

STEP 4

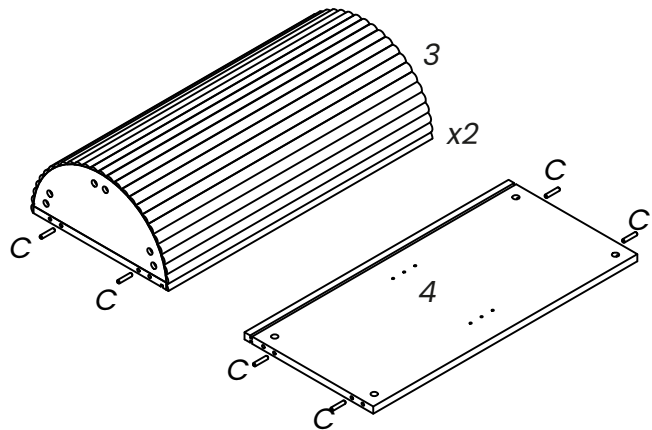

Santana Sideboard, Sintered Stone & Smokey Oak

CF_HE2374-1/SIN-STONE/SMK-OAK_bundle

PRODUCT PARTS INCLUDED



φ15x12

Ax12



M6x35

Bx12



φ8x40

Cx12



M3.5x15

Dx32



M6x40

Ex8



M6x30



Fx8




φ12xM6x1

Gx16

STEP 5

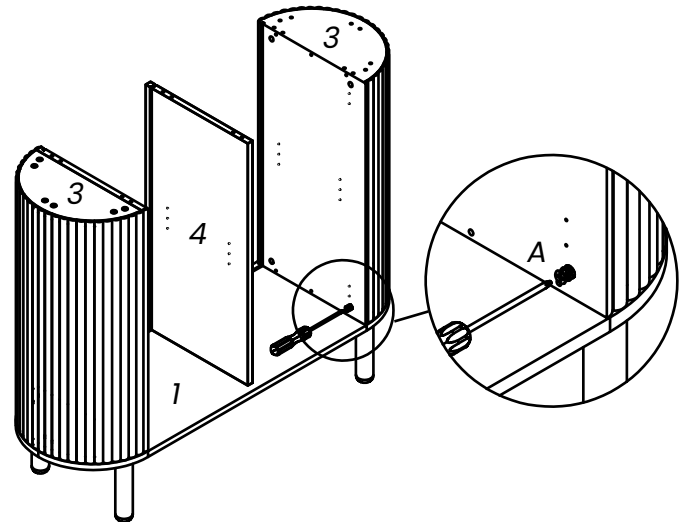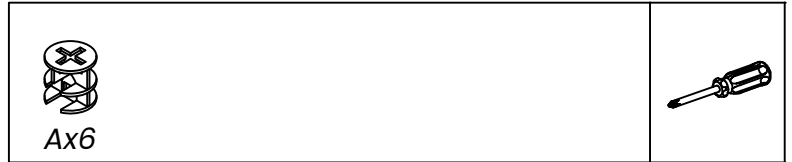

STEP 6

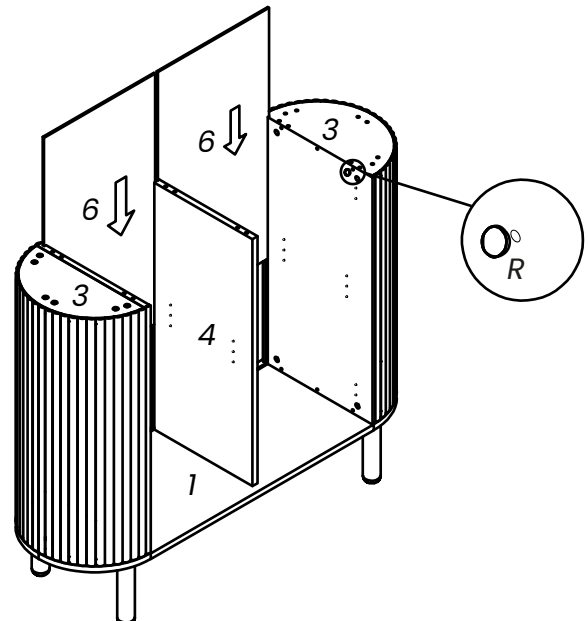




Santana Sideboard, Sintered Stone & Smokey Oak

CF_HE2374-1/SIN-STONE/SMK-OAK_bundle

PRODUCT PARTS INCLUDED



Hx2



Ix2




Jx8




M5

Kx1



Lx2




Mx4





Nx8

STEP 7

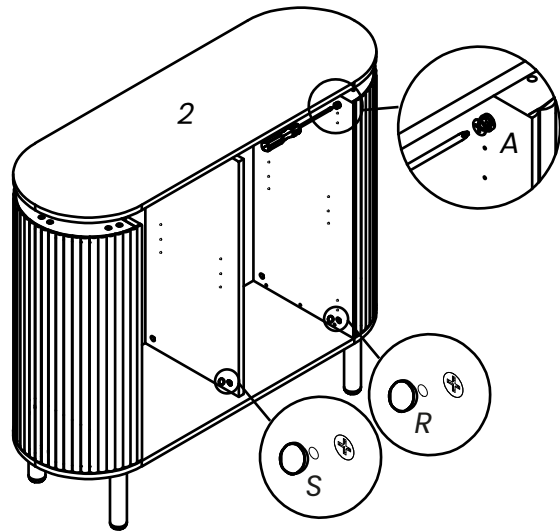

STEP 8

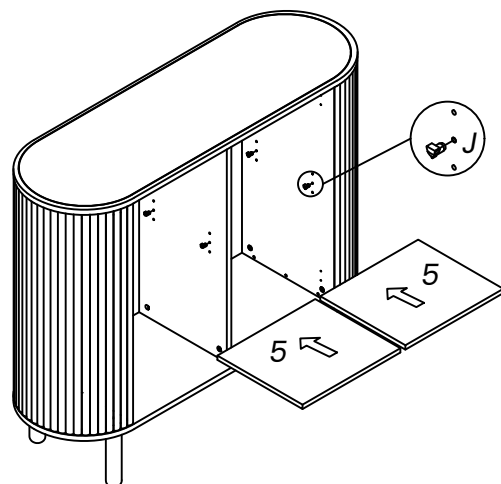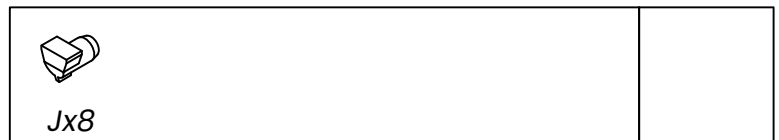

Santana Sideboard, Sintered Stone & Smokey Oak

CF_HE2374-1/SIN-STONE/SMK-OAK_bundle

PRODUCT PARTS INCLUDED



Ox2



Px2



Qx2



φ 20

Rx28



φ 20



Sx4







M3.5x12

Tx4

STEP 9

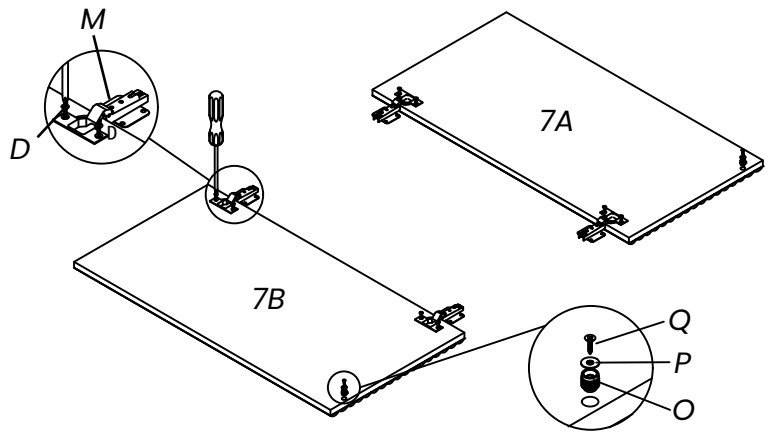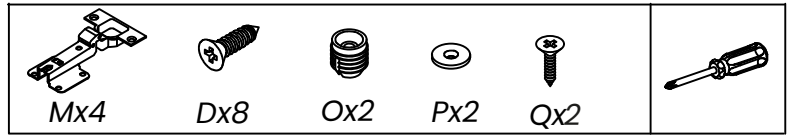

STEP 10

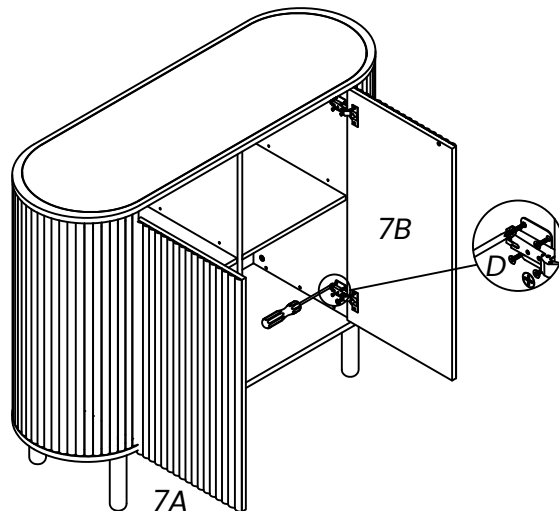





Santana Sideboard, Sintered Stone & Smokey Oak

CF_HE2374-1/SIN-STONE/SMK-OAK_bundle

STEP 11

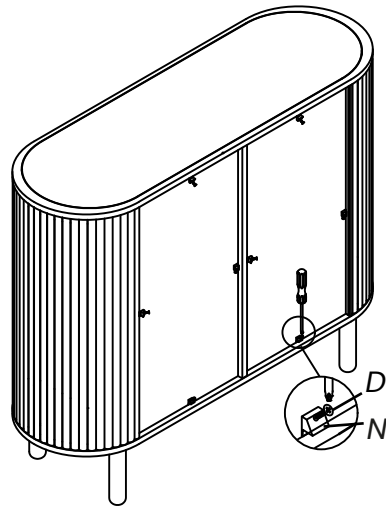

STEP 12

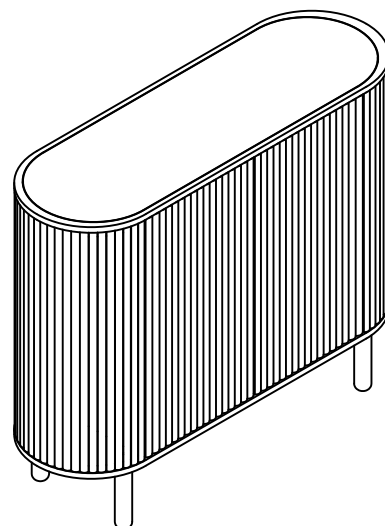

Assembled