



# SWOON

BT0092C  
Fresco Bedside

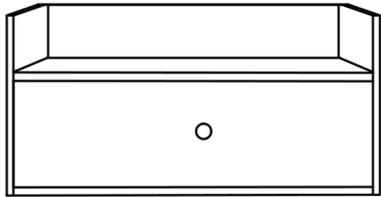


1x Bedside



2x Leg



6 X Allen Bolt 30x6mm



6 X Washer 25x8mm




1 x Allen Key 4 mm


Extra      2 X Allen Bolt 30x6mm  
Hardware   2 X Washer 25x8mm

" Important "

Use mat or carpet to assemble the product to avoid scratches.

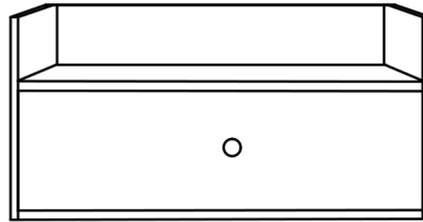

①

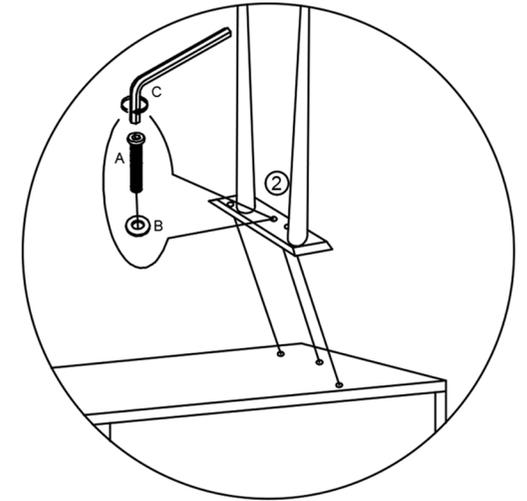

②

③

