


SWOON


BT0047K
Newham Bedside

A

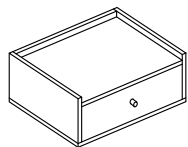


1 x Top

B



4 x Leg

C



8x Allen Bolt 8x50 mm

D



8x Washer 8x16 mm

E



1x Allen Key 6 mm

Extra
Hardware


2x Allen Bolt 8x50 mm

2x Washer 8x16 mm


" Important "

Use mat or carpet to assemble
the product to avoid scratches.


Step - 1

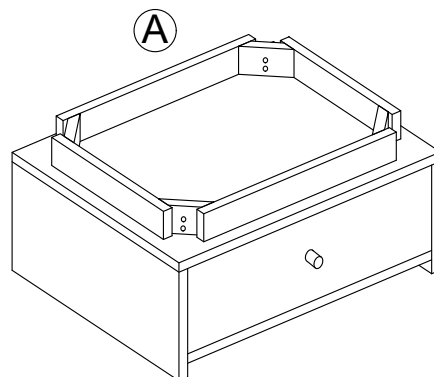

Step - 2

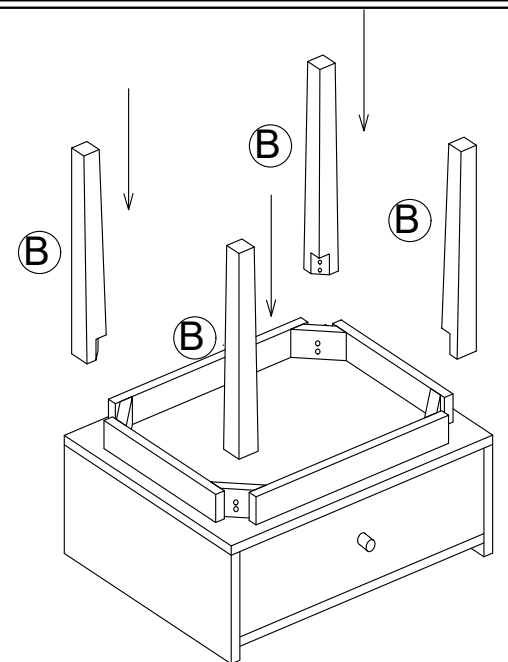

Step - 3

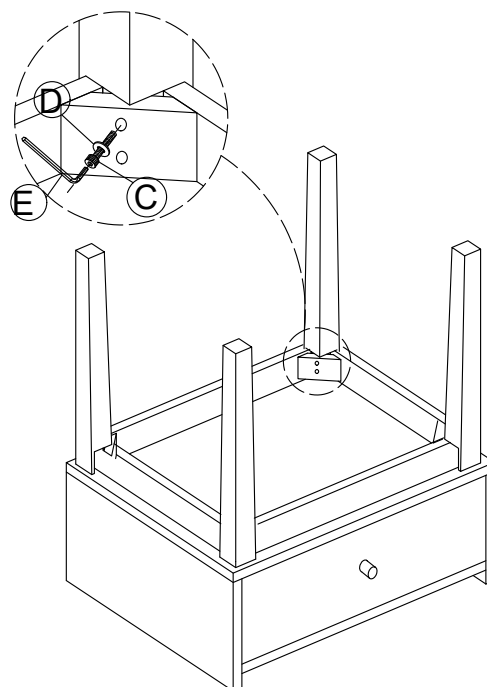

Step - 4

