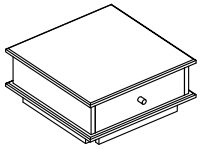


SWOON


BT0043F
Canonbury Bedside

A		1 x Top
B		4 x Leg
C		8x Allen Bolt 8x50 mm
D		8x Washer 8x16 mm
E		1x Allen Key 5 mm
Extra Hardware		2x Allen Bolt 8x50 mm 2x Washer 8x16 mm


" Important "

Use mat or carpet to assemble the product to avoid scratches.


Step - 1

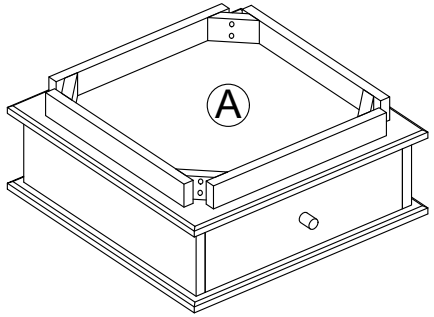

Step - 2

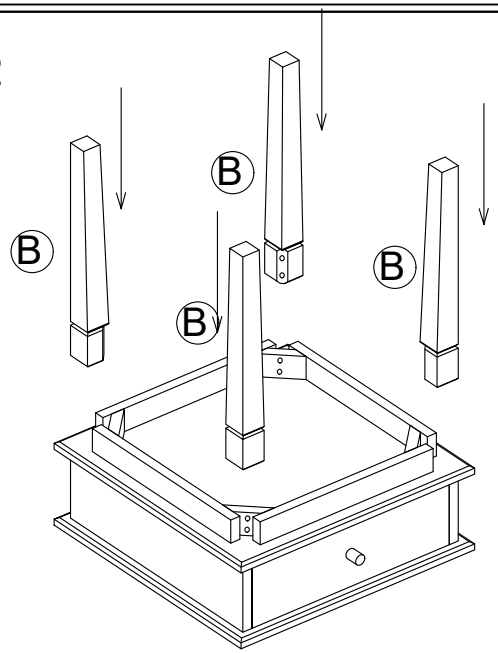

Step - 3

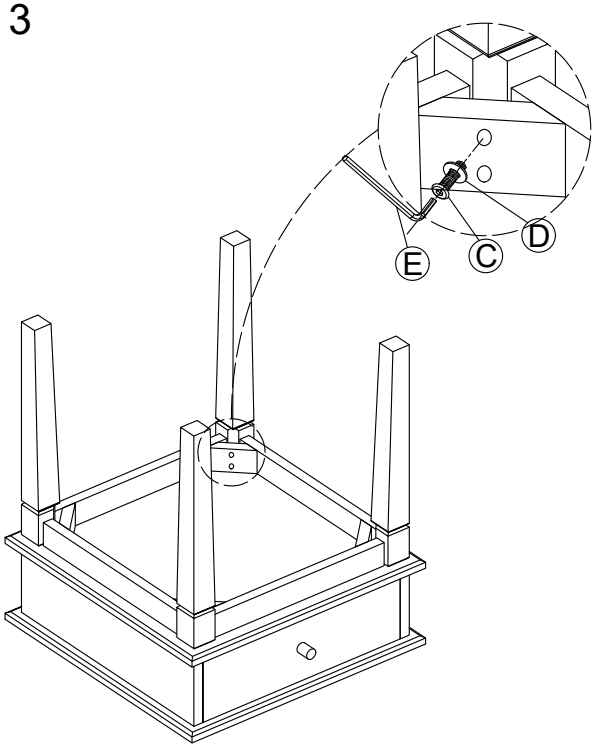

Step - 4

