Thank you for shopping with us

NEXT CARSON BLACK FLOOR LAMP N39648 Assembly Instructions



CARSON BLACK FLOOR LAMP

N39648

Assembly Instructions

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference

This light is suitable for indoor use only

Do's

We suggest you spend a short time reading through this leaflet before you start

When you are ready to start, make sure that you have the right tools and plenty of space

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

We recommend that the packaging is used to protect the surfaces during assembly

Carefully check that you have all the parts before beginning assembly

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use. Check fixings regularly to ensure they remain tight

Always switch off the supply before changing light bulbs or cleaning


Allow bulbs to cool down before handling

Don'ts

Do not position this product in an area, subject to humid or moist conditions.

Do not allow moisture to come into contact with electric parts.

Time to assemble



Tools required

Scissor for unpacking

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on 0333 777 8999.

Cleaning Care

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will rub away the protective coating.

Maintenance

To ensure your safety, if the cable becomes damaged it must be replaced only by a qualified person.

Safety information

For your safety, please remember the following:

- Always switch off the power supply before changing lightbulbs or cleaning
- Allow bulbs to cool down before handling.

You can write to us at

Home Customer Services Next Retail Ltd, Desford Road, Leicester, LE19 4AT or Next Retail (Ireland) Ltd, 13-18 City Quay, Dublin 2, Du2 ED70

> To view our full range please visit www.next.co.uk

CARSON BLACK FLOOR LAMP

N39648

Assembly Instructions

GETTING TO KNOW YOUR PRODUCT				
Ref	Description	Specification	Qty	Remark
1	Lamp body		1	Packed in carton
2	Lamp base	Ф250*H55MM	1	Packed in carton
3	Outer glass shade	Ф165*Н185MM	1	Packed in carton
4	Inner glass shade	Ф75*H160MM	1	Packed in carton
5	Assembly instructions	A4 X 2	1	Packed in fixing pack
6	Re-package instructions	A4 X 1	1	Packed in fixing pack
7	Screw driver		1	Packed in fixing pack
8	Fixing screw	L38MM	1	Packed in fixing pack
9	Rawl plug	L38MM	1	Packed in fixing pack
10	Bracket	L220*W25MM	1	Packed in fixing pack
11	Screw	M5*L12MM	1	Packed in fixing pack
12	Spare flat head screws	M4*L6MM	2	Packed in fixing pack
13	Spare grub screws	M4*L8MM	2	Packed in fixing pack
14	Allen key	M4*L80MM	1	Packed in fixing pack
15	Silicone washer	Ф30ММ	2	Packed in fixing pack

CARSON BLACK FLOOR LAMP

N39648


Assembly Instructions

Assembly Instructions

Unpack the contents of the carton. Lay the contents out on a flat surface giving yourself room to work.

Step 1

Align the holes on two stems and connect them together, pull surplus cable from the bottom of the stem, screw on the two flat head screws. Check that they are securely tightened. Insert the stem into the lamp base and make sure it is straight, tighten the grub screws on the side and bottom by using the allen key supplied. (See Figure 1)

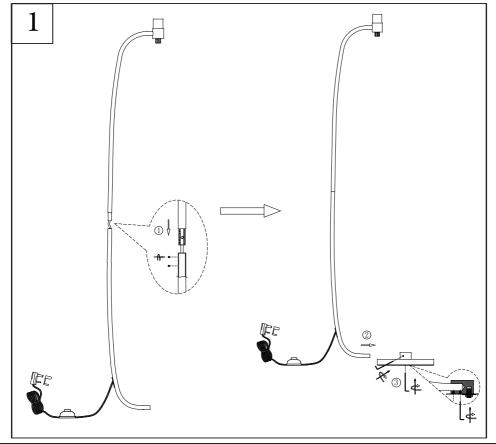

CARSON BLACK FLOOR LAMP

N39648

Assembly Instructions


Selecting the correct light bulb

Maximum Wattage - 33 Watts Voltage - 220 - 240 Volts Lightbulb type - 33W G9 bulb

Do not exceed the maximum wattage as it may cause your light fitting to overheat. Use a soft cloth to handle bulb.

Attaching shade

Fit the bulb. Attach silicone washer, outer glass shade, silicone washer onto the lampholder in sequence and secure into position with the shade ring. (See Figure 2)

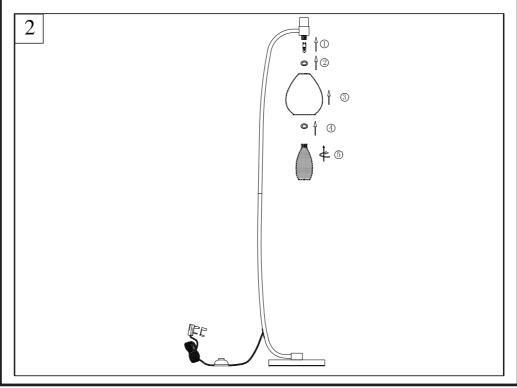


NEXT CARSON BLACK FLOOR LAMP N39648 Assembly Instructions

PLEASE NOTE: ENSURE THAT THE AREA DRILLED MUST NOT BE IN CONTACT WITH ANY ELECTRICAL WIRING, WATER OR GAS PIPES. DRILLING WILL LEAVE A PERMANENT MARK ON THE FLOOR.

3) Attach the enclosed bracket to the bottom of the base in the prethreaded hole using the screw (part no.10) provided. (See Figure 3)

4) Taking care not to damage any wiring or piping under the floor,drill the floor to the height of the rawl plug. Screw the bracket to the floor using the fixing screw (part no.7) supplied in the accessory pack. Ensure the floor lamp is secured in place. (See Figure 4)

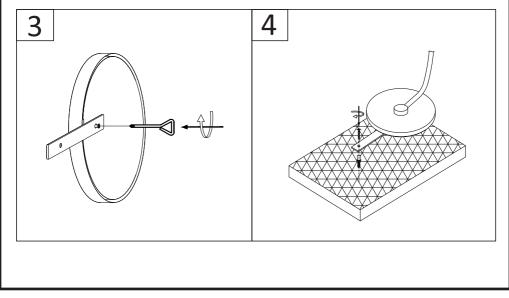

Produced in China for Next Retail Ltd. N39648 - 2023 - V1