


NEXT

MIA TRIPLE WARDROBE

Q73001
Assembly instructions

Actual product size
H190 x W140 x D56 cm

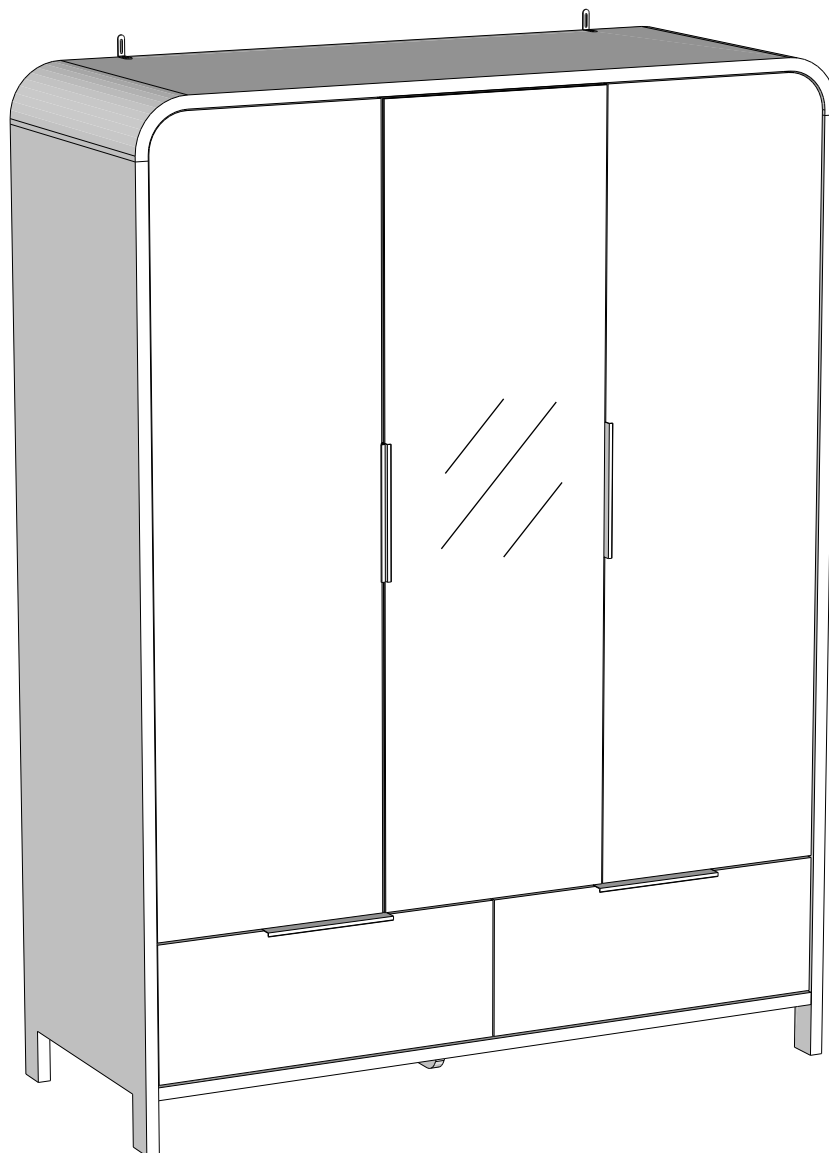

Need Help ?

With: Assembly instruction
Missing or damaged parts

IMPORTANT - RETAIN FOR FUTURE REFERENCE

CALL: 0333 777 8999

NEXT

MIA TRIPLE WARDROBE

Q73001

Assembly instructions

BEFORE YOU START

Number of people required to assemble


Two people are required to assemble this item



Time to assemble : 30 minutes



Tools required

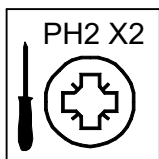

not supplied

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

Don'ts

Do not drag or pull your furniture.

Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.


Never allow any kind of liquid to remain on your furniture.
Absorption can cause wood to warp or finishes to de-laminate.

Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

GETTING TO KNOW YOUR PRODUCT

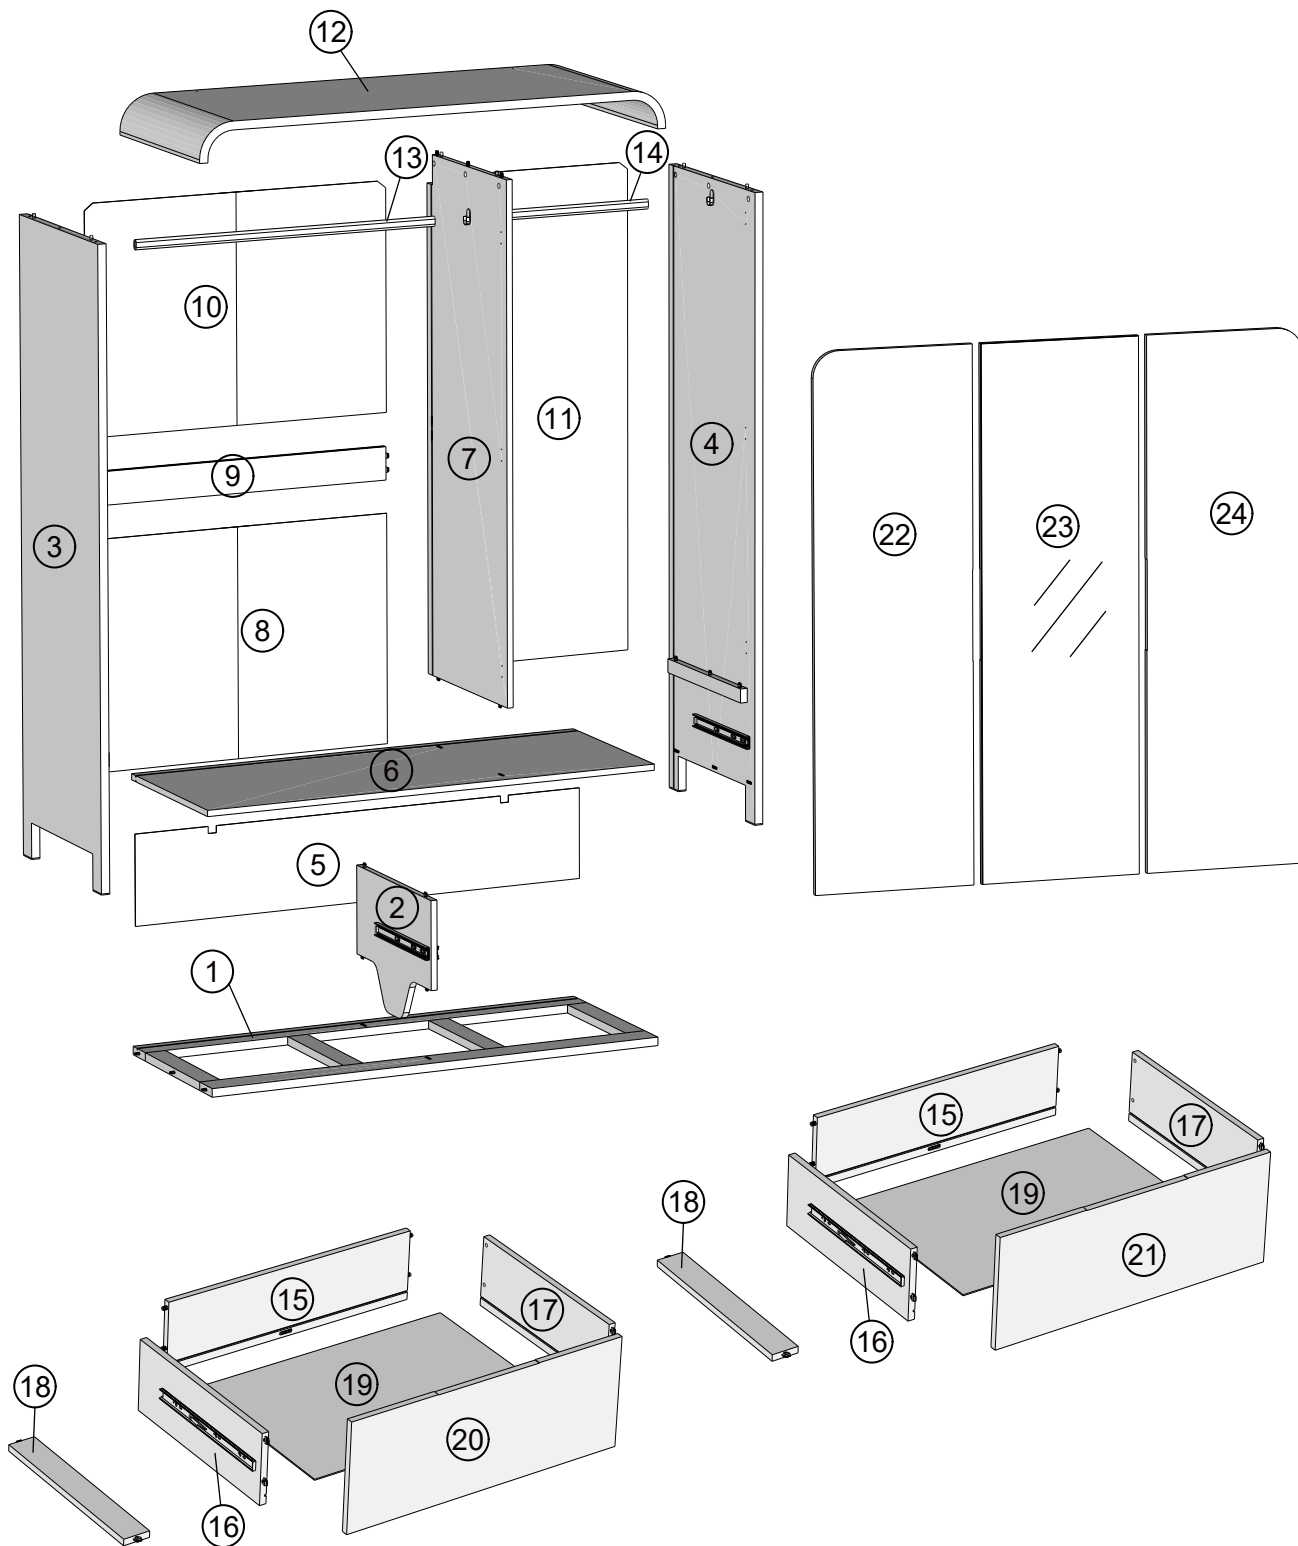

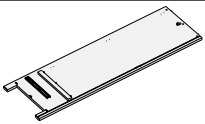
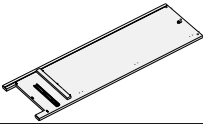






















NEXT MIA TRIPLE WARDROBE

Q73001

Assembly instructions

Components supplied. Please use this guide if you require replacement parts.


Ref	Dimensions	Visual	Qty	Ctn
1	56x136cm		1	1
2	37x49.5cm		1	1
3	56x179cm		1	3
4	56x179cm		1	3
5	26x136cm		1	2
6	53.5x135cm		1	1
7	53.5x148cm		1	3
8	66x91cm		1	1
9	9.5x90.5cm		1	1
10	66x91cm		1	1
11	44x140cm		1	2
12	56x140cm		1	1

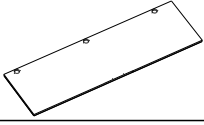Ref	Dimensions	Visual	Qty	Ctn
13	3x89.5cm		1	1
14	3x43cm		1	1
15	16.5x61cm		2	2
16	16.5x45cm		2	1
17	16.5x45cm		2	1
18	6x43cm		2	1
19	43.5x62cm		2	1
20	26x67cm		1	2
21	26x67cm		1	2
22	44.5x148cm		1	2
23	44.5x148cm		1	2
24	44.5x148cm		1	2

NEXT FITTINGS ASSEMBLE INSTRUCTIONS



Push connector into housing to join.

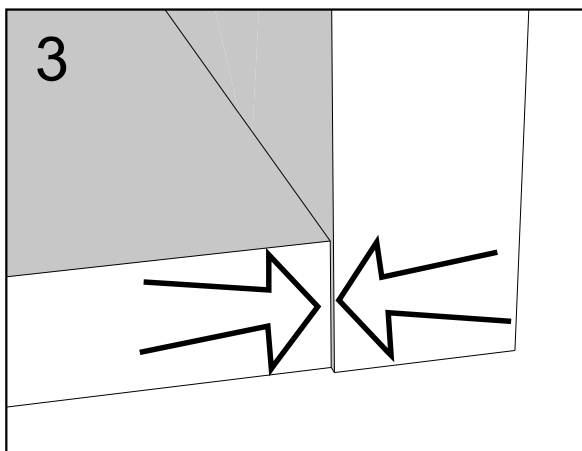


Make sure there is no gap between the panels.

NEXT

MIA TRIPLE WARDROBE
Q73001
Assembly instructions

Fixtures and fittings
supplied (actual size)

Ref	Dimensions	Qty	Spare Qty
B3	Ø15 x 12mm	6	1
B12	Ø7.5 x 33mm	6	1
S41	Ø4 x 16mm	2	1
U139	Ø4.5 x 15mm	36	2
D6	Ø8 x 30mm	N/A	1
S42	Ø4 x 16mm	2	1
U143	Ø4 x 15mm	18	2

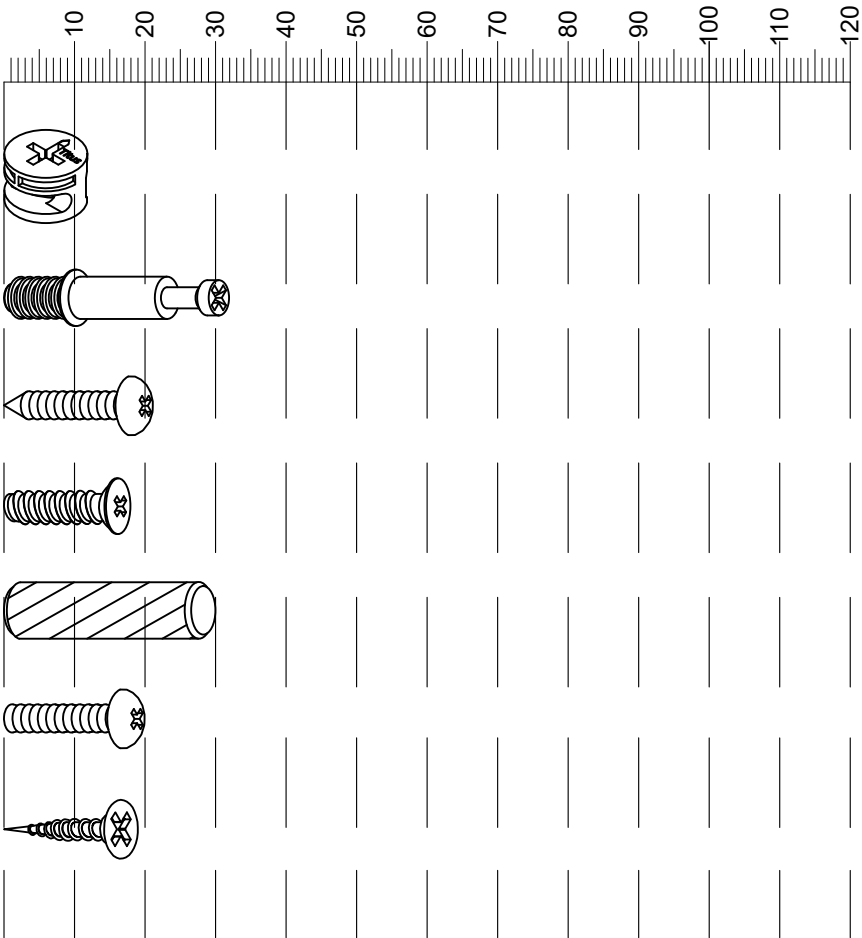

Fixtures and fittings supplied (not to scale)

Ref	Dimensions	Qty	Spare Qty	Visual
N1	N/A	2	N/A	
T38	N/A	14	2	
M11	N/A	1	N/A	
C19	N/A	6	N/A	
O1	N/A	9	1	
E48	N/A	5	N/A	

Ref	Dimensions	Qty	Spare Qty	Visual
C17	N/A	3	N/A	
F1	N/A	1	N/A	

NEXT

MIA TRIPLE WARDROBE
Q73001
Assembly instructions

1

A hand is shown screwing a screw into a pre-drilled hole in a wooden frame. The frame is labeled with a circled '2'. The screw is being inserted into a hole that is part of a 'Packing Materials' section. The text 'Packing Materials' is written below the frame with lines pointing to the specific area where the screw is being inserted.

F1	N/A	1	
----	-----	---	--


2

A hand is shown sliding a door, labeled with a circled '3', into a frame labeled with a circled '1'. The door has a handle and a lock. The frame is a rectangular structure with a central opening. An inset image shows a close-up of the door's bottom edge being aligned with the frame's bottom rail. A checkmark is shown in the inset, and the text 'SLOTS ALIGNED' is written below it.


NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

3

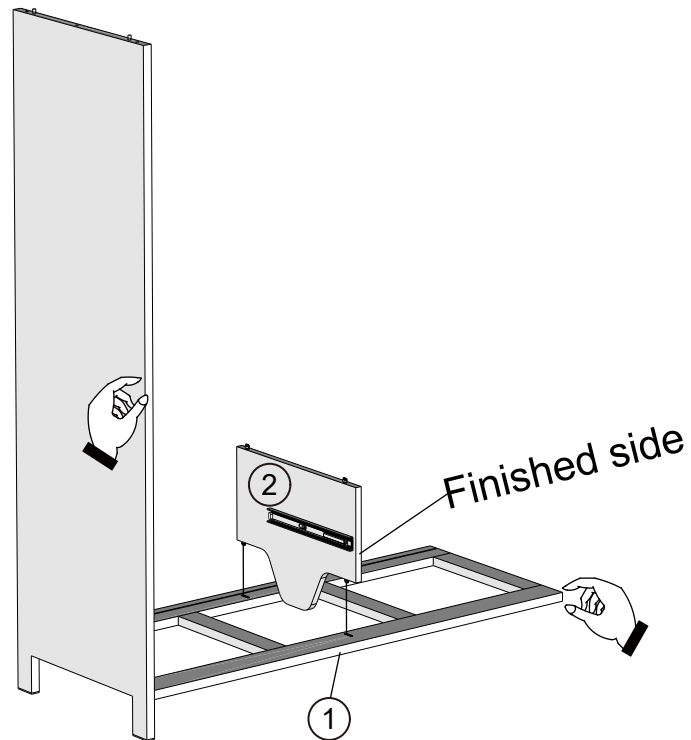


4

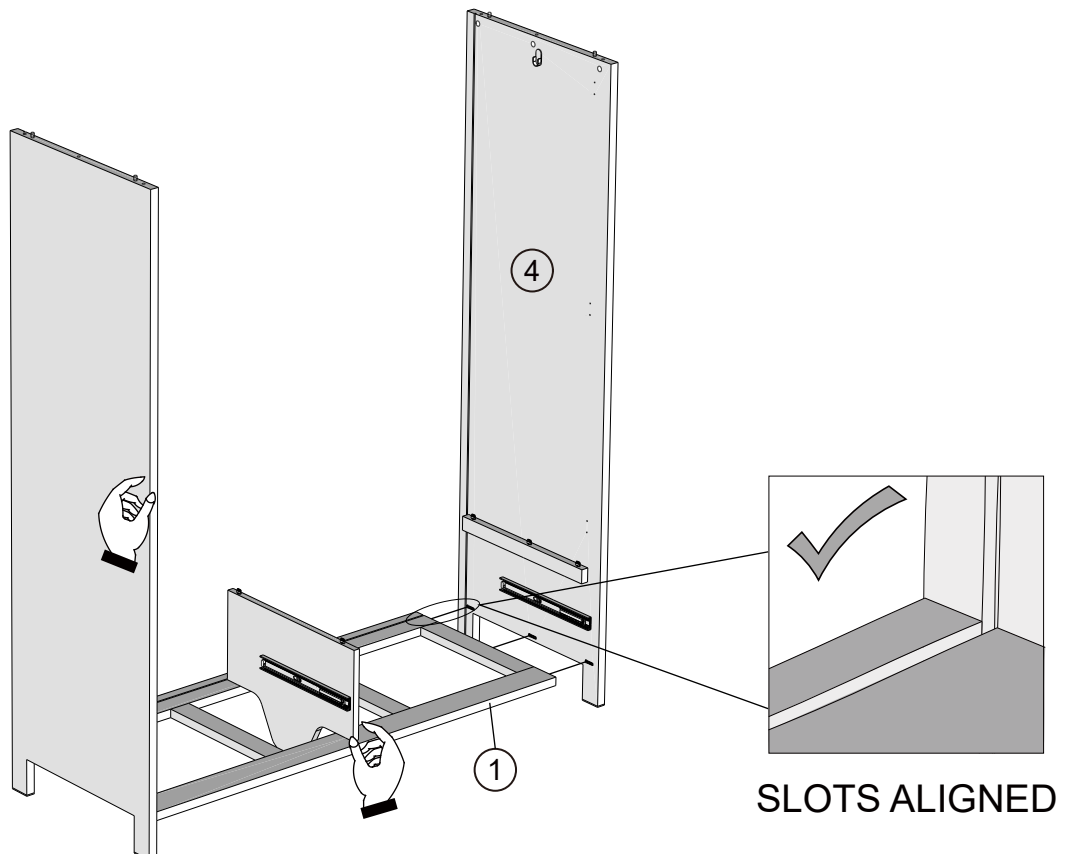


NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

5

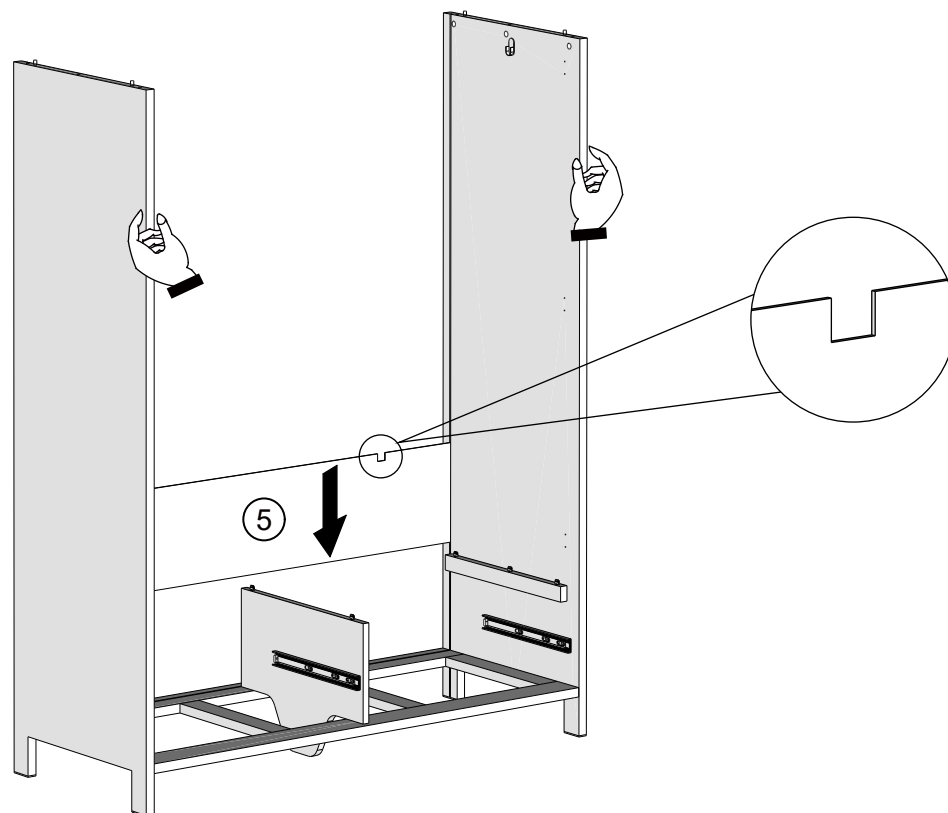


6

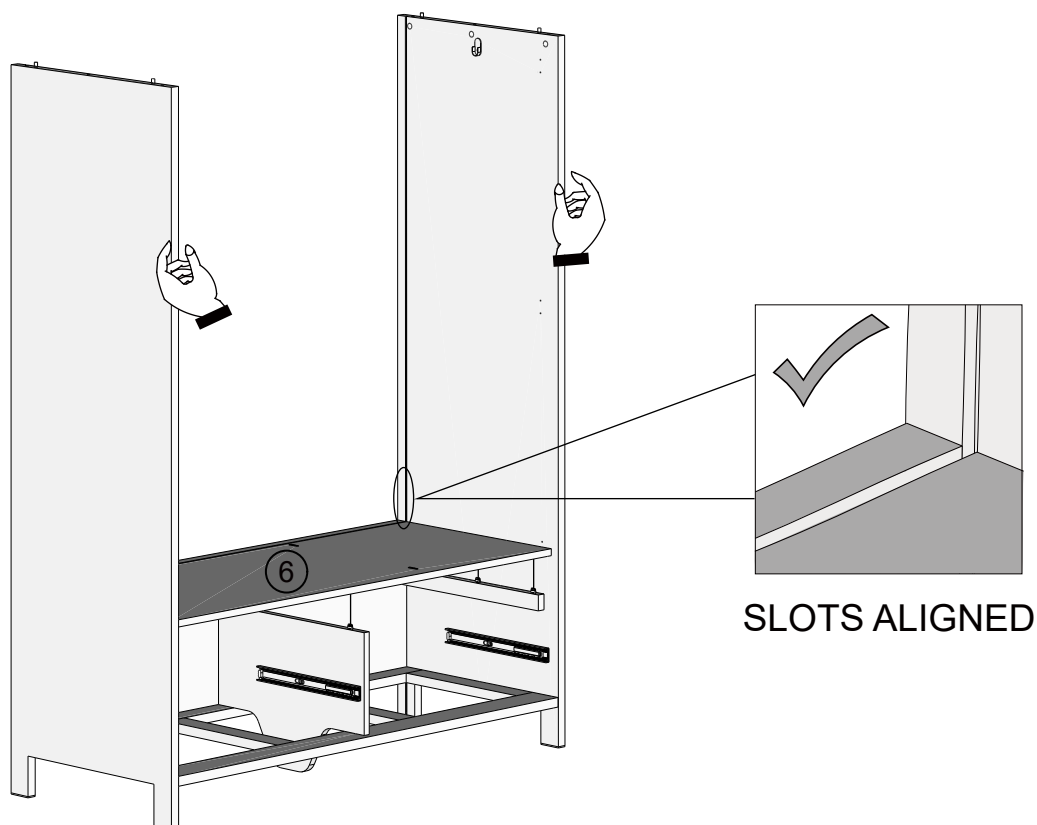


NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

7

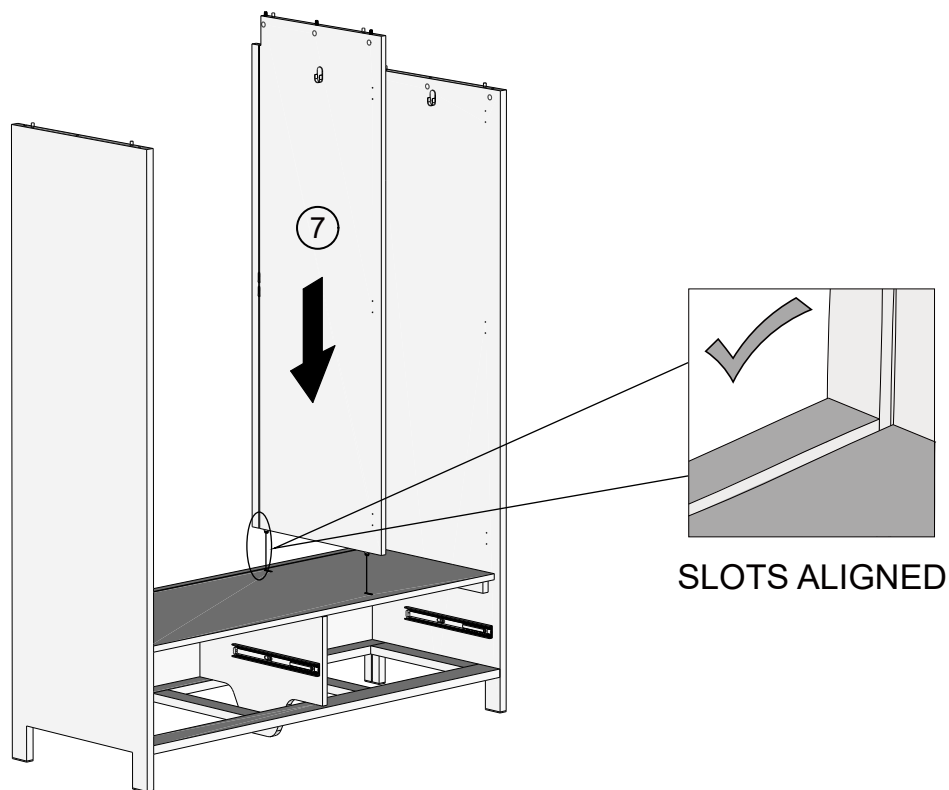


8

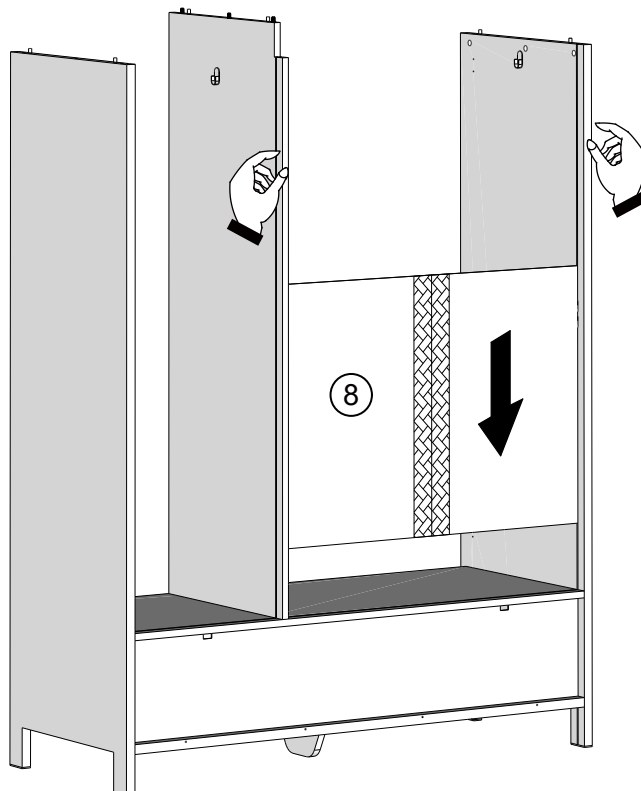


NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

9

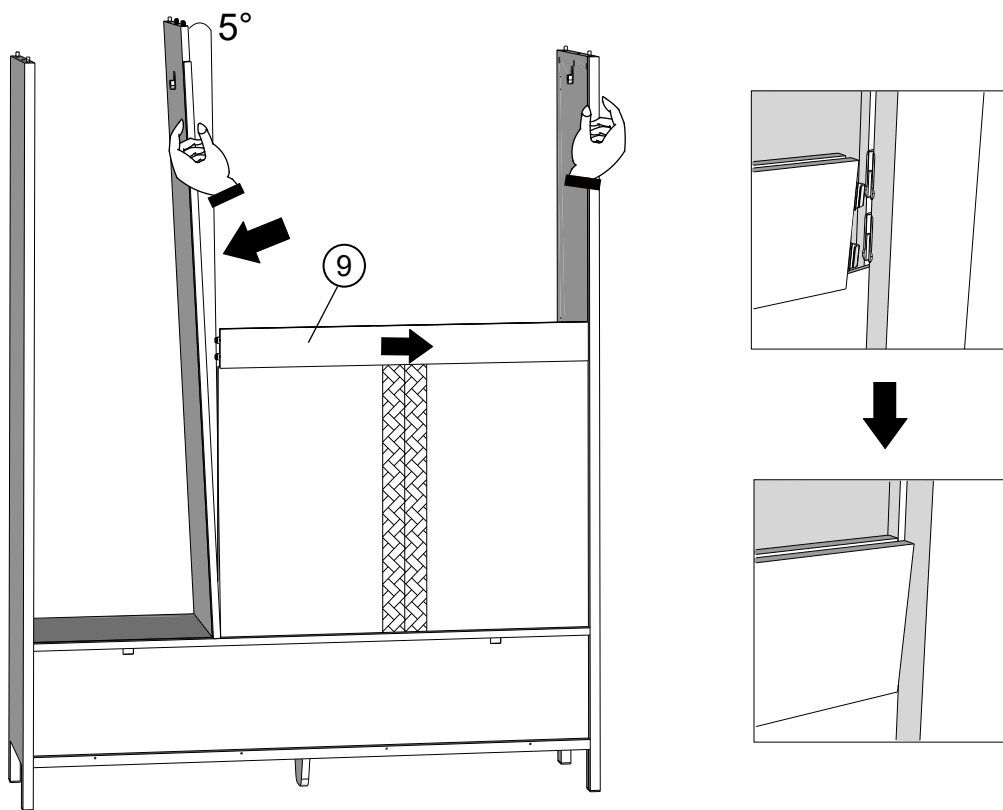


10

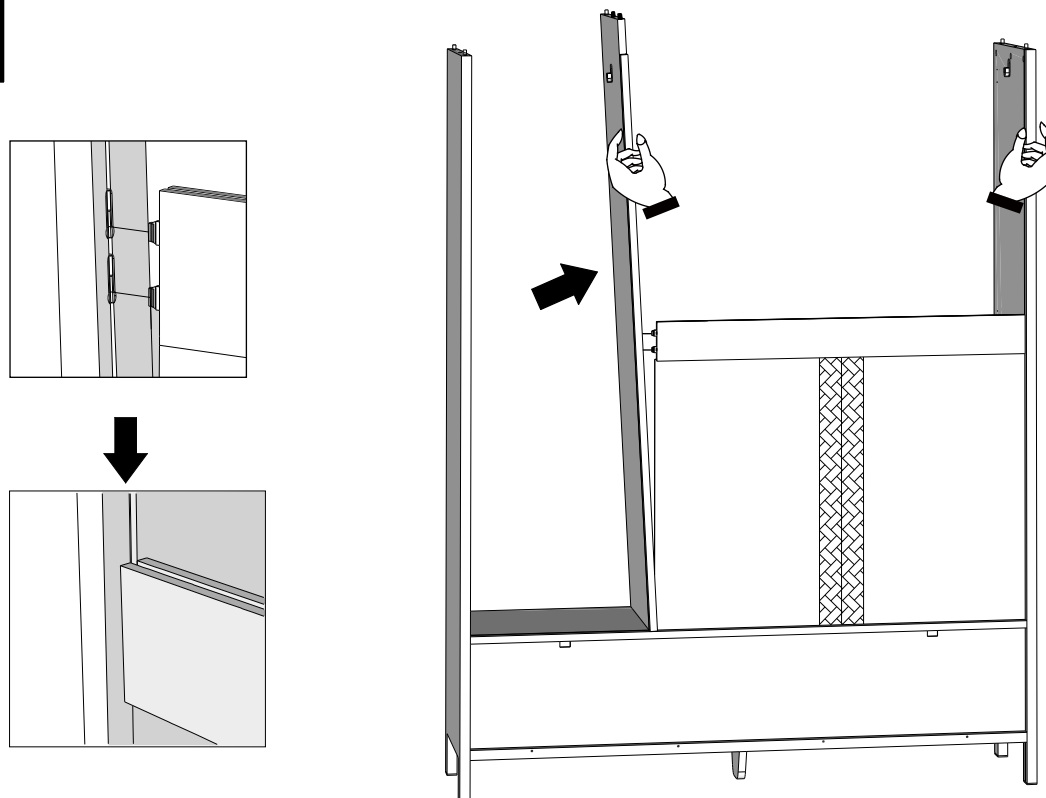


NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

11

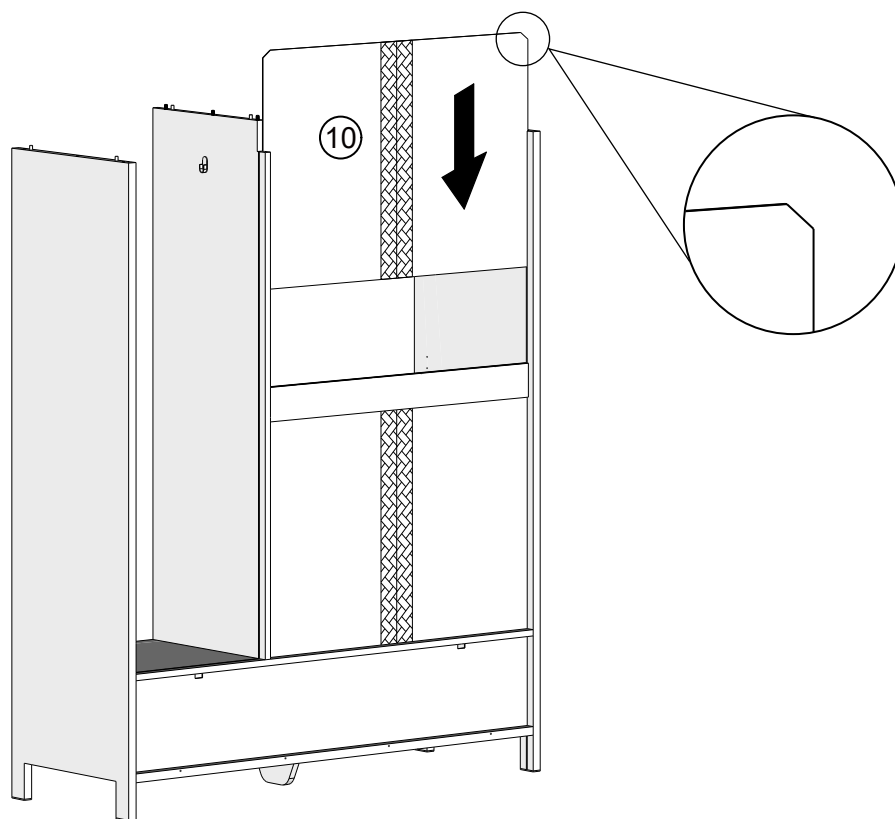

12

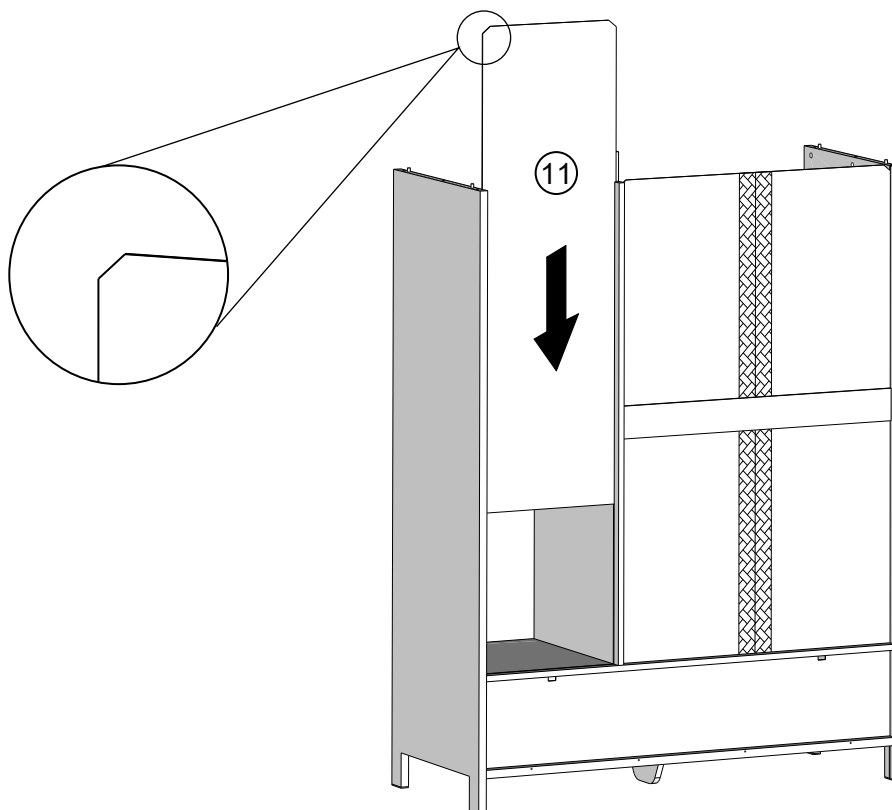

NEXT

MIA TRIPLE WARDROBE
Q73001
Assembly instructions

13



M11	N/A	1	
S42	Ø4 x 16mm	2	
B12	Ø7.5 x 33mm	6	<div> PH2 not supplied </div>

14

N1	N/A	2	
S41	Ø4 x 16mm	2	<div> PH2 not supplied </div>

NEXT


MIA TRIPLE WARDROBE
Q73001
Assembly instructions

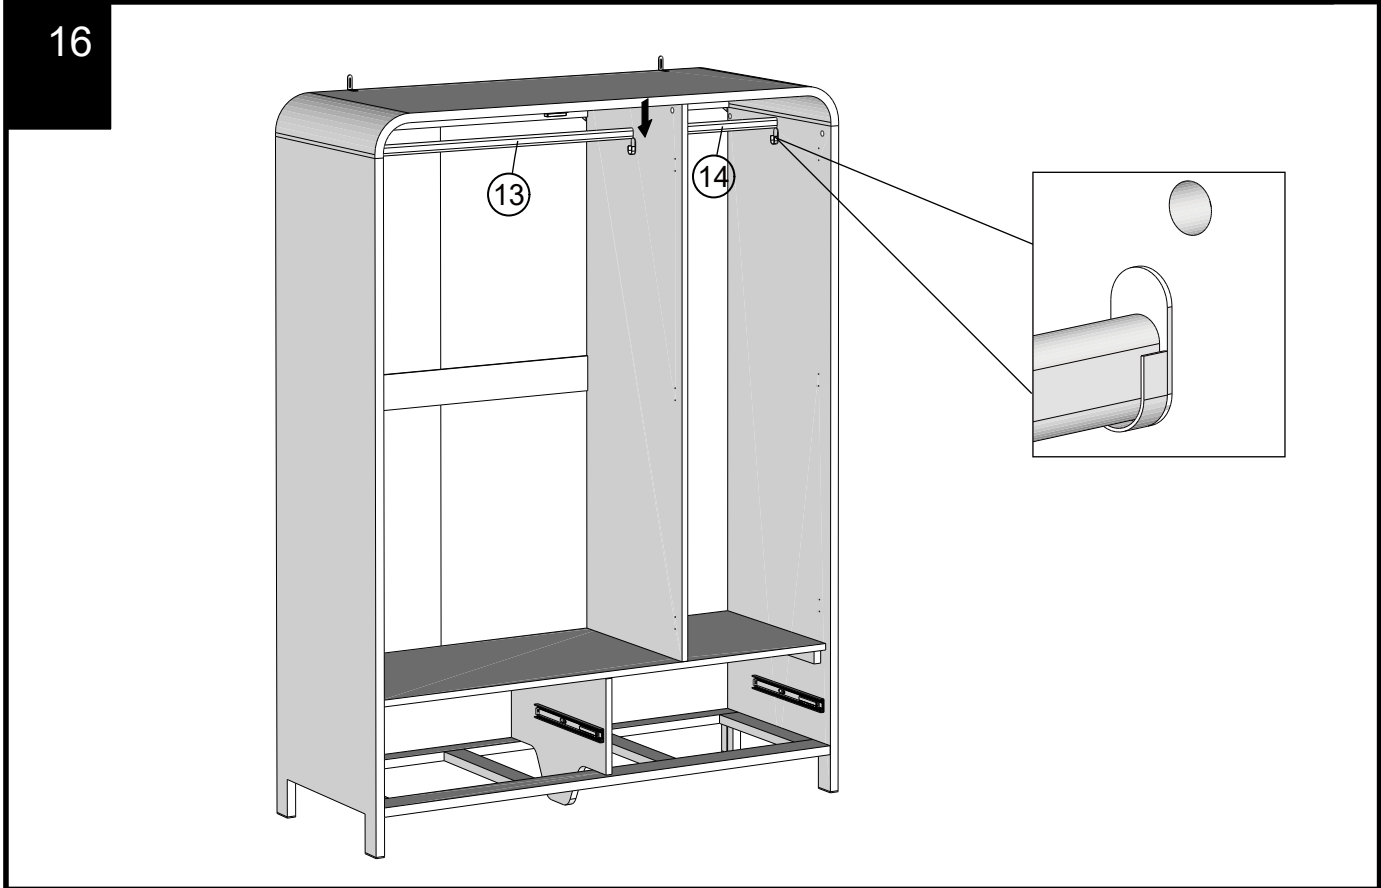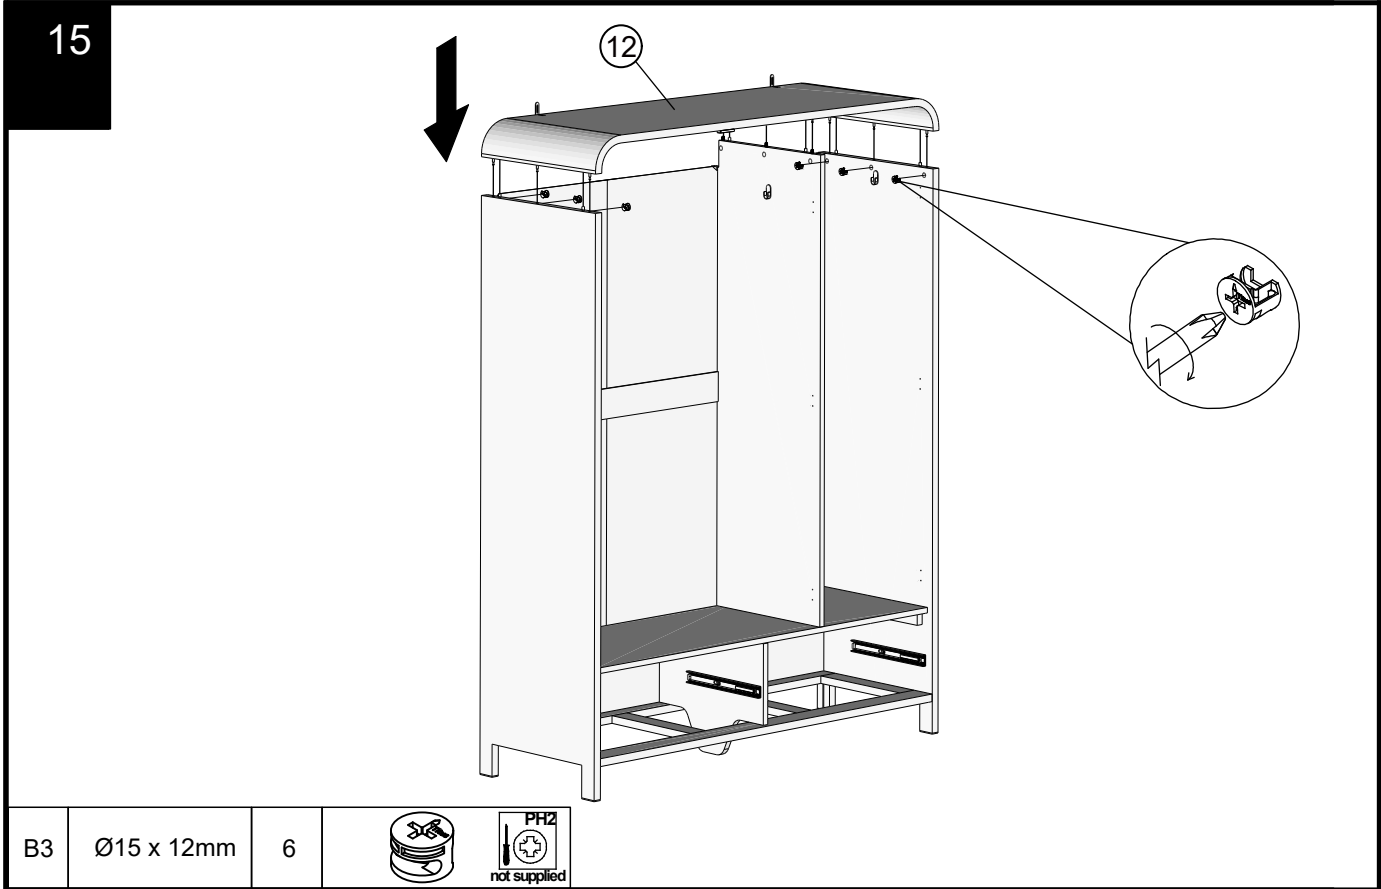


NEXT


MIA TRIPLE WARDROBE
Q73001
Assembly instructions

17

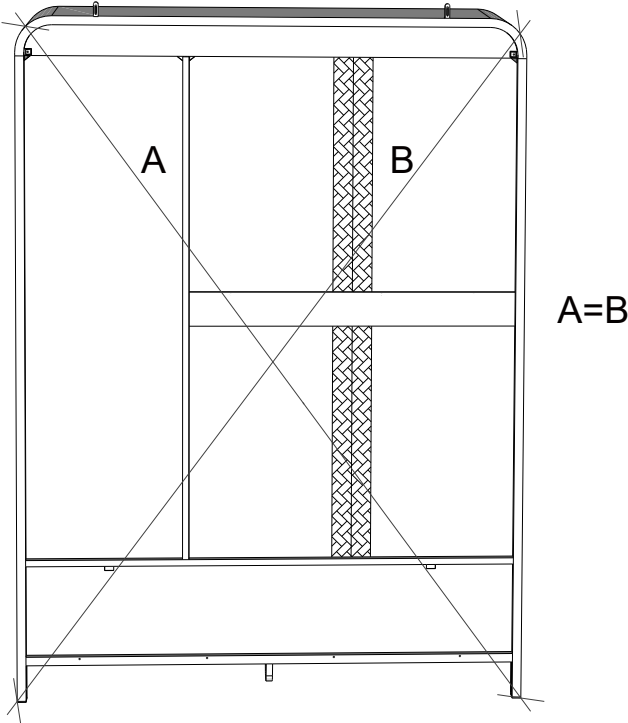



18

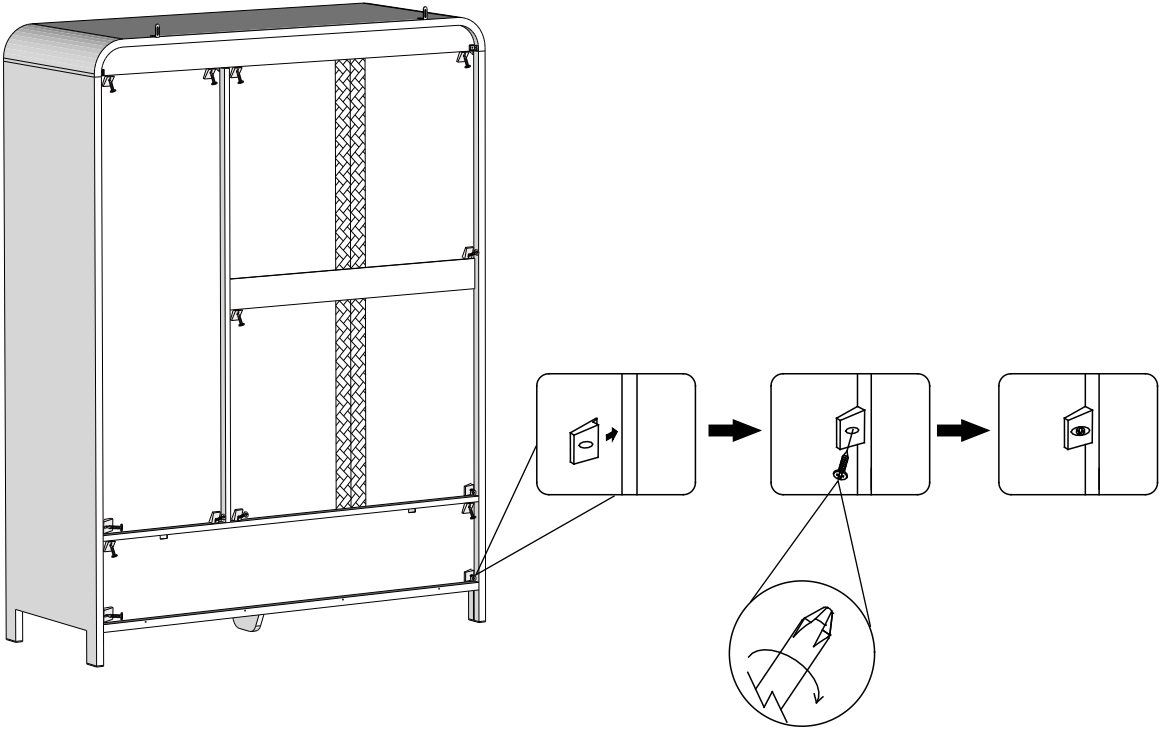



T38	N/A	14	 not supplied
-----	-----	----	---

19

We recommend the use of the wall attachment bracket/strap provided for safety reasons. Move unit into desired position. Secure the 2X"L" metal brackets to the wall with an appropriate screw and wall plug for your wall type (not provided).
Warning: Always ensure intended wall area to be drilled is free from hidden electrical wires, water and gas pipes.
NB: Wall fixings are not included-Please source suitable fixing for your wall type. If in doubt please consult a qualified trades person.

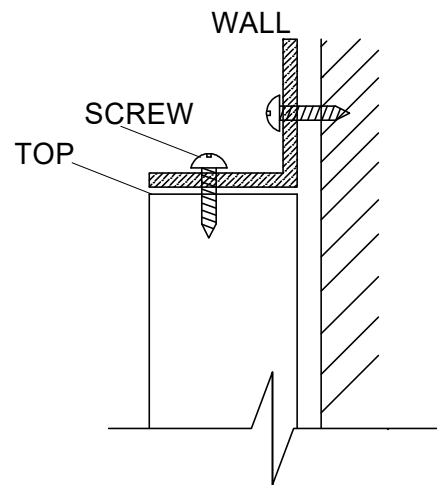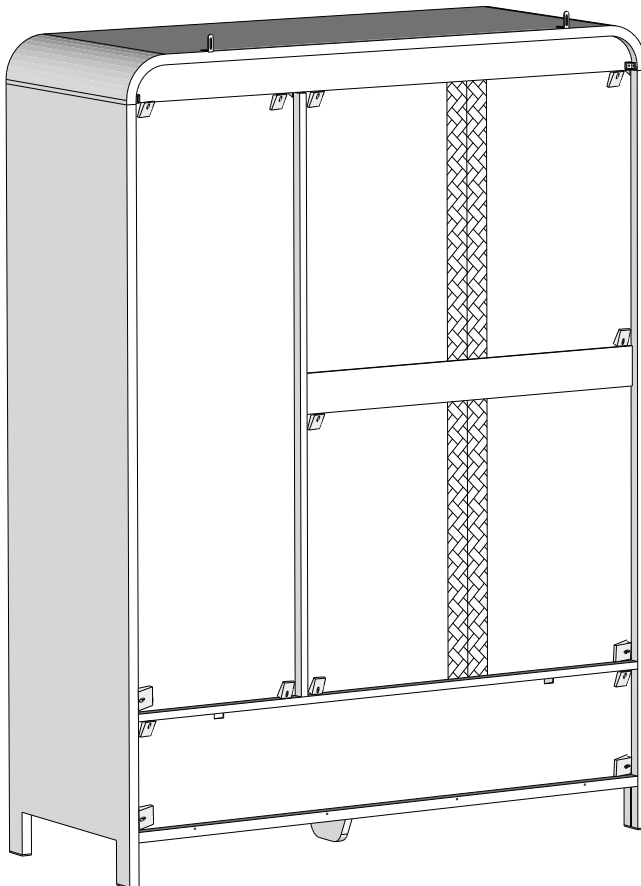


20

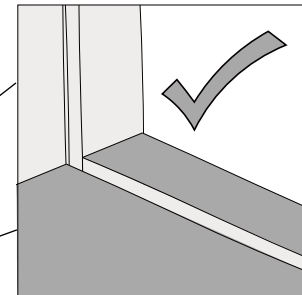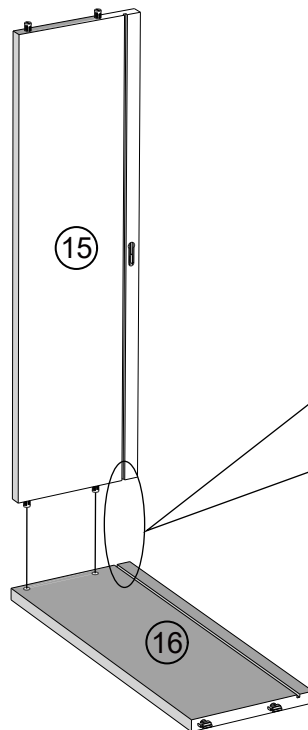


SLOTS ALIGNED

x2

21

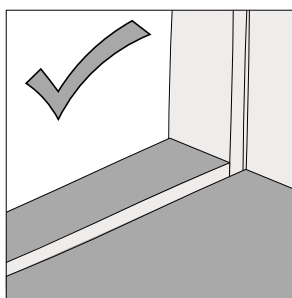

SLOTS ALIGNED

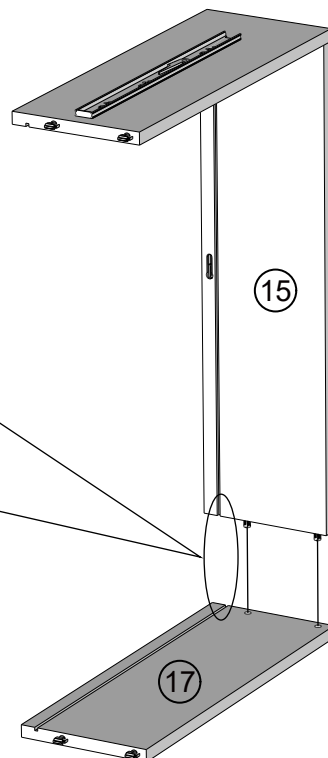


x2

NEXT MIA TRIPLE WARDROBE


Q73001
Assembly instructions

22

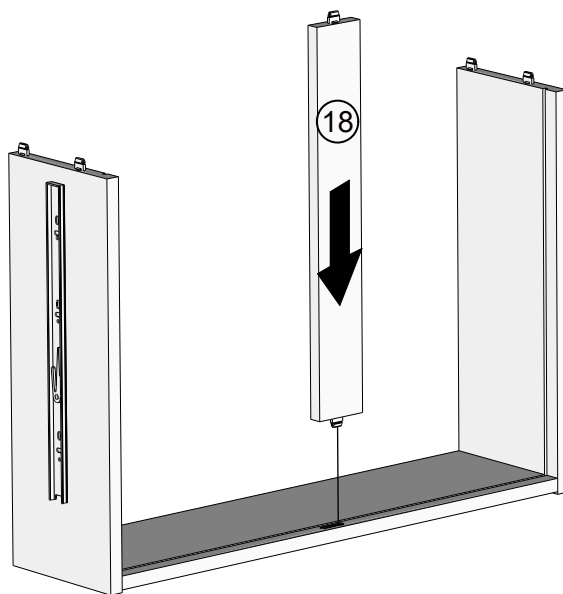

x2

23

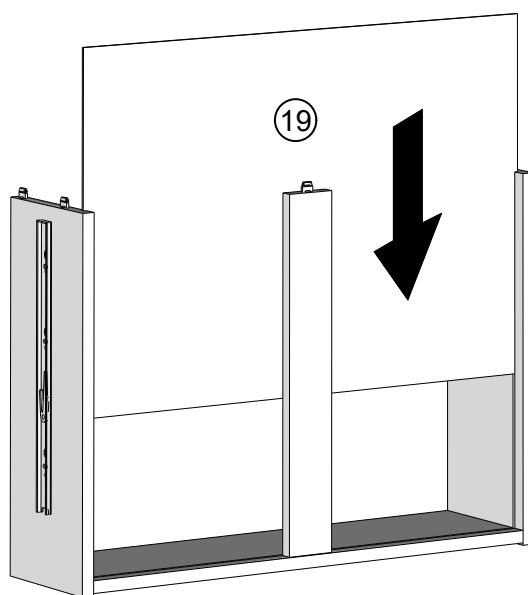



x2

NEXT



MIA TRIPLE WARDROBE
Q73001
Assembly instructions

24

Note: Drawer will be permanently assembled once panel ②0 and panel ②1 are fitted.

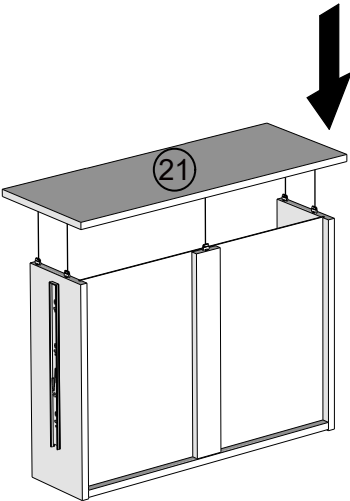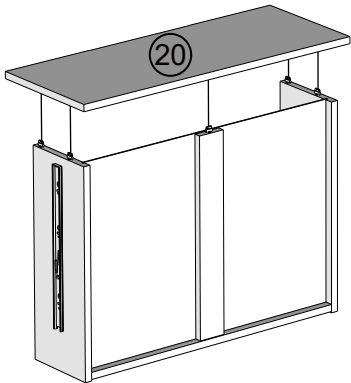

25

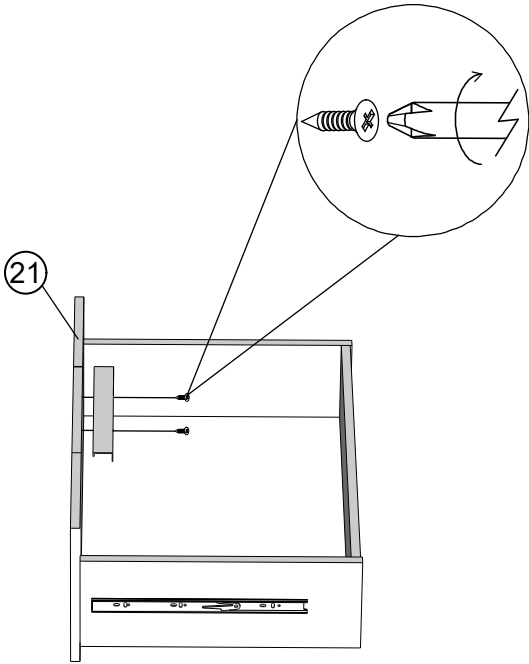
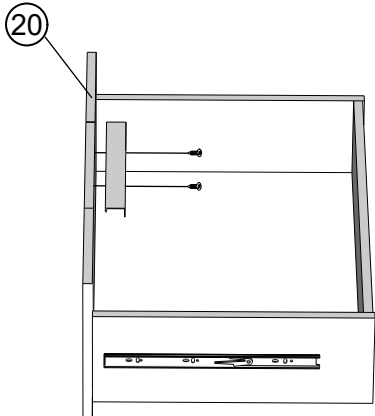


E48	N/A	2		 not supplied
-----	-----	---	---	---



NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions



26

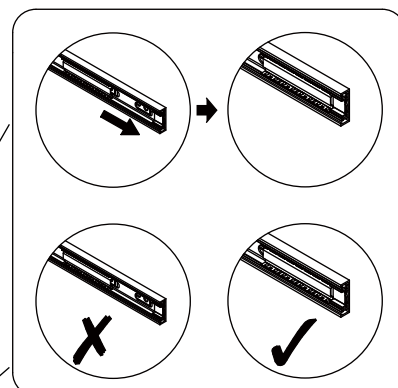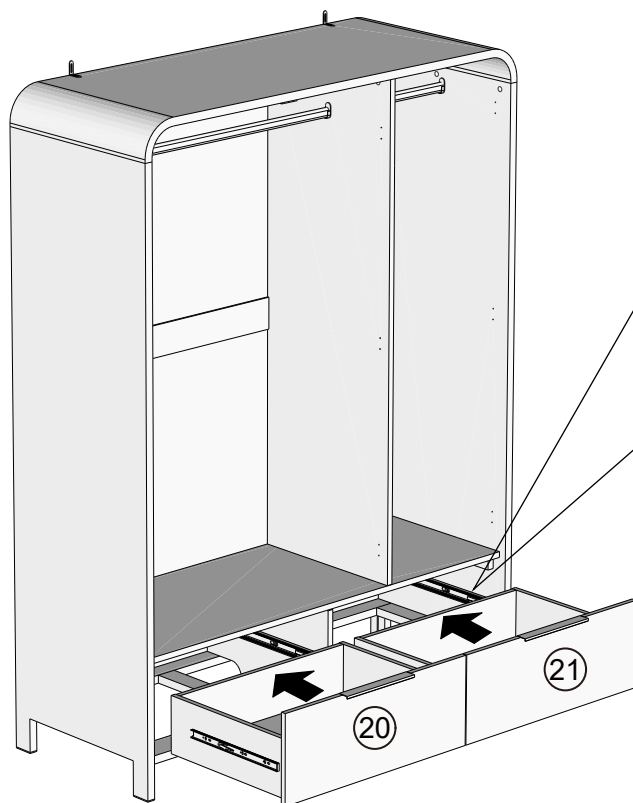



Left side

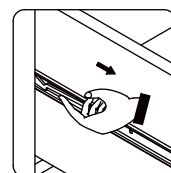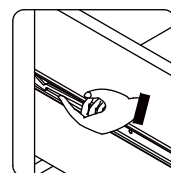

Right side

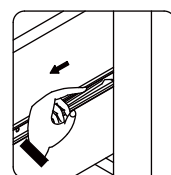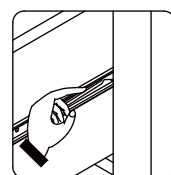


27

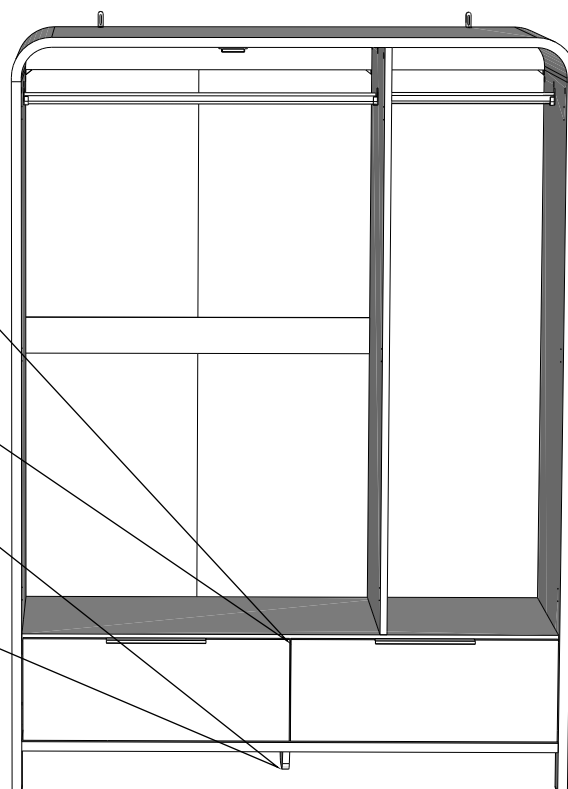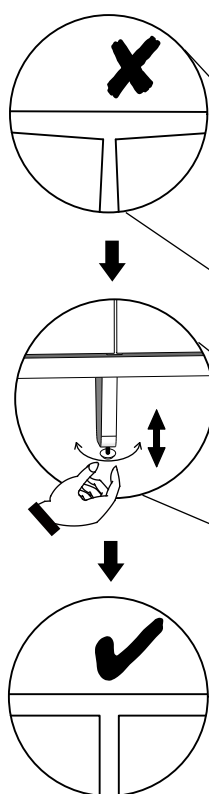




NEXT


MIA TRIPLE WARDROBE
Q73001
Assembly instructions

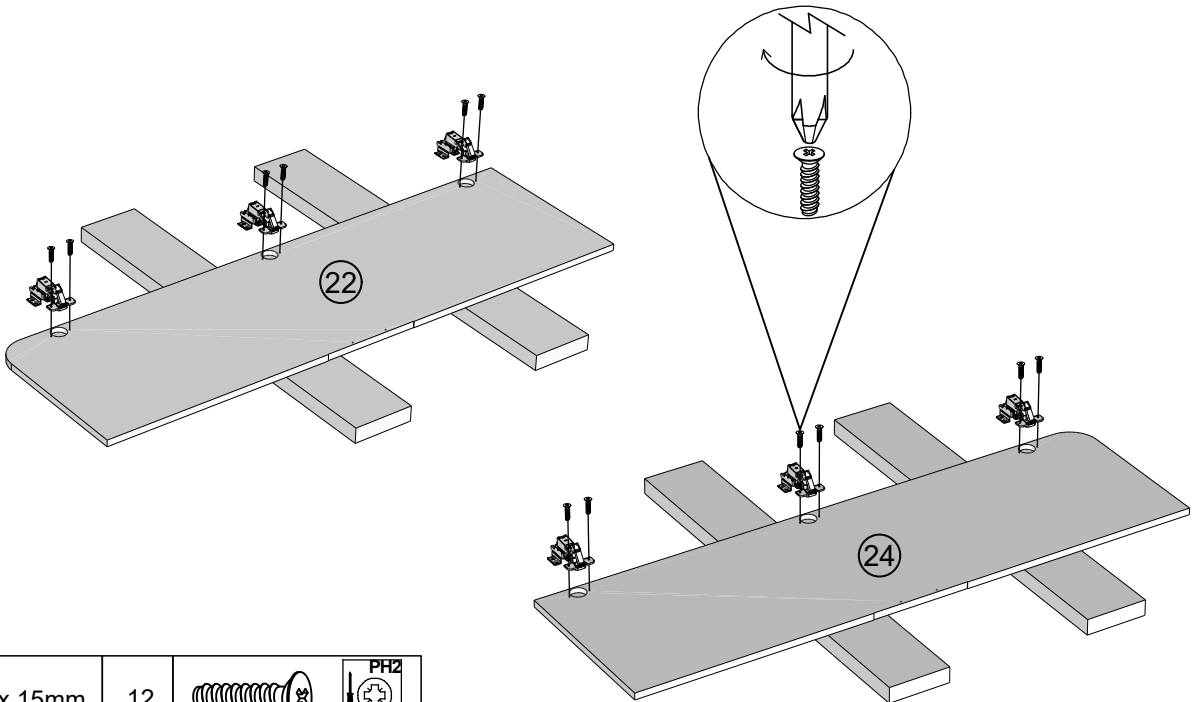


28



U139	Ø4.5 x 15mm	12		 not supplied
C19	N/A	6		

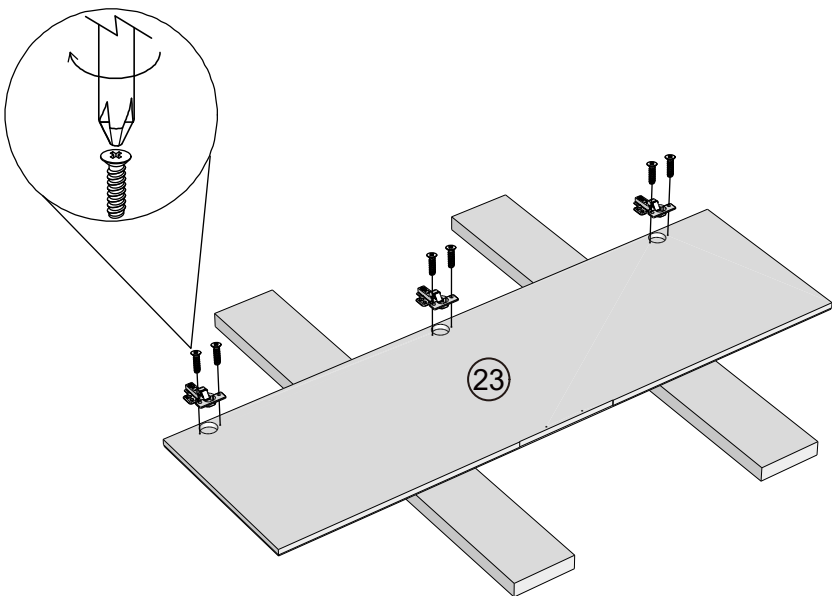29






U139	Ø4.5 x 15mm	6		 not supplied
C17	N/A	3		

NEXT

MIA TRIPLE WARDROBE
Q73001
Assembly instructions

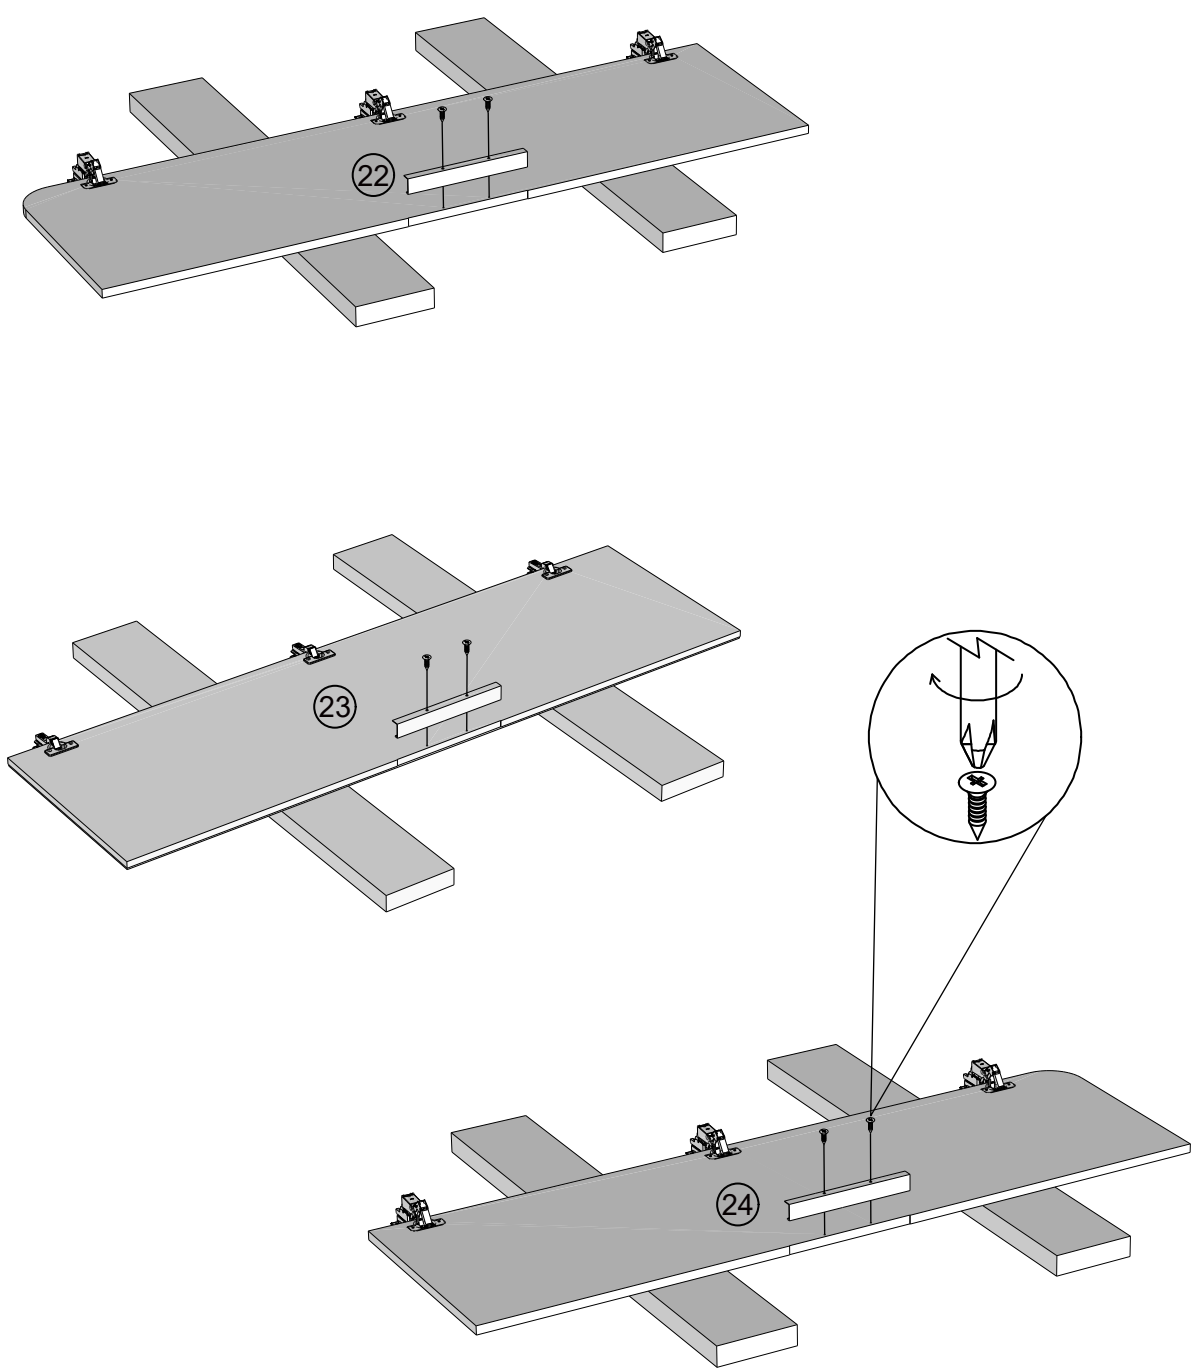30




E48	N/A	3		 not supplied
-----	-----	---	---	---

NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

31

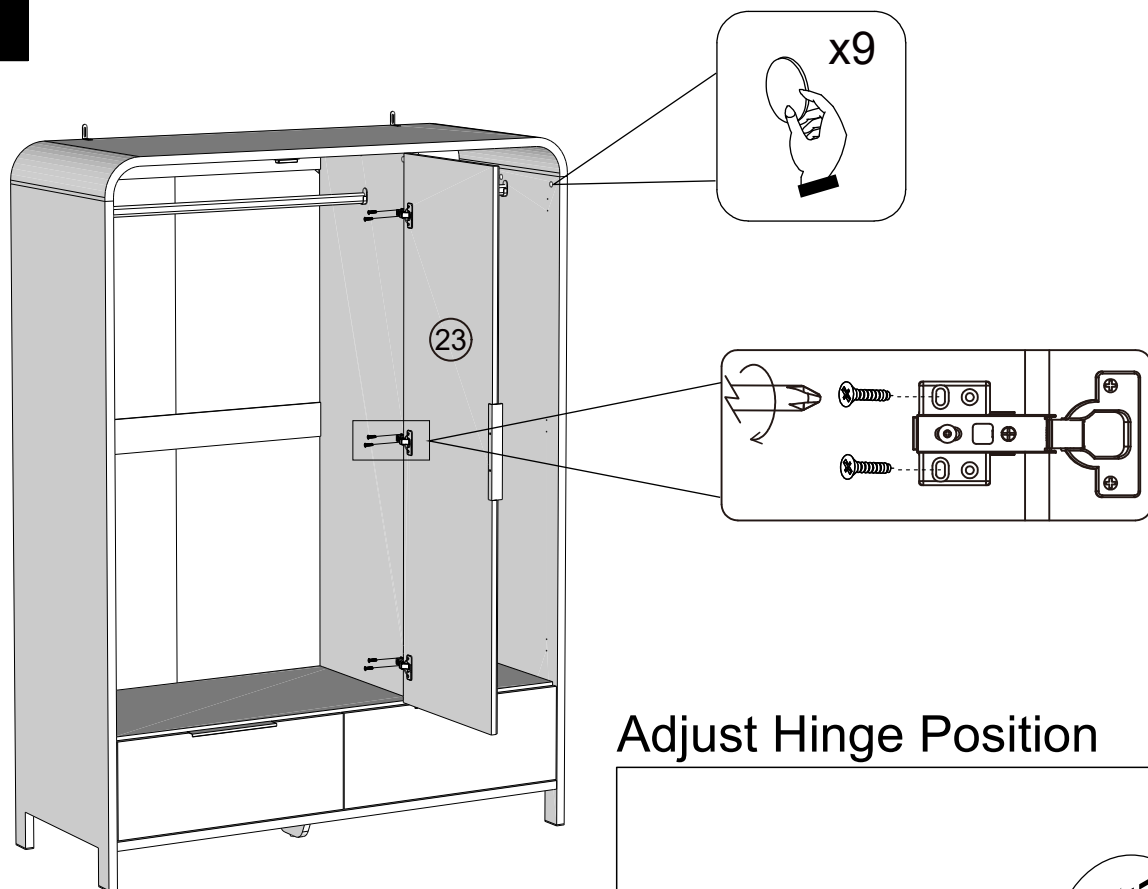


Adjust Hinge Position

WHEN LOOSENING THE CAM

TURN THE CAM IN A COUNTERCLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITION SHOWN IN THE DIAGRAMS BELOW



MAXIMUM
LOCK

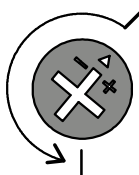


TURN
TO UNLOCK






UNLOCKED




VERTICAL

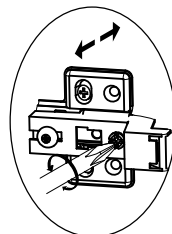

LATERAL

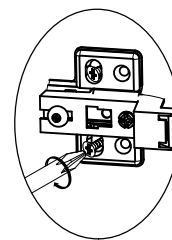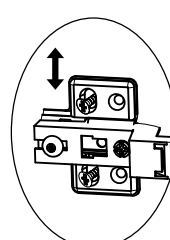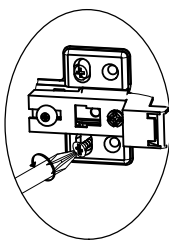

FRONT- TO-BACK

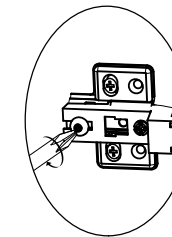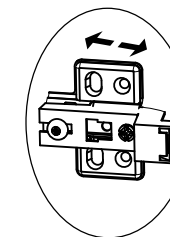
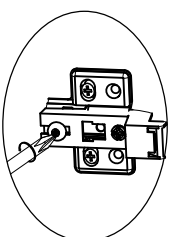


O1	Ø21mm	9	
U139	Ø4.5 x 15mm	6	<small>not supplied</small>


NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

32

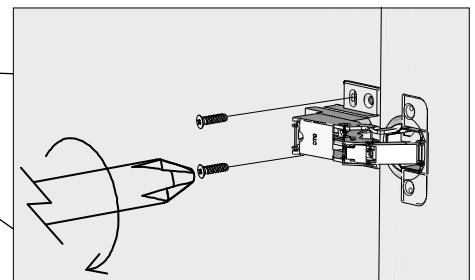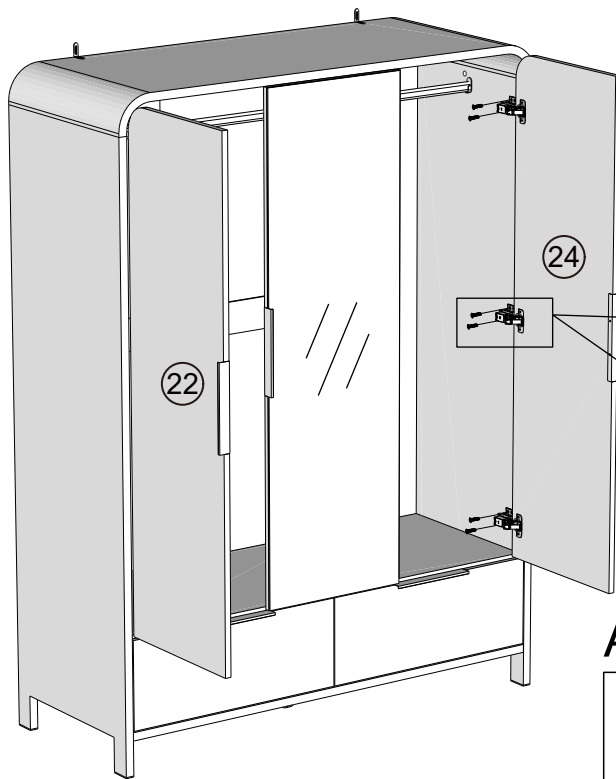

Adjust Hinge Position

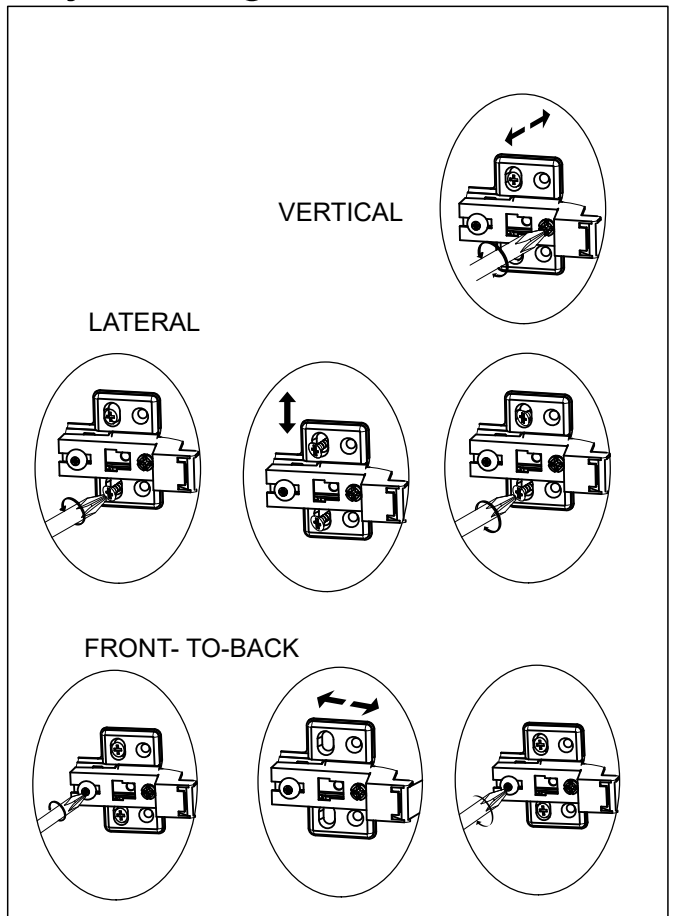




U139	Ø4.5 x 15mm	12		 not supplied
------	-------------	----	---	---

NEXT MIA TRIPLE WARDROBE

Q73001
Assembly instructions

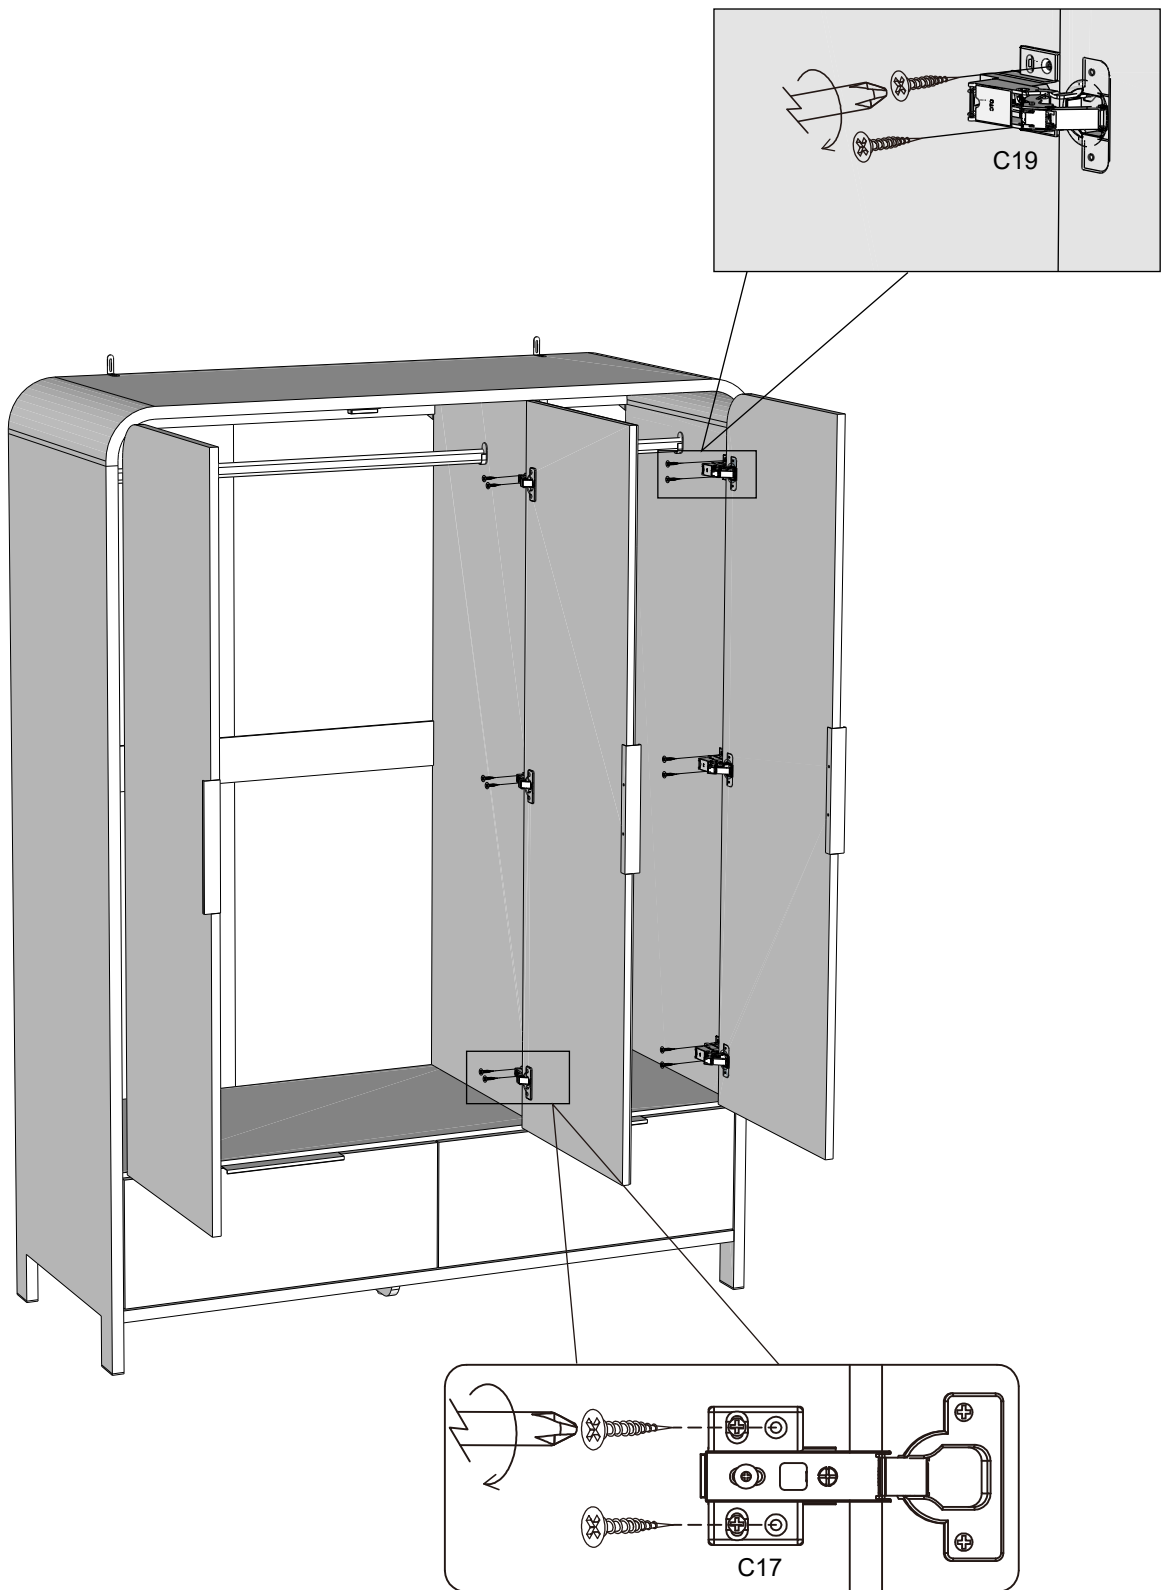33




U143	Ø4 x 15mm	18		 not supplied
------	-----------	----	---	---

NEXT

MIA TRIPLE WARDROBE
Q73001

Actual product size
H190 x W140 x D56 cm

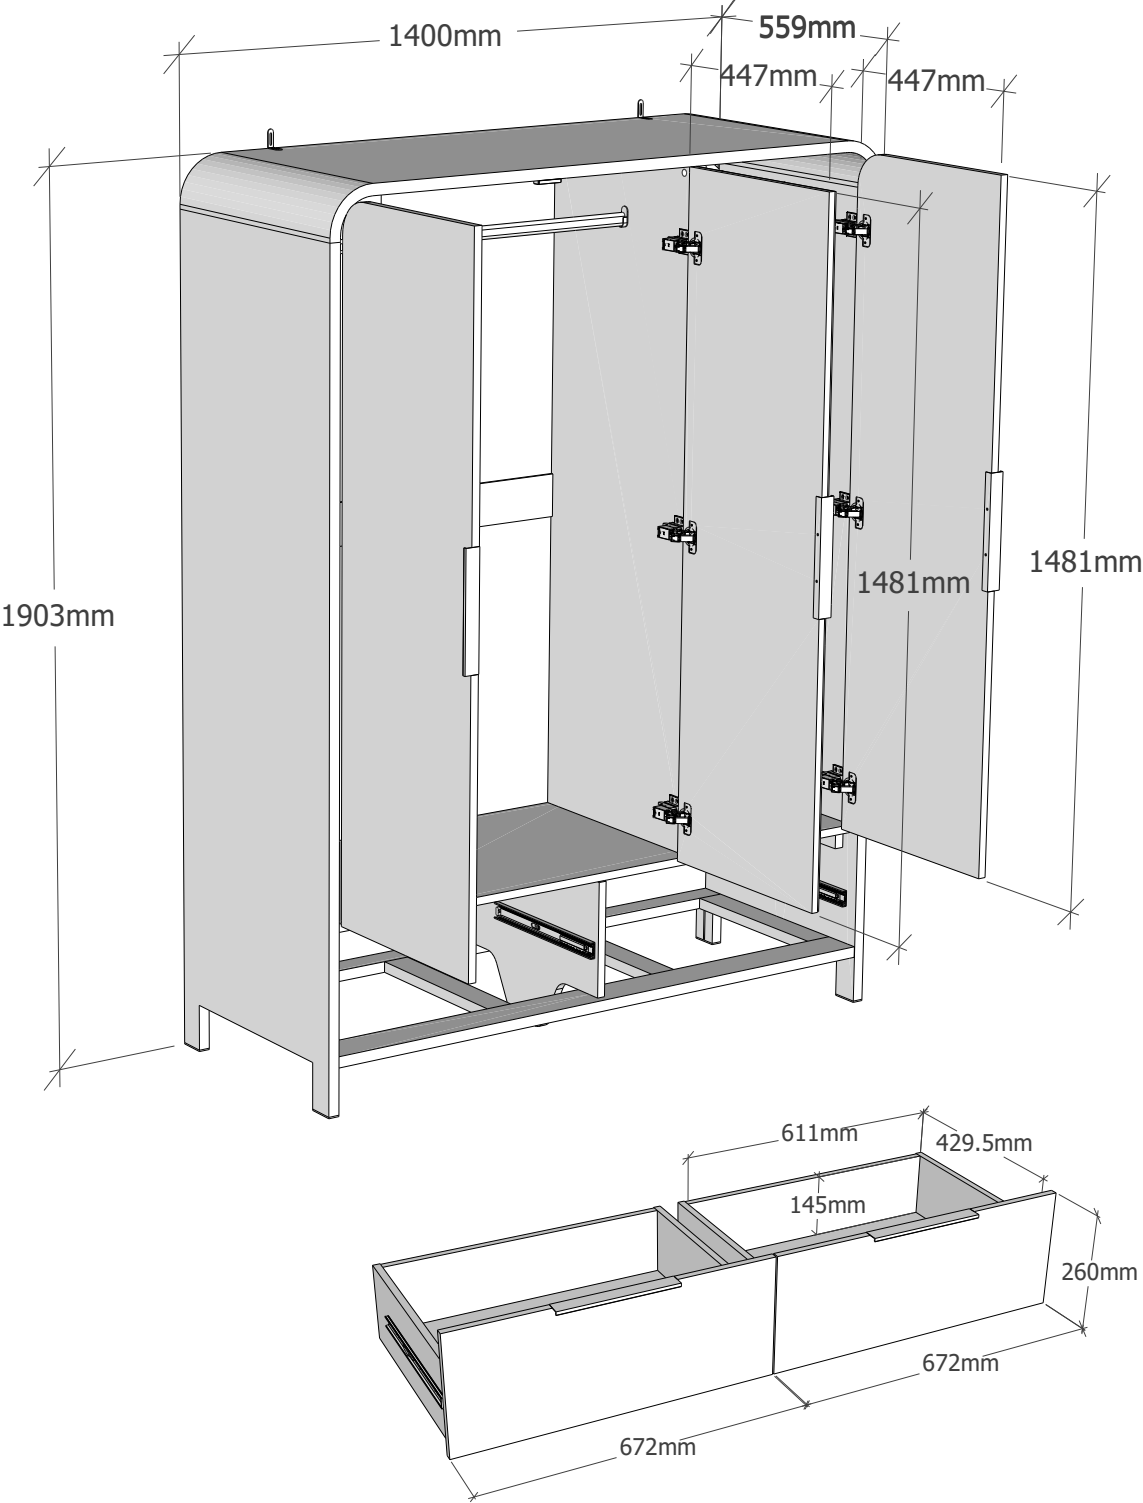

NEXT MIA TRIPLE WARDROBE

Q73001

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

Name and Address: NEXT RETAIL LTD. LE19 4AT

Identification and model Number: Q73001 MIA TRIPLE WARDROBE

Date of Manufacture:

Contract number:

Nominal thickness of Glass: 4mm, Annealed glass

Country of Origin: China

If a glass component is chipped or broken replace with glass of the type described on this label. Consult with the retailer with regard to obtaining a manufacturing specification and shape for replacement glass quoting the model number, batch number and date of manufacture.

Missing parts

If you are missing any fixtures and fittings for your product.

Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd.
Desford Road,
Leicester,
LE19 4AT

To view our full furniture range please visit www.next.co.uk