


# NEXT

## BRONX/BRONX LIGHT SLAT XL BED WITH BEDSIDES C24482/Q96760 Assembly instructions

### Actual product size

SUPER KING:H110 x W266 x D207cm

KING:H110xW236xD207cm

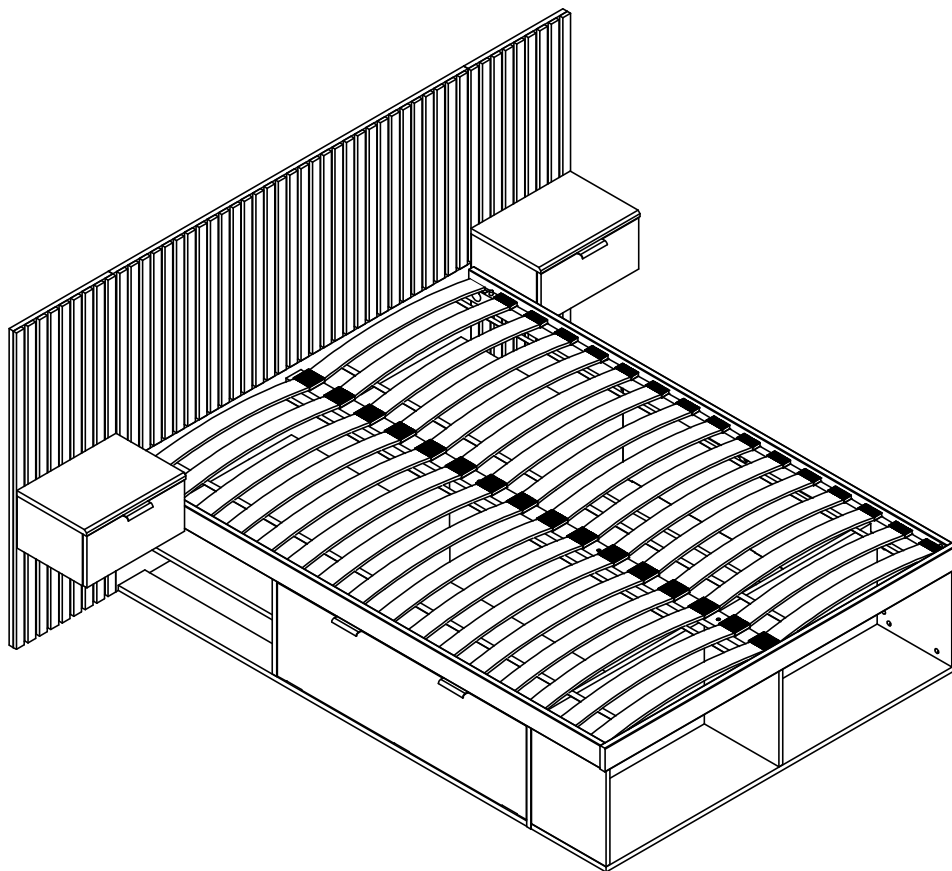

## Need Help ?

With: Assembly instruction

Missing or damaged parts

**IMPORTANT - RETAIN FOR FUTURE REFERENCE**

**CALL: 0333 777 8999**

## BEFORE YOU START


### Number of people required to assemble

Two people are required to assemble this item



Time to assemble : 1 hour

### Tools required

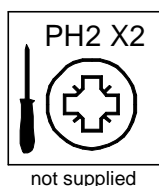

### Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools and plenty of space.

Unwrap all packaging materials and place the components on a clean surface to protect it from damage, We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Ensure the product is fully assembled as illustrated and all fixings fully tightened before use.

Wipe occasionally with a soft cloth slightly dampened with water. Then buff with a dry clean soft cloth.

Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

### Don'ts

Do not drag or pull your furniture.



Do not rub or scrub the surface when cleaning.

Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

Never allow any kind of liquid to remain on your furniture.  
Absorption can cause wood to warp or finishes to de-laminate.















Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.

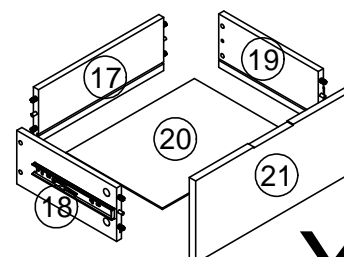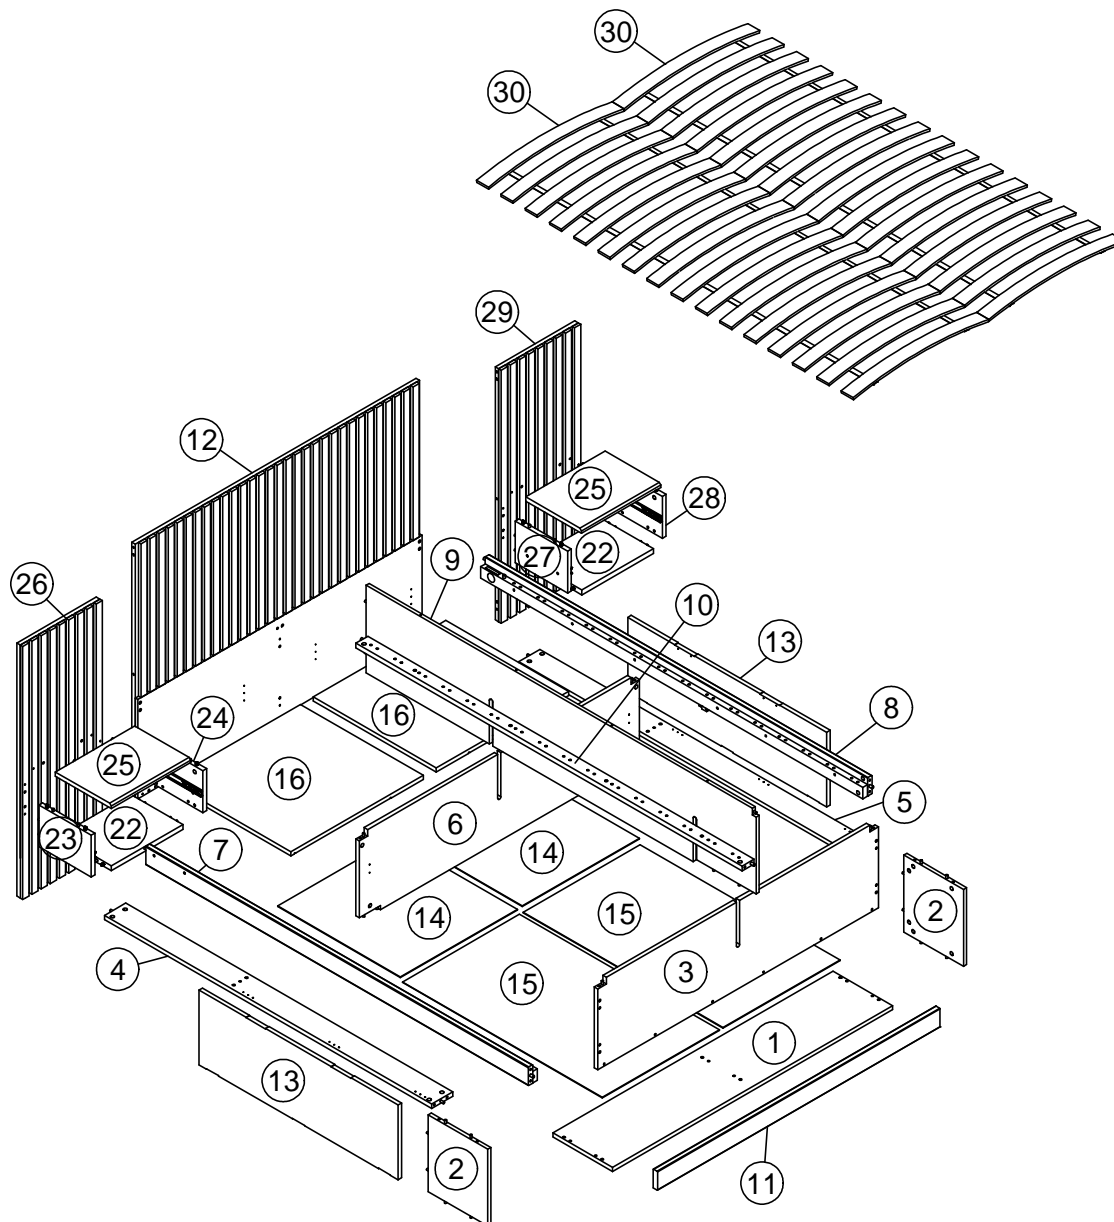















## GETTING TO KNOW YOUR PRODUCT



**X2**


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	30 x 185.5cm		1	1
2	30 x 33.5cm		2	2
3	38 x 186cm		1	3
4	10.5 x 172.5cm		1	1
5	10.5 x 172.5cm		1	1
6	38 x 155.5cm		1	3
7	8 x 202cm		1	1
8	8 x 202cm		1	1
9	38 x 204cm		1	1
10	6 x 202cm		1	1
11	8 x 186.5cm		1	1
12	110 x 186.5cm		1	3
13	32.5 x 105cm		2	2
14	65 x 81.5cm		2	3


Ref	Dimensions	Visual	Qty	Ctn
15	81.5 x 105.5cm		2	3
16	65 x 90cm		2	3
17	11.5 x 31cm		2	2
18	11.5 x 25cm		2	2
19	11.5 x 25cm		2	2
20	24.5 x 32cm		2	2
21	18 x 39cm		2	2
22	26 x 36cm		2	2
23	18 x 26.5cm		1	2
24	18 x 26.5cm		1	2
25	28 x 40cm		2	2
26	40 x 110cm		1	2
27	18 x 26.5cm		1	2
28	18 x 26.5cm		1	2
29	40 x 110cm		1	2
30	6 x 90.5cm		32	1

# NEXT


## TITUS TIGHTENING INSTRUCTIONS

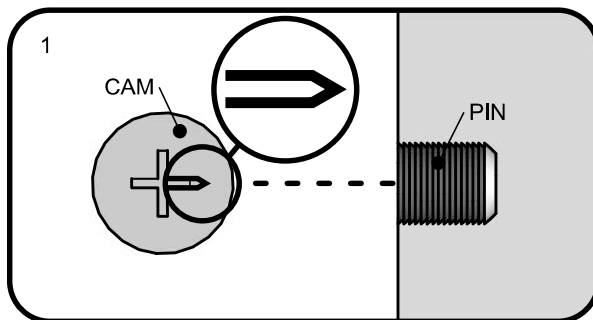


Line up the arrow on the CAM with the PIN.

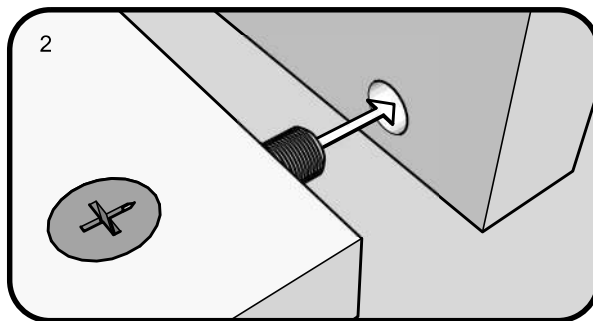


Push the pins into the holes in the panel to be joined.

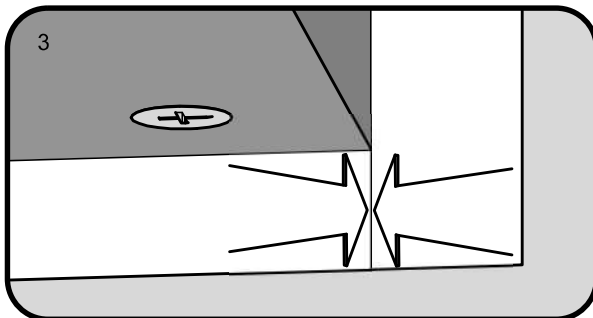

Make sure there is no gap between the panels.

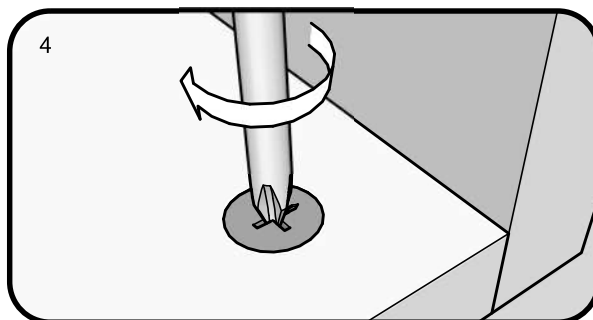

Use a cross-point screwdriver (PH2 or PZ2 is ideal) to tighten the cams and lock the panels together.


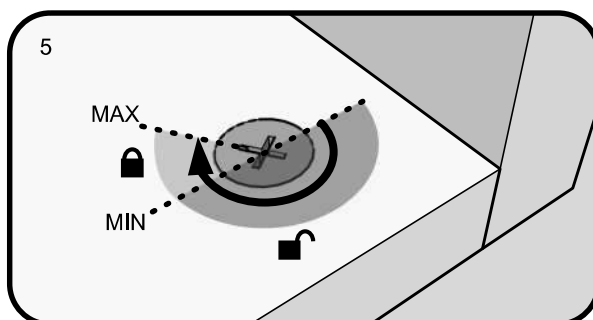


The panels are locked when each cam is turned to between 1/2 and 2/3 of a full turn (Maximum rotation)

# NEXT















BRONX/BRONX LIGHT SLAT XL BED WITH BEDSIDES-KING  
C24482/Q96760  
Assembly instructions

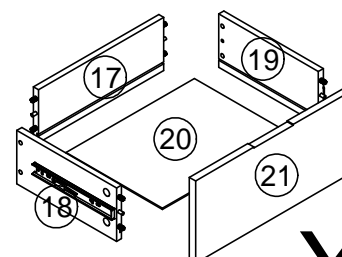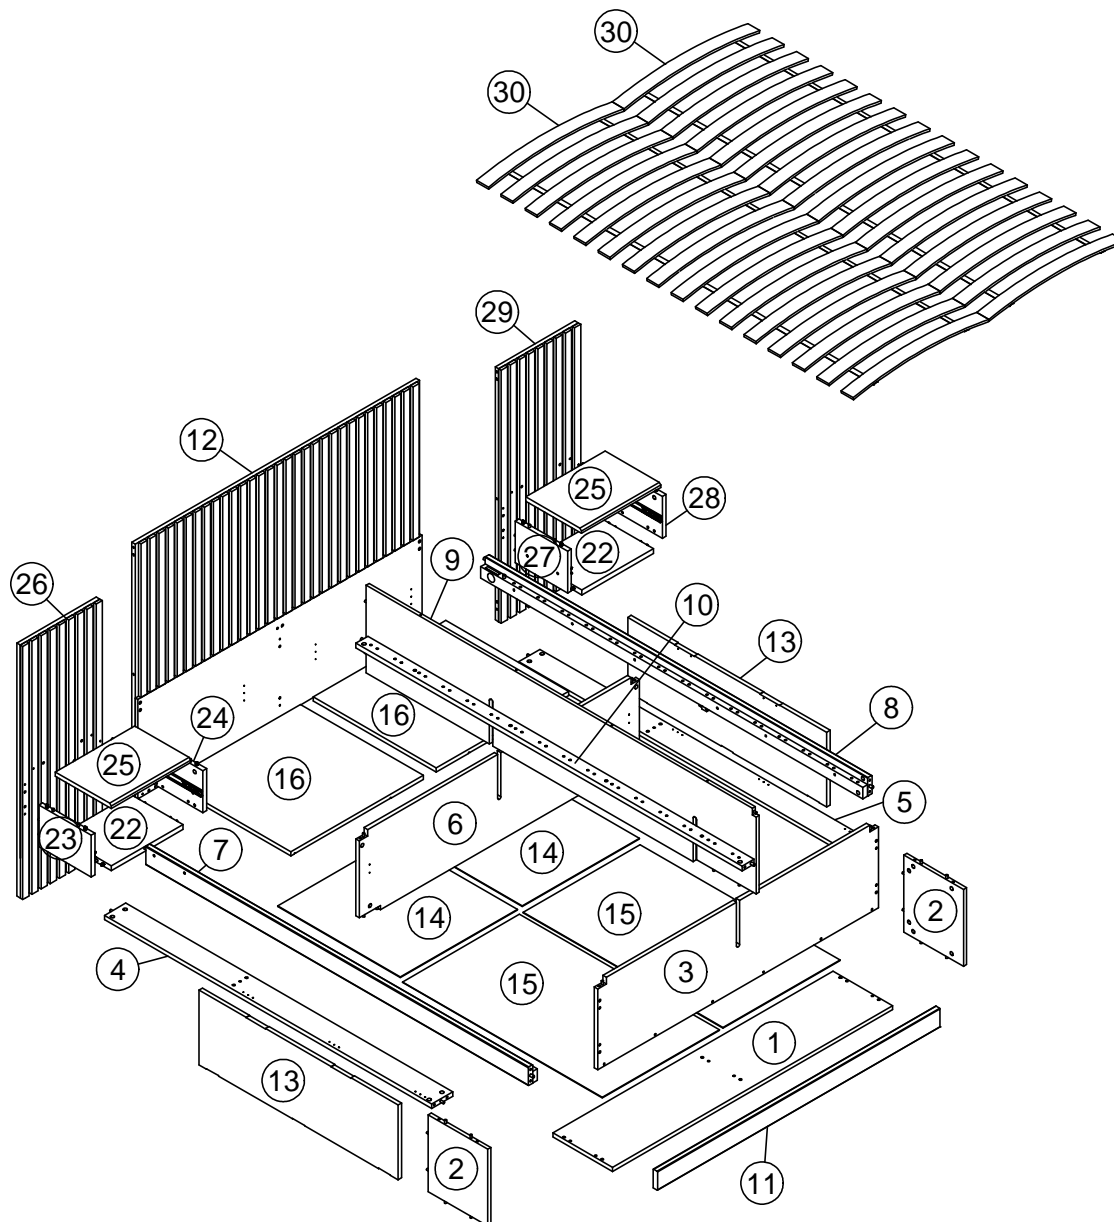















## GETTING TO KNOW YOUR PRODUCT



X2


Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	30 x 155.5cm		1	1
2	30 x 33.5cm		2	2
3	38 x 156cm		1	3
4	10.5 x 172.5cm		1	1
5	10.5 x 172.5cm		1	1
6	38 x 155.5cm		1	3
7	8 x 202cm		1	1
8	8 x 202cm		1	1
9	38 x 204cm		1	1
10	6 x 202cm		1	1
11	8 x 156.5cm		1	1
12	110 x 156.5cm		1	3
13	32.5 x 105cm		2	2
14	65 x 66.5cm		2	3

Ref	Dimensions	Visual	Qty	Ctn
15	66.5 x 105.5cm		2	3
16	65 x 75cm		2	3
17	11.5 x 31cm		2	2
18	11.5 x 25cm		2	2
19	11.5 x 25cm		2	2
20	24.5 x 32cm		2	2
21	18 x 39cm		2	2
22	26 x 36cm		2	2
23	18 x 26.5cm		1	2
24	18 x 26.5cm		1	2
25	28 x 40cm		2	2
26	40 x 110cm		1	2
27	18 x 26.5cm		1	2
28	18 x 26.5cm		1	2
29	40 x 110cm		1	2
30	6 x 75.5cm		32	1







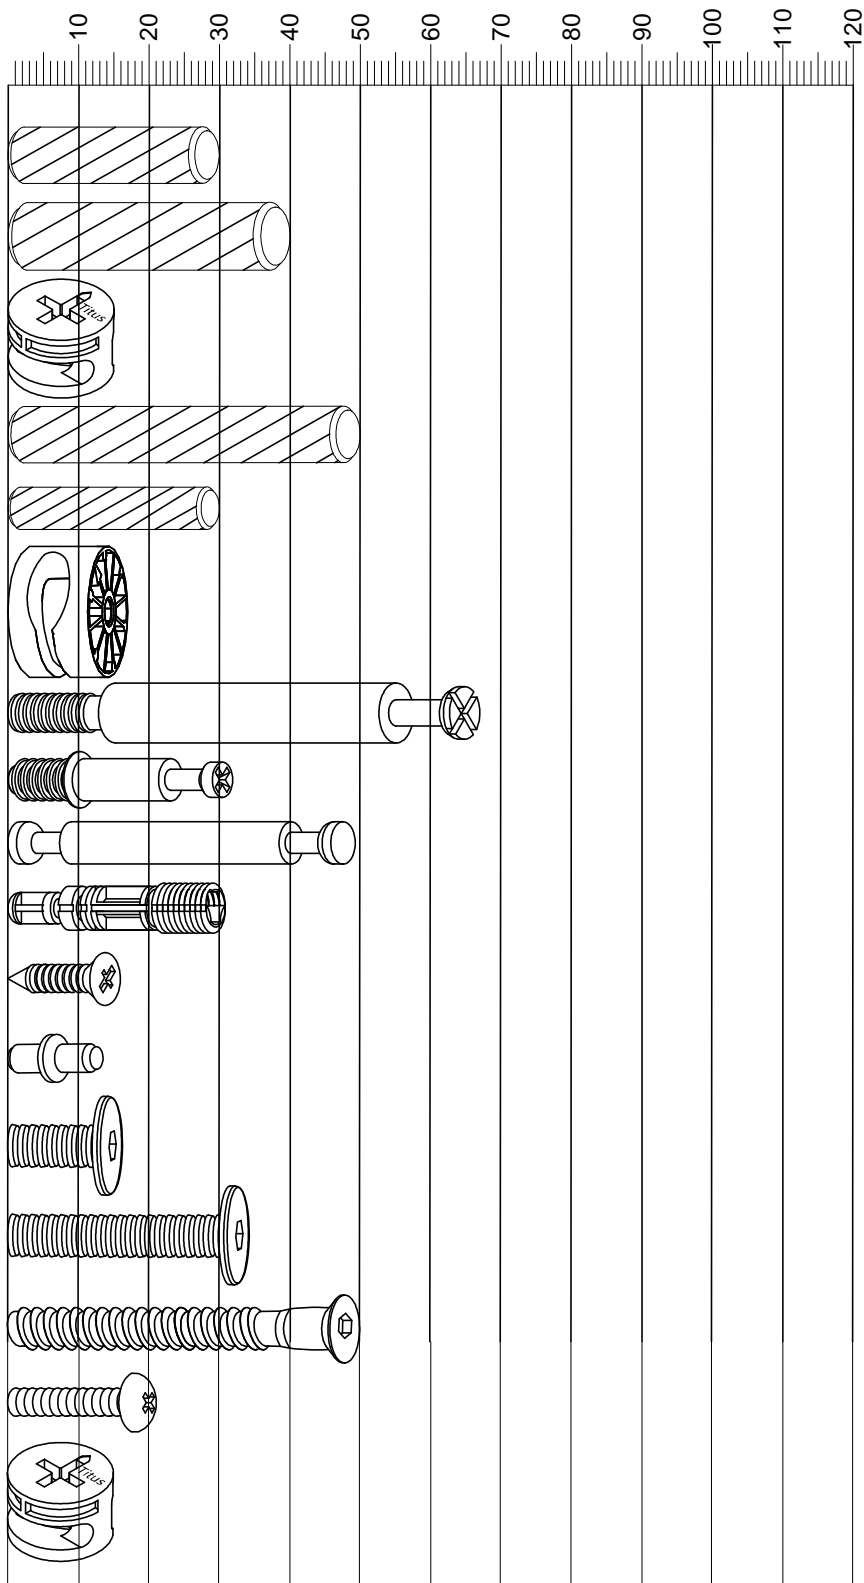




#### Fixtures and fittings supplied (actual size)



Ref	Dimensions	Qty	Spare Qty
D6	Ø8 x 30mm	N/A	2
D9	Ø10 x 40mm	N/A	1
B4	Ø15 x 12mm	48	2
D24	Ø8 x 40mm	4	1
D3	Ø6 x 30mm	N/A	1
B25	Ø35 x 17mm	2	N/A
B24	Ø8.5 x 63mm	2	N/A
B12	Ø7.5 x 33mm	36	2
B15	Ø6 x 49.5mm	6	1
B8	Ø8 x 38mm	N/A	2
U123	Ø4 x 16mm	58	2
P3	Ø5 x 16mm	8	1
V35	Ø6 x 12mm	16	2
V53	Ø6 x 30mm	4	1
Y8	Ø6 x 50mm	22	2
S42	Ø4 x 16mm	4	1
B2	Ø15 x 10mm	N/A	2





### Fixtures and fittings supplied ( not to scale)



Ref	Dimensions	Qty	Spare Qty	Visual
H38	N/A	4	N/A	
H29	N/A	6	N/A	
E39	N/A	6	N/A	
T34	N/A	16	N/A	
T33	N/A	30	N/A	
T7	N/A	1	N/A	
T1	N/A	2	N/A	
N30	N/A	4	N/A	
M1	N/A	2	N/A	
O1	Ø21mm	40	2	
O2	Ø21mm	12	2	

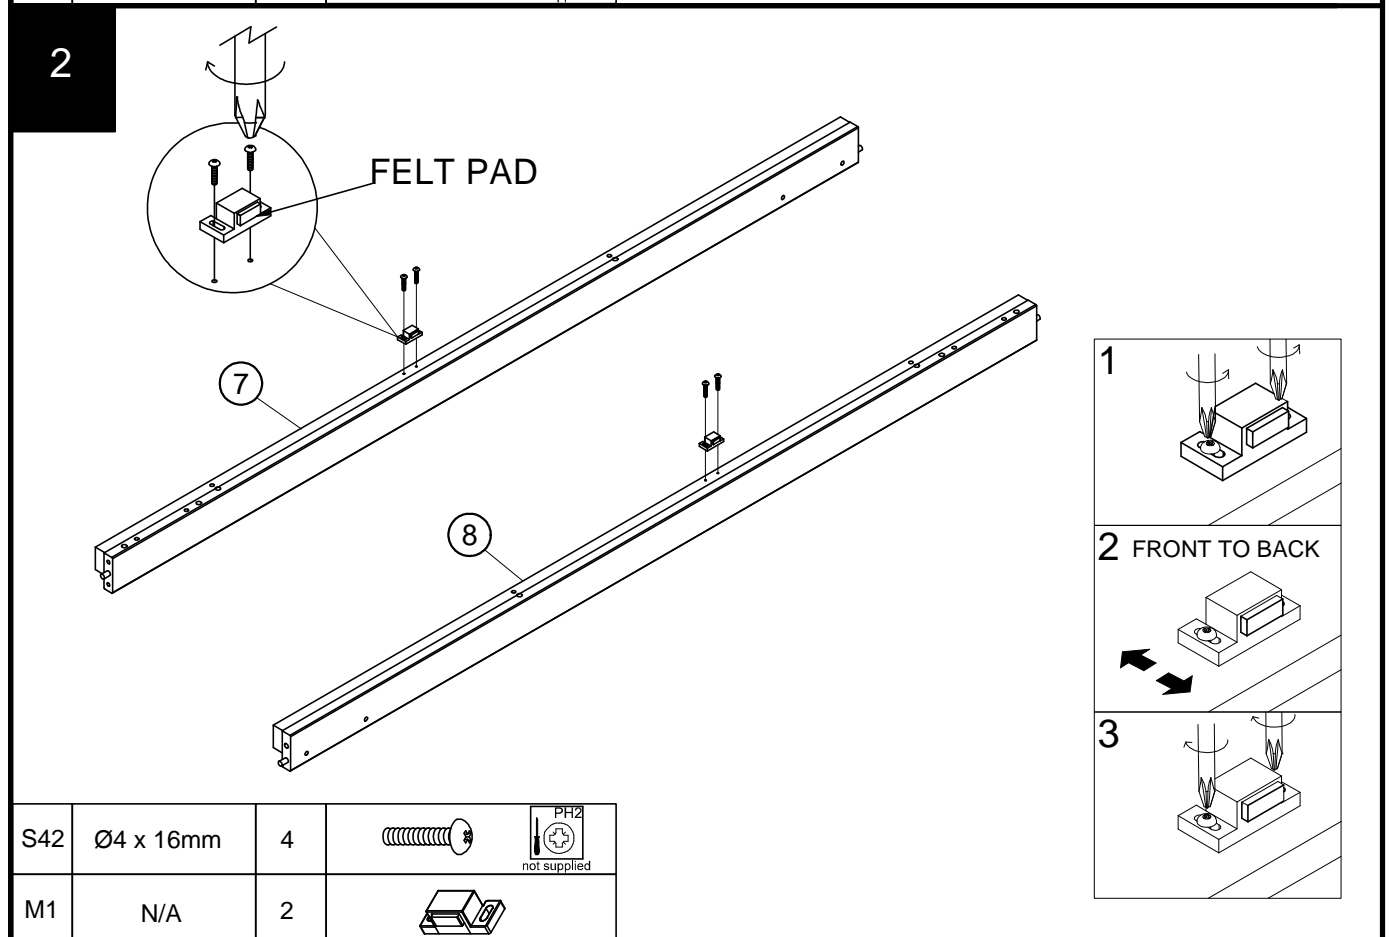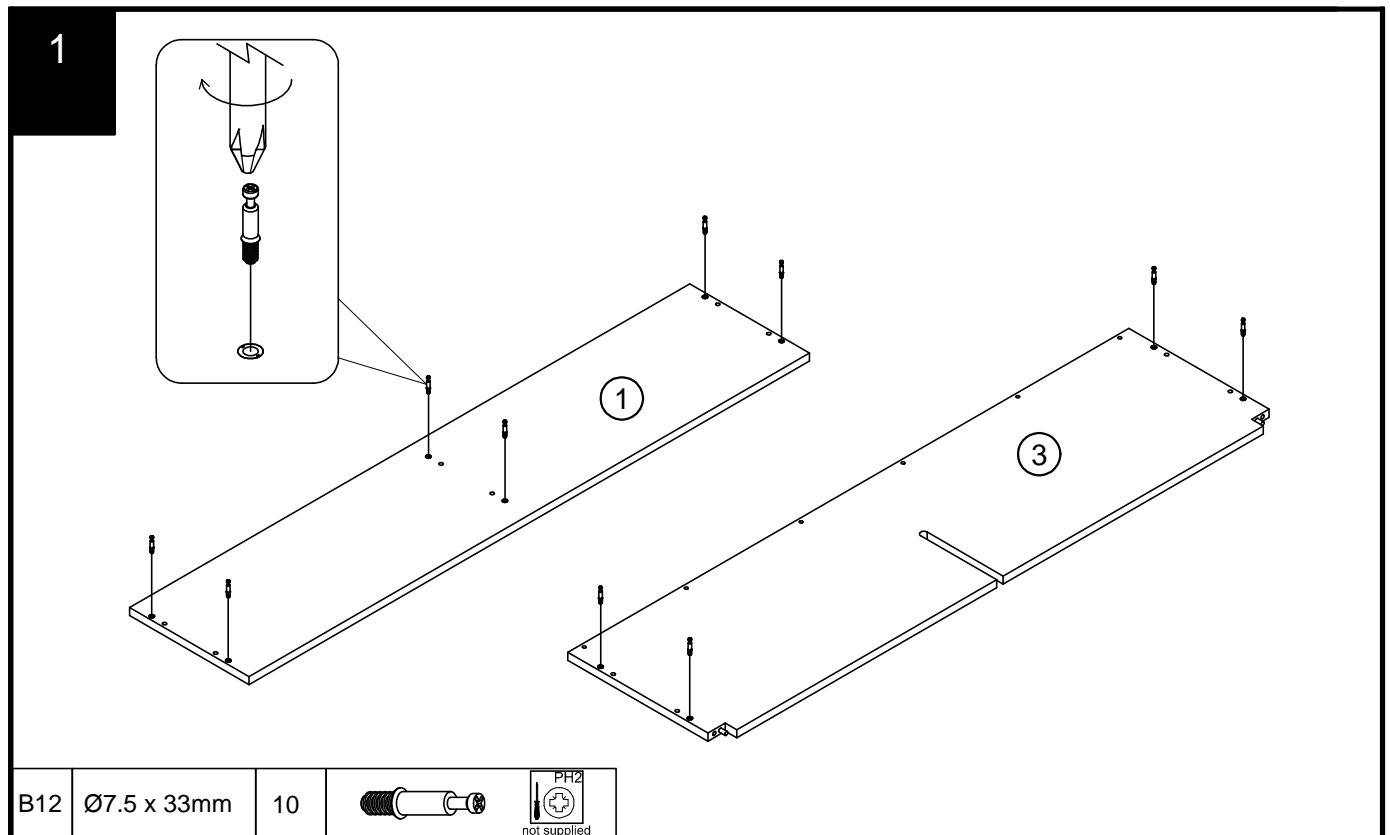


3

### DON'T STOP UNTIL THE 2 O'CLOCK LOCK


TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE  
ARROW POINTS IN THE POSITIONS SHOWN IN THE  
DIAGRAMS BELOW

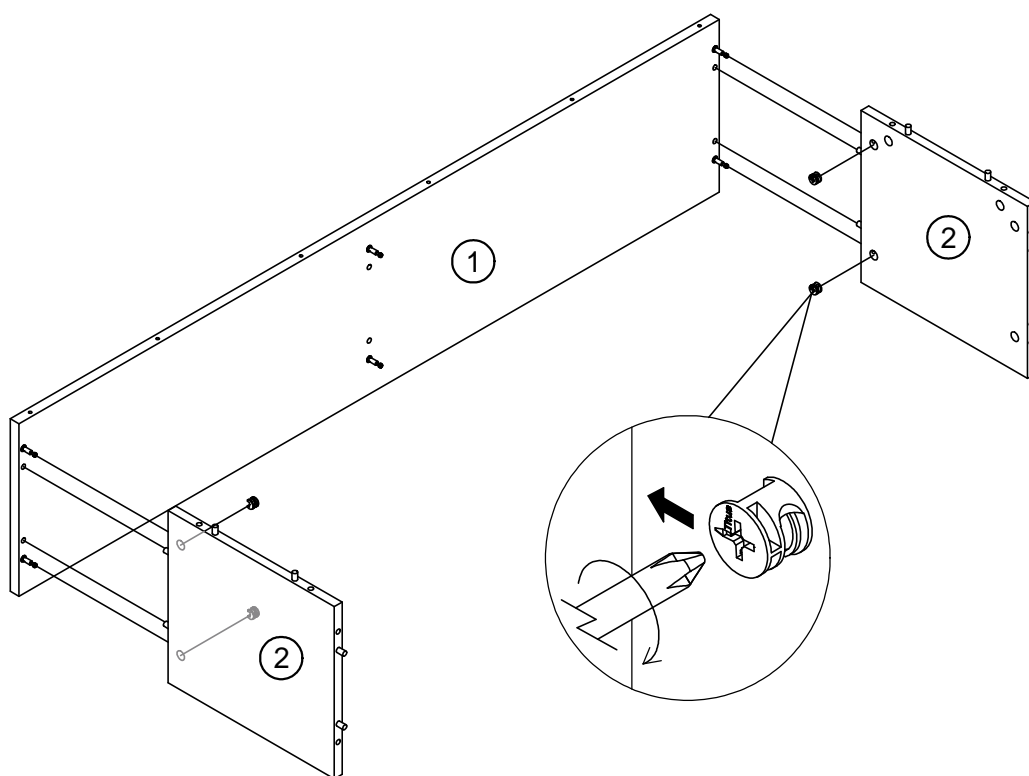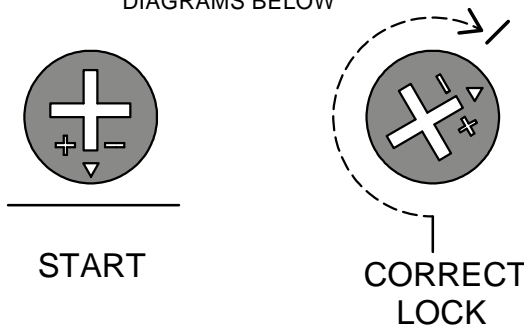

PUSH THE TWO PANELS TOGETHER ALLOWING THE  
DOWEL TO ALIGN WITH THE HOLE

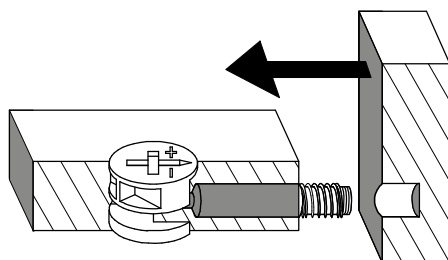

TURN THE CAM IN A CLOCKWISE DIRECTION

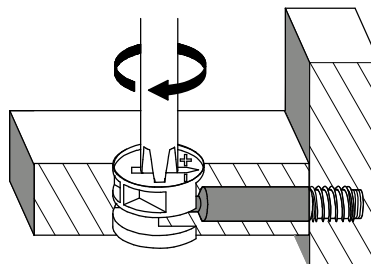


B4 Ø15 x 12mm





4

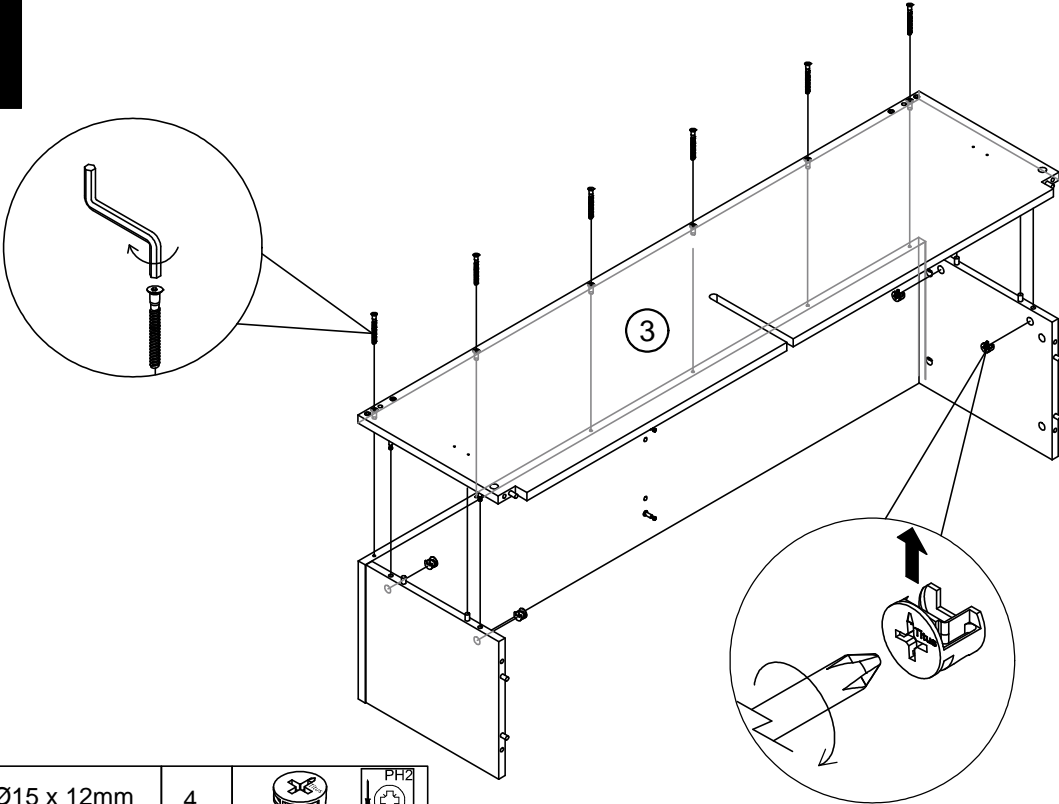


not supplied



4




B4	Ø15 x 12mm	4	  not supplied
T1	N/A	2	
Y8	Ø6 x 50mm	6	

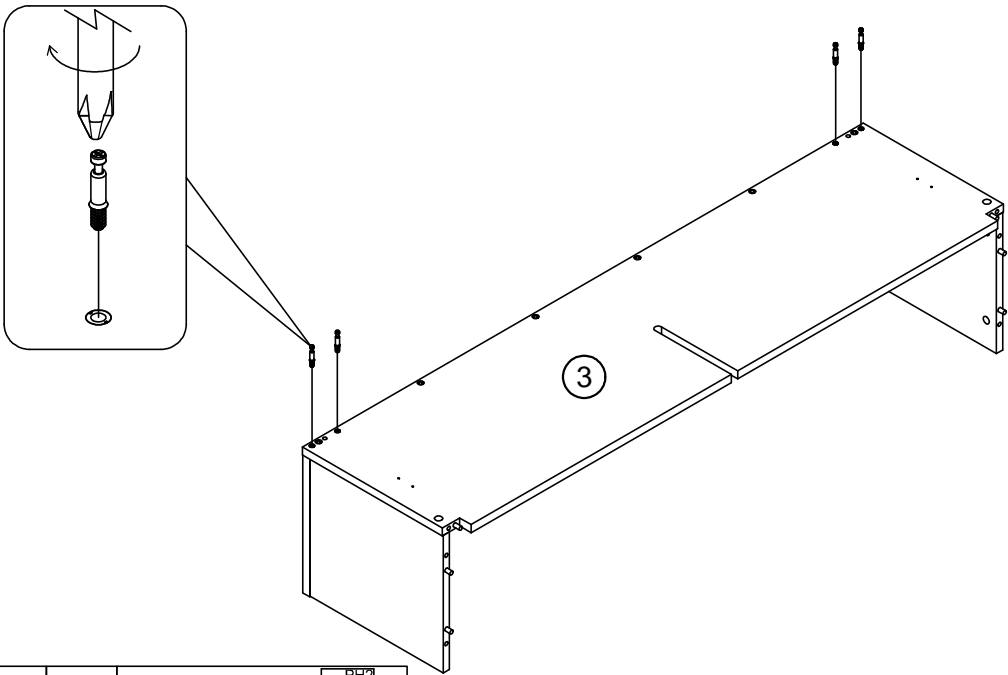5




B12	Ø7.5 x 33mm	4	  not supplied
-----	-------------	---	---

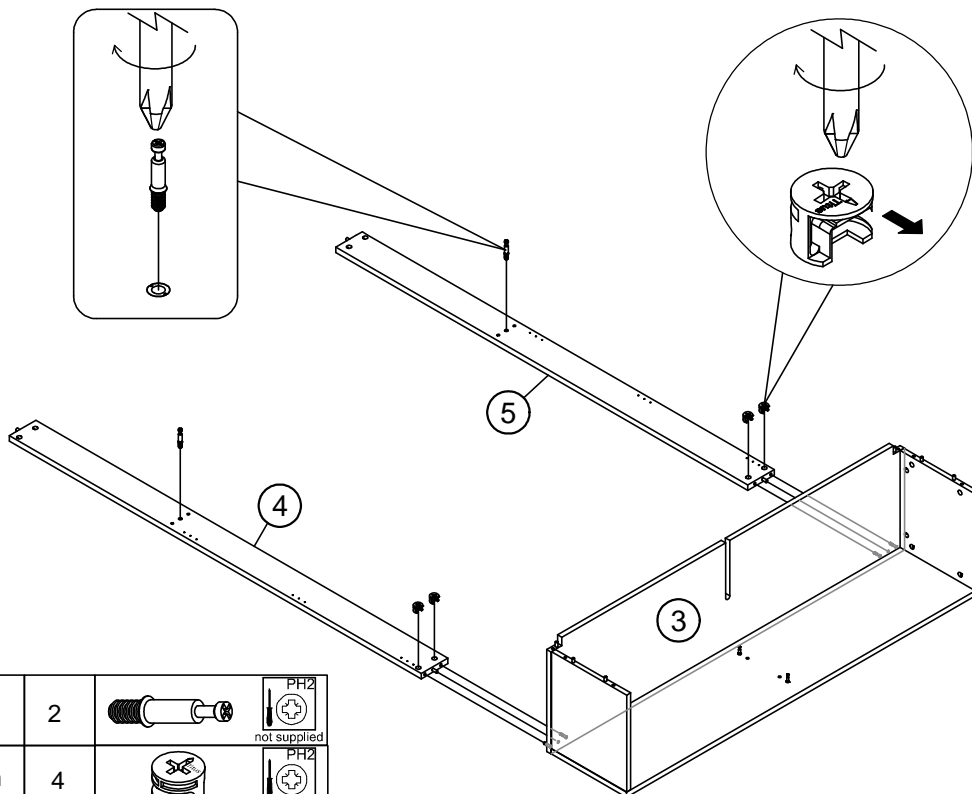

6




B12	Ø7.5 x 33mm	2		 not supplied
B4	Ø15 x 12mm	4		 not supplied

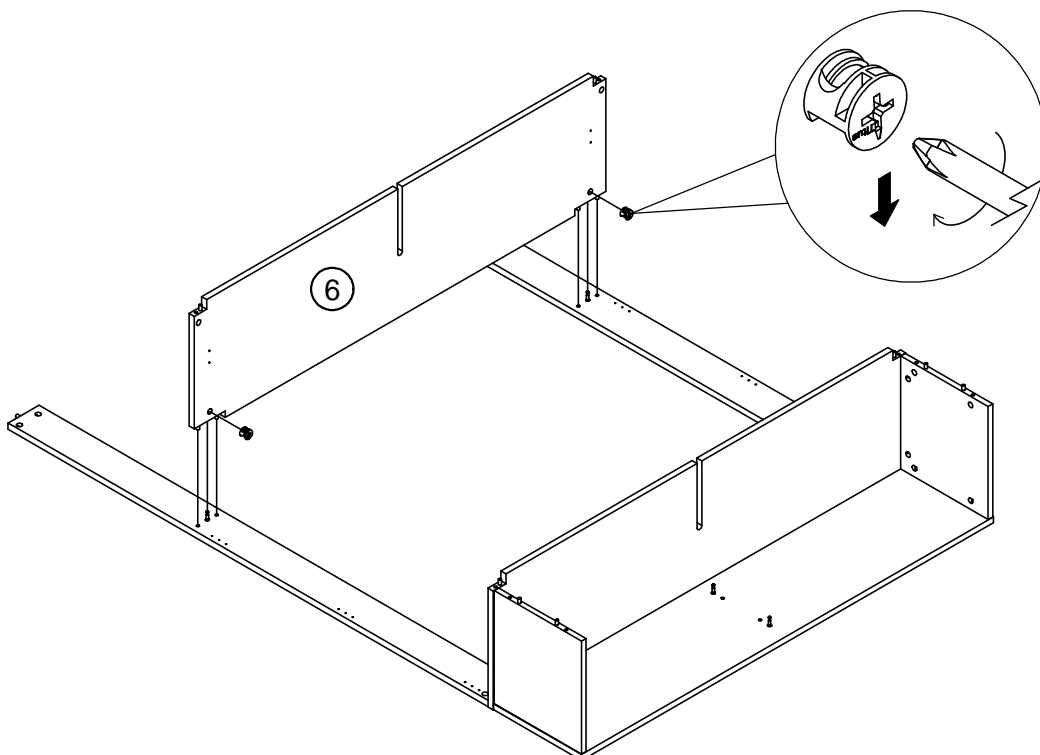7



B4	Ø15 x 12mm	2		 not supplied
----	------------	---	---	---


8

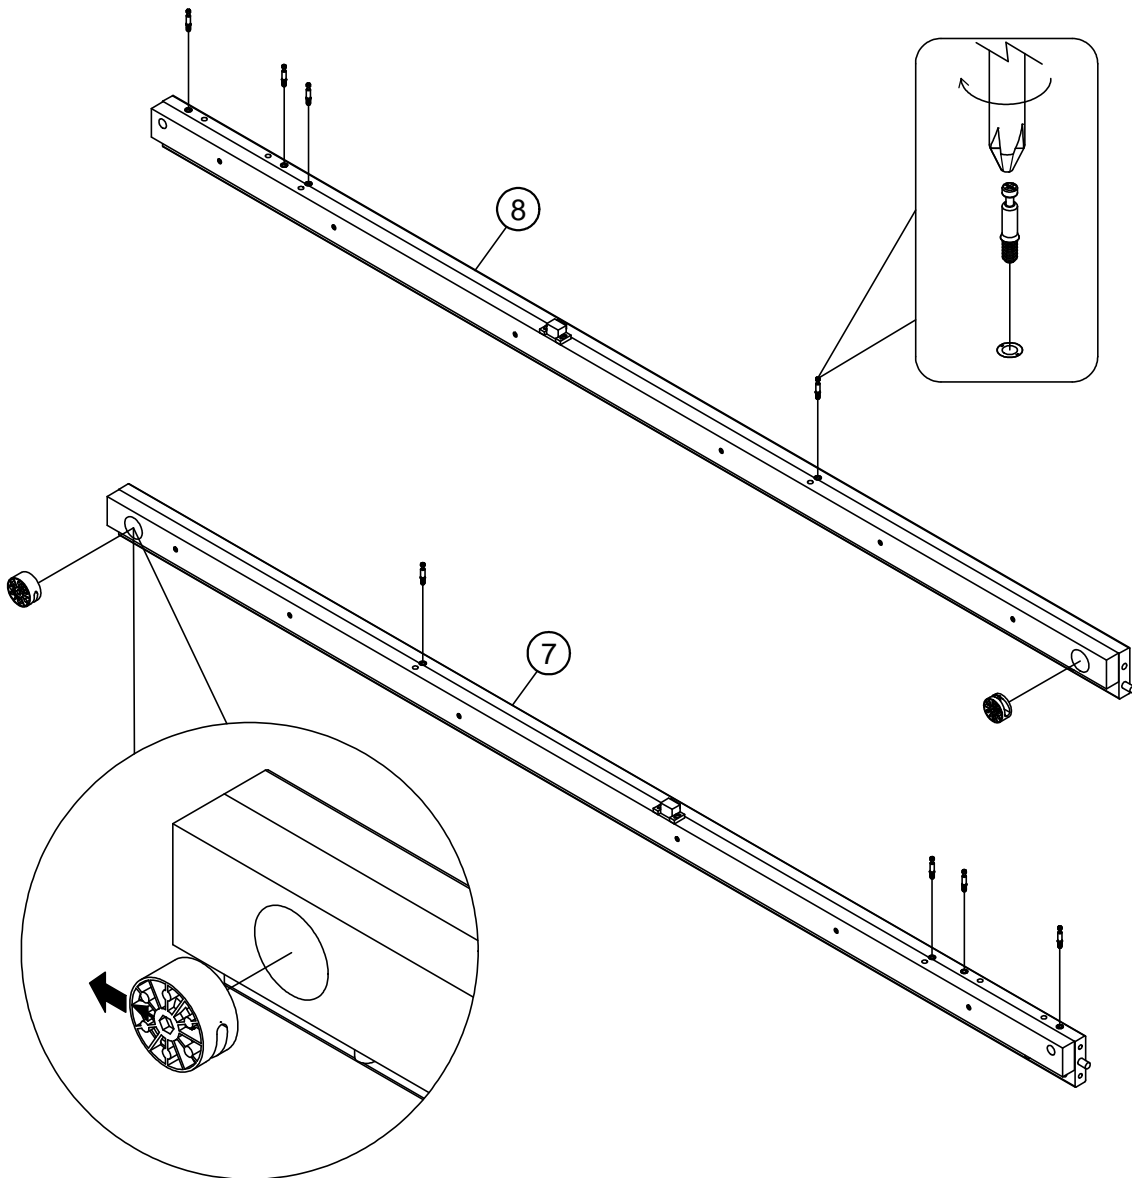

B25	Ø35 x 17mm	2	
B12	Ø7.5 x 33mm	8	

not supplied

9

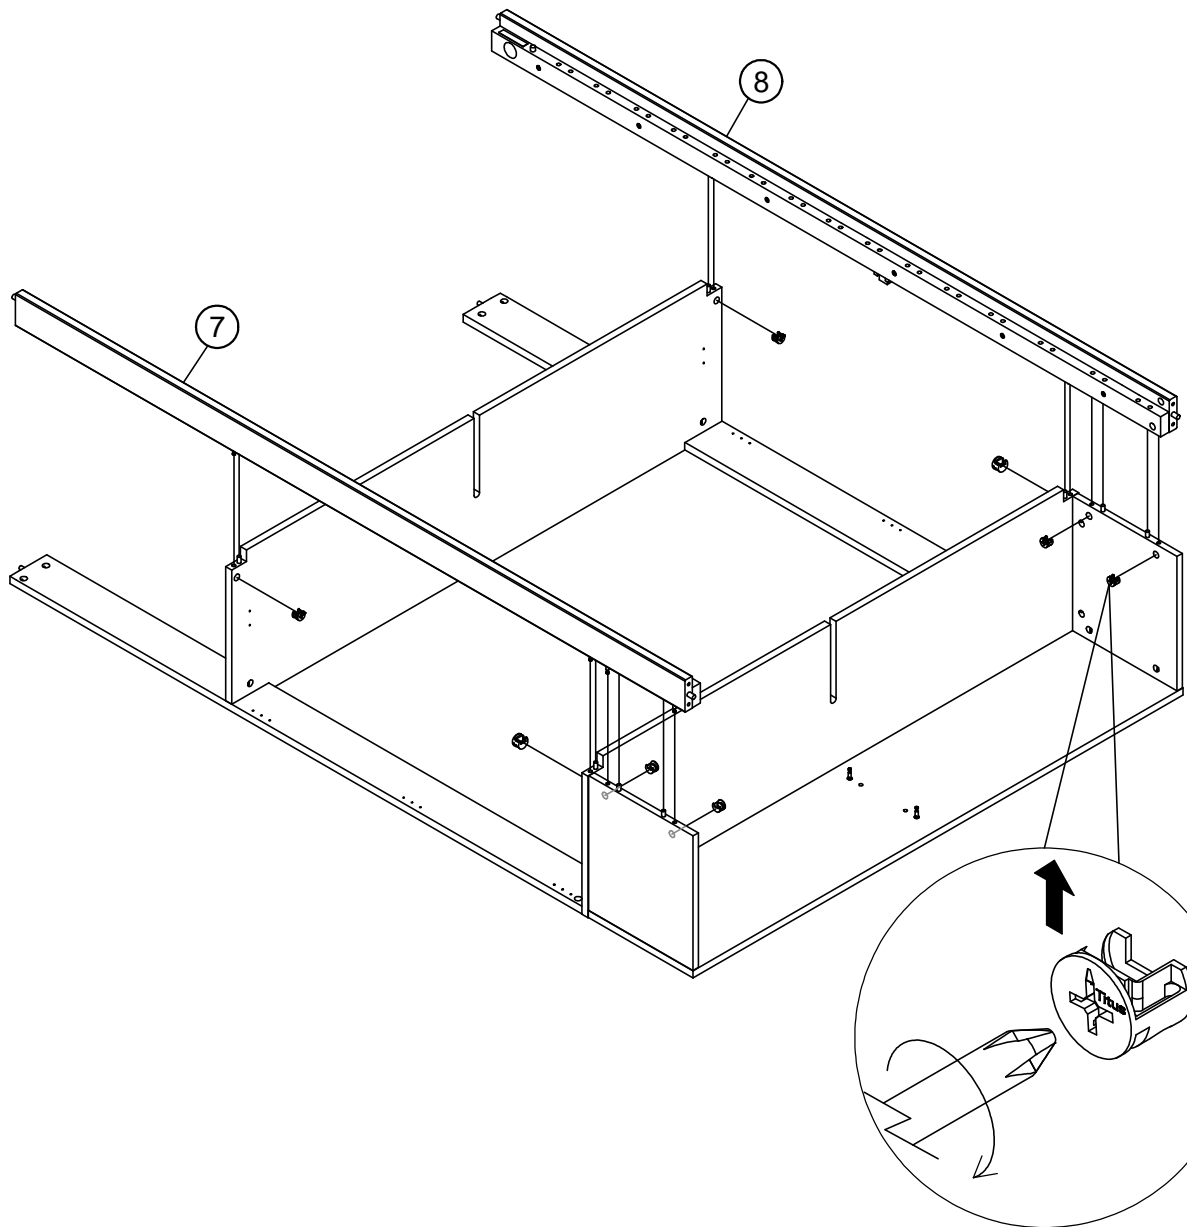

B4


Ø15 x 12mm

8



not supplied

10

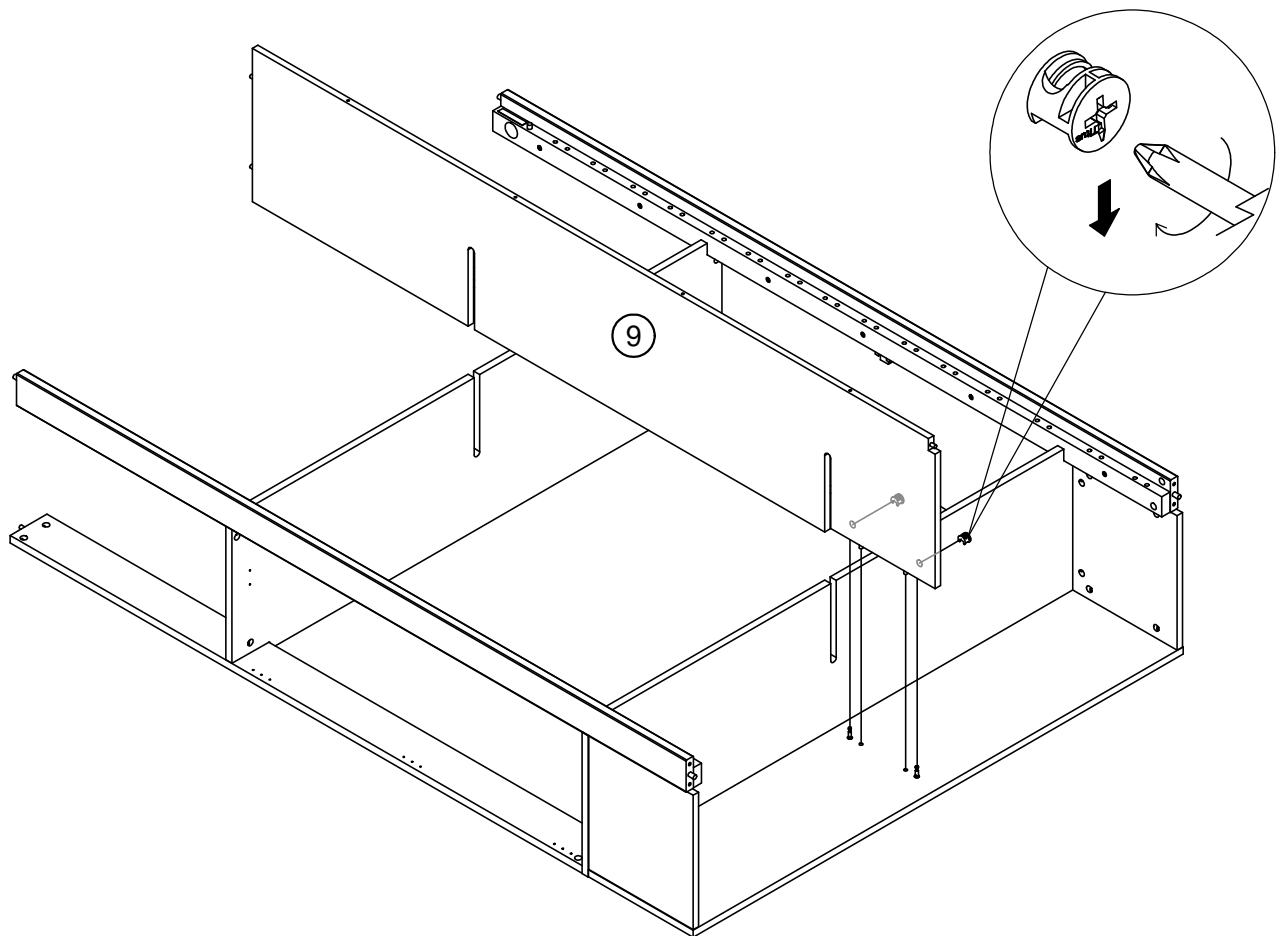

B4


Ø15 x 12mm



2



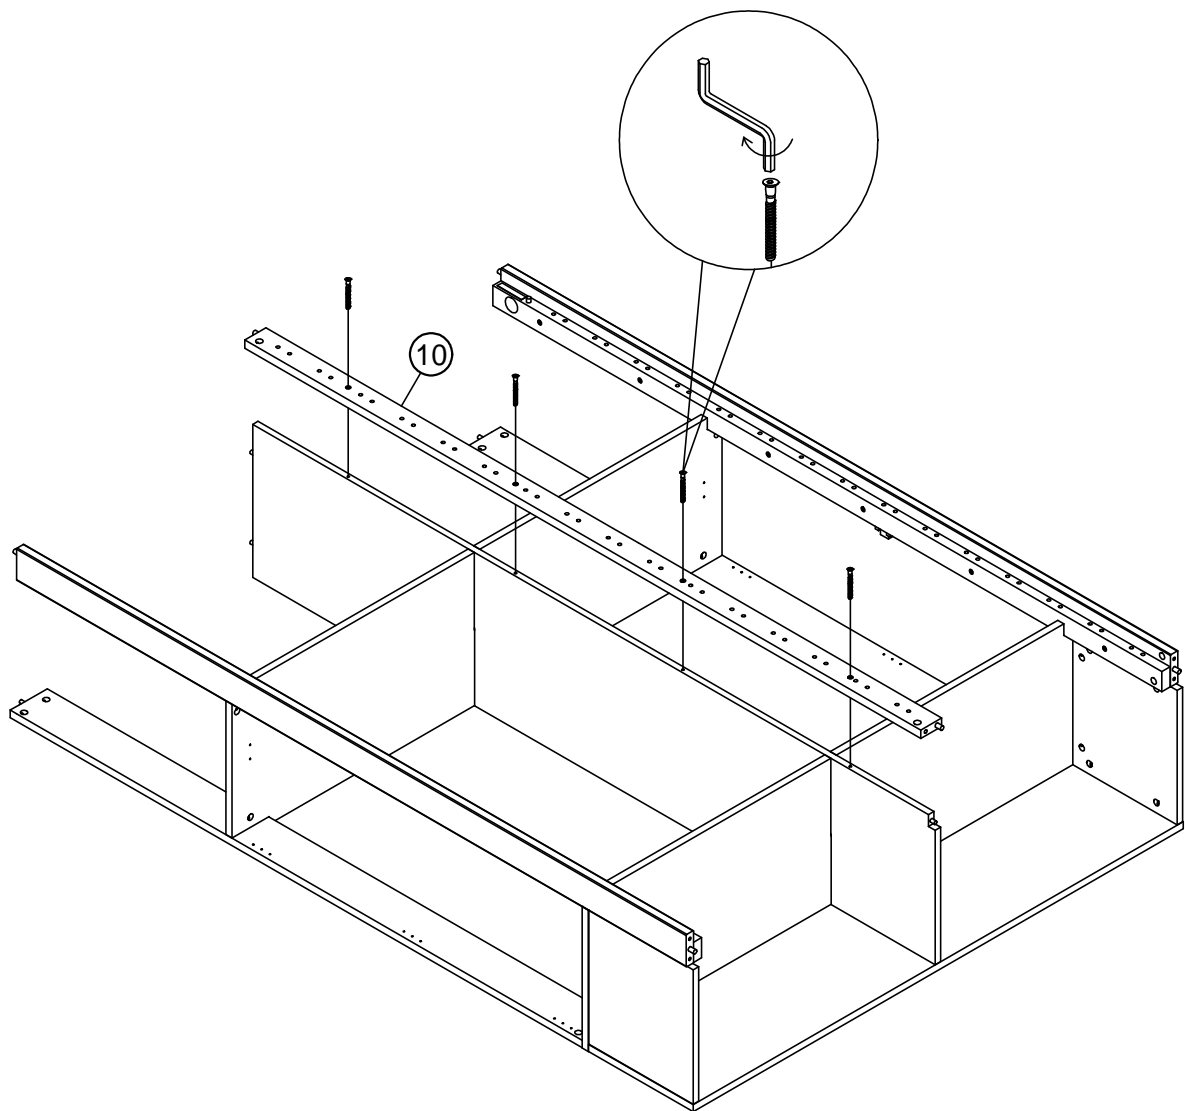





11



T1	N/A	2	
Y8	Ø6 x 50mm	4	


12

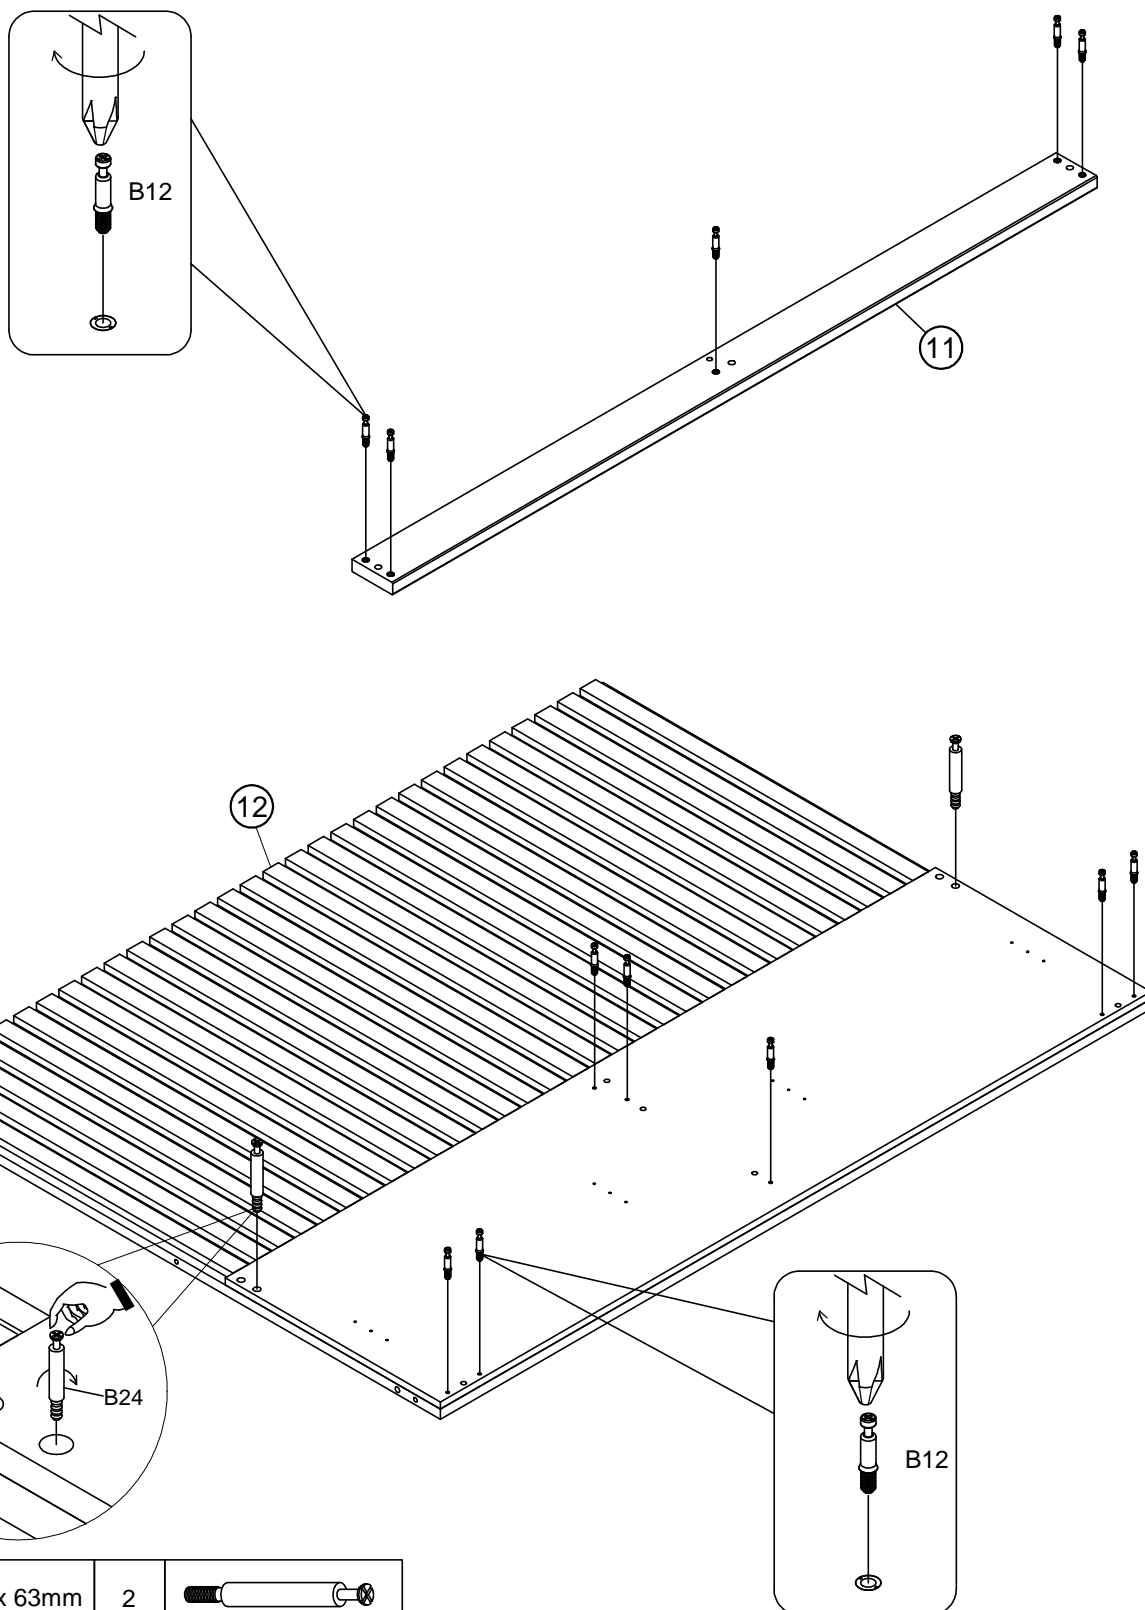

B24	Ø8.5 x 63mm	2	
B12	Ø7.5 x 33mm	12	 


not supplied

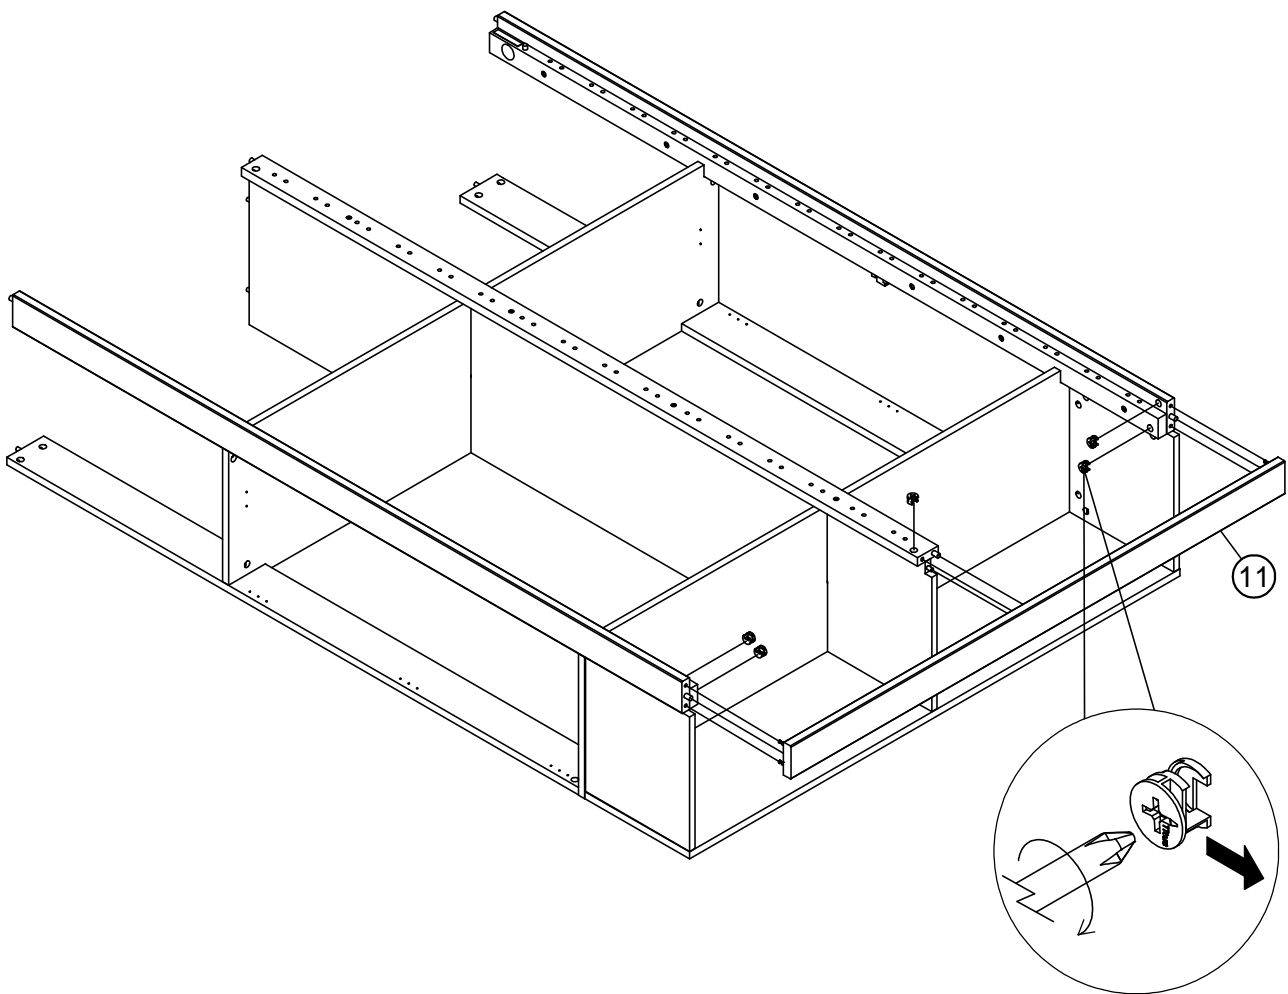


13



B4	Ø15 x 12mm	5		 not supplied
----	------------	---	---	---

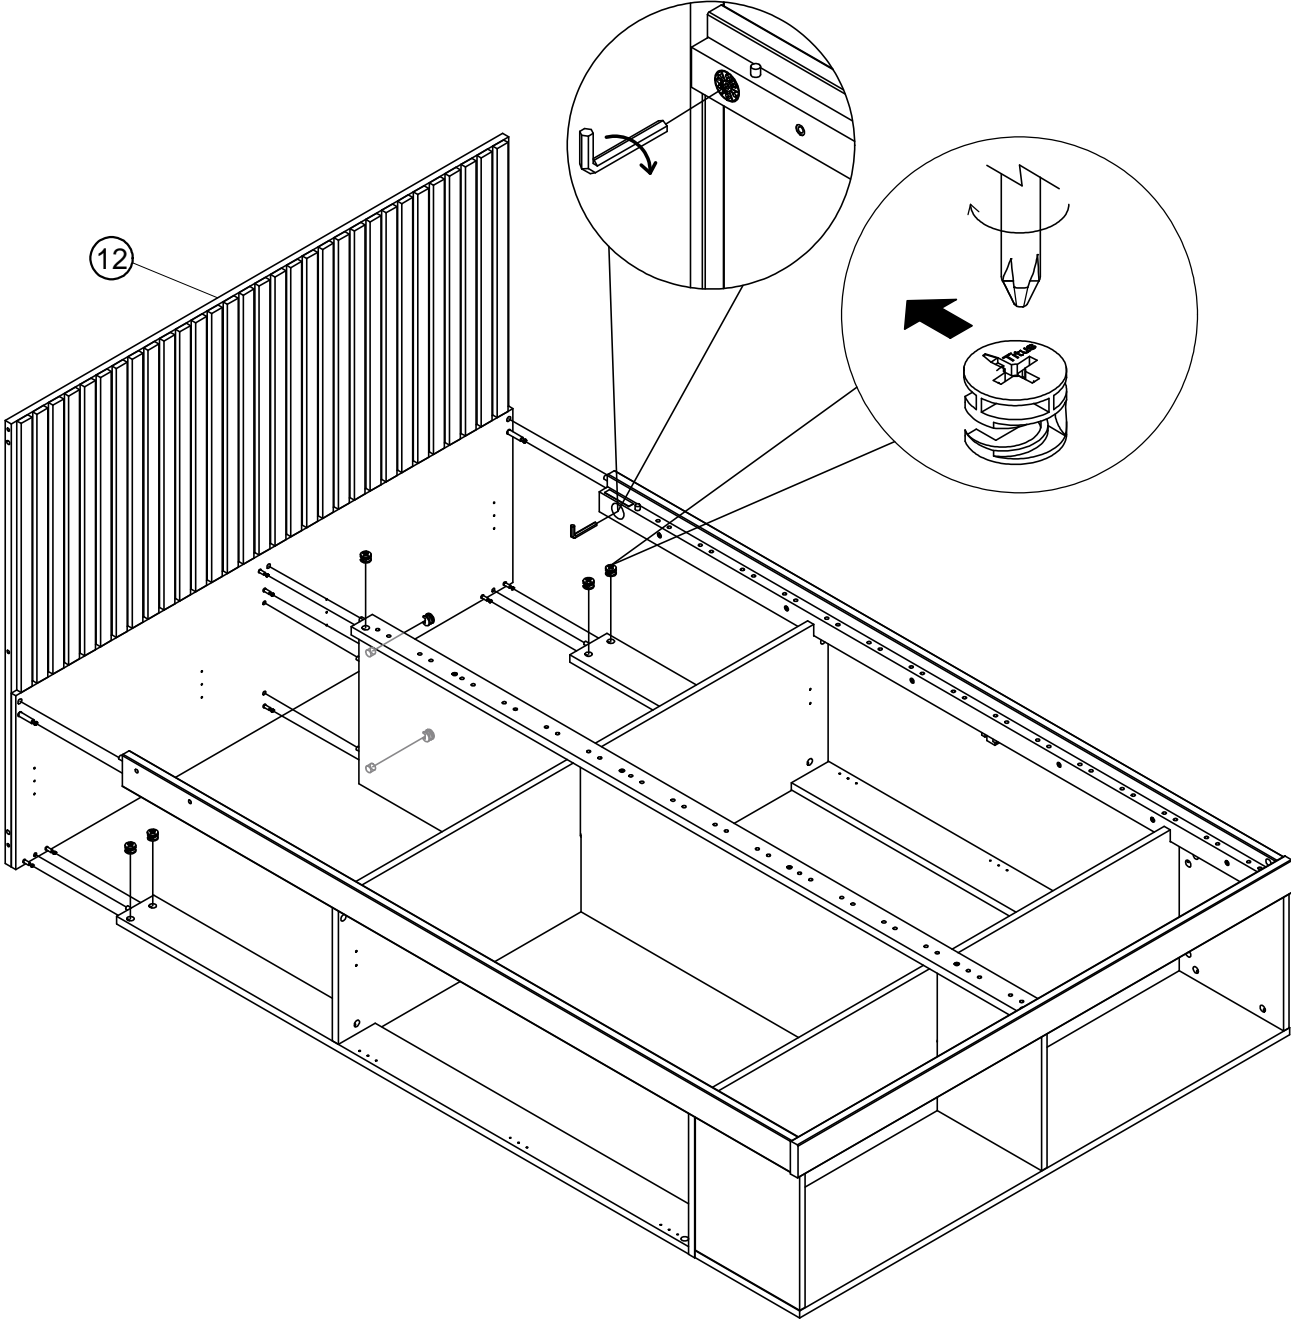14




T7	N/A	1	
B4	Ø15 x 12mm	7	  not supplied



NEXT

BRONX/BRONX LIGHT SLAT XL BED WITH BEDSIDES  
C24482/Q96760  
Assembly instructions

15

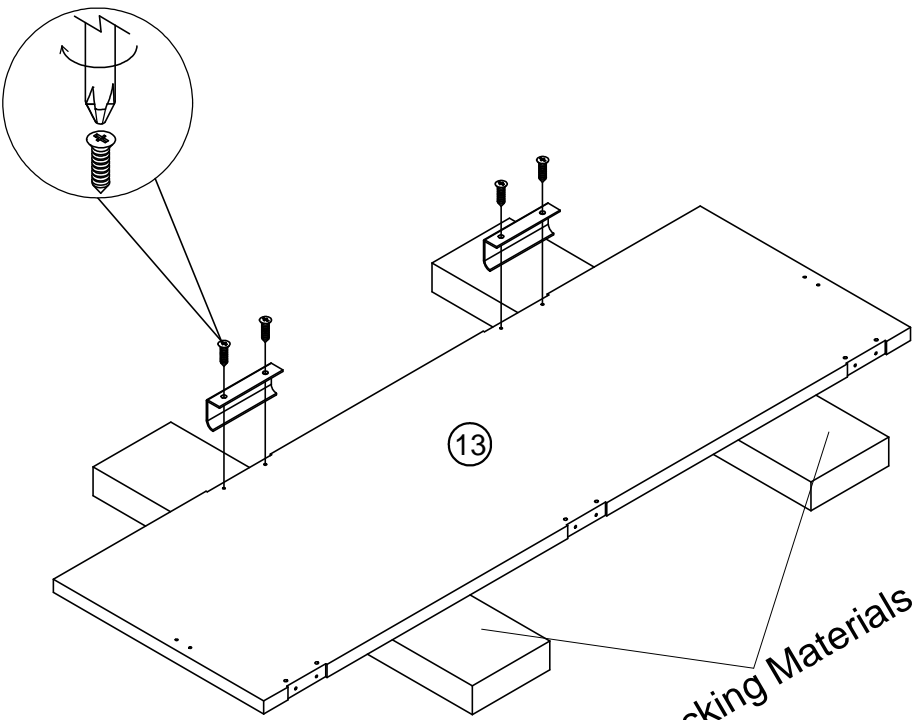


Packing Materials




E39	N/A	4		 not supplied
-----	-----	---	---	---

X2

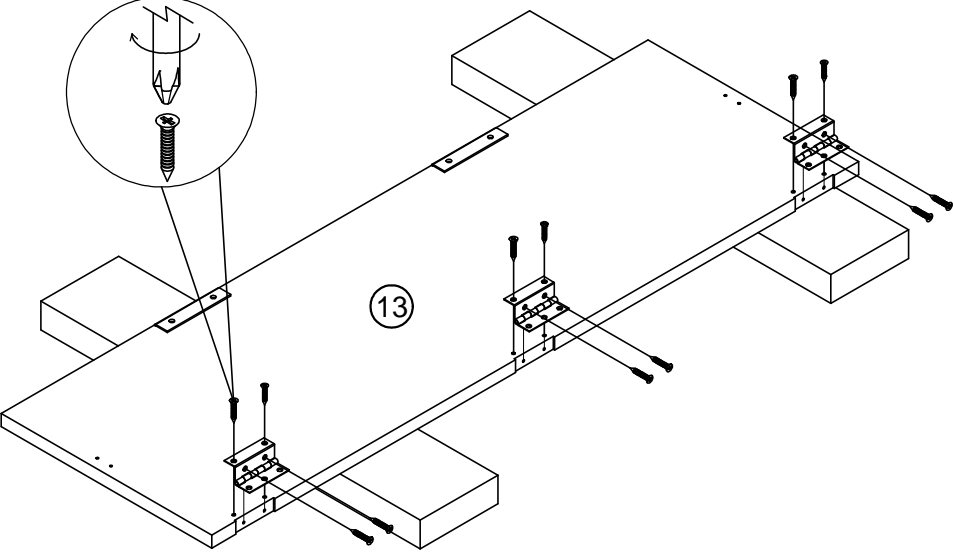16






Packing Materials

U123	Ø4 x 16mm	24		 not supplied
H29	N/A	6		


X2

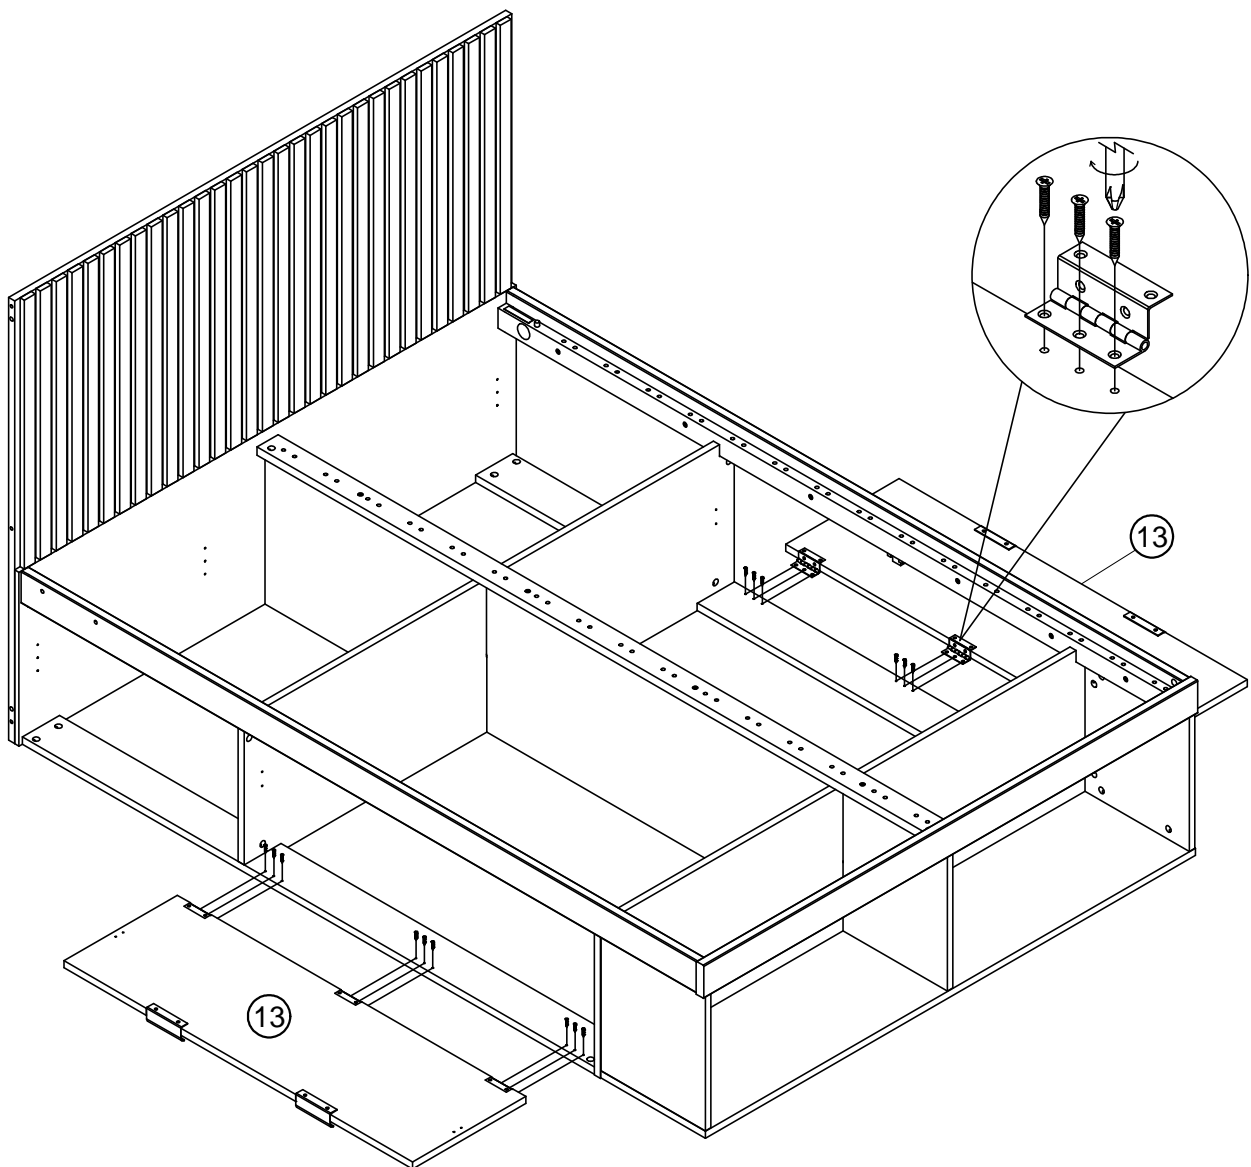


17




U123	Ø4 x 16mm	18		 not supplied
------	-----------	----	---	---

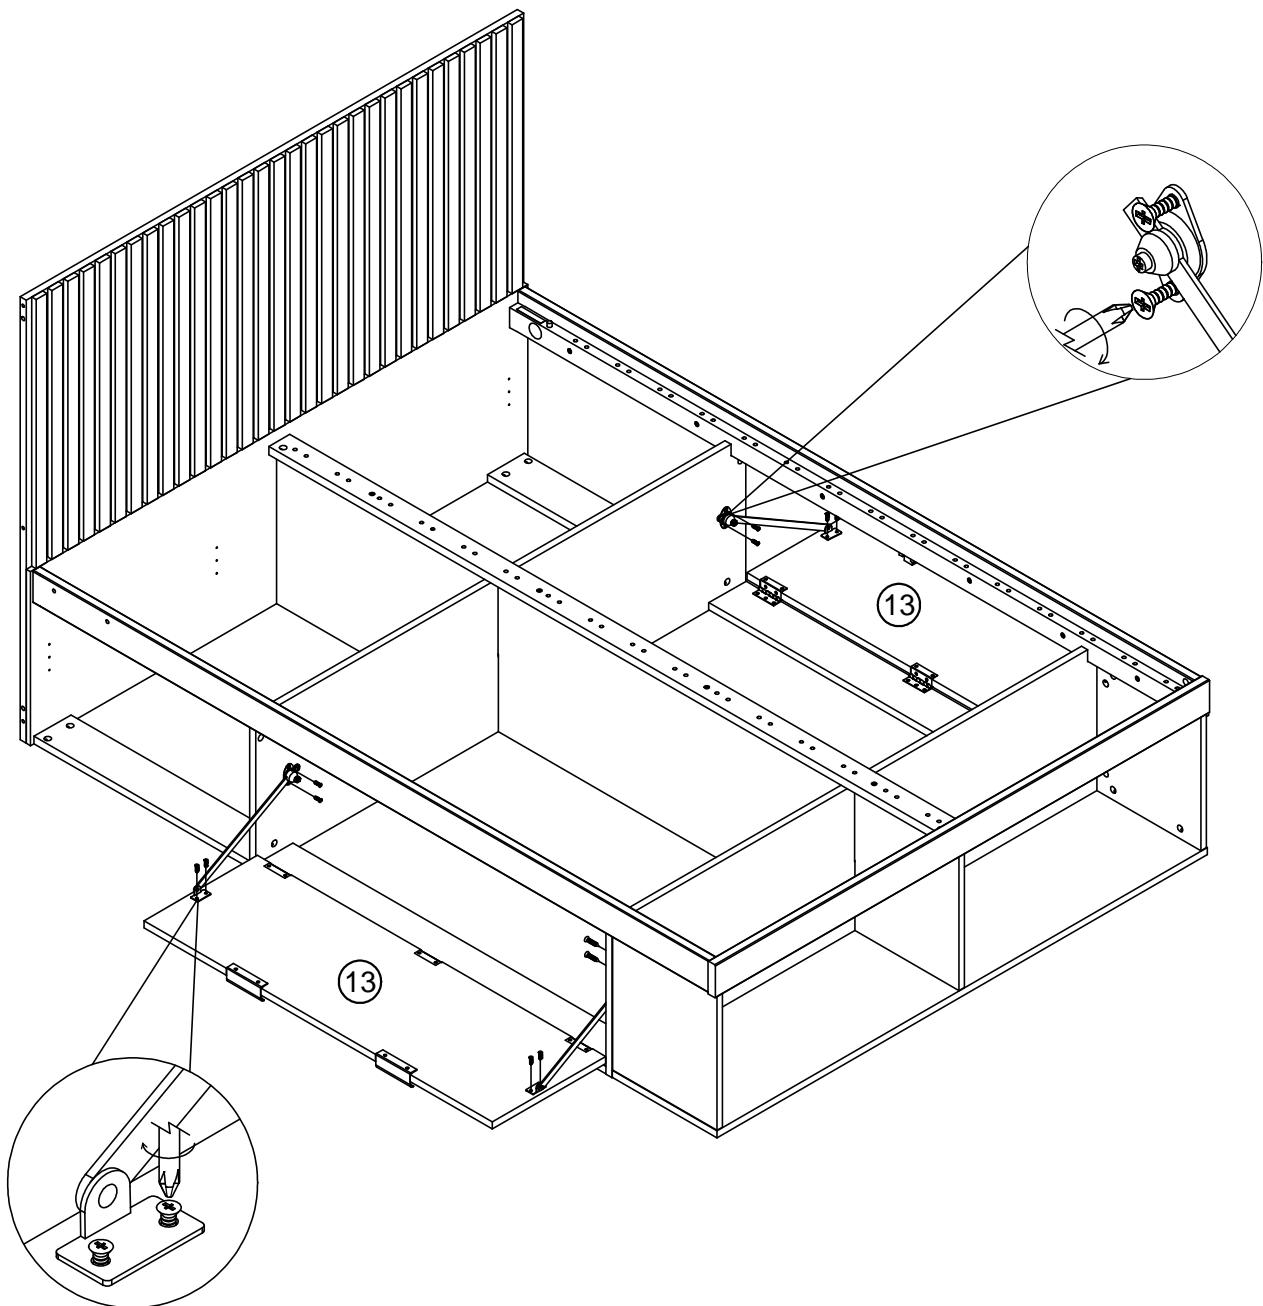18






U123	Ø4 x 16mm	16		 not supplied
H38	N/A	4		

19

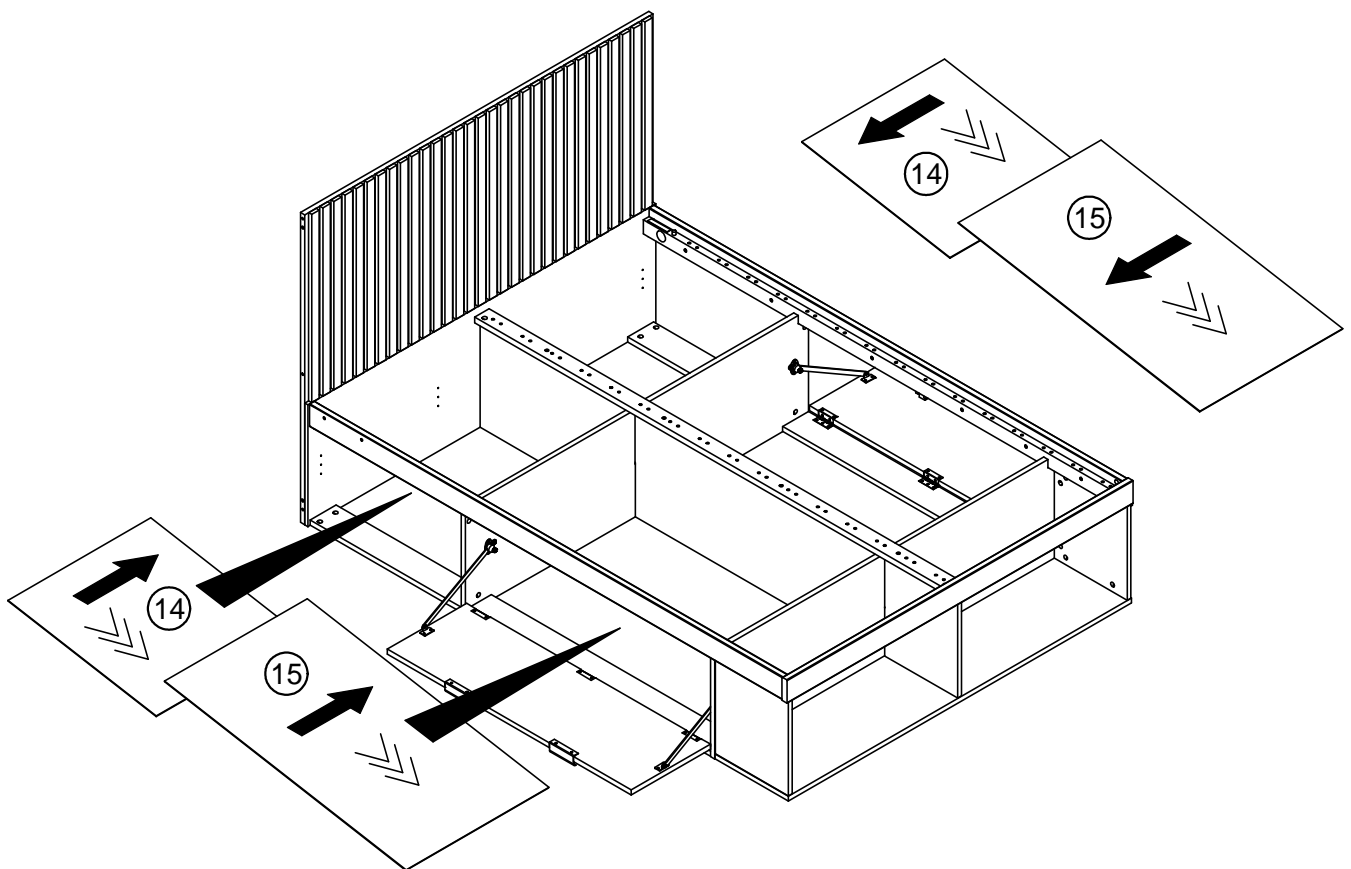




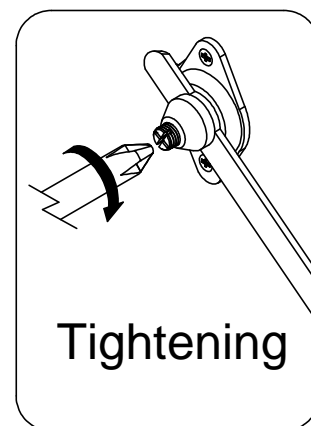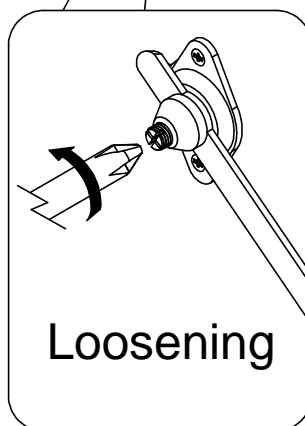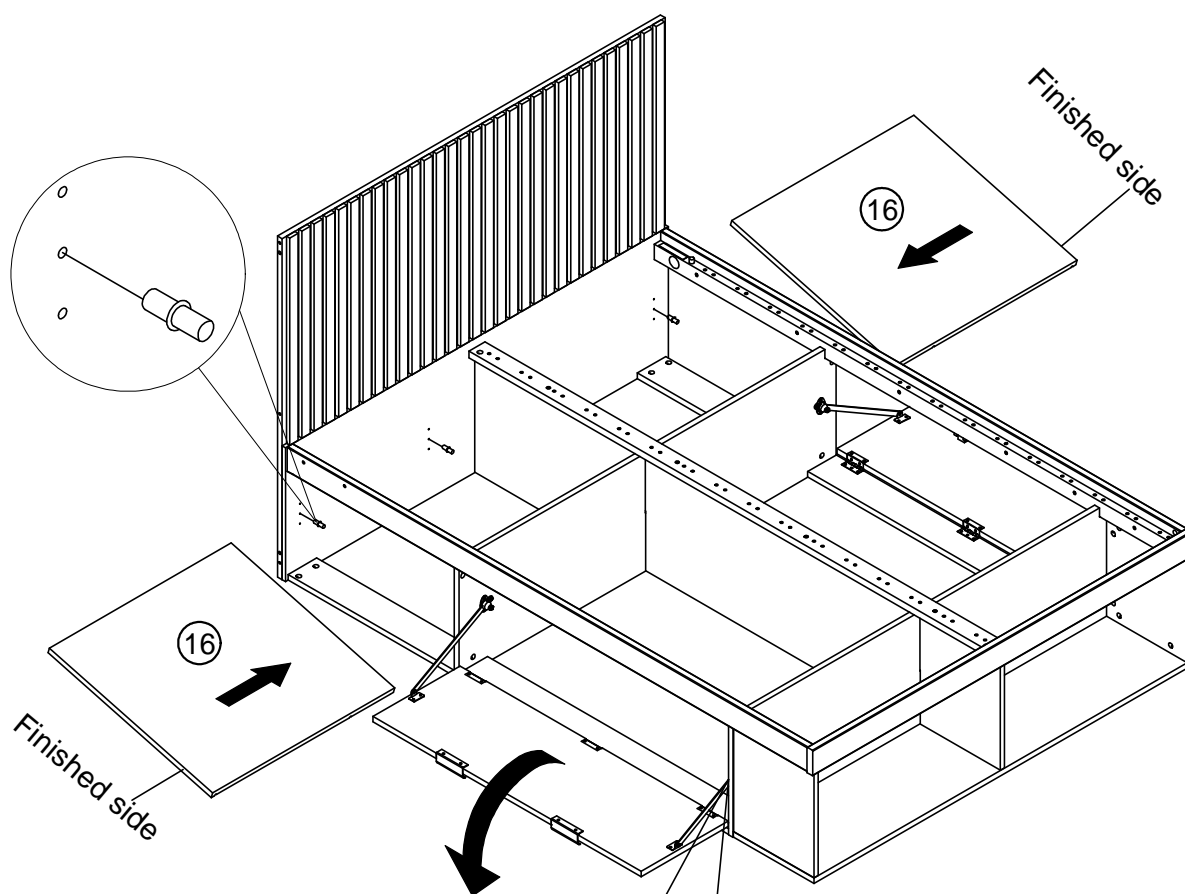


P3	Ø5 x 16mm	8	
----	-----------	---	--

21

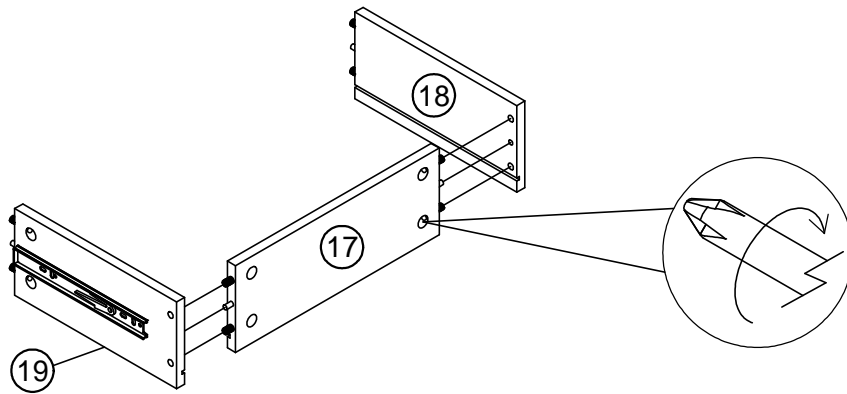


X2

22

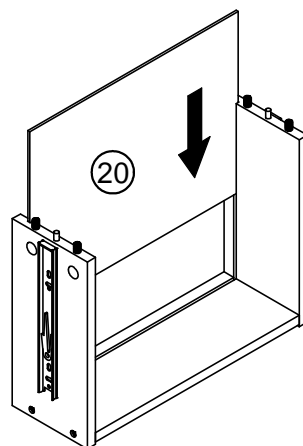


X2

23

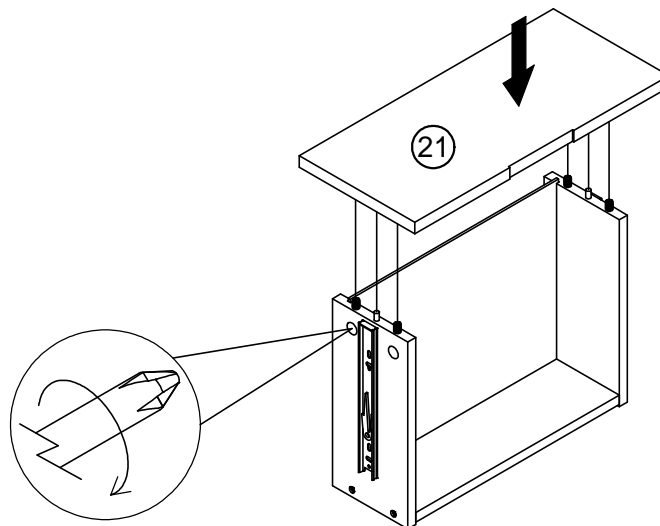




X2

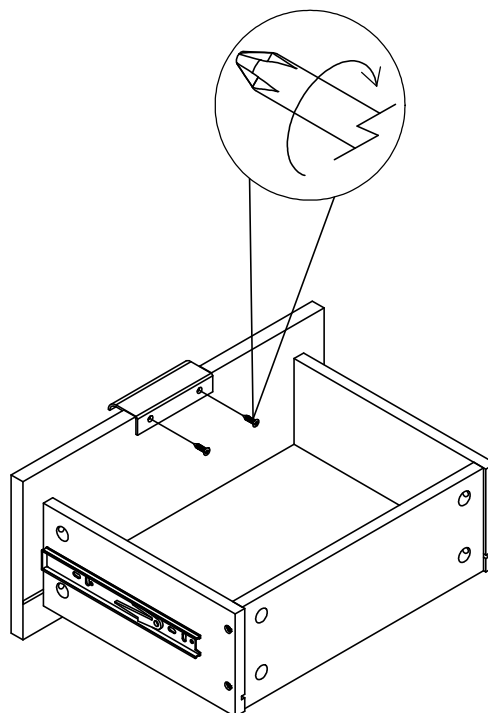
24




X2

E39	N/A	2			
-----	-----	---	---	---	---


25

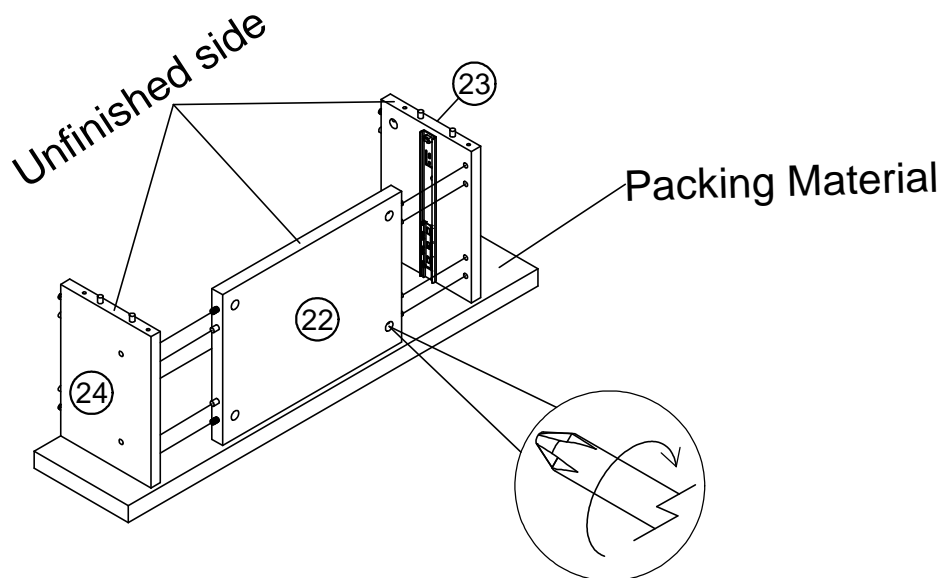


26

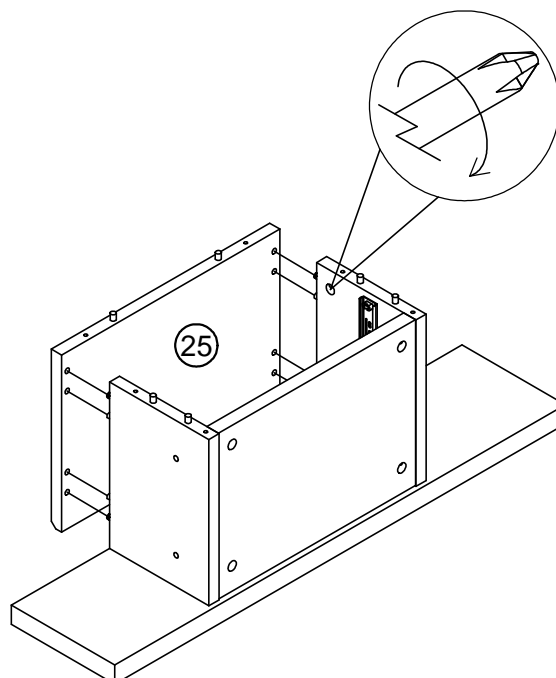


27

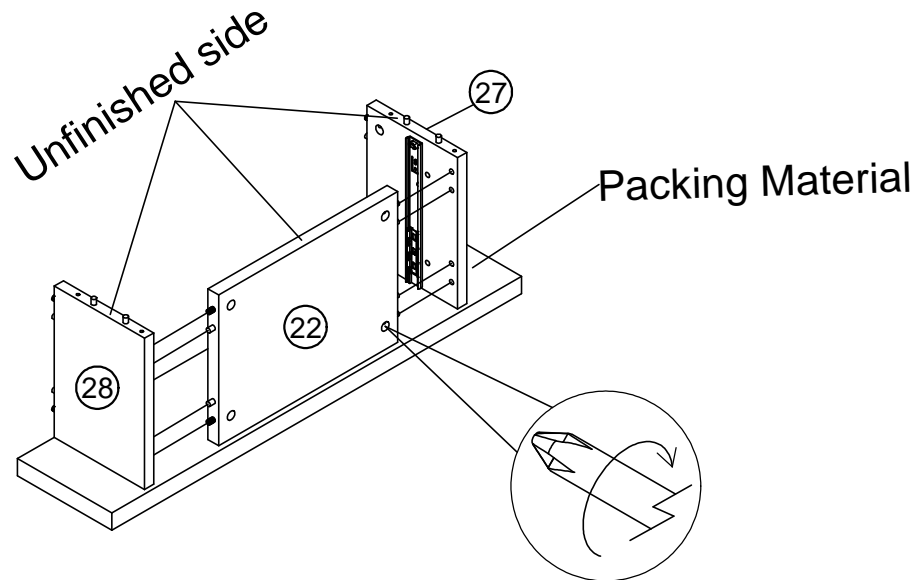



28


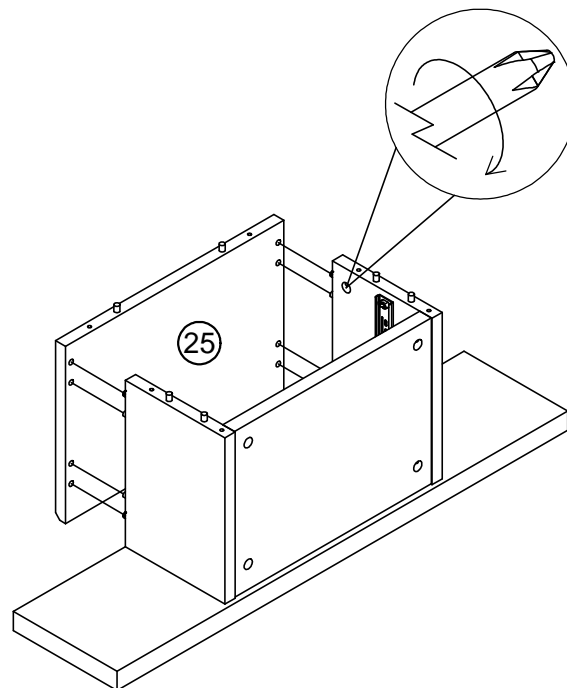





29

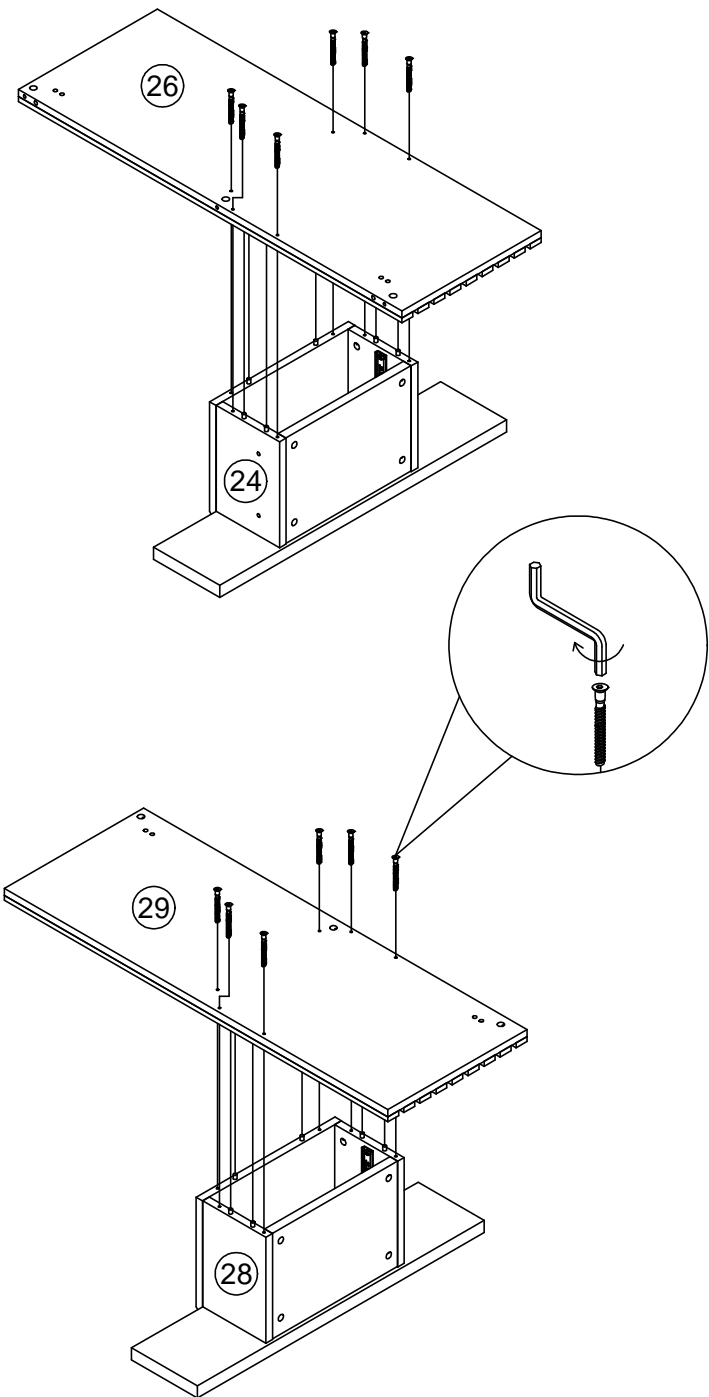


T1	N/A	2	
Y8	Ø6 x 50mm	12	

30

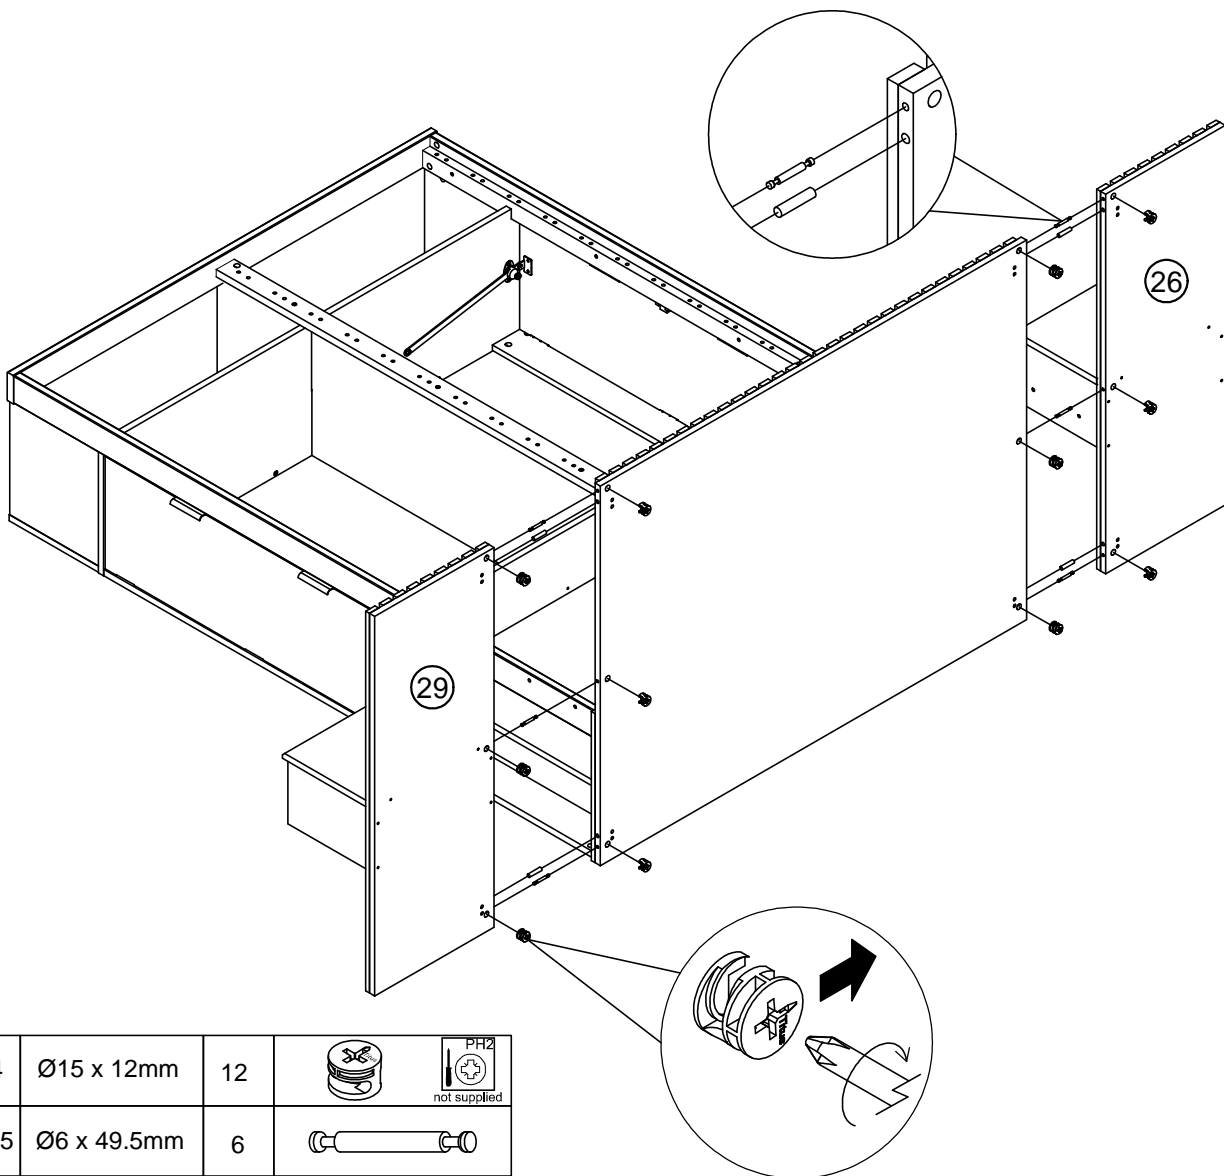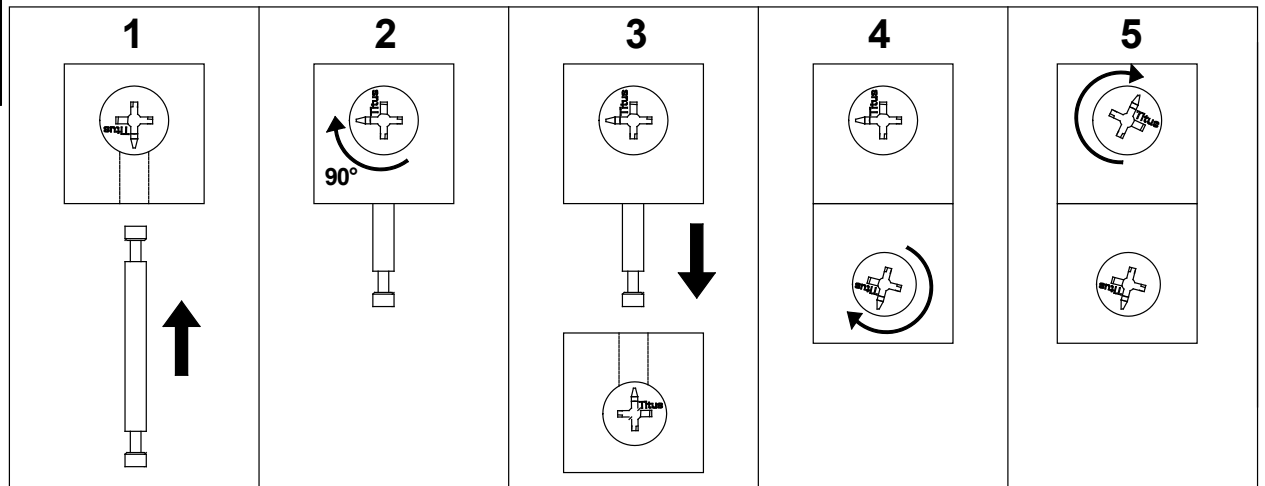

B4	Ø15 x 12mm	12	 not supplied
B15	Ø6 x 49.5mm	6	
D24	Ø8x 40mm	4	

31

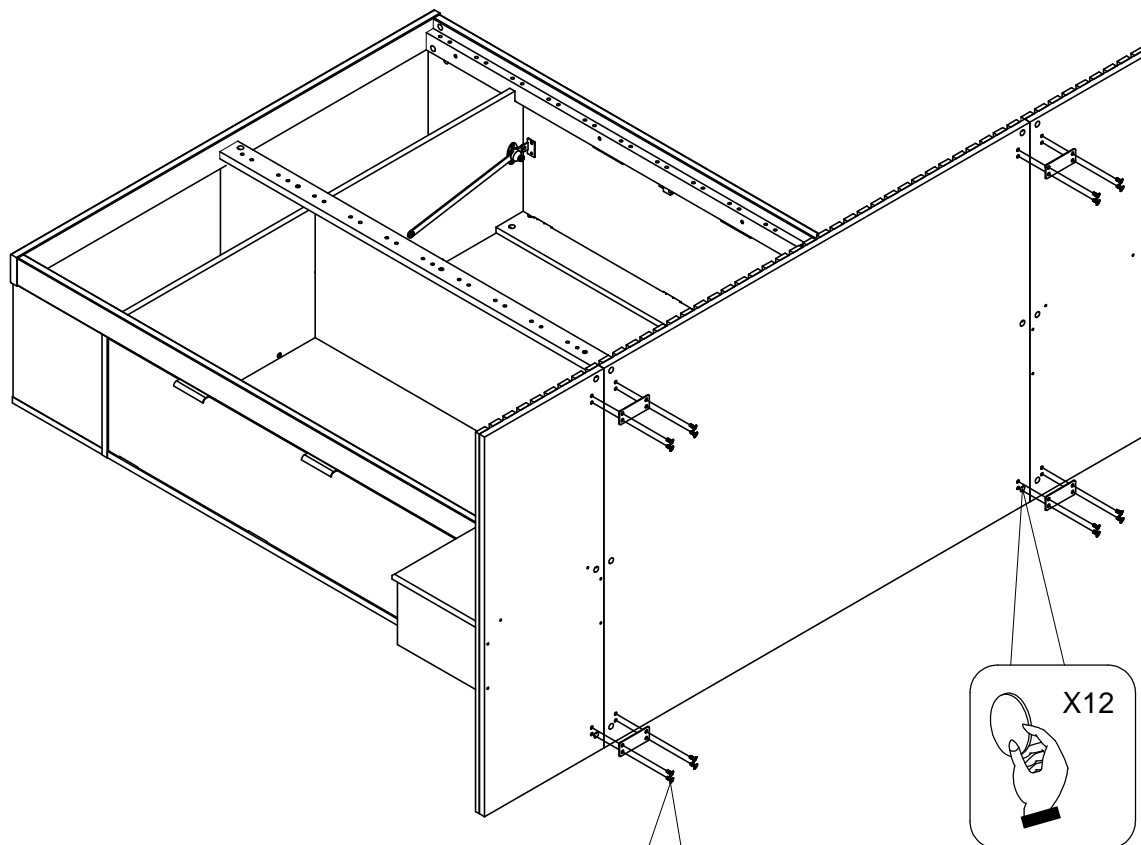





Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.

O2	Ø21mm	12	
T1	N/A	2	
V35	Ø6 x 12mm	16	
N30	N/A	4	





32

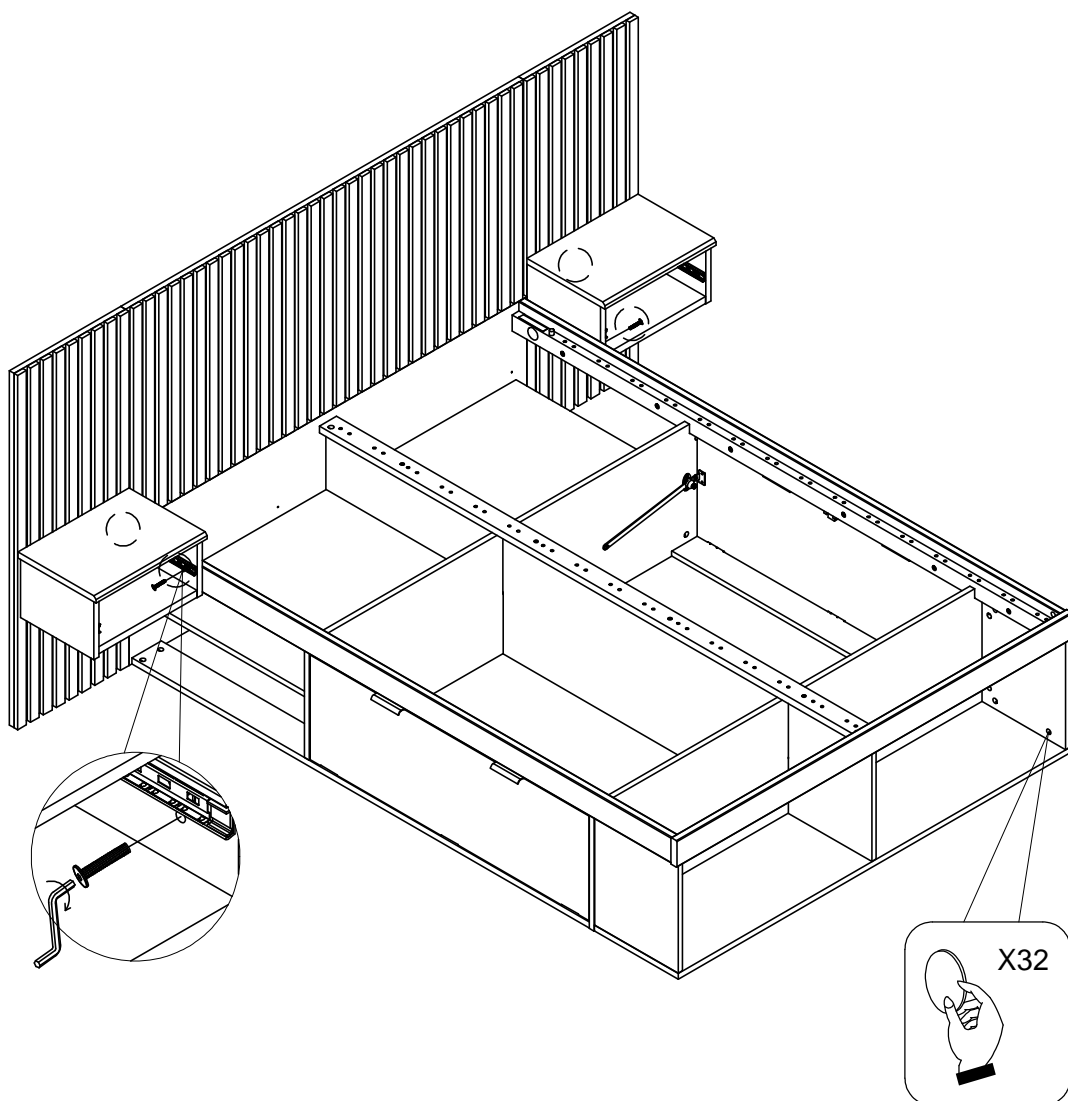





O1	Ø21mm	32	
T1	N/A	2	
V53	Ø6 x 30mm	4	

Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.


### 33 Left side

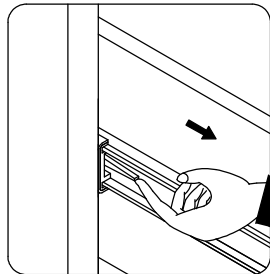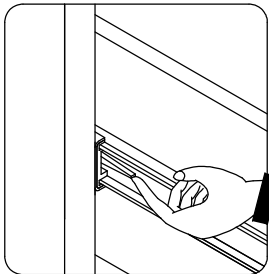

### Right side

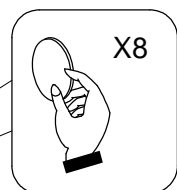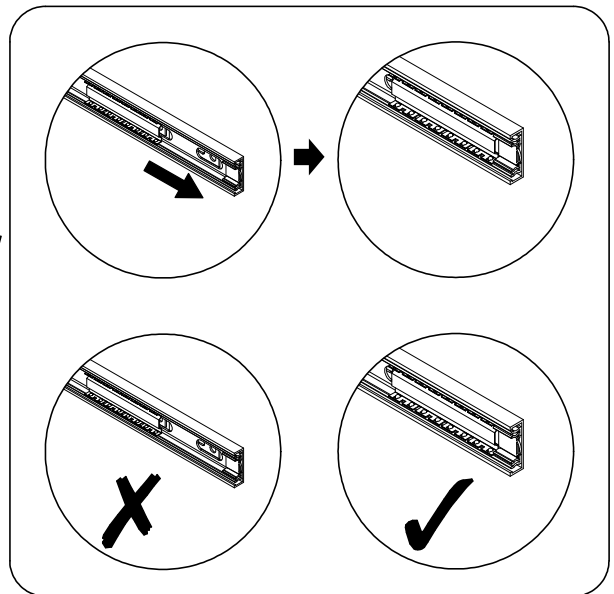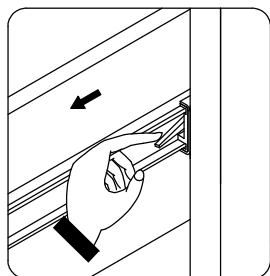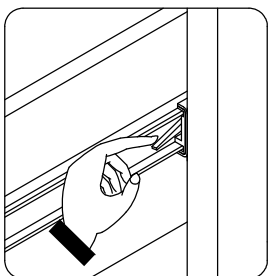



Please apply the stickers provided to cover the camlocks as shown on the diagram as an example.

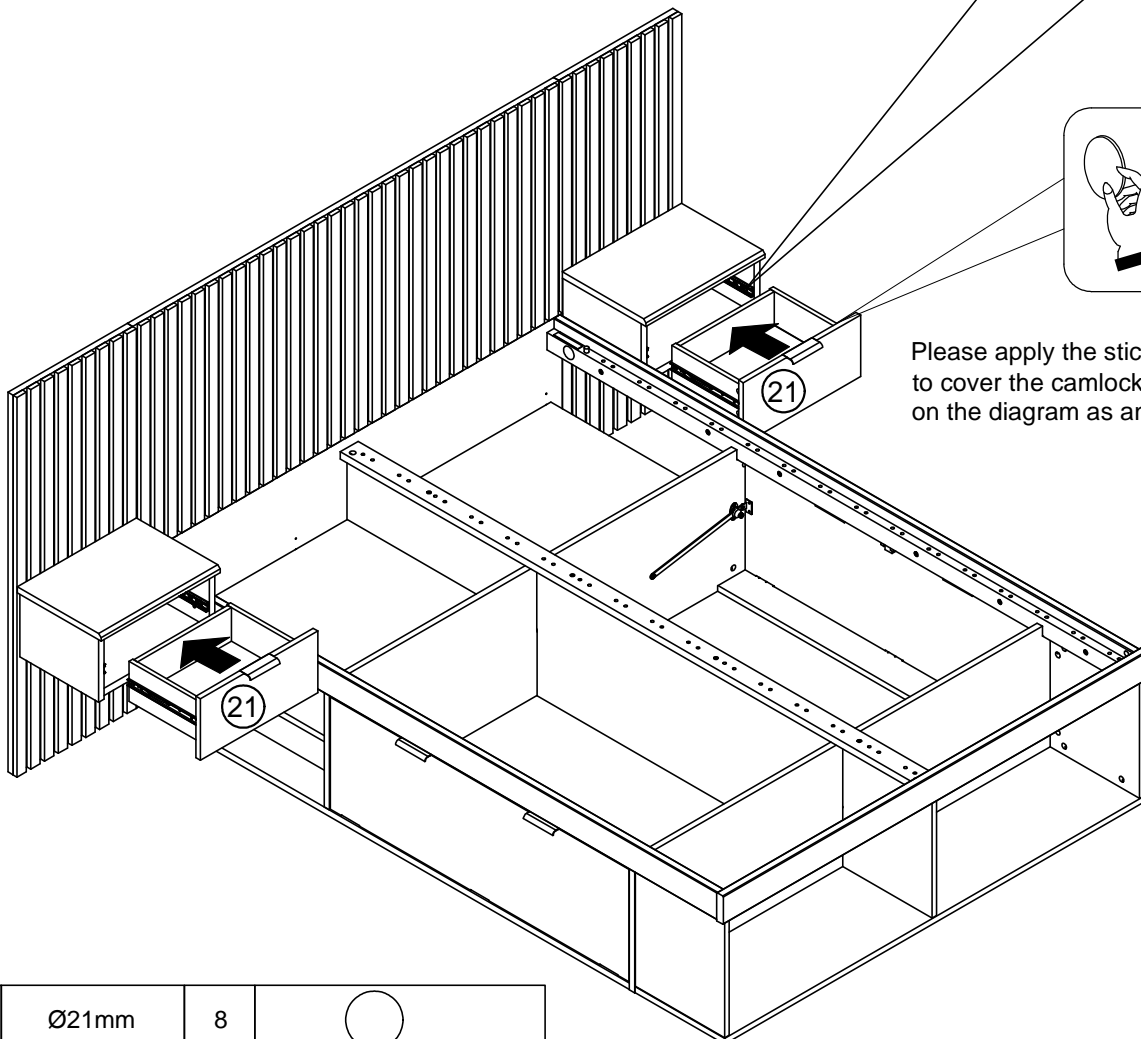


O1	Ø21mm	8	
----	-------	---	--

34

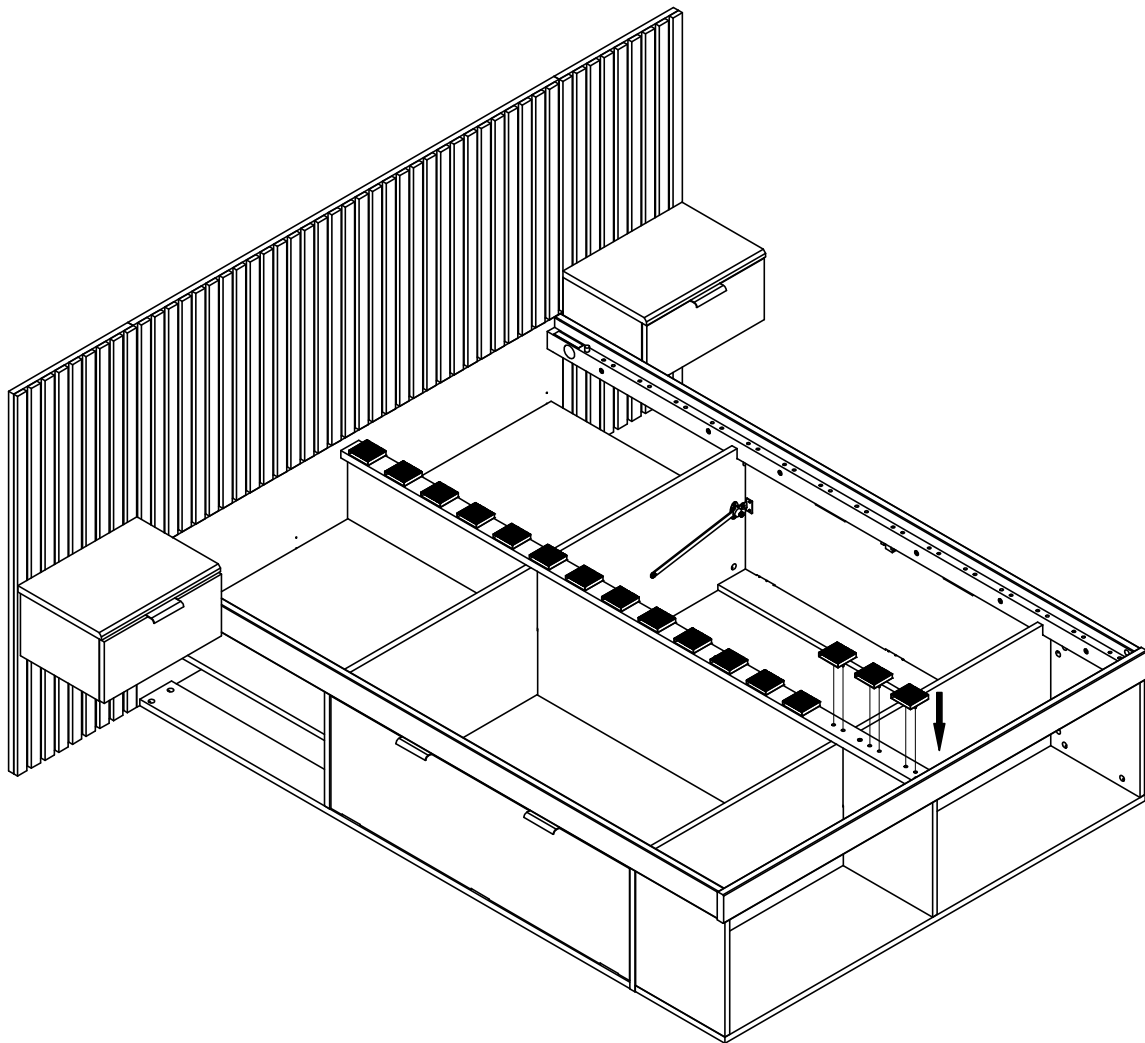



T34	N/A	16	
-----	-----	----	---

35

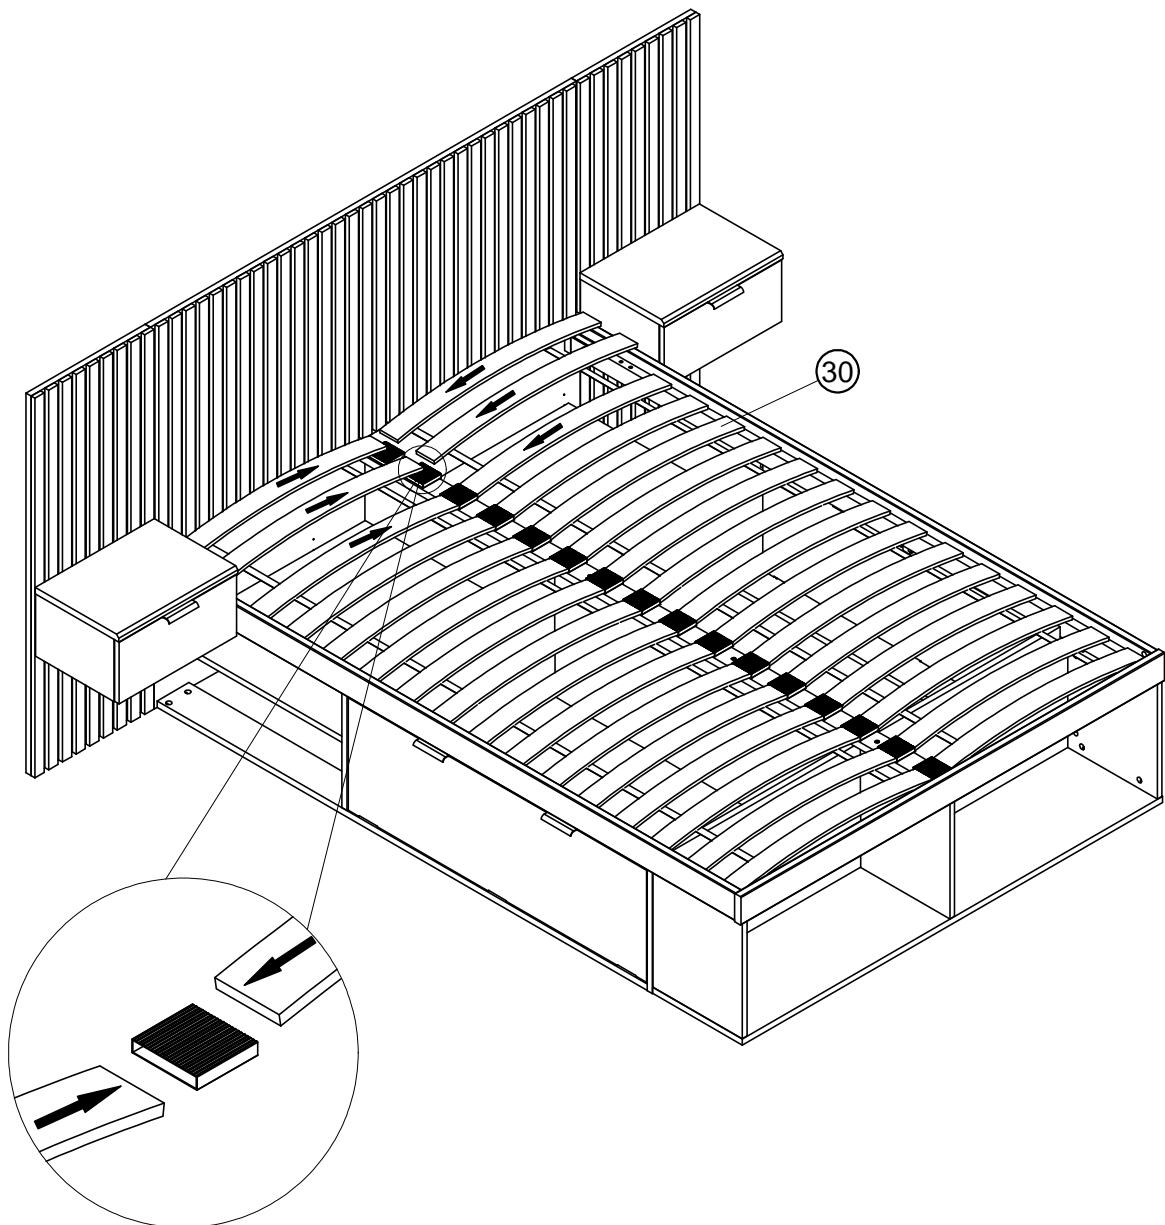

36

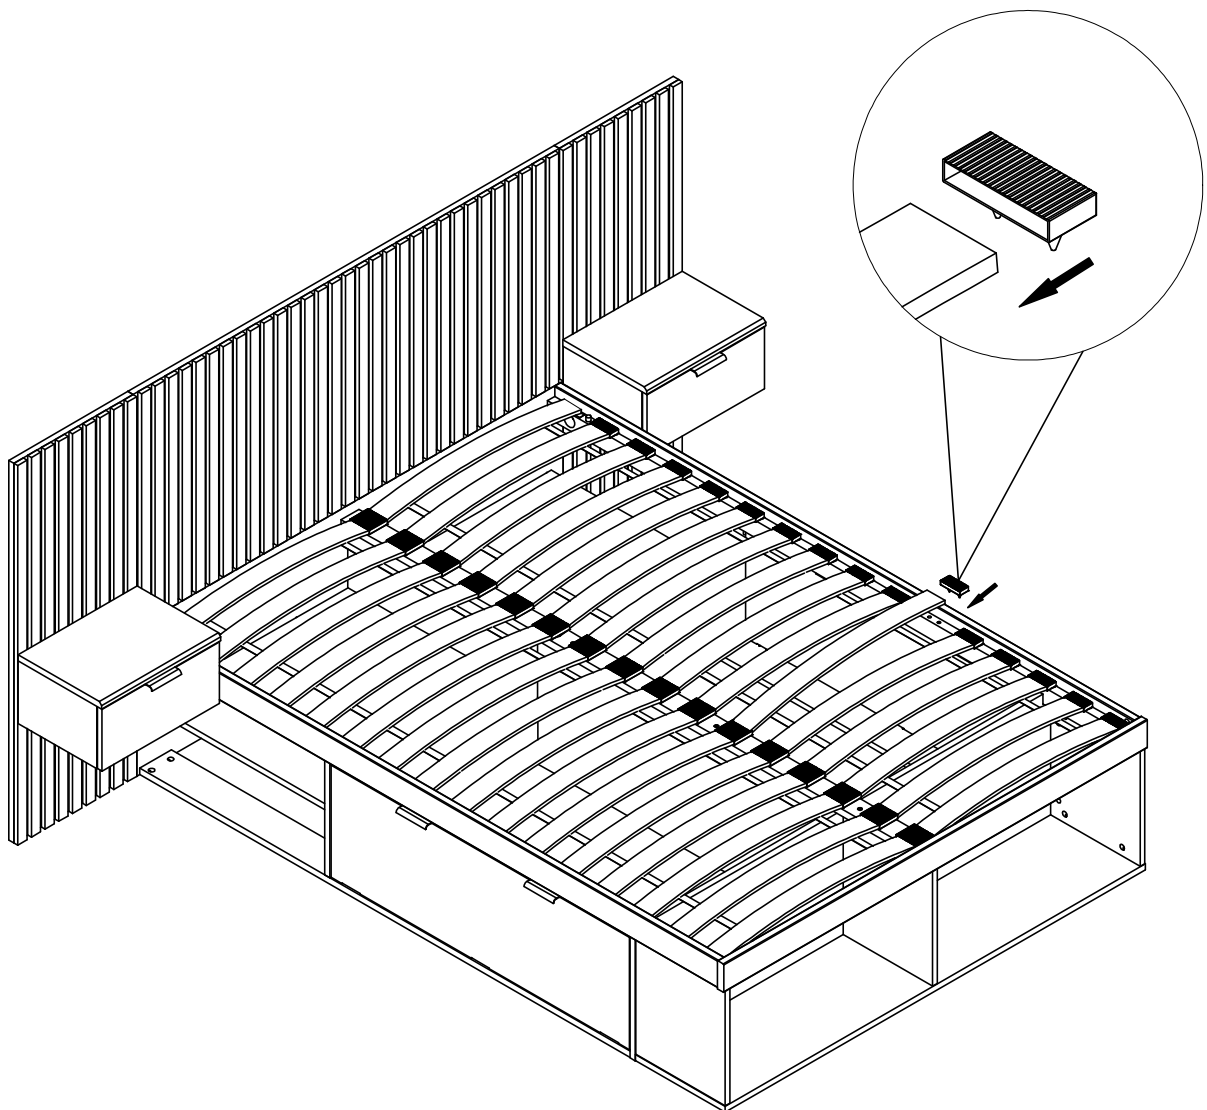


T33	N/A	30	
-----	-----	----	---

# NEXT

## BRONX/BRONX LIGHT SLAT XL BED WITH BEDSIDES C24482/Q96760

### Actual product size

SUPER KING:H110 x W266 x D207cm

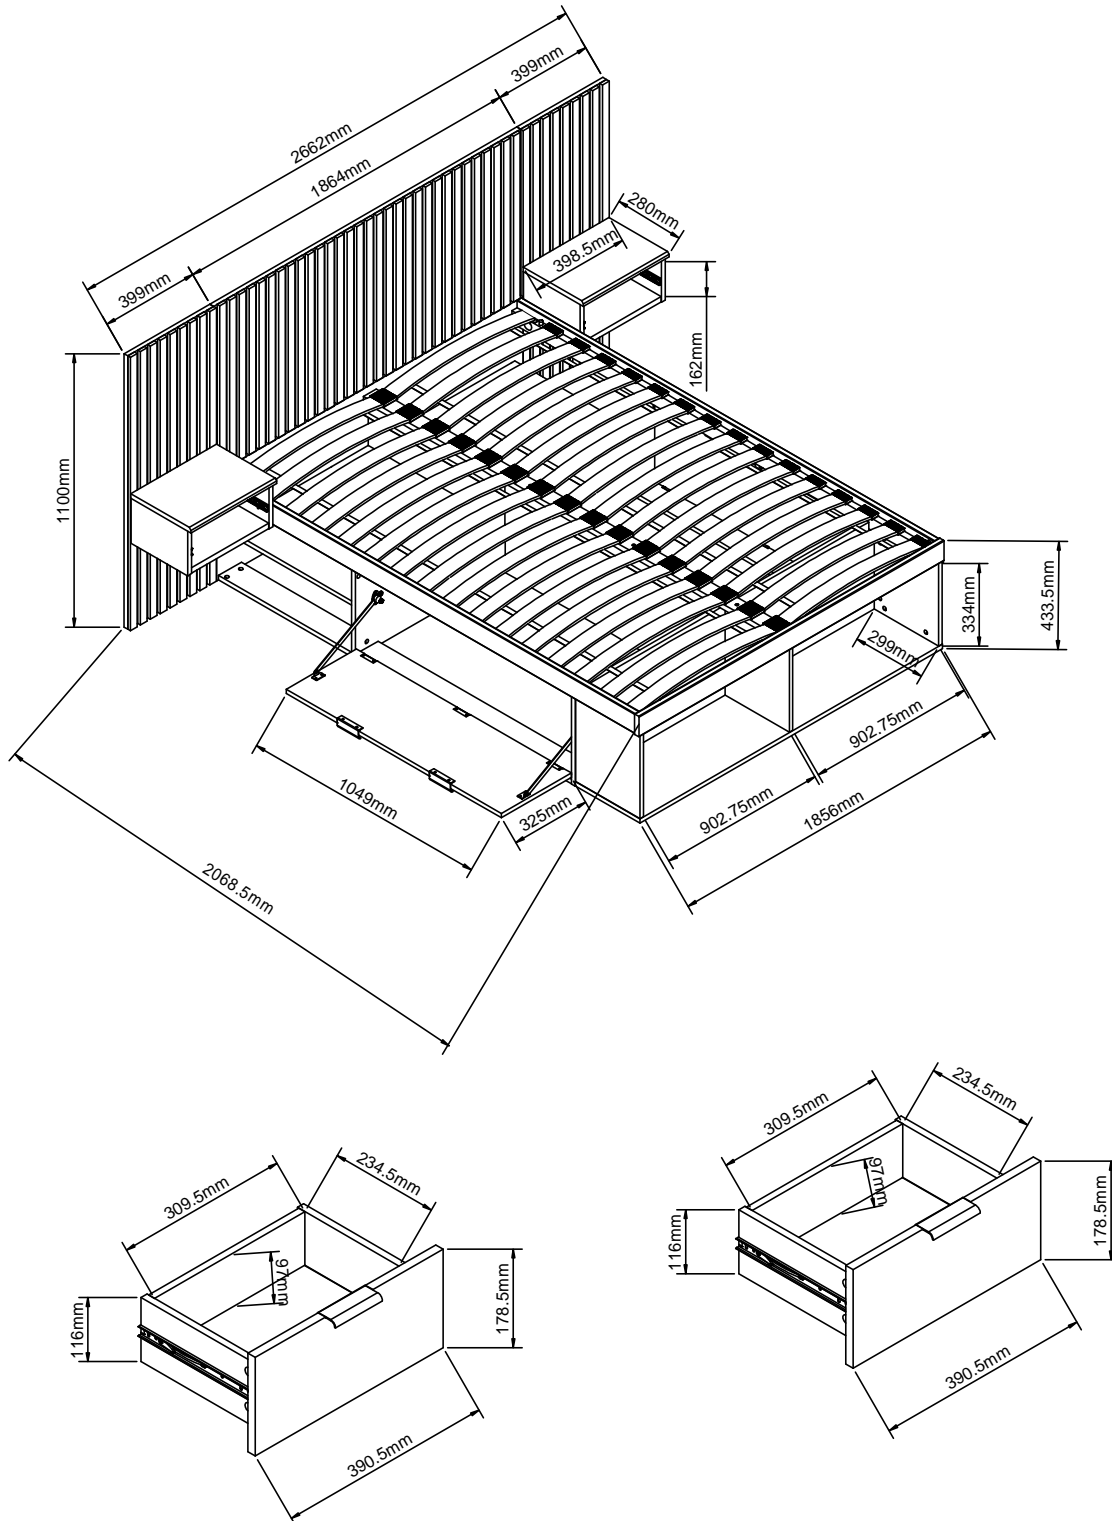


# NEXT

## BRONX/BRONX LIGHT SLAT XL BED WITH BEDSIDES C24482/Q96760

### Actual product size

KING:H110 x W236 x D207cm

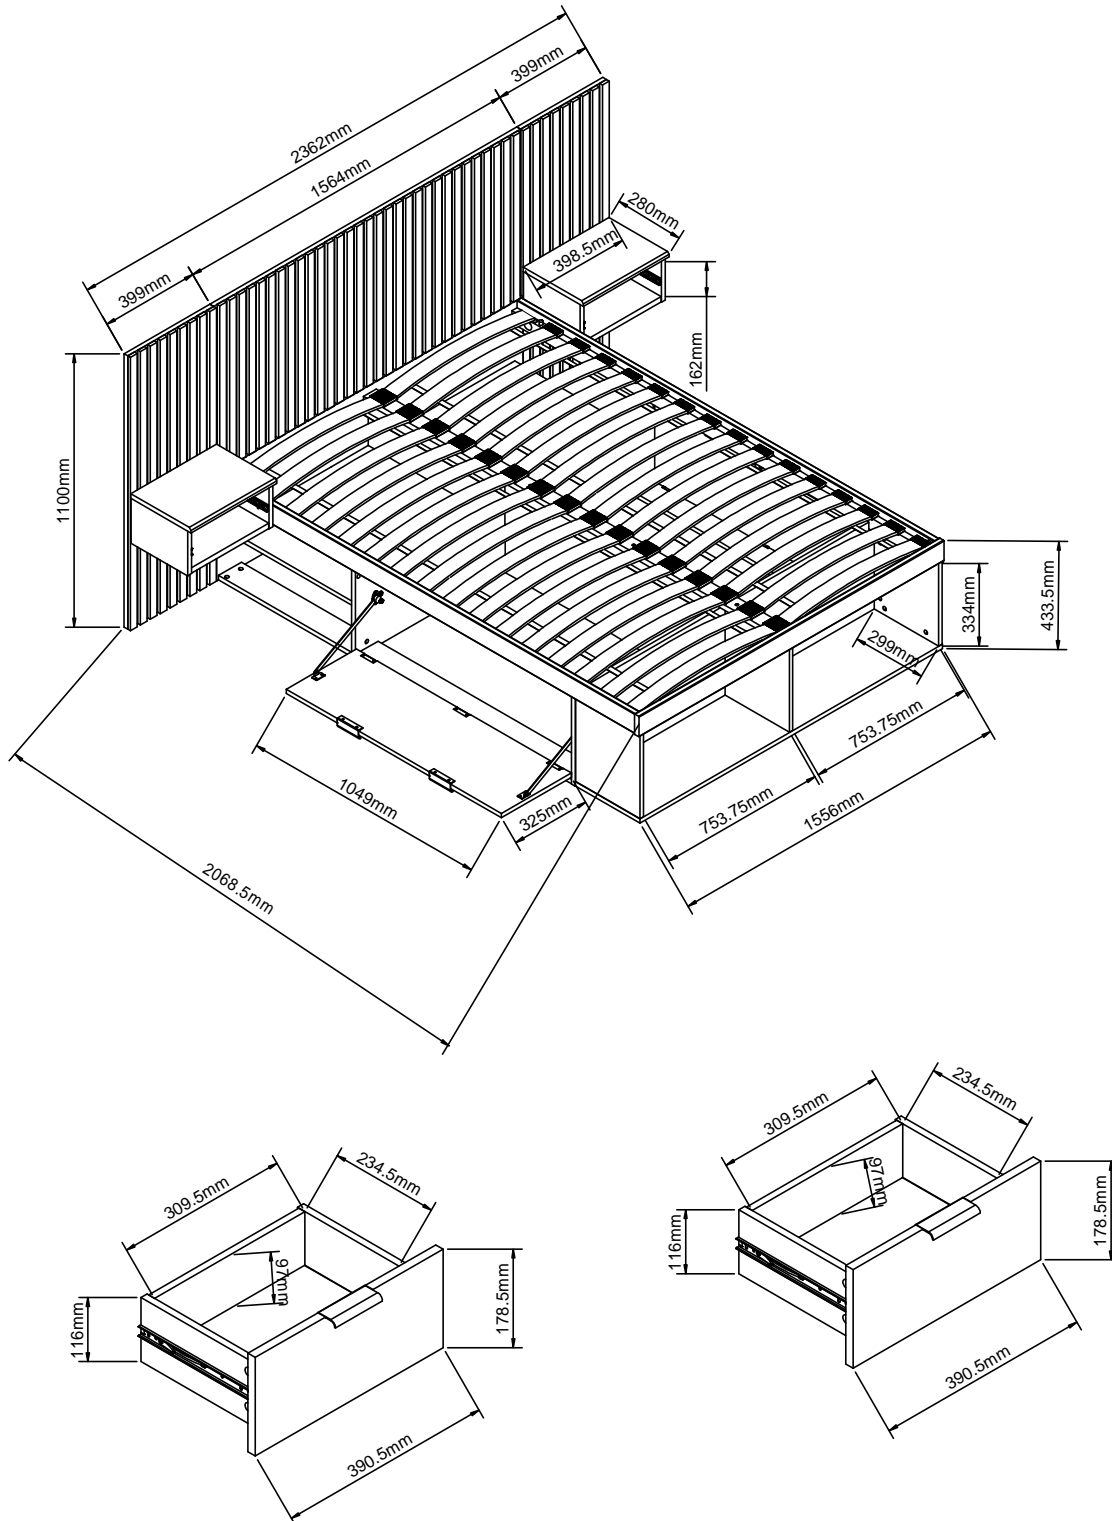

# NEXT

BRONX/BRONX LIGHT SLAT XL BED WITH BEDSIDES  
C24482/Q96760

## Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not sit or stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to protect it from damage

## Missing parts

If you are missing any fixtures and fittings for your product. Please contact our customer service team on 0333 777 8999 and they will be happy to arrange for a replacement to be sent to you free of charge.

## Home service technicians

If you have a fault with your product, please contact our customer service team on 0333 777 8999. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

## You can write to us at

Home Customer Services  
Next Retail Ltd.  
Desford Road,  
Leicester,  
LE19 4AT

To view our full furniture range please visit [www.next.co.uk](http://www.next.co.uk)