

CHARLES BENTLEY

EST. 1860

Wooden small log store made of FSC®-certified wood

Product Code: GLLOGSTORE01

Assembly Instructions



The mark of
responsible forestry

Please Read All Instructions Thoroughly Before Starting Assembly

Contact : customerservices@buydirect4u.co.uk

Please Retain Instructions For Future Use

Find Us On



CHARLES BENTLEY & SON LTD
NORTH ROAD, LOUGHBOROUGH, LEICESTERSHIRE, LE11 1QJ

Assembly Instructions


Product Code: GLLOGSTORE01

Before assembly.

- We recommend that time is taken to read the instructions before starting assembly, then follow the easy step by step guide.
- The instruction sheet is only a guide to the assembly.
- Drill all screw locations where indicated.
- This product should be assembled by no less than two people.
- Never attempt to erect the assembly in high winds.


Recommended tools for assembly:

- Drill with 3 mm diameter drill bit
- Cross head screw driver
- Hammer




No	Components	Qty
1	Floor	1
2	Left side panel	1
3	Right side panel	1
4	Back slats	9
5	Shelf	1
6	Roof	1
7	Front slat	1

No	Fixing kit	Qty
8	70 mm screws	8
9	60 mm screws	4
10	Nails	40

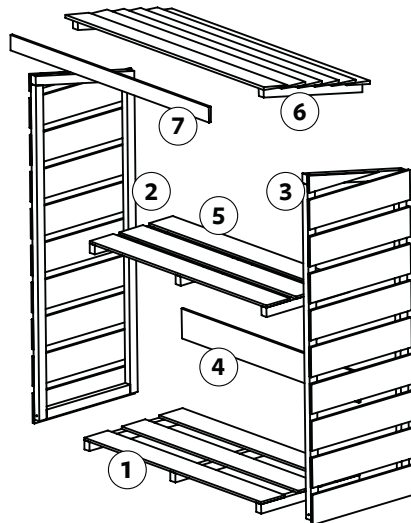


1. Wall panels.

Position the left side panel on the floor so that the frame sit on the floor and cladding overhang the floor edge. Secure through the bottom frame of the side panel into the floor using 2 × 70 mm screws. Position and attach the right side panel in the same way.

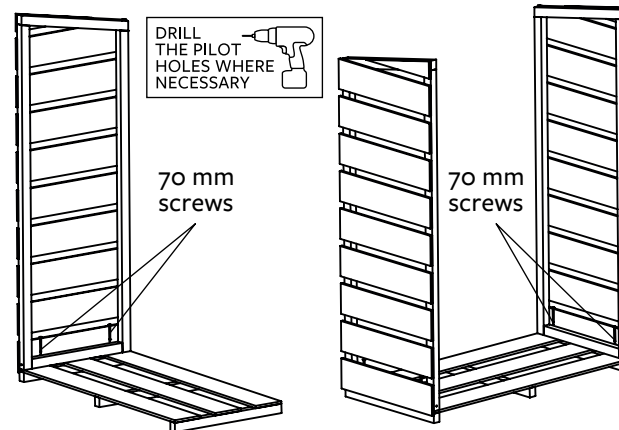


2. Shelf.

Position the shelf at the desired height between the two side panels. Secure in place using 4 × 70 mm screws. Screw through the frame of the side panel in to the ends of the shelf frames as shown.

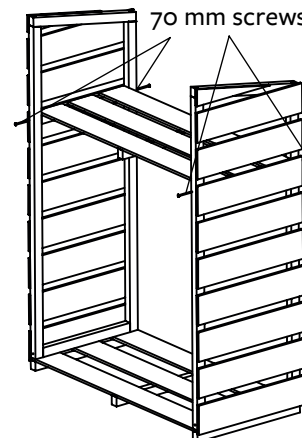

3. Back wall.

Secure the nine back slats to the back of the log store. Align each slat with the slats on the side panels and secure in place using 2 nails at each end of the slat.

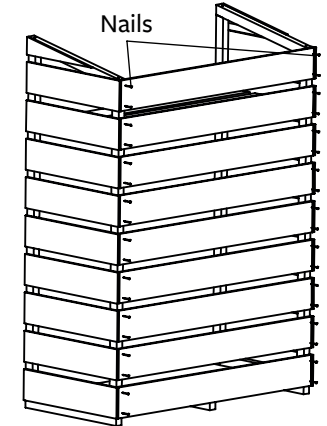

4. Roof and front slat.

Place the roof over the top of the back and side walls. Secure in place using 4 × 60 mm screws. Screw through the sides of the roof into the side panel frame. Secure the front slat to the top of the side wall frames using 4 nails.

