


U60492 GREY BRONX MIRROR

NEXT

Tools Needed

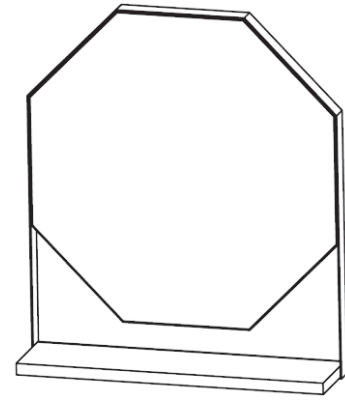

Helpline

If you have any problems with this product, please contact customer services Tel: 0333 777 8000

Important

- Please spend a short time reading through this leaflet and follow the simple step by step instructions.
- Carefully check that you have all parts before beginning assembly.
- Keep fittings out of children's reach and keep children away from construction.
- We suggest you retain this instruction for future reference.
- Please do not use abrasive cleaners on this product.
- Suggest to make periodic check to ensure that all screws are fully tightened.
- Please ensure wall fixings used are appropriate to your wall type. If in doubt, consult a qualified tradesperson.
- Wall plugs and wall fixings are not included.
- Made in China

Care instructions

- Do not use abrasive cleaners or cleaners containing bleach.
- The maximum load is 2 kgs.
- To prevent corrosion ensure the product does not come into prolonged contact with water. Wipe away excess moisture.

Fittings

A.X1	B.X1	C.X3	D.X3	(not included)	(not included)	Template

Assembly Instructions

Step 1. Use a flat head screwdriver to remove the grub screws (C) and washers (D) from shelf (B).

Step 2. Secure shelf (B) to mirror (A) by tighten screws (C) and washers (D) with a screwdriver.

Step 3. Use template (G) to mark position and drill holes on the wall. Secure wall fixings (F) and wall plugs (E) to wall. Ensure that all screws are properly fixed and the wall plugs (E) should be exposed 5mm outside the wall.

Step 4. Hang mirror (A) to wall fixings (F) and check to ensure that all screws are securely fixed.

(E) and (F) are not included.

Warning - Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes. Ensure wall plugs used are suitable for your wall type. If in doubt, consult a qualified tradesperson.

