

BEFORE YOU GET STARTED...

We're confident you'll love your gorgeous new Next furniture. However, it's worth making absolutely certain before you put it all together.

So, let's quickly run through these three steps:

1. COLOUR

Make sure you're happy with the colour
No need to unpack everything, just check the first component.

2. PROTECTIVE PACKAGING

If you're happy, then it's time to get opening! Start by laying everything out on the protective packaging – this will prevent anything getting scratched.

3. PARTS PAGE

Finally, double check you have all the pieces by referencing the parts page of the instructions.

TIPS FOR RETURNS

Not completely happy with the product? No problem.
We just need everything back in the original packaging, so follow the steps below and this will ensure a super-smooth returns process and no delay to your refund.

DO



- Check everything is there (the 'parts page' is a handy checklist).
- Pop all the loose Fittings and Fixtures into the packaging provided or tie them up in a plastic bag.
- Wrap all the big components back up in the original protective packaging.
- Close up the box and seal it securely (don't be afraid to use plenty of tape).

DON'T



- Leave anything assembled - all components should be dismantled and separately packed.
- Put loose Fixtures and Fittings straight into the box.
- Throw it back in the box carelessly – as it may get damaged.

NEXT
HOME

Then just give us a call on 0333 777 8999 and we'll sort out a pick up time for you.

NEXT


SUNRAY HOTEL BED

W63009
Assembly instructions

Actual product size

DOUBLE: W233.5 X L206 X H111cm
KING: W248.5 X L216 X H111cm
SUPER KING: W278.5 X L216 X H111cm

MAX MATTRESS WEIGHT
DOUBLE: 50 KG
KING: 55 KG
SUPER KING: 60 KG

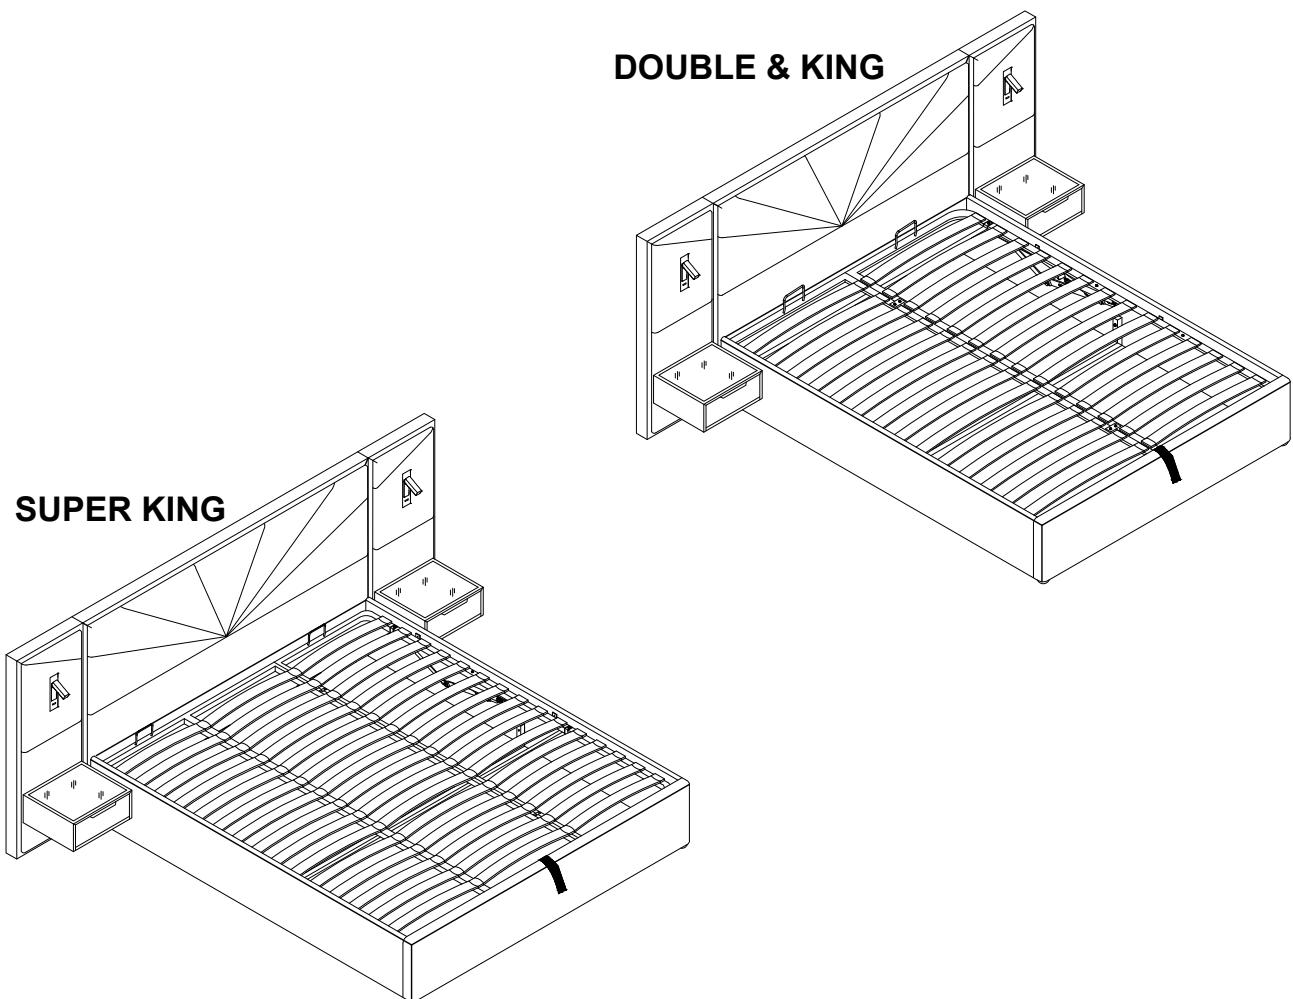

Item No.	Fabric	Content
W63009	Oyster Natural	100%polyester

Need Help?

With: Assembly Instructions
Missing or damaged parts

CALL: 0333 777 8999

IMPORTANT - RETAIN FOR FUTURE REFERENCE

Produced in China for Next Retail Ltd.

W63009-2025-V1.

BEFORE YOU START

Warnings

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm, level ground.

Please periodically check all fittings and re-tighten as necessary.

Please do not stand on your furniture.

Avoid exposing the furniture to excessive heat or direct sunlight as this can cause deterioration of the colour.

The light tubes may get warm to the touch if the reading light is turned on for a prolonged period.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools, plenty of space.

Due to the size of this product we recommend that it is assembled in the room intended for use.

Unwrap all packaging materials and place the components on a clean surface to protect them from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use. Check fixings regularly to ensure they remain tight.

When moving your assembled bed. It is best to lift the bed and never to drag it. Please check that the centre support rail is securely fixed in place.

When adjusting the support legs ensure that the foot is set 5mm from the floor surface without the mattress in place. When in use the legs will create the required support for the product.

Never allow any kind of liquid to remain on your furniture. Absorption can cause materials to warp or finishes to de-laminate.

To clean your item, please use a vacuum or lightly brush clean.

Don'ts

Do not tighten screws until fully assembled.

Do not over tighten screws or bolts.

Do not drag or pull your furniture.

Do not use this product if parts are missing, damaged or worn.


Never use scourers, abrasives or chemical cleaners.

Number of people required to assemble

Two people are required to assemble this item



Time to assemble : 30 minutes

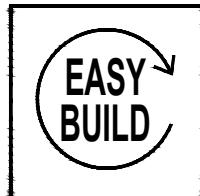

Missing parts

If you are missing any fixtures and fittings for your product please contact our customer service team on **0333 777 8999** and they will be happy to arrange for a replacement to be sent to you free of charge.

Home service technicians


If you have a fault with your product please contact our customer service team on **0333 777 8999**. If you have had the product for 28 days or less you may be offered a replacement, refund or for a fully trained home service technician to visit your home to assess the fault and repair the product where possible. If you have had the product for more than 28 days we will send an independent home service technician to review and repair the product where possible and recommend further action.

You can write to us at

Home Customer Services
Next Retail Ltd,
Desford Road,
Leicester,
LE19 4AT,

To view our full furniture range please visit www.next.co.uk

GETTING TO KNOW YOUR PRODUCT

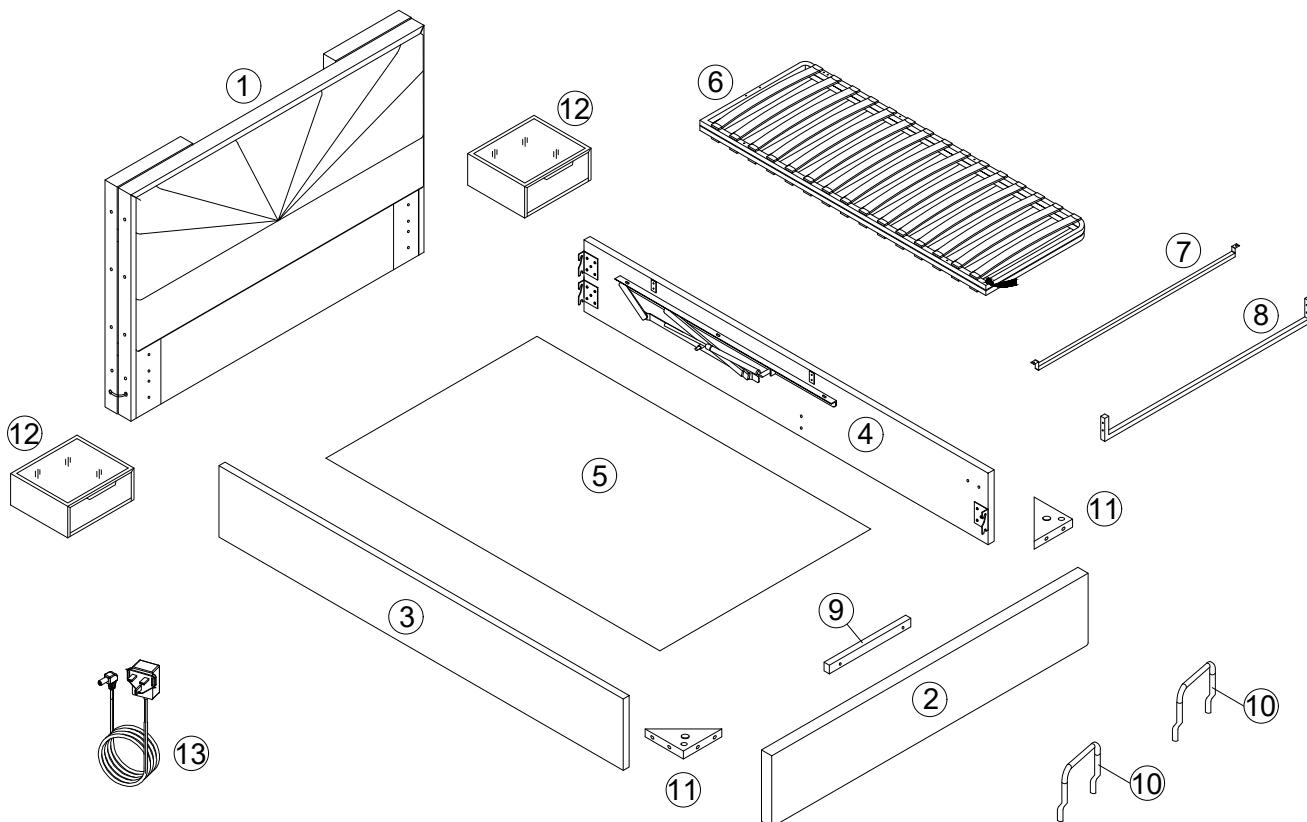

Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visal	Qty	Ctn
1	Headboard		1	1
2	Footboard		1	3
3	Side Rail - Left		1	2
4	Side Rail - Right		1	2
5	Fabric Base Cover		1	3
6	Metal Lift up Slat Frame		1	3

Ref	Dimensions	Visal	Qty	Ctn
7	Cross Bar		1 DOUBLE & KING 2 SUPER KING	3
8	"U" Shape Bar		1	3
9	Slat Frame Support Rail		1	3
10	Mattress Stopper		2	3
11	Angle Bracket		2	3
12	Bedsides		2	4
13	Power Adapter 90° LV Plug		1	1


NEXT

SUNRAY HOTEL BED

W63009
Assembly instructions

Fixtures and fittings supplied (actual size)

Ref	Dimensions	Qty	Spare
A	M5	2	N/A
B	M8x25	26	2
C	M8	44	2
D	M8x17	45	2
E	M14	1	N/A
F	M8x50	21	2
G	M8	10	1
H	M8	2	1
J	M8x70	4	1
K	M8x30	12	2

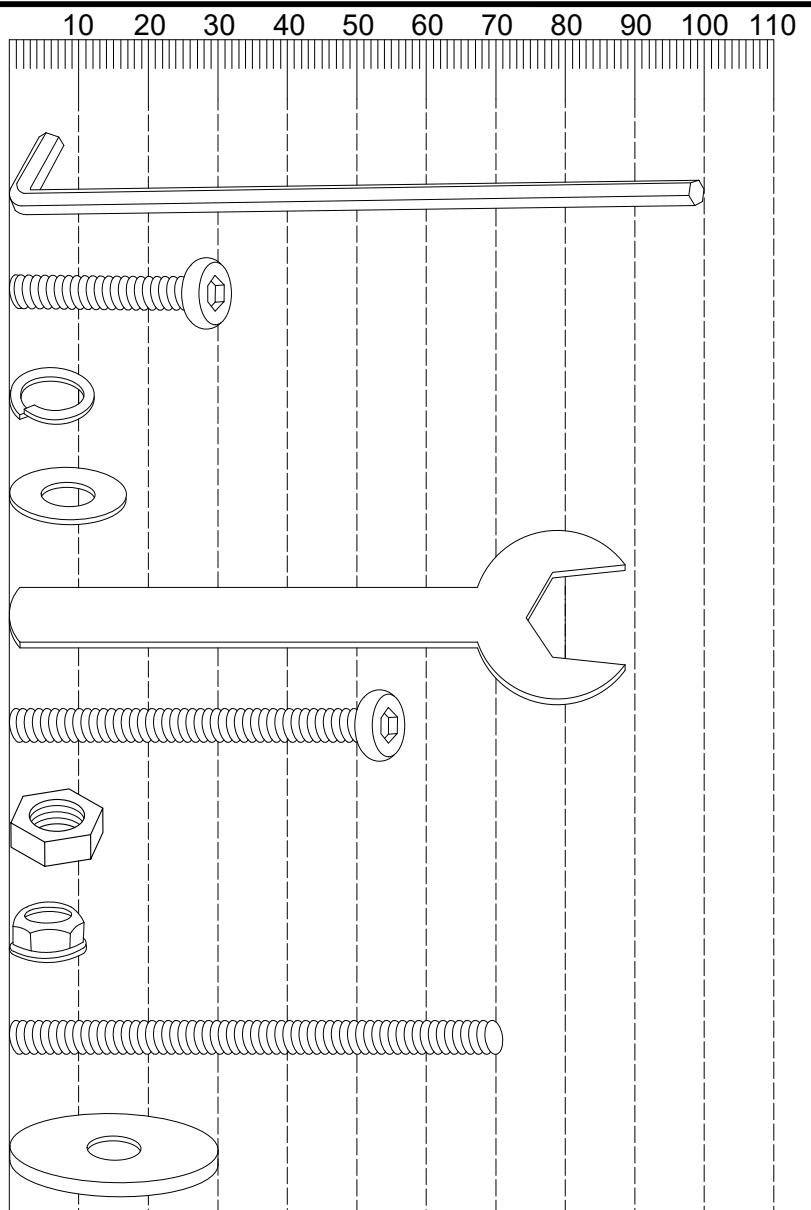


Fixtures and fittings supplied (not to actual)

Ref	Dimensions	Qty	Spare
L	55x28	2	N/A
M	Box spanner	1	N/A

Spare part for lights

Dimensions	Qty	Spare
M2	N/A	1

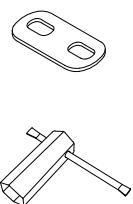



NEXT

SUNRAY HOTEL BED


W63009
Assembly instructions

1

i) Unfold both wings, unzip compartments and retrieve hardware and cable packs from compartment.

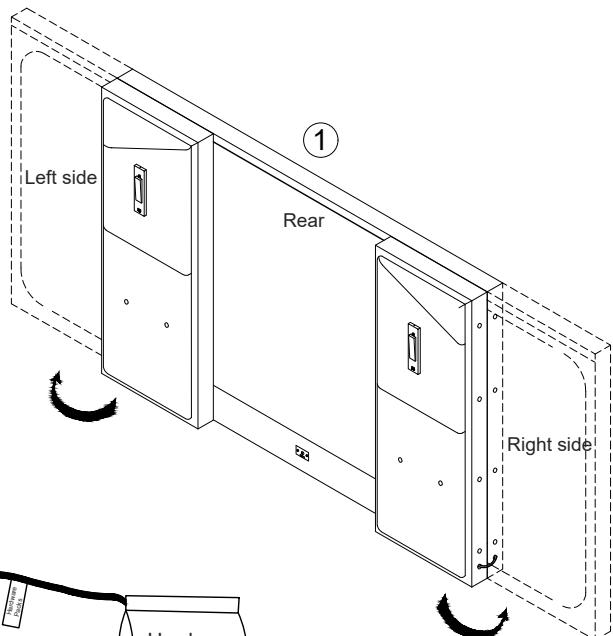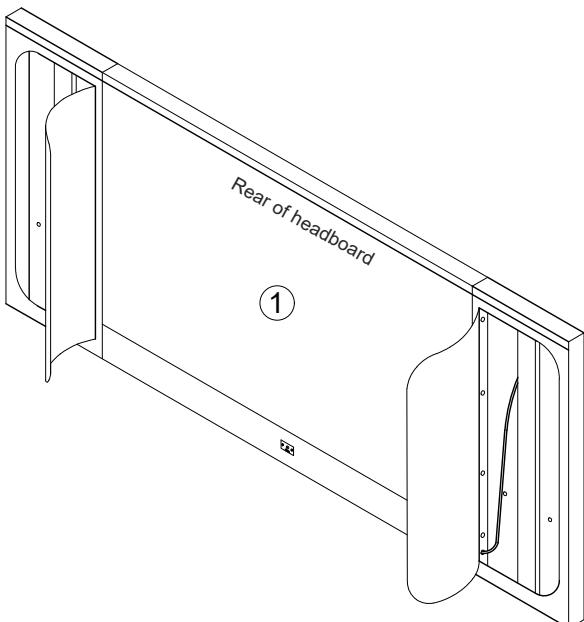


ii) Bolt each wing to main headboard.
Screw four bolt sets (F, C & K), into the pre-tapped holes on each side of the main headboard.
Tighten with Allen key (A).

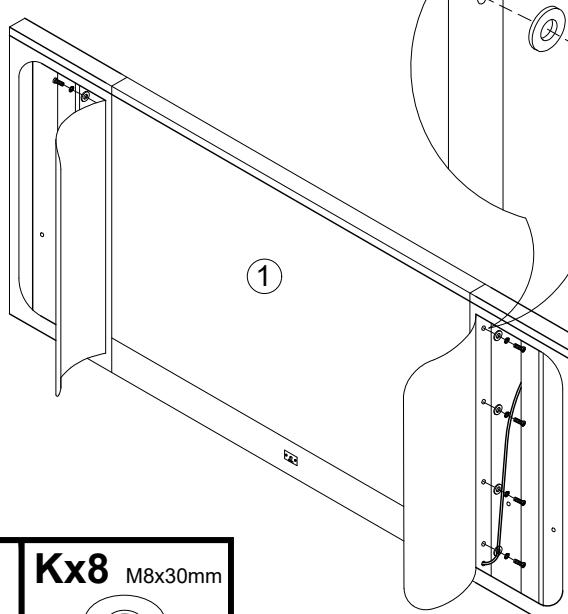

Ax2 M5



Fx8 M8x50mm



Cx8 M8



Kx8 M8x30mm



Produced in China for Next Retail Ltd.




W63009-2025-V1.

NEXT

SUNRAY HOTEL BED

W63009
Assembly instructions

2

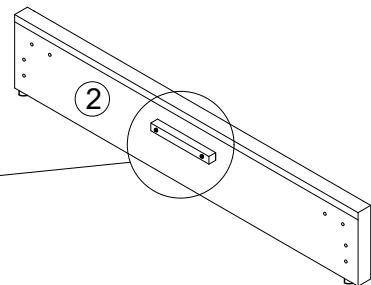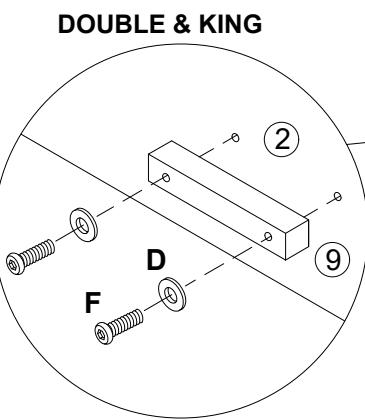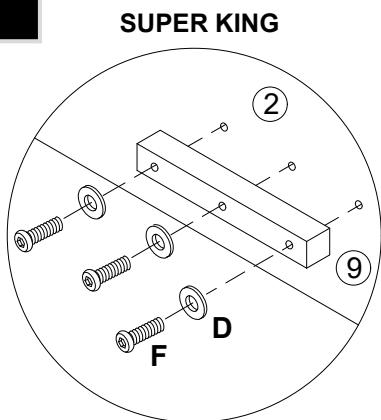

Ax2 M5



DOUBLE & KING

Dx2 M8x17mm



DOUBLE & KING

Fx2 M8x50mm







SUPER KING

Dx3 M8x17mm

SUPER KING

Fx3 M8x50mm


3

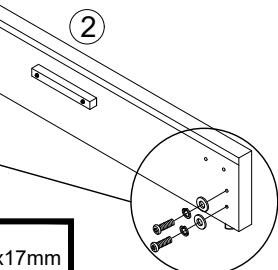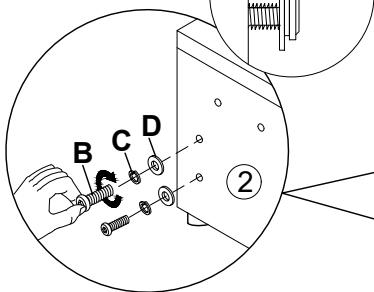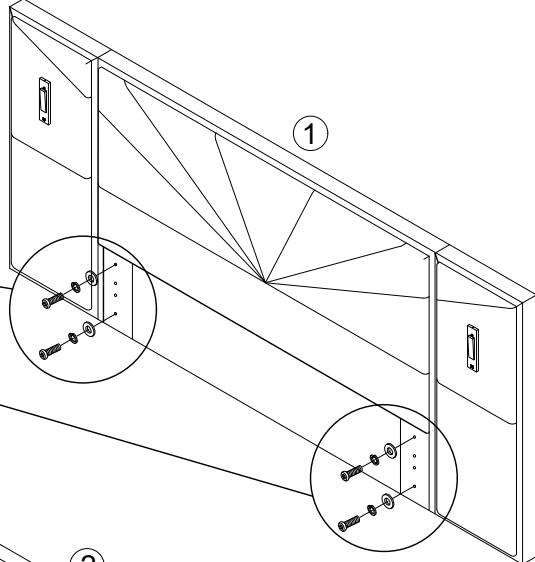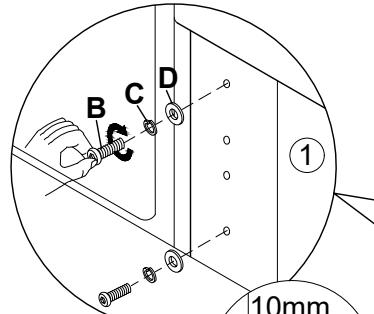

Ax2 M5



Bx8 M8x25mm



Cx8 M8




Dx8 M8x17mm



Produced in China for Next Retail Ltd.

W63009-2025-V1.


4

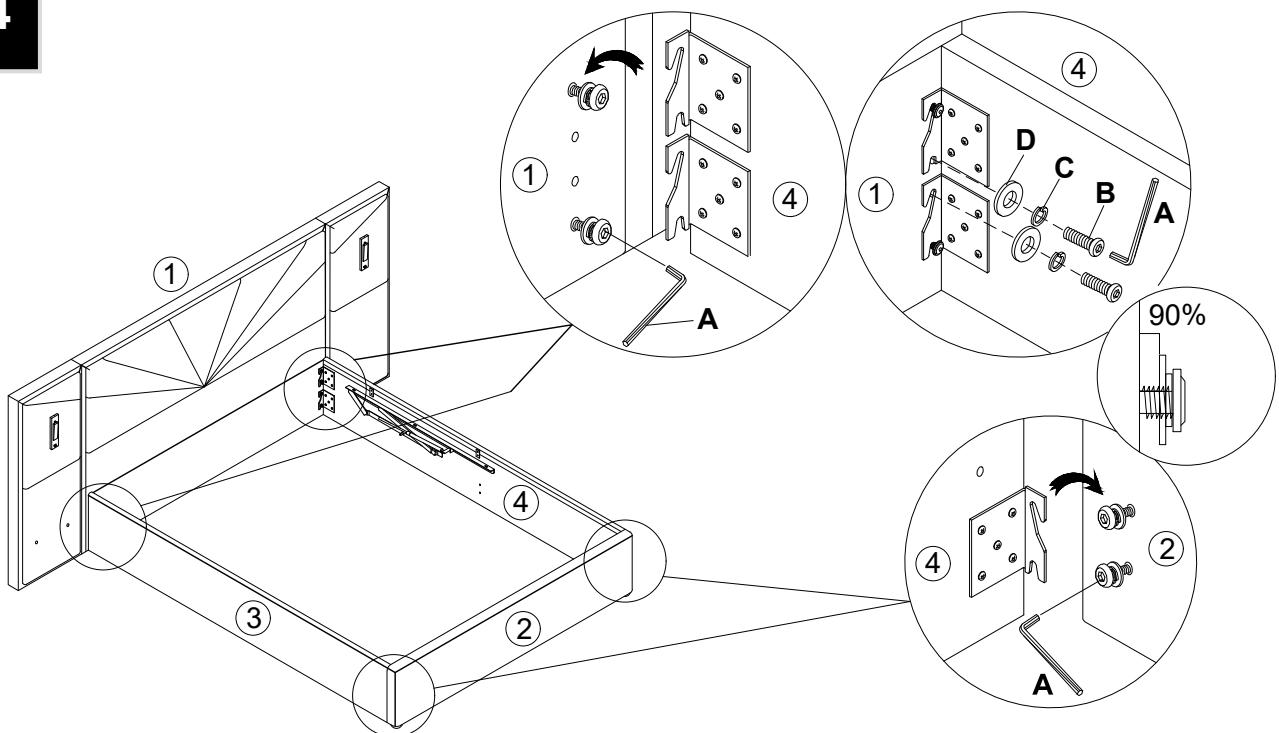

Ax2 M5



Bx4 M8x25mm



Cx4 M8




Dx4 M8x17mm




5

For safety, remove glass during this step and place well away from the workplace.

x2

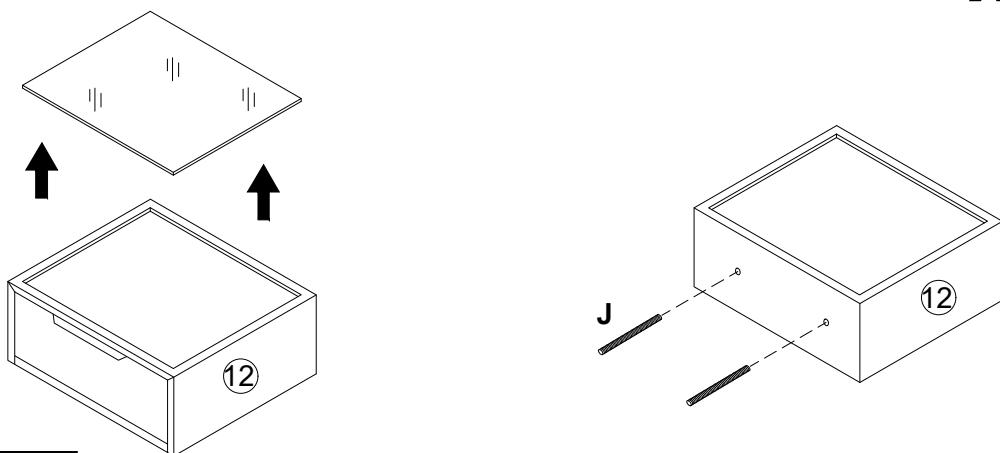


Jx4 M8x70mm



Screw the threaded bolts (E) into the tapped holes in rear of the bedside chests until they stop, do not over-tighten.

6

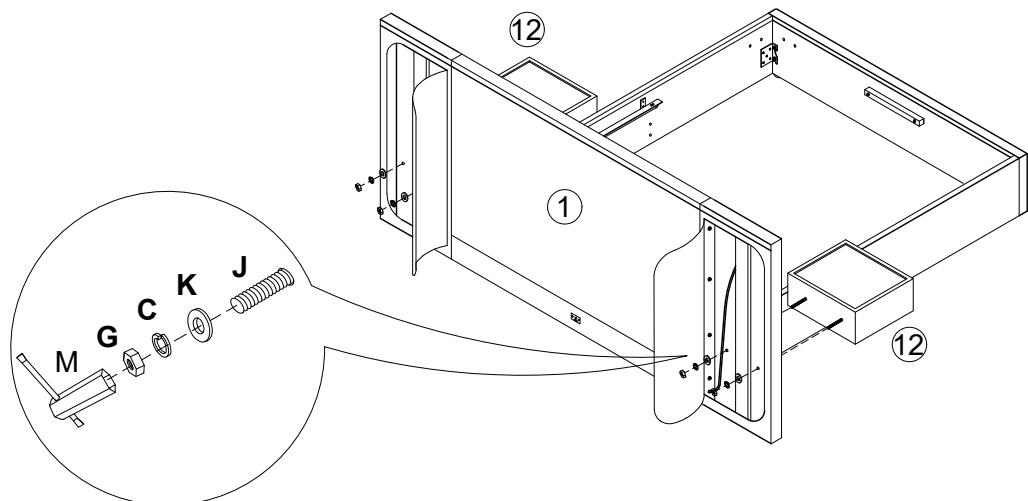

Cx4 M8




Gx4 M8



Kx4 M8x30mm





Mx1 Box spanner




7

Fit the 'U' shaped cross bar (8) between each side rail across the centre of the bed being careful not to damage the fabric. Bolt the rail into position on each side using bolts (F) and flat washers (D).

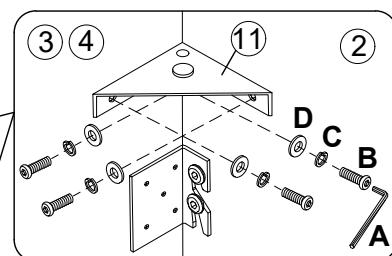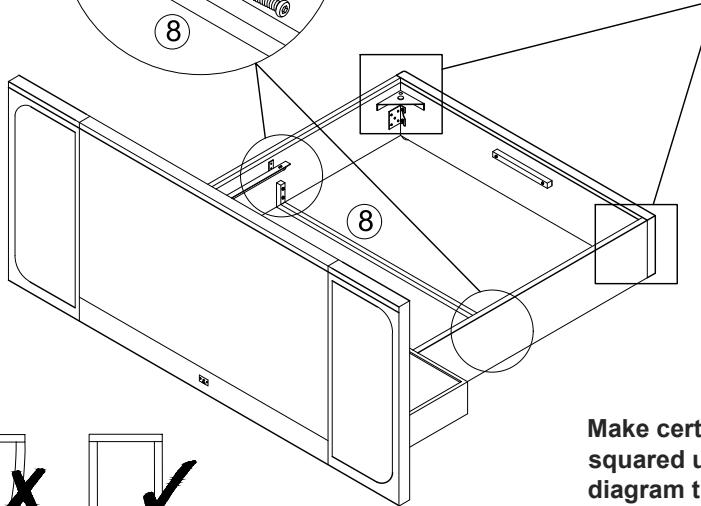


Fit the two angle brackets (11) loosely screwing the bolts (B), spring washers (C) & flat washers (D) into the threaded inserts in the corners of footboard (2) & the side rails (3&4).

Ensure bed frame is square



Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

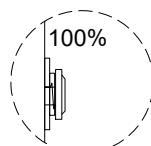

Ax2 M5



Bx8 M8x25mm



Cx8 M8



Dx12 M8x17mm



Fx4 M8x50mm




Produced in China for Next Retail Ltd.

W63009-2025-V1.

8

! WARNING CAREFULLY LIFT BOTH SIDE RAILS AT THE SAME TIME, DO NOT LET THE BED TWIST.

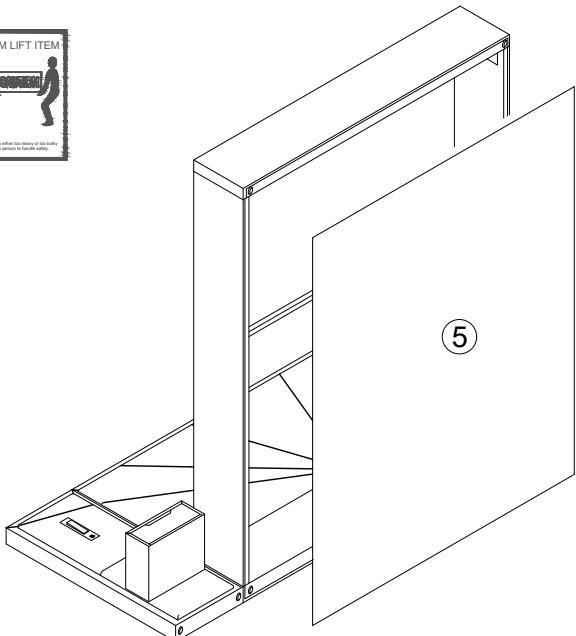

To fit the fabric base cover (5).


Carefully & evenly lift up the bed from the base end making sure it doesn't twist and turn the headboard onto its back.

For safety, your assistant should hold up the bed whilst the fabric base cover is fitted.


Using the velcro tape, attach the cover to bottom of both side-rails, headboard & footboard making sure that the fabric is fixed evenly all round.

Lower the bed evenly back to the floor.

9

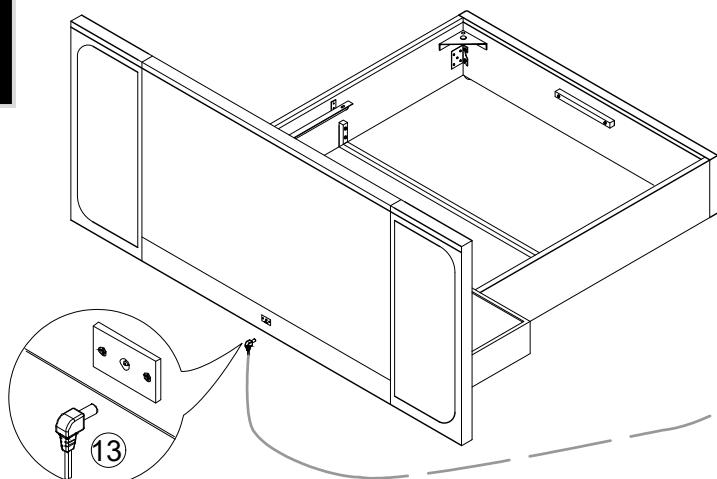


i) Connect Mains Power Lead (13) to your wall socket - for safety, this must be an earthed supply.

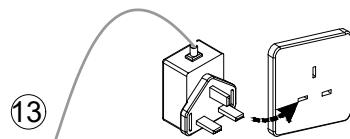

ii) After the power cable is fitted, the lights and USBs should be tested.


iii) Using help, lift the bed back in its final position close up against the wall, please do not drag it.

iv) Make sure bed is still squared up then go onto next step and fit the ottoman frame.

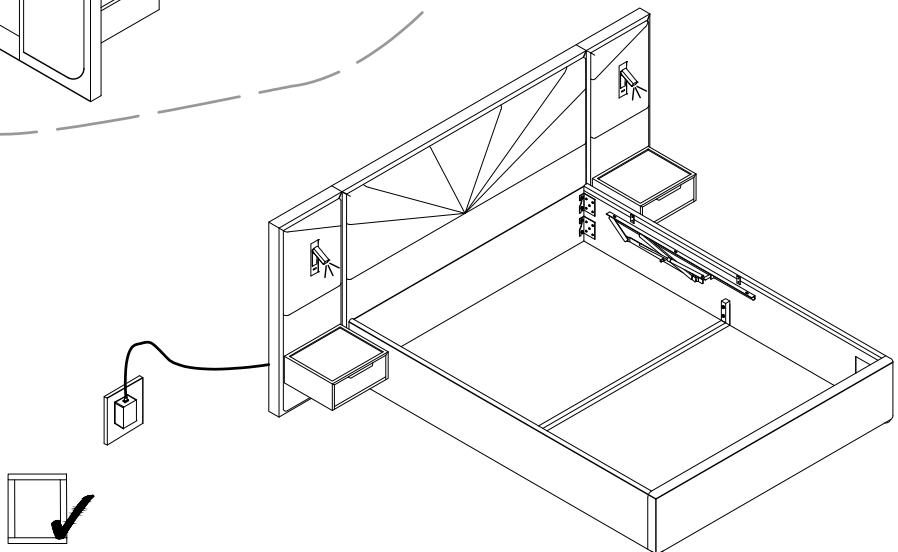




10a

For Double and King Size

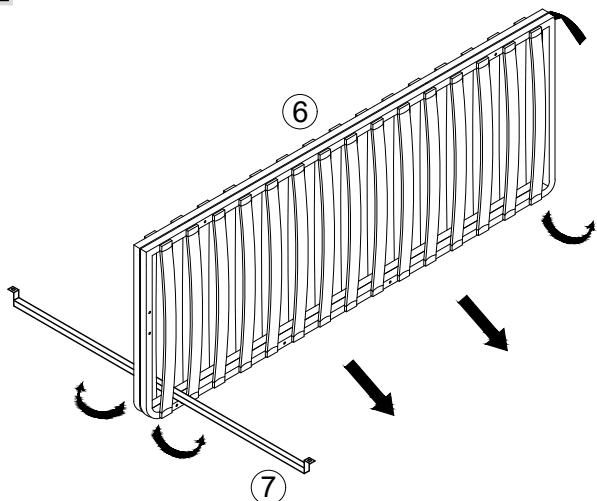

i) Fitting position for cross bar (7).
Pass bar through metal slat frame (6) between 1 & 2 slat.
Carefully open the frame.


ii) Ease the plates on top of the cross bar (7) onto top of the slat frame sides and through the holes in the plates, loosely fit two sets of bolts (B), spring washers (C) & flat washers (D) into the threaded inserts. Do not tighten yet.

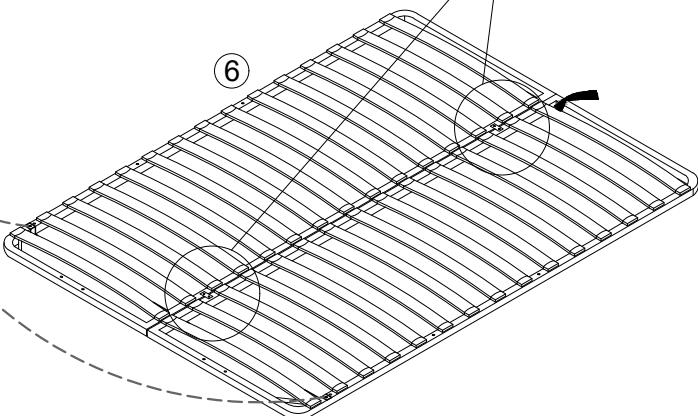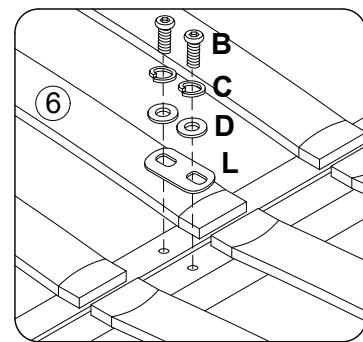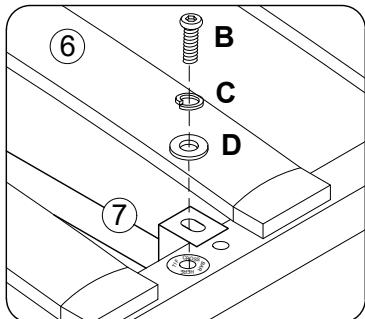

Ax2 M5



Bx6 M8x25mm



Cx6 M8



Dx6 M8x17mm




Lx2 55x28mm



Produced in China for Next Retail Ltd.


W63009-2025-V1.

10b For Super King Size

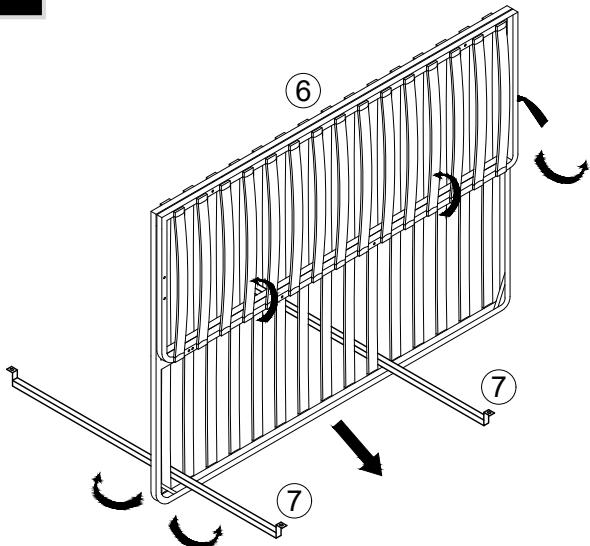


i) Fitting position for cross bars (7). Pass one bar through metal slat frame (6) between 1 & 2 slat. And pass another bar through between 10 & 11 slat. Carefully open the frame.


ii) Ease the plates on top of the cross bar (7) onto top of the slat frame sides and through the holes in the plates, loosely fit two sets of bolts (B), spring washers (C) & flat washers (D) into the threaded inserts. Do not tighten yet.

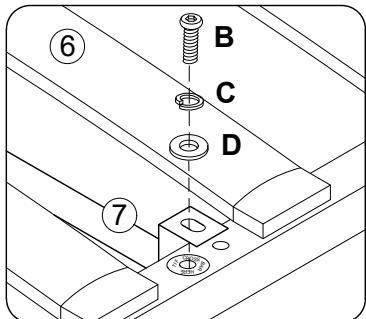

iii) Using four sets of bolts (B), spring washer (C) & flat washers (D) fit the metal connection plates (L) into the threaded inserts on top of the frame. Using Allen key (A), tighten all six bolts 100%.

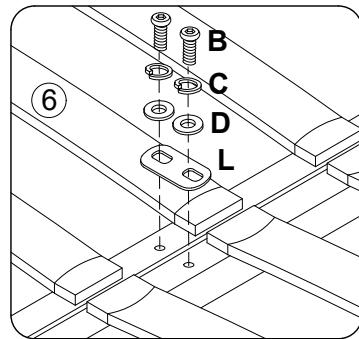


x2

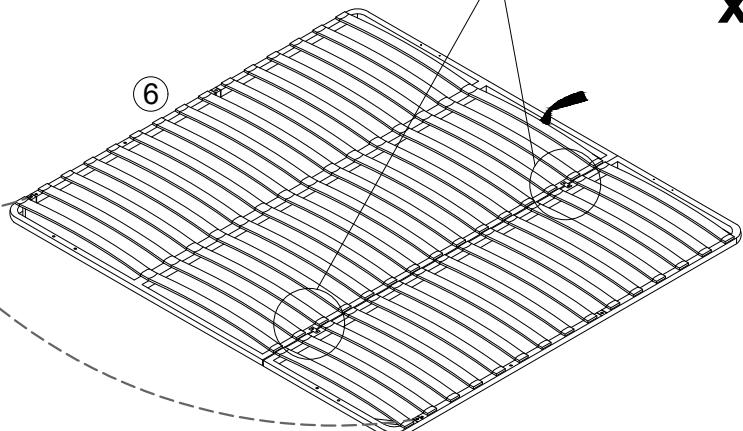

Ax2 M5



Bx6 M8x25mm



Cx6 M8



Dx6 M8x17mm



Lx2 55x28mm



Produced in China for Next Retail Ltd.


W63009-2025-V1.

NEXT


SUNRAY HOTEL BED

W63009
Assembly instructions


11

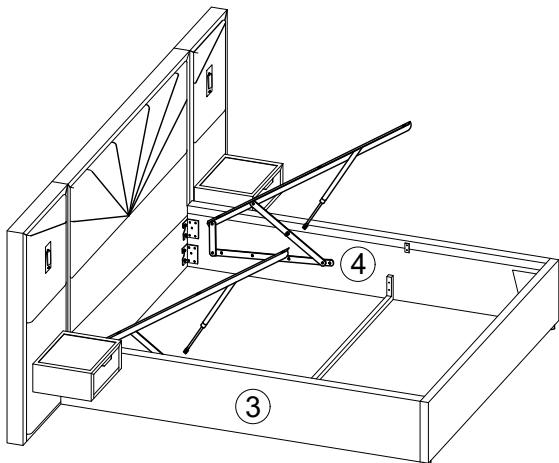


i) Un-tie the mechanisms, and take out the transit blocks.

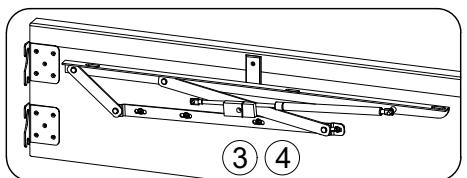

ii) Hold the bars upward

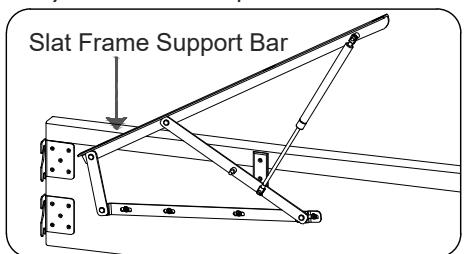


12

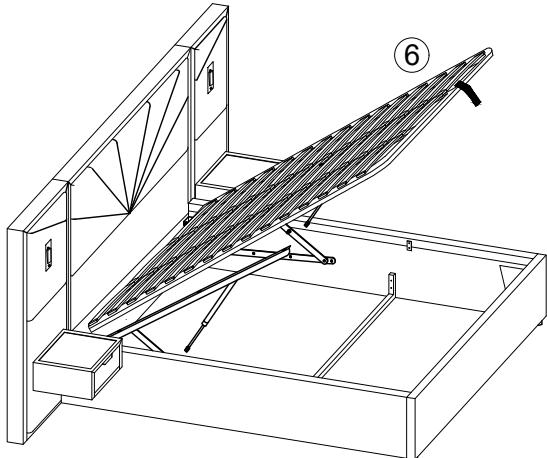


i) With help from your assistant, lift metal slat frame (6) onto slat frame support bars aligning first set of holes on slat frame with first set of holes in support bars (nearest headboard).

ii) Using three bolt sets on each side (C), (D), (F) & (G), fix slat frame to the support bars but do not tighten fully

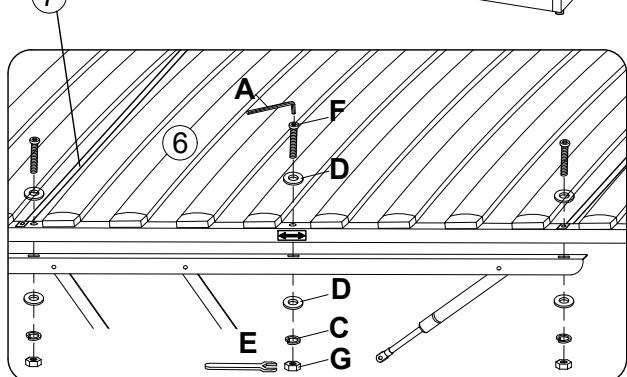

DOUBLE & KING

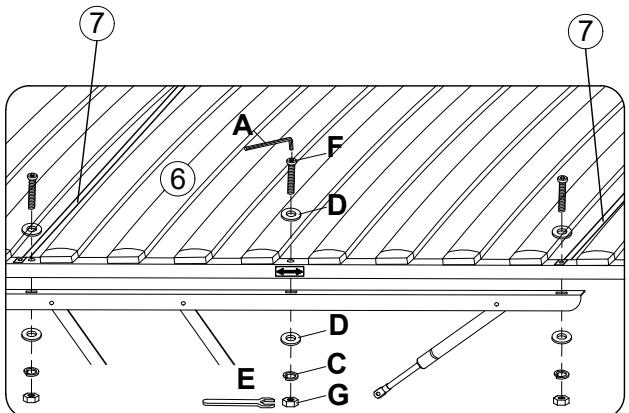

SUPER KING

Ax2 M5



Cx6 M8



Dx12 M8x17mm



Ex1 M14



Fx6 M8x50mm




Gx6 M8




Produced in China for Next Retail Ltd.

W63009-2025-V1.

13

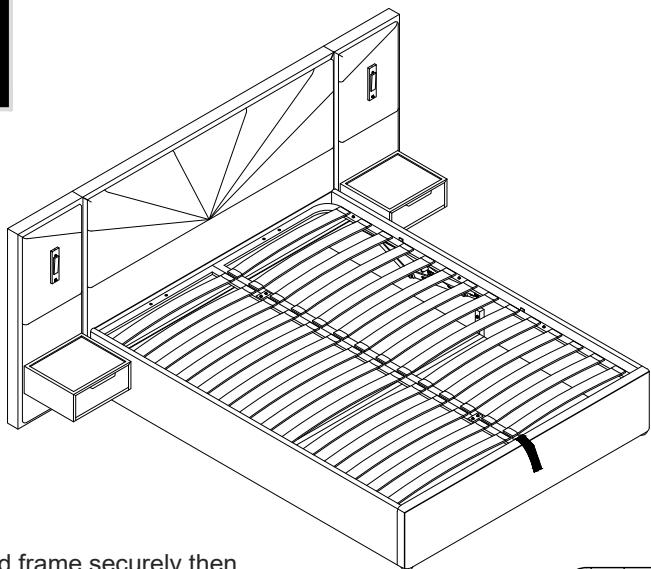

Carefully lay frame down making sure there is an even gap all round as in the sketch.

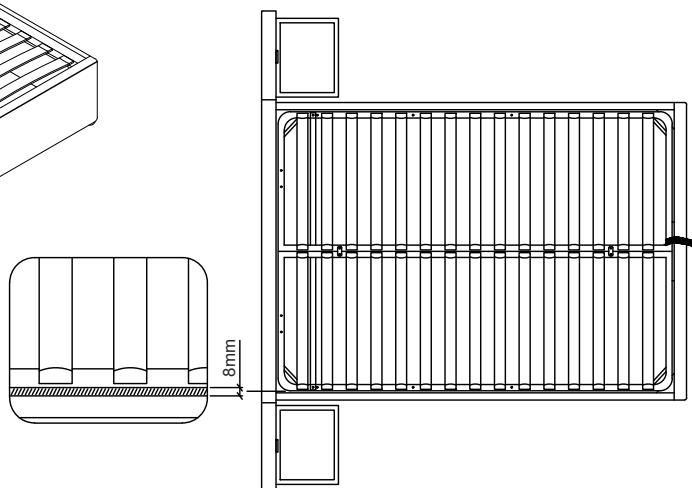

Hold frame securely then tighten all six bolt sets 100% using spanner (E) & Allen key (A).





Ax2 M5



Ex1 M14



14

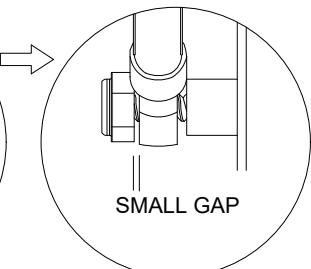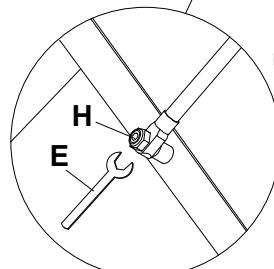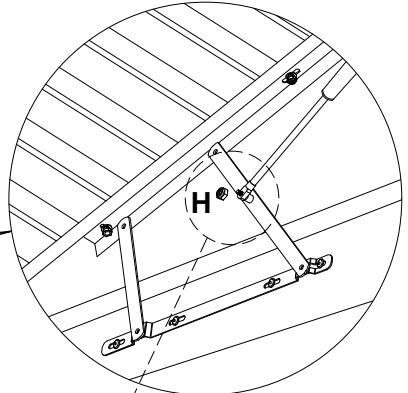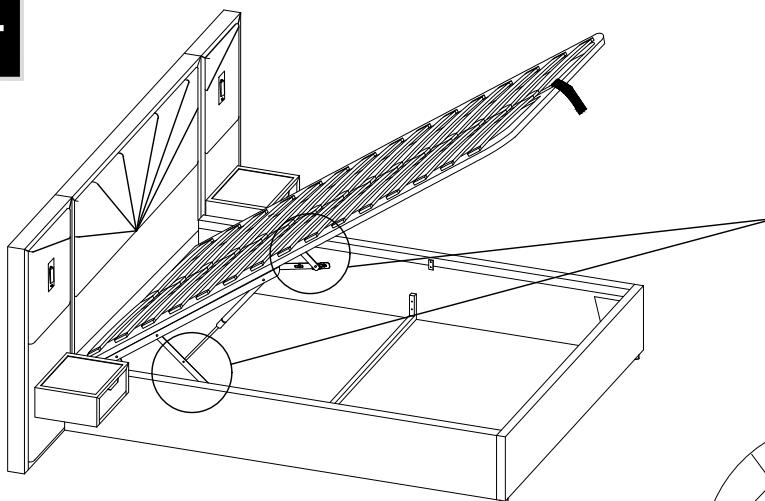

Ex1 M14



Hx2 M8





NEXT

SUNRAY HOTEL BED


W63009
Assembly instructions

15

Push x2 Mattress Stoppers (10) into metal frame, they should go all the way through the upper & lower metal sections.

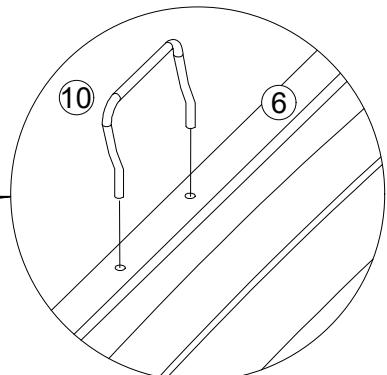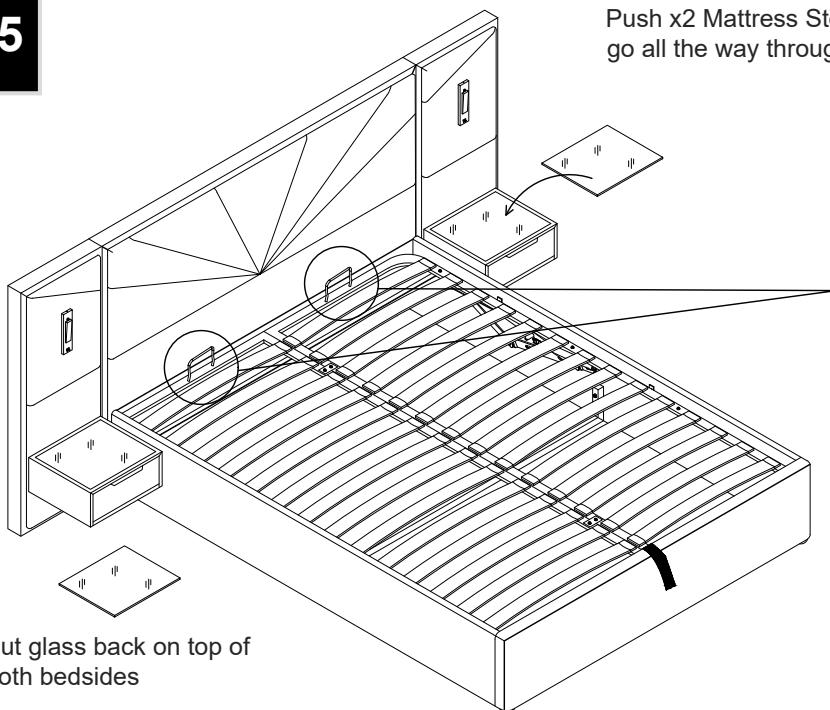

16

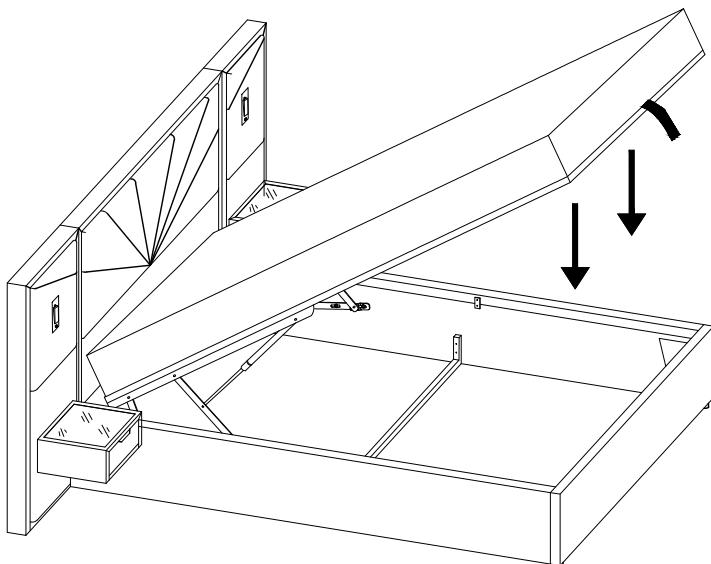

Only lift when the mattress is in place.
Place mattress & Carefully lower frame down.
Keep objects/body part & children away from moving parts.
If lights become loose during use, please use the Allen key to gently tighten the screws which are at the top & bottom of the light fascia.




NEXT

SUNRAY HOTEL BED

W63009
Assembly instructions

Overall Dimensions (WxLxH cm)
DOUBLE: 233.5 x 206 x 111/35.5
KING: 248.5 x 216 x 111/35.5
SUPER KING: 278.5 x 216 x 111/35.5

Internal Dimensions (WxL cm)
137.5 x 192
152.5 x 202
182.5 x 202

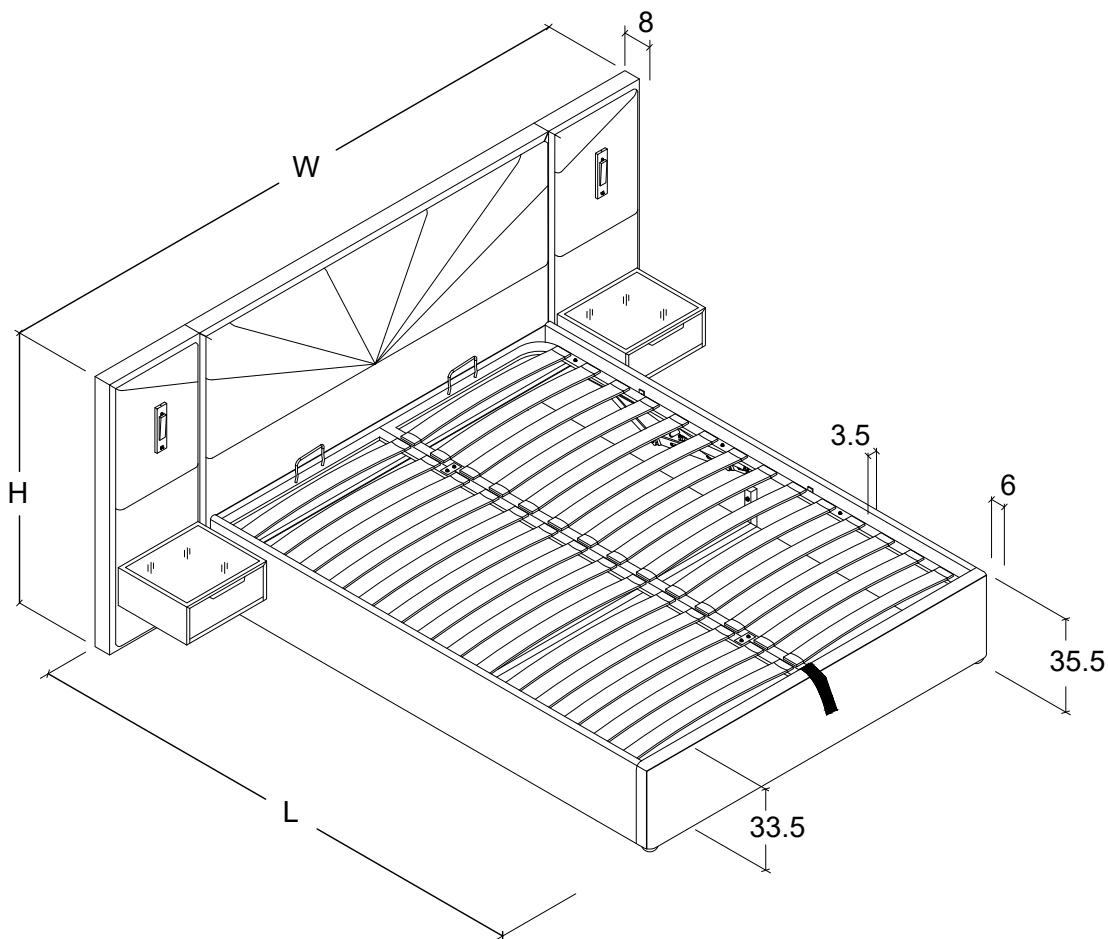

LUMINAIRES

We like to keep our customer's safe so these Luminaires are prepared with class II and class III electrical circuits. There is no mains electricity in the bed and overall power rating for lights & USBs is 12V 2A and 5V 2A respectively, both DC - (direct current). The USBs have integrated safety circuits that prevent overloading and consequently, overheating. The 220/240V power adapter should be plugged into a properly earthed wall socket.

This adapter has an input rating of 100/240V 50/60 Hz - 1.5A AC - output is 12V 2A DC - for safety please only use the adapter that was supplied with the bed.

The testing of the system has been carried out by an accredited laboratory and meets or exceeds the standards below. The whole system is fully approved for use in Europe & UK and to carry CE marking if required.

CE / LVD / UKCA BS EN IEC 60598-2-1:2021 BS EN 60598-1:2015+A1:2018 BS EN 62493:2015
IEC 60598-2-1:1979 AMD1:1987 IEC 60598-1:2014 AMD1:2017 IEC 62493:2015 EN 60598-2-1:1989
EN 60598-1:2015+A1:2018 EN 62493:2015 POWER SUPPLY BS EN 55032:2015
BS EN 55035:2017 BS EN IEC 61000-3-2:2019 BS EN 61000-3-3:2013+A1:2019

Produced in China for Next Retail Ltd.


W63009-2025-V1.



ENERGY

Next

526938

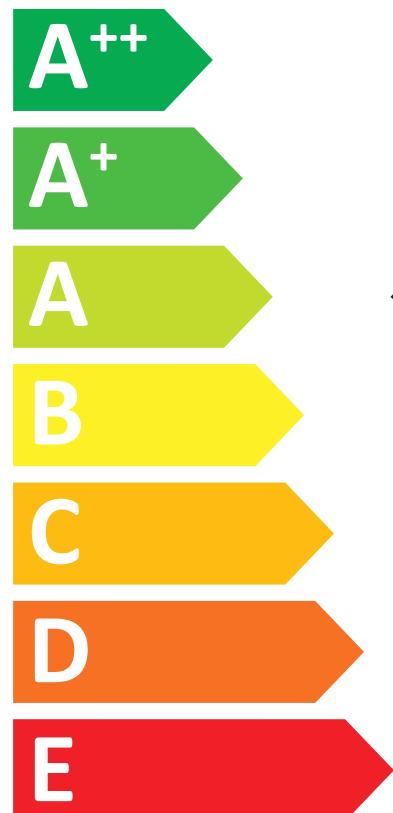


2 kWh/1000h



ENERGY
енергия · ενέργεια

Next

526938

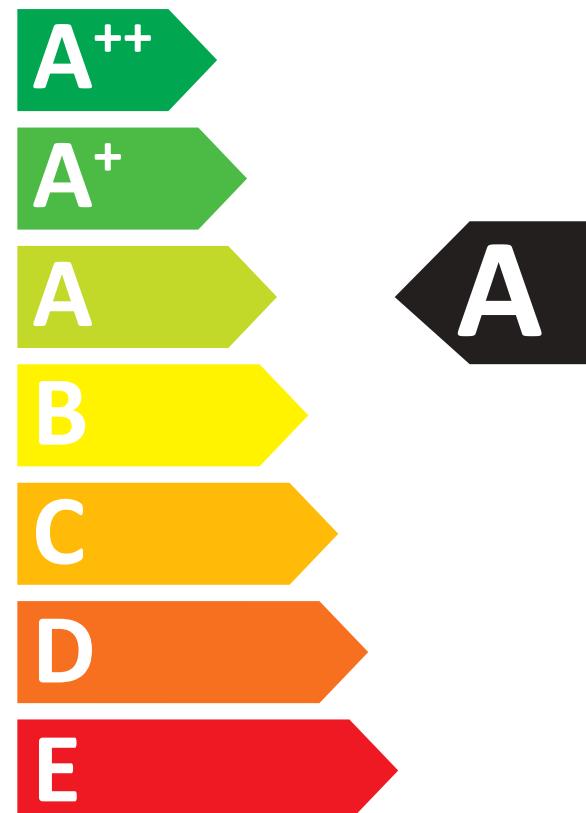

2 kWh/1000h