



SWOON

SOUTHWARK CABINET




2 x Leg

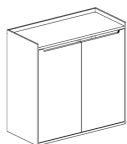


1 x Cabinet



6 x Allen Bolt M6 x 20mm

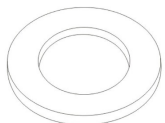


6 x Metal Washer 8x16mm




1 x Allen Key 4 mm


1

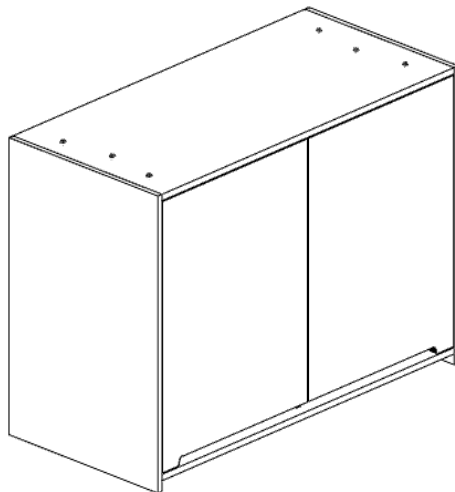


2

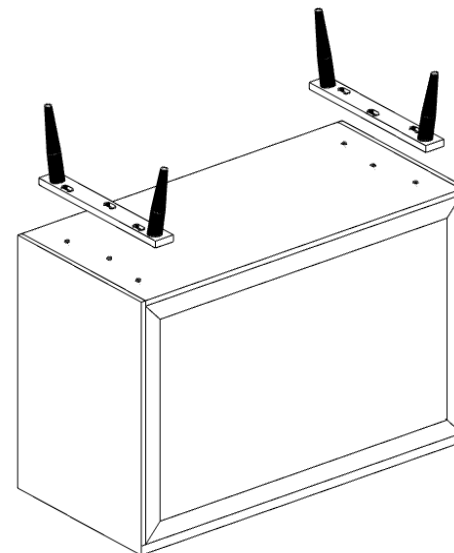


3

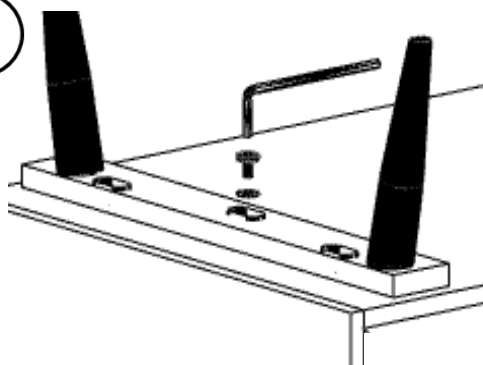

4

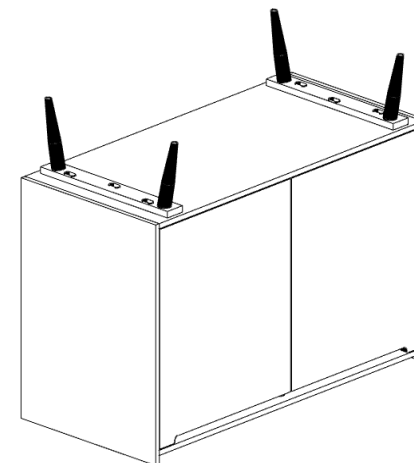

5

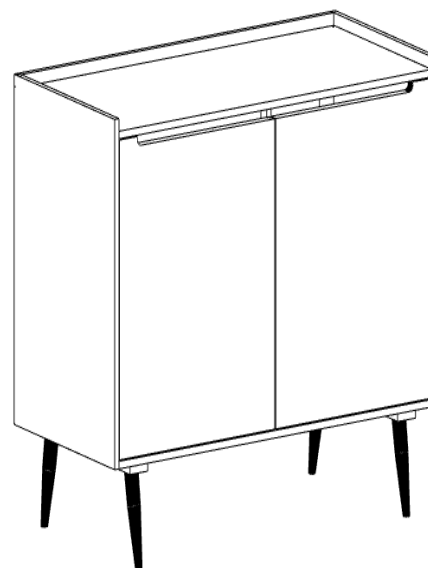

“Important”

Use mat or carpet to assemble the product to avoid scratches.