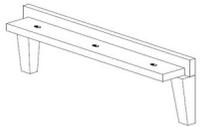




# SWOON

## VERNE Chest Of Drawers


	2 x Leg
	1 x Cabinet
	6 x Allen Bolt M6 x 25mm
	1 x Allen Key 5mm

“Important”  
Use mat or carpet to assemble the  
product to avoid scratches.


①

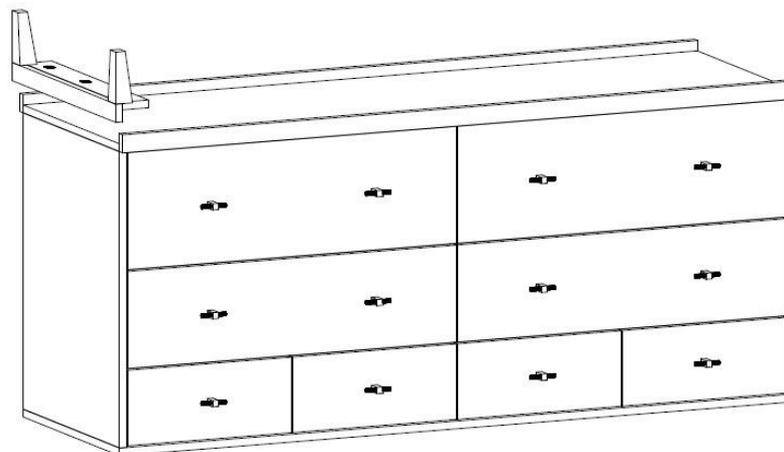

②

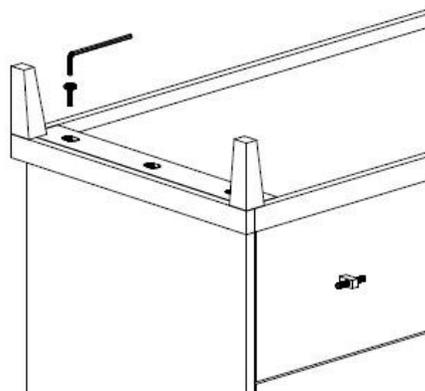

③

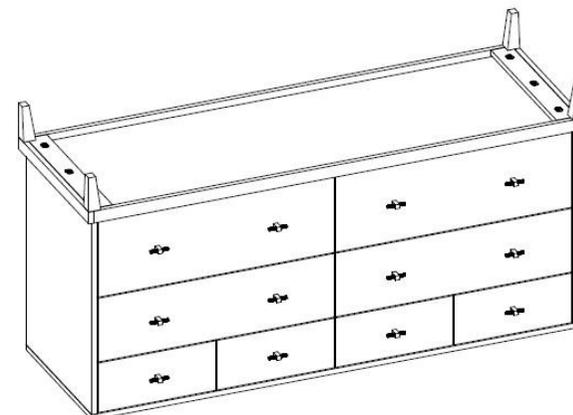

④

