

















# ASSEMBLY INSTRUCTION MOR029-SINGLE WARDROBE


No	LIST OF HARDWARE	Q.ty (pcs)
①	Bolts M6x30 	10
②	Flat Washers 	10
③	Allen key K4 	1
④	Screw Ø4 x 30 	26
⑤	Wooden Dowel Ø8x30 	1
⑥	Handles with Bolts 	1
⑦	Bracket 	2
⑧	Tie 	2
⑨	Screw Ø4 x 20 	6

Screwdriver (not included) 

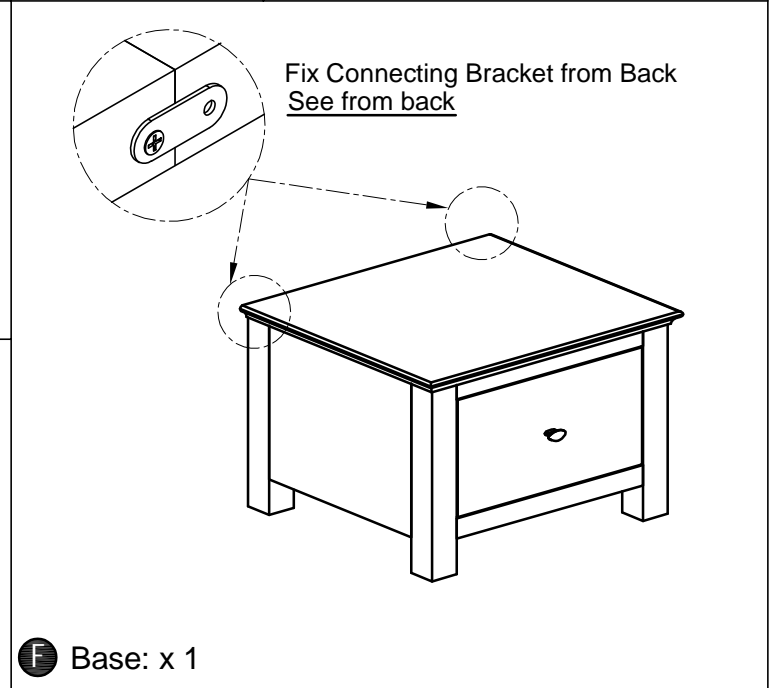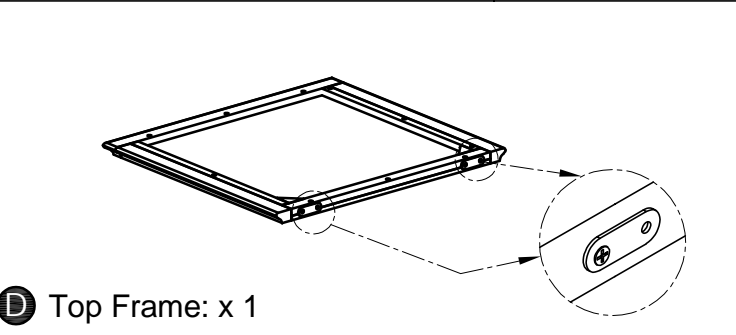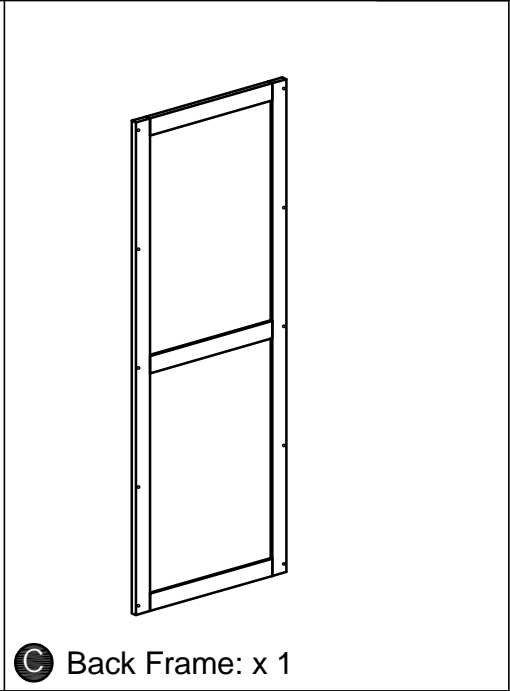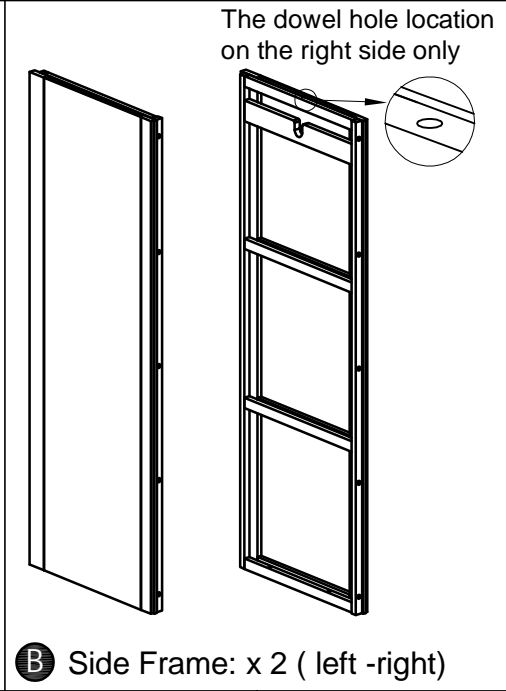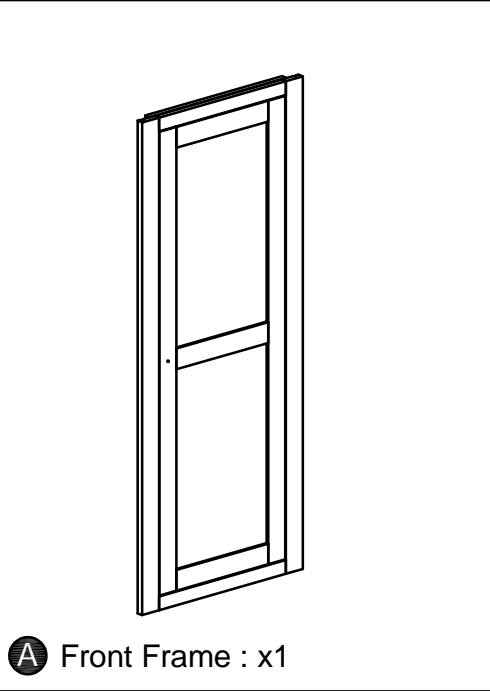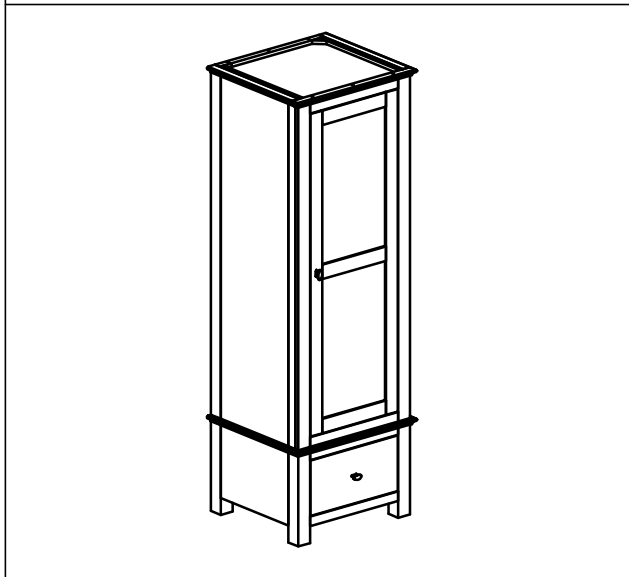


# ASSEMBLY INSTRUCTION MOR029-SINGLE WARDROBE

## STEP 1

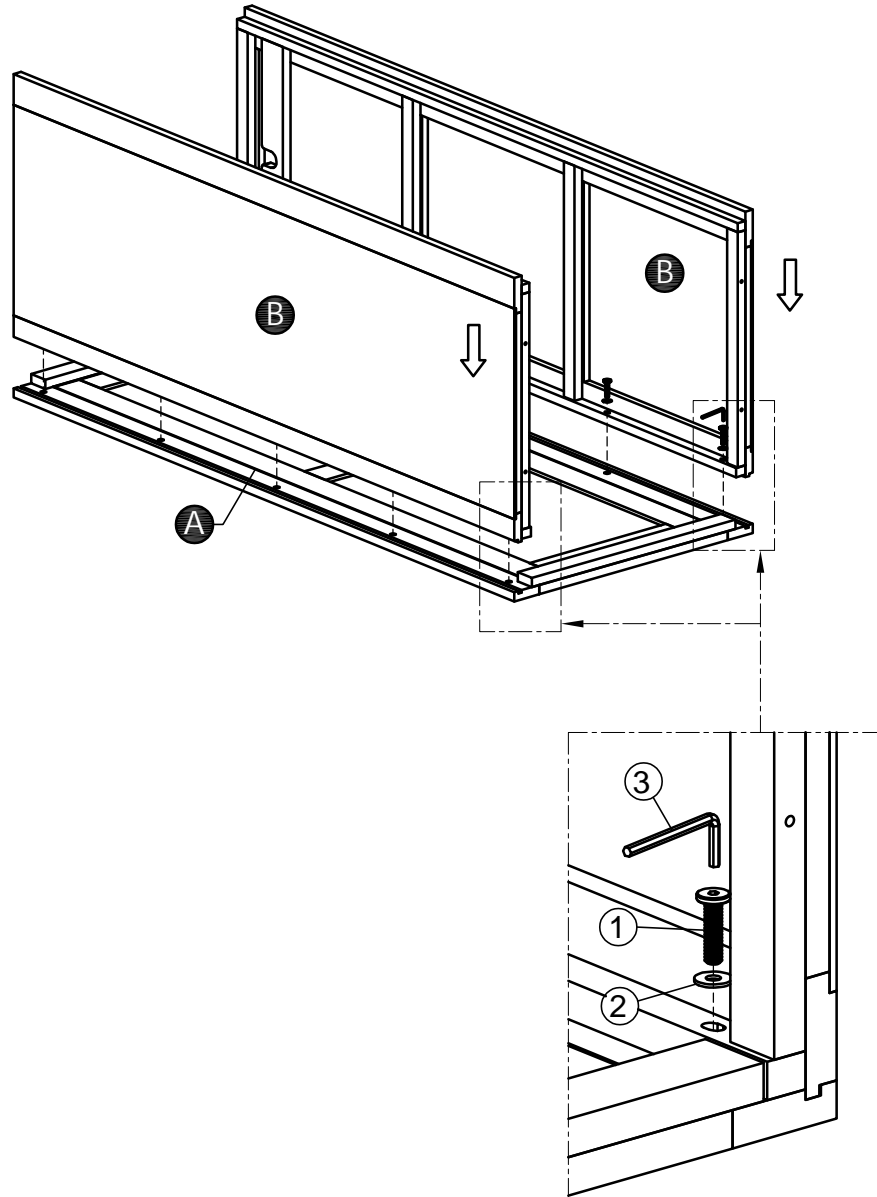


## STEP 2

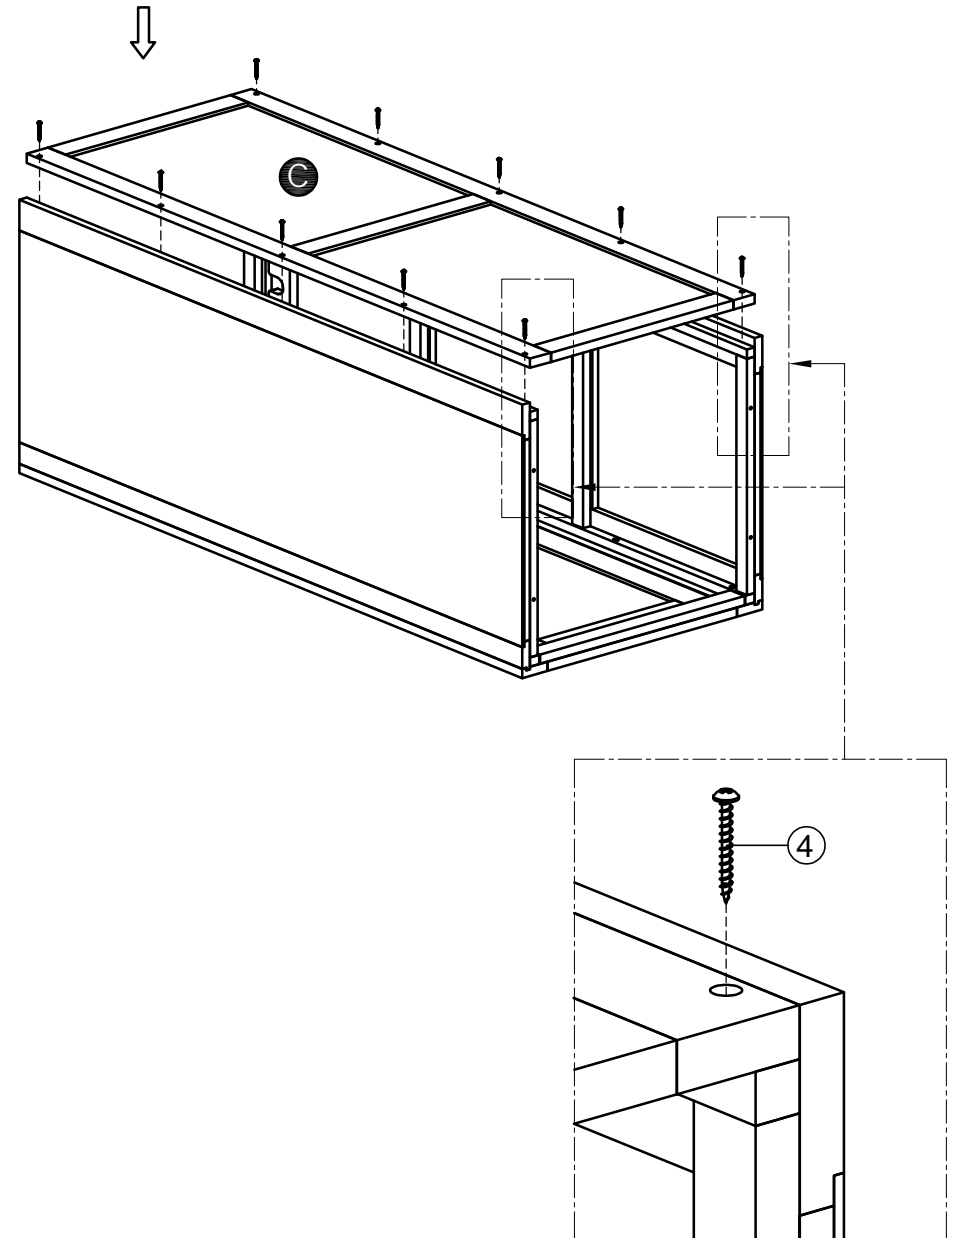


# ASSEMBLY INSTRUCTION MOR029-SINGLE WARDROBE

## STEP 3

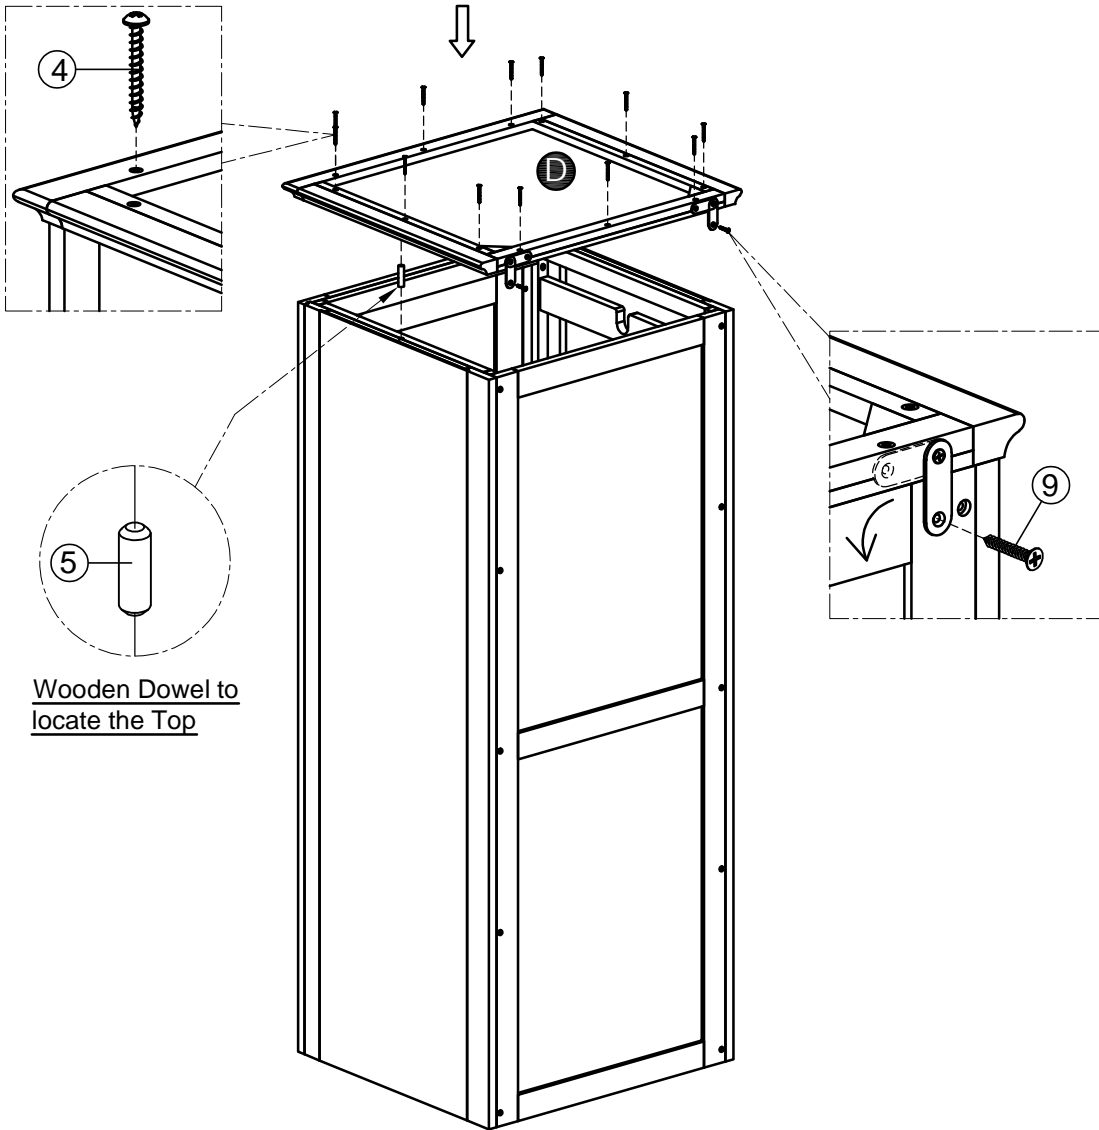


## STEP 4

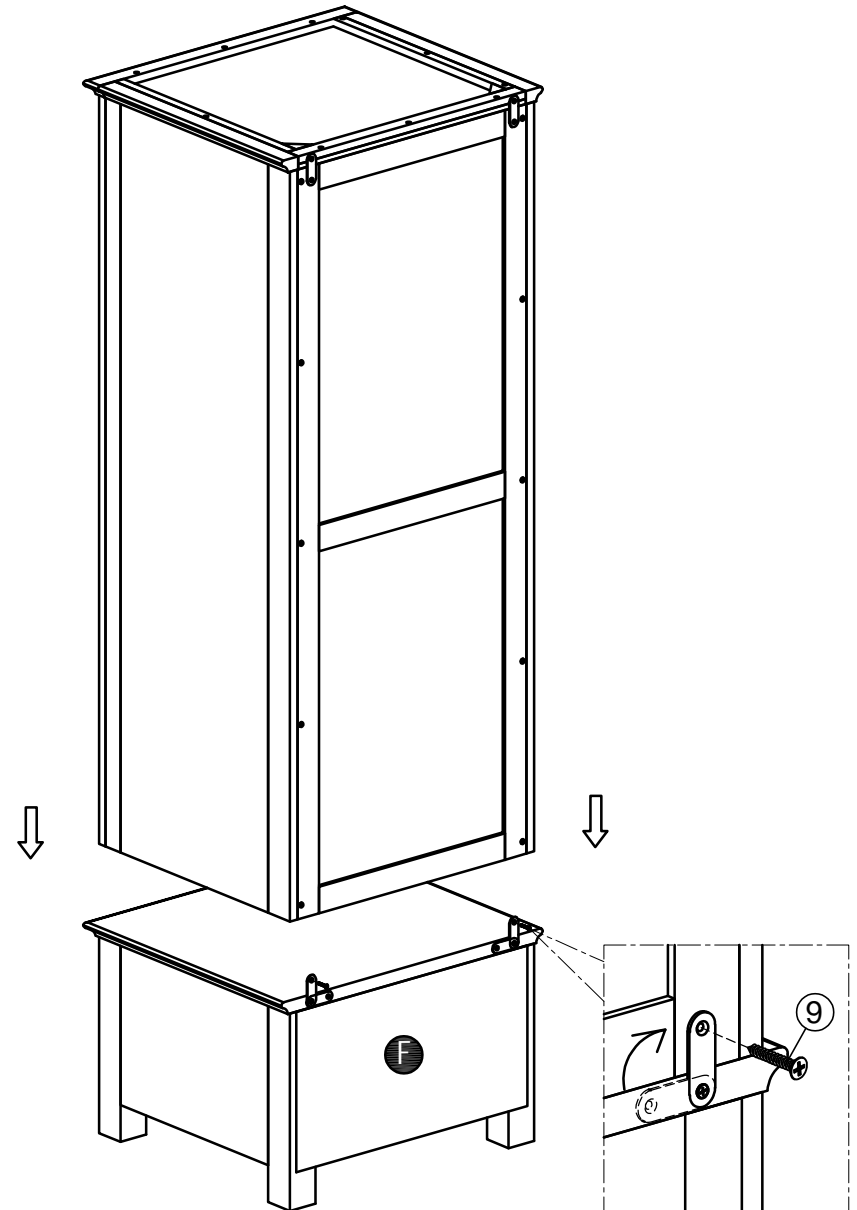


ASSEMBLY INSTRUCTION  
MOR029-SINGLE WARDROBE

STEP 5

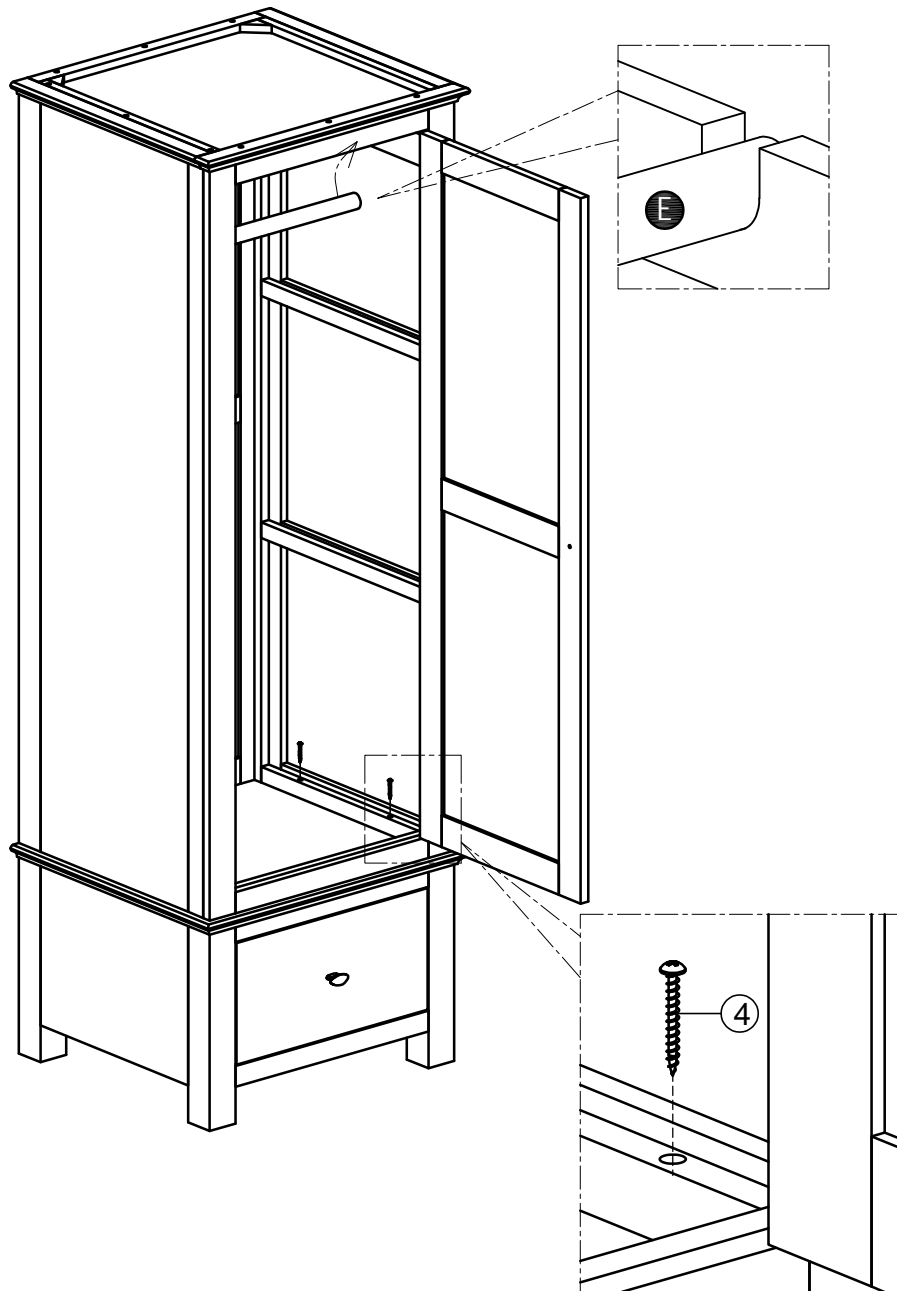


STEP 6

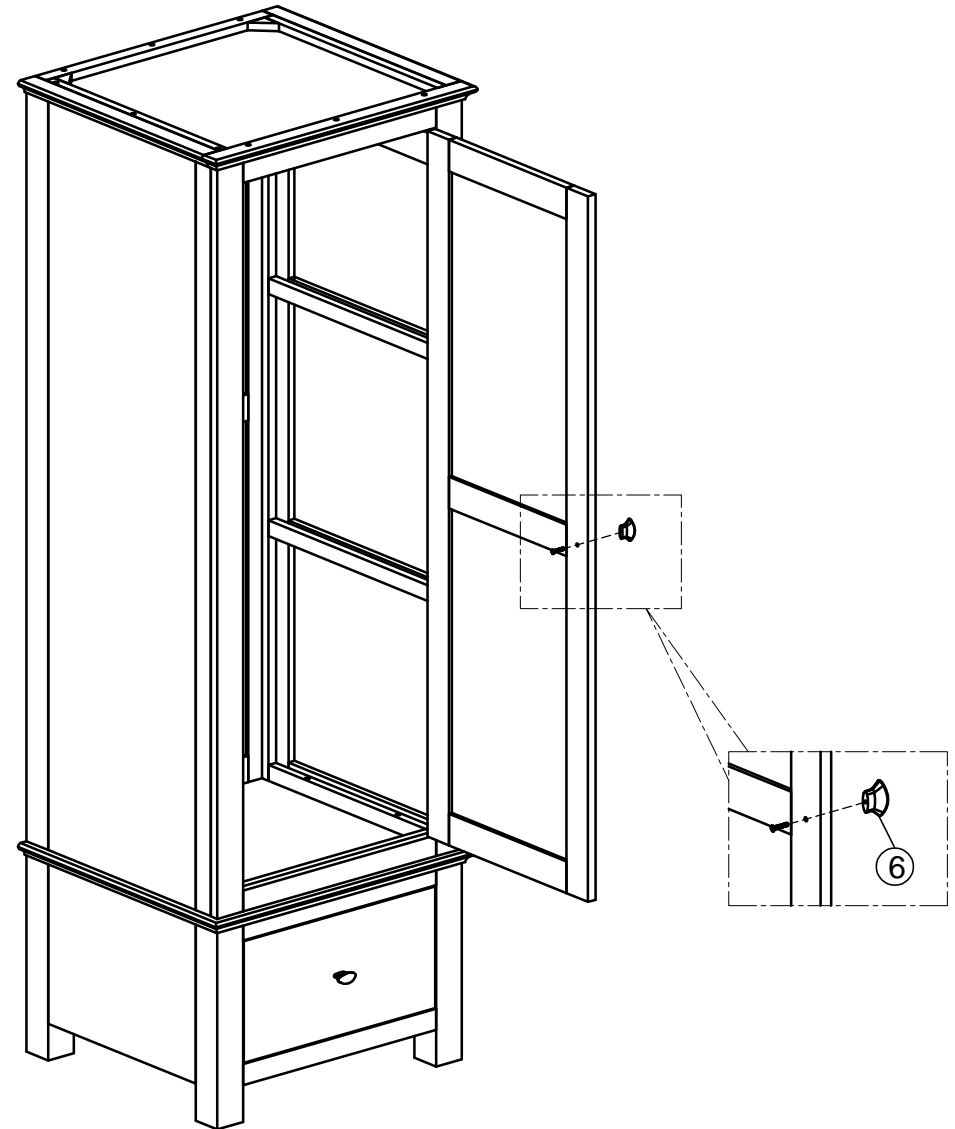

ASSEMBLY INSTRUCTION  
MOR029-SINGLE WARDROBE

STEP 7

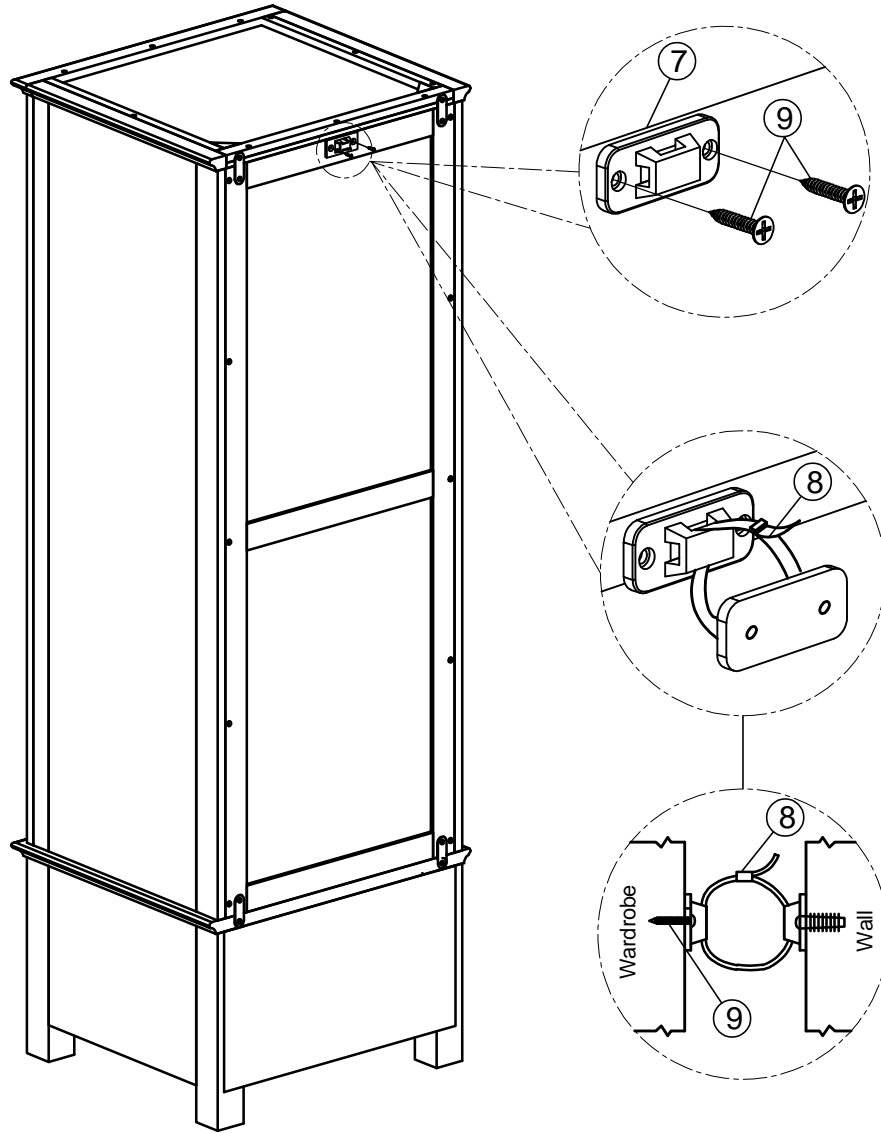

FINAL

