


Multifunctional LED makeup mirror wireless charger

Model: SY-W02243

—.Function Buttons :

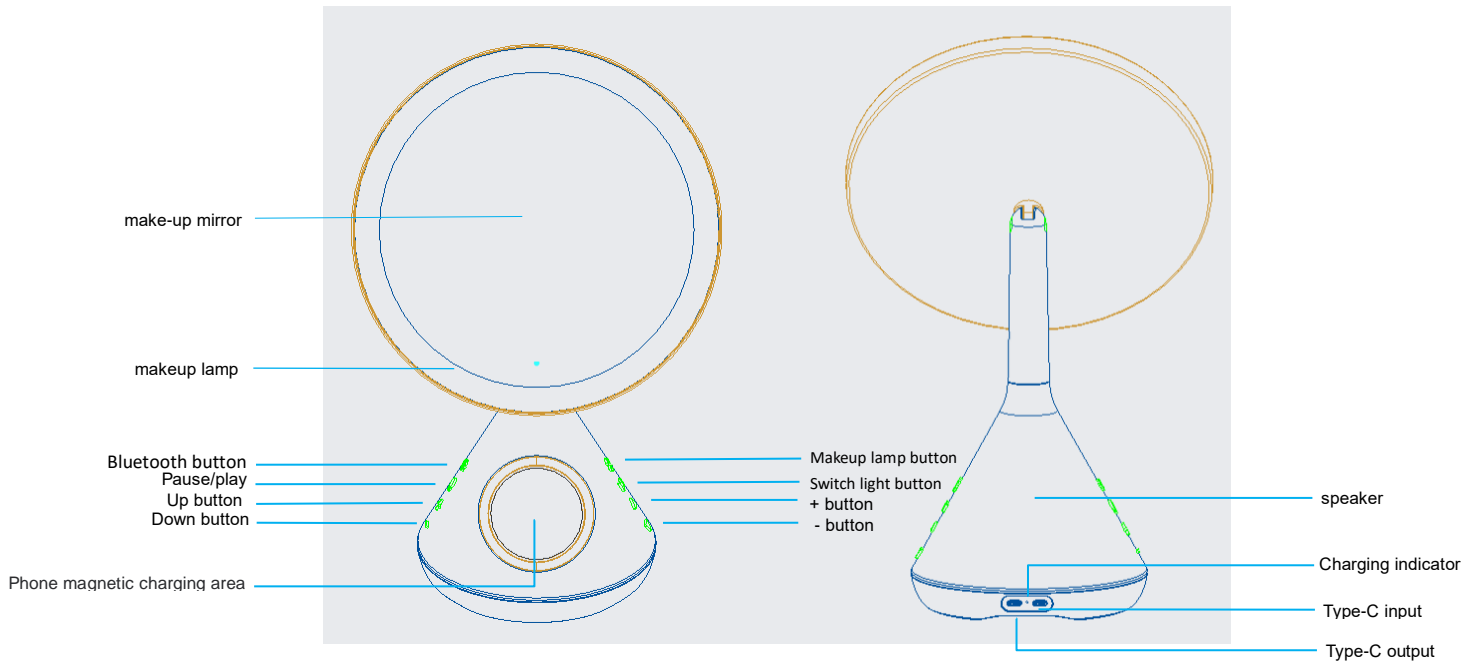

二 . Operation manual:

1.Power Connection:

Plug the USB end of the charging cable into the power adapter, plug the Type-C port into the product, and blink the indicator twice to turn off the indicator and enter the standby mode.

2.Charging indicator:

Charging – Blue light stays on

Fully charged – Blue light off (Some phones do not support this function)

FOD – light flashes

3.Output power:

3.1 Magnetic phone wireless charging output: 15W (Max).

3.2 USB-C output: 5W (Max)

4.Bluetooth function:

4.1 Button function: 8 buttons, bluetooth button, pause/play, up button, down button, makeup lamp button, switch light button, + button, - button.

4.2 Press the Bluetooth button to enter Bluetooth mode. Bluetooth name for the first pairing: W02243, a prompt tone is played after the pairing is successful.

- 4.3 Press Pause/play to switch between pause/play
- 4.4 Press the up button to play the up song,hold press the up button to increase the volume
- 4.5 Press the down button to play the down song,hold press the down button to reduce the volume

5.Light control:

- 5.1 Press the Makeup lamp button to turn on or off the Makeup lamp, press the switch light Buttons to change three lighting effects: warm yellow, cold white, warm yellow + cold white
- 5.2 Press the “+” button , “-” button to adjust the light brightness (high light, medium light, low light, off light) and cycle the light successively

6.Notes:

Special attention: If require Bluetooth, wireless charger, Makeup lamp work at the same time, please be sure to use PD30W or above power adapter; When the 5V voltage is supplied, the wireless charger only supports 5W load and Makeup lamp work.

- 6.1 Do not squeeze or collide.
- 6.2 Do not disassemble or put into the fire, water, to avoid short-circuit leakage.
- 6.3 Do not use wireless chargers in severe high temperature, humidity or corrosive environments to avoid leakage of damaged circuits.
- 6.4 Do not place it too close to magnetic cards (ID cards, bank cards, etc.) with magnetic strips or chips to avoid magnetic card failure.
- 6.5 Keep more than 20cm between the implanted medical device (pacemaker, implantable cochlea, etc.) and the wireless charger to avoid potential disruption to medical devices.
- 6.6 Keep children from the product in case they play the wireless charger as a toy to avoid accidents.
- 6.7 Keep the wireless charger and receiver device away from water and other liquids.
- 6.8 To clean the charger, make sure the power supply is disconnected.
- 6.9 Usage temperature: 0-45℃.
- 6.10 Usage humidity: 20-85% (40℃)

- * The pictures involved in this manual are all illustration. Final product is subject to the actual object.
- * Inside package including: Mirror wireless charger, USB charging cable, User manual.
- * Power adapter is not included.Please purchase otherwise or use conforming adapter

☰ . Specification:

☰ ☰ ☰
 Input: 5V 4A 9V 4A 12V 3A
 Output 1:Phone 15W (MAX)
 Output 2:USB-C 5W (MAX)
 Charging efficiency: ≥73%
 Charging distance: 2-5mm
 Wireless charger work frequency: 110-205KHz
 Speaker Power: 1*5W
 Bluetooth transmission distance: 30m

Product size:356.7*230*148mm